
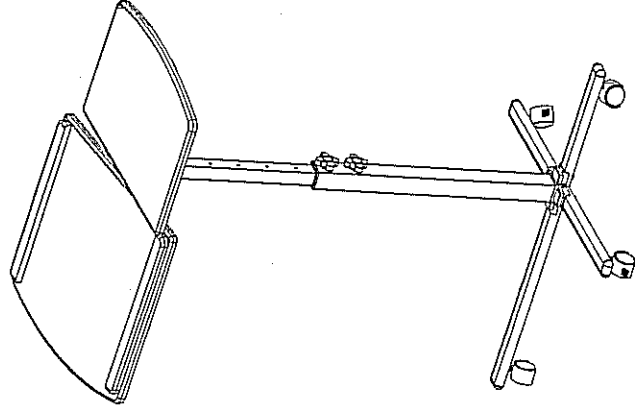
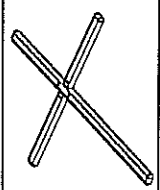
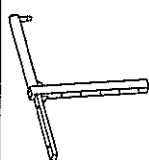



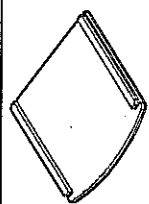



PARTS

Use knobs to adjust to desired height

①		M6x35 X6
②		M6x20 X4
③		M6x10 X4
④		M6 X6
⑤		X2
⑥		M6 X2
⑦		M8 X1
⑧		X2
⑨		X2
⑩		X1
⑪		X1
⑫		X1
⑬		X1
⑭		X1
①		X1
②		X1
③		X1
④		X2
⑤		X1
⑥		X1
		Wrencher
		Allen key

በጥናቱ ላይ የተጠቀሱት ምርመራዎች የሚከተሉት ናቸው፡

Important Note:When assembling the metal frame, make sure that the height adjustment Knob screw holes are located over the short end of the long base frame member for stability purposes.

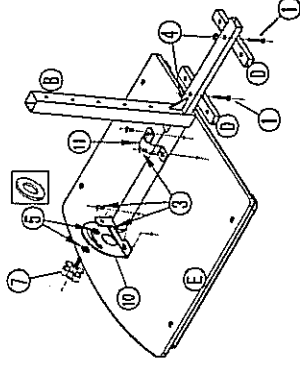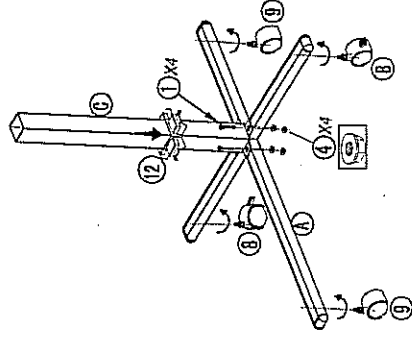

TAP WITH HAMMER OR RUBBER Mallet TO SECURE INTO PLACE

