



THERMO-BRACE[®], TAPES, AND FLASHING.

INSTALLATION GUIDE

TABLE OF CONTENTS

PRODUCTS & SPECIFICATIONS	THERMO-BRACE	FLASHING TAPE	OTHER
2 BARRICADE [®] PRODUCTS	4 INSTALLATION	5 INSTALLATION	10 OTHER DETAILS
3 PRODUCT SPECIFICATIONS		7 FLASHING CORNERS	
		8-9 FLASHING PENETRATIONS	

BARRICADE® PRODUCTS

THERMO-BRACE®



Thermo-Brace structural sheathing provides racking resistance and may be used as an alternative corner bracing method with structural ratings equivalent or better than OSB.



An all-in-one, insulated, structural, AWRB solution, Thermo-Brace S.I.B. is the ultimate defense against the elements. Versatile, lightweight and superior in strength to OSB, Thermo-Brace S.I.B. combines the insulative power of BASF Neopor® GPs with the strength and racking resistance of Barricade Thermo-Brace to deliver the toughest insulation solution on the market.

FLASHING



A high-performance, asphalt-based window and door flashing tape designed to provide a permanent, weather-tight seal to protect from moisture, leaks, and air penetration.



Our top-of-the-line flashing tape offers the ultimate protection for windows and doors. The 100% butyl rubber adhesive creates a permanent, flexible, weatherproof seal, while the UV inhibitors protect against the sun's harmful rays.



A highly stretchable flashing tape with an aggressive, slower-acting butyl rubber adhesive that conforms around radii and corners while providing maximum protection from water intrusion.



Extremely aggressive, self-adhering flashing membrane designed to protect windows and doors from moisture penetration.



Precut Barricade Sill Corners provide a quick, easy, and economical seal at transitions between building envelope components.

ADDITIONAL MATERIALS



A thin, strong film-coated tape with a cold-weather adhesive system for added protection against energy-robbing air infiltration and exterior moisture penetration.




The perfect partner to Barricade tapes — a flexible, waterproof, door and window caulk for framework and joints.


SPECIFICATION OVERVIEW

BARRICADE THERMO-BRACE	Green	TER 1507-07	High-quality, long-fibered, specially treated water and weather-resistant plies. Plies are pressure laminated. A special water-resistant adhesive is used.	48" x 96" 48 3/4" x 96" 48" x 108" 48 3/4" x 108"	48" x 120" 48 3/4" x 120" 48" x 132" 48 3/4" x 132" 48" x 144" 48 3/4" x 144"	400	0.075"	1 1/4" Galvanized roofing nails, or 16-gauge, 1" min. crown staples with 1 1/4" leg length Red & Green = Structural up to 16" O.C. Blue = Structural up to 24" O.C.				
	Red	TER 1507-08					0.095"					
	Blue	TER 1507-09					0.120"					
	BARRICADE THERMO-BRACE S.I.B. — R3	Green	TER 1709-07	Barricade® Thermo-Brace™ with BASF Neopor® GPS	48" x 96" 48" x 108" 48" x 120"	48" x 120" 48 3/4" x 120" 48" x 132" 48 3/4" x 132" 48" x 144" 48 3/4" x 144"	70		3/4"	Foam Outward: 1 5/16" x 1 3/4" Leg 16 ga. Staples Foam Inward: 1 3/4" x 11 ga. Smooth Shank Roofing Nail		
Red		TER 1703-16	40					1 1/8"	Foam Outward: 1 5/16" x 2" Leg 16 ga. Staples Foam Inward: 1 3/4" x 11 ga. Ring Shank Roofing Nail			
BARRICADE THERMO-BRACE S.I.B. — R5	Green	TER 1709-07	Barricade® Thermo-Brace™ with BASF Neopor® GPS	48" x 96" 48" x 108" 48" x 120"	48" x 120" 48 3/4" x 120" 48" x 132" 48 3/4" x 132" 48" x 144" 48 3/4" x 144"	40	1 1/8"	12 Months		Up to 365 days		
	Red	TER 1703-16							10-Year Limited Warranty		Pass	12 Months
BARRICADE FLASH ULTI	Composition	Roll Length	Roll Widths	Rolls Per Case	Total Thickness	Tensile Strength	Application Temperature Range	Operating Temperature Range	Warranty	Nail Sealability	Shelf Life	UV Exposure Rating
BARRICADE FLASH CONFORM	Polyolefin faced, peel-and-stick flashing tape using butyl rubber adhesive	75'	4" 6" 9" 12"	6 6 3 4	20 mils	60 lb/in	0°F–150°F	-30°F–200°F	10-Year Limited Warranty	Pass	12 Months	Up to 365 days
			75'	6" 8"	1	50 mils	> 400psi	40°F–180°F	-30°F–200°F	10-Year Limited Warranty	Pass	12 Months
BARRICADE FLASH RIGHT	White polyolefin-faced, using SBS asphalt adhesive	75'	4" 6" 9" 12" 18"	9 6 4 3 2	20 mils	12 lb/in (ASTM D412)	40°F–160°F		10-Year Limited Warranty	Pass	12 Months	180 days
			75'	4" 6" 9" 12"	12 8 4 4	15 mils	-30°F–150°F		10-Year Limited Warranty	Pass	18 Months	180 days
BARRICADE FLASH EXTREME	Non-asphaltic, copolymer flashing tape using pressure-sensitive adhesive	75'	4" 6" 9" 12"	N/A	15 mils		-30°F–150°F		10-Year Limited Warranty	Pass	18 Months	180 days
			N/A	N/A	16	3 mils	30 lb/in	14°F–122°F	-40°F–212°F	10-Year Limited Warranty	Pass	12 Months
BARRICADE FLASH CORNERS	Non-asphaltic, copolymer flashing tape using pressure-sensitive adhesive	N/A	N/A	N/A	15 mils		-30°F–150°F		10-Year Limited Warranty	Pass	18 Months	180 days
			165'	1 7/8" 3"	24	N/A	N/A	1-year Limited Warranty	Pass	12 Months	180 days	
BARRICADE SEAM TAPE	Polypropylene film coated with a cold-weather acrylic adhesive system	N/A	N/A	N/A	3 mils	30 lb/in	14°F–122°F	-40°F–212°F	10-Year Limited Warranty	Pass	12 Months	180 days
			N/A	N/A	24	N/A	N/A	1-year Limited Warranty	Pass	12 Months	180 days	
BARRICADE BEAR CAULK	One-component, solvent-free Silyl Modified Polyether (hybrid) sealant	N/A	N/A	N/A	3 mils	30 lb/in	14°F–122°F	-40°F–212°F	10-Year Limited Warranty	Pass	12 Months	180 days
			N/A	N/A	24	N/A	N/A	1-year Limited Warranty	Pass	12 Months	180 days	


THERMO-BRACE® **INSTALLATION** FOR BARRICADE® THERMO-BRACE® BARRICADE® THERMO-BRACE S.I.B. – R3 BARRICADE® THERMO-BRACE S.I.B. – R5

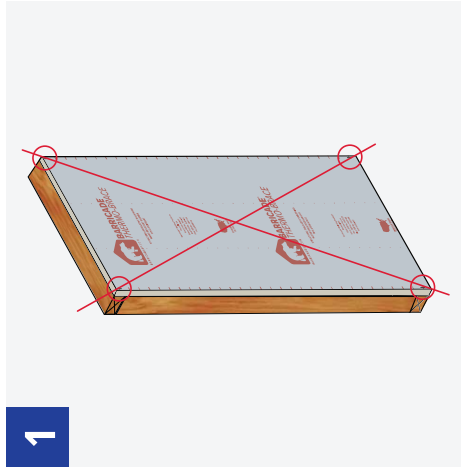


DO NOT fasten the four corners first.
 In order to prevent gaps or rippling, it's important to move horizontally, from one side of the panel to the other, when installing.

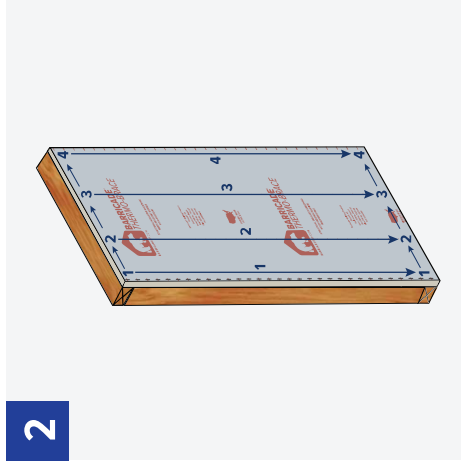

Starting at the top left of the panel, begin fastening from top to bottom following the printed fastener schedule (every 3").

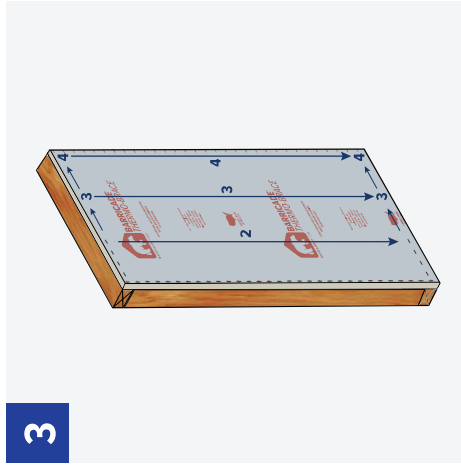

Moving across the panel, attach fasteners at the top and bottom of the panel until you reach the next stud. (Note: when using staples, it's important to fasten them in a parallel direction to the stud.)

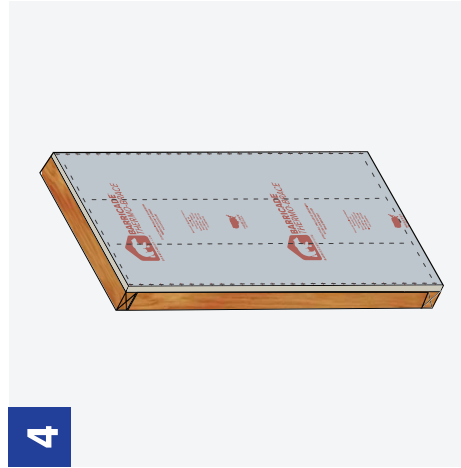

Fasten panel in numerical order repeating the procedure described in steps 2 and 3. Continue until the Thermo-Brace panel is properly secured to the frame.

SEAMS & JOINTS
 48" sheets should have a slight gap of approximately 1/8" between panels at the seams. 48 3/4" sheets are to be overlapped 3/4".
 For use as water-resistive barrier (WRB) noted in IRC section R703.2 and IBC section 1404.2, use Barricade® Seam Tape on joints and seams. Overlapped seams do not require tape for use as a WRB.



FOR THERMO-BRACE S.I.B.
 Weather-resistant barrier on both sides allows for install with foam side in or out.

R3
 Foam Outward:
 15/16" x 1 3/4" Leg 16 ga. Staples
 Foam Inward:
 1 3/4" x 11 ga. Smooth Shank Roofing Nail

R5
 Foam Outward:
 15/16" x 2" Leg 16 ga. Staples
 Foam Inward:
 1 3/4" x 11 ga. Ring Shank Roofing Nail



FLASHING TAPE INSTALLATION

FOR
BARRICADE® FLASH RIGHT
BARRICADE® FLASH ULTI
BARRICADE® FLASH CONFORM
BARRICADE® FLASH EXTREME

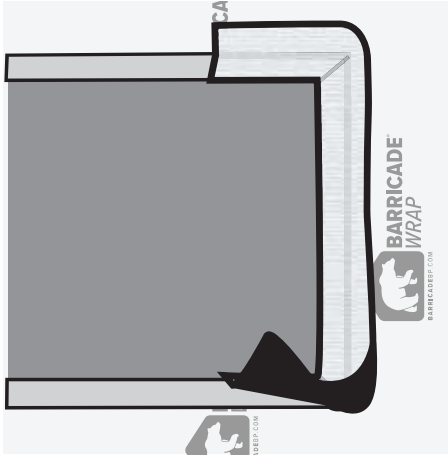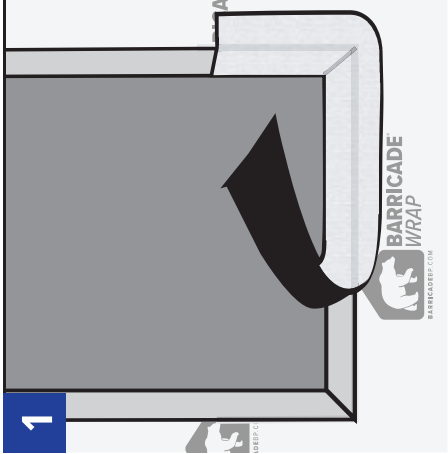

BARRICADE® FLASHING

Prepare sill flashing by cutting Barricade Flash Conform at least 12" longer than the width of the rough opening. Install sill flashing by removing the release paper, centering sill flashing on sill framing stud, and adhering into rough opening. The back edge of Flash Conform should extend to inside edge of sill framing stud and at least 6" up each jamb framing stud. (Sill flashing should not wrap onto the inside of wall.) DO NOT stretch material along the sill or jamb. When house wrap or conventional building paper is used as a weather-resistive barrier (WRB) over wall sheathing prior to window and flashing installation, Flash Conform should be applied over the WRB after it has been properly cut and folded in and around the window rough opening.

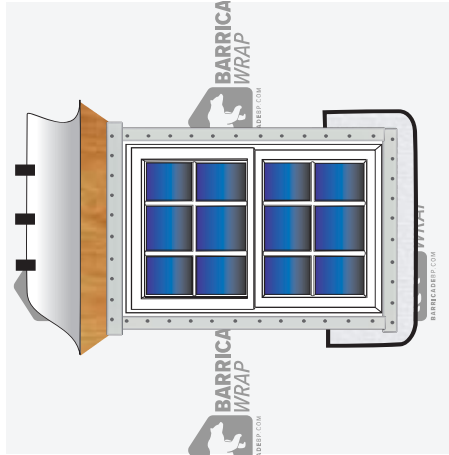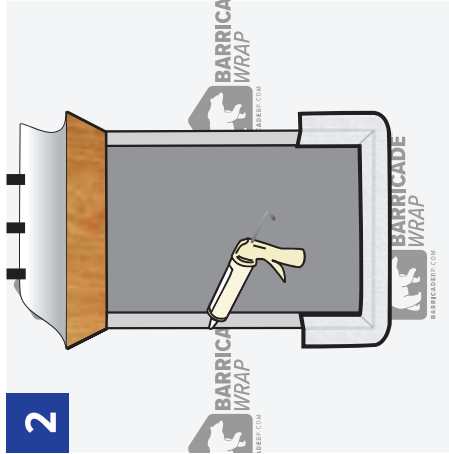


WINDOW AND DOOR INSTALLATION

Before installing the window, either (A) apply a continuous bead of sealant to the backside (interior) of the mounting flange near the outer edge, or (B) apply a continuous seal to the rough window opening at a point to assure contact with the backside (interior) of the mounting flange. DO NOT caulk along bottom. Install window according to manufacturer's installation procedures. Use of Barricade Bear Caulk is recommended.


NOTE:

If a WRB will be applied after the window and flashing have already been installed, be sure not to fasten the lower edge of the flashing so that the WRB may be slipped underneath the flashing in weatherboard or shingle lap fashion (i.e., top layer overlapping bottom layer).

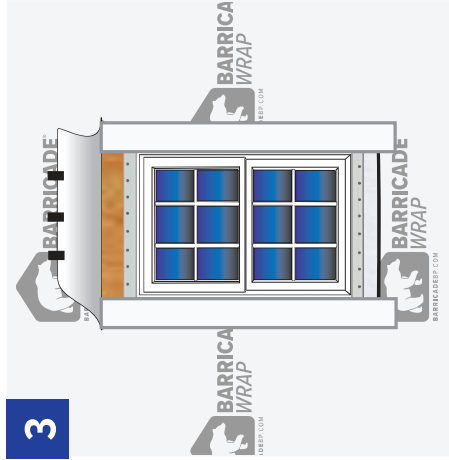


SIDE JAM FLASHING

Utilizing a roller to provide firm, consistent pressure, apply Barricade window flashing along vertical sides of the opening. Flash over the side window flanges. Extend the flashing a minimum of 3" beyond the sill flashing already in place and extend the flashing you're using a minimum of 3" beyond the top of the opening, so that it projects beyond the head flashing to be applied later.

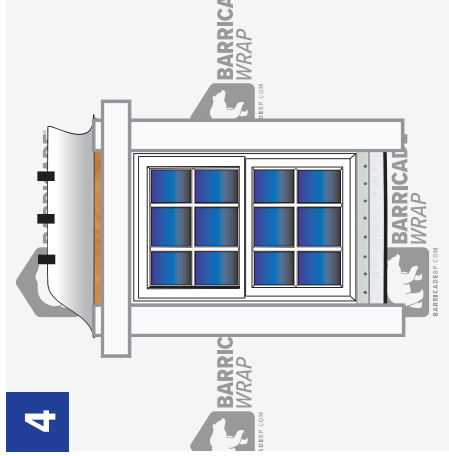

HEAD FLASHING



Affix the bottom of the head flashing over the mounting flange. Be sure to extend the flashing beyond each jamb flashing. Secure in place by applying pressure. Unattach house wrap and apply over head flashing as shown. Tape all seams and joints.

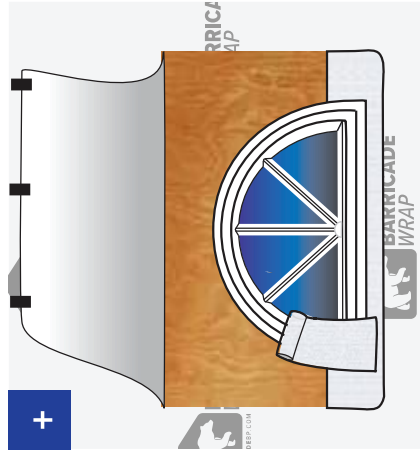

CIRCULAR WINDOWS

Follow above instructions for proper installation pro to head flashing installation. Install circular-top windows according to window manufacturers installation guidelines, then follow instructions below to complete the process.

Measure the circular portion of the window and add 12" to this number. Cut flashing to this length for the head flashing. Remove approximately 20" of release paper and position flashing tightly along the first edge of round window; press firmly into place.

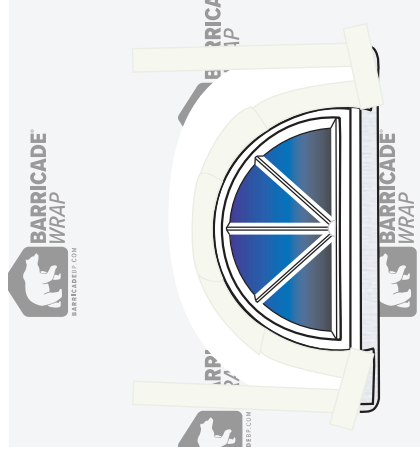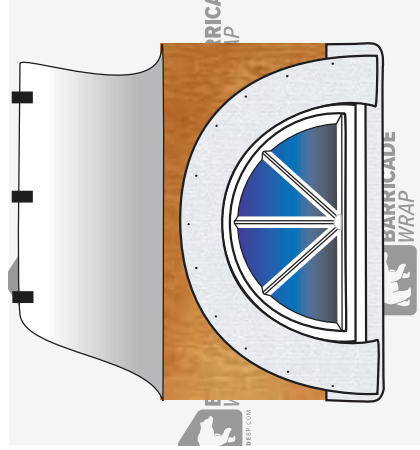

Continue removing release paper and conform Barricade Flash Conform along entire circular portion of window. Use Barricade Seam Tape or mechanical fasteners (i.e. nails, staples, or screws) to temporarily hold top edge of head flashing to wall. Flash Conform's adhesive bond will strengthen over time. Both ends of head flashing should overlap jamb flashings by at least 6".


Note:

This recommendation refers to the most commonly used types of windows (surface mounted). For other types of frames, special attention should be paid to window manufacturer instructions.




PREPARATORY WORK

A spray adhesive, such as Nashua 357, is recommended when Barricade Flash Corners are applied directly to Oriented Strand Board (OSB) or other surfaces where additional adhesion is needed or required.

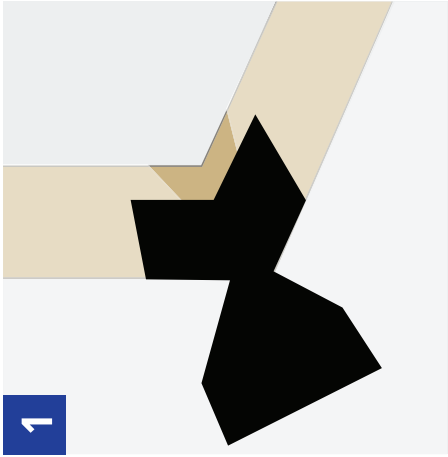

Peel back paper-release liner and discard. Adhere square-edged side of Barricade Flash Corners to a front, inside sill corner. Ensure the front edge of the material is flush with the front edge of the window opening.

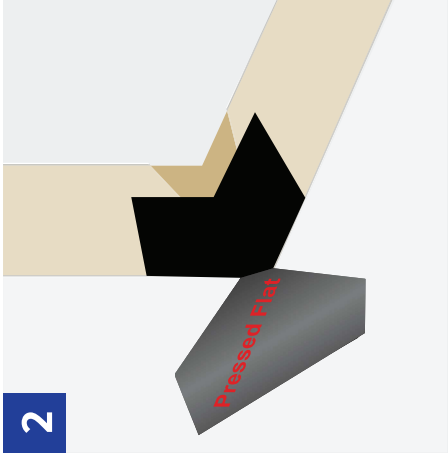

Smooth the dove-tailed edge of the Flash Corners over the sill and adhere to the vertical wall face. Make certain any bubbles or wrinkles are smoothed out.




Repeat Steps 1-3 for the other corner of the window. Overlap the horizontal flanges of Barricade Flash Corners with a measured piece of Barricade Flash Ulti or Barricade Flash Extreme window flashing. Flash remaining portion of window per the building code.


IMPORTANT TO NOTE

Avoid contact with residual asphaltic products (mastics or primers), such as coatings and other roofing products. 15-pound felt paper or building paper may be used with Barricade Flash Corners. Make sure overlaps are in the direction of moisture drainage


SQUARE PENETRATION

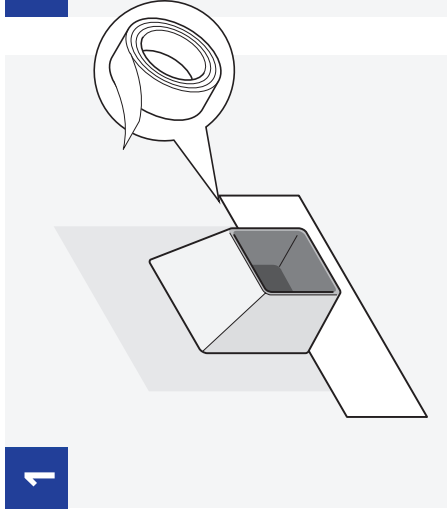


Apply flashing to the bottom of the penetration. We recommend using Barricade Flash Ulti, Barricade Flash Extreme, or Barricade Flash Right.

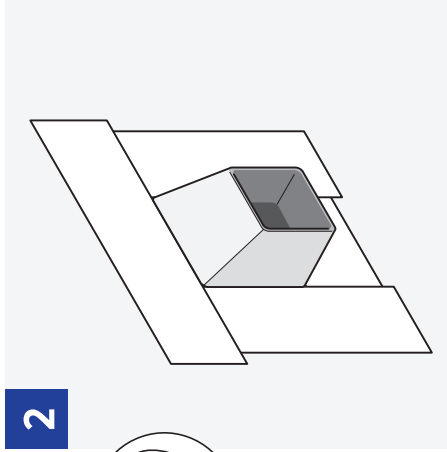

Apply flashing along the sides and then the top, shingling each layer.

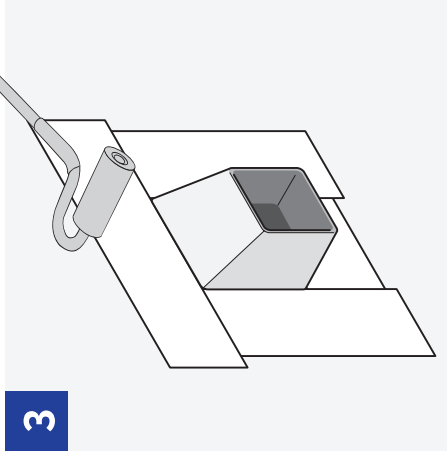


Use a roller to apply even pressure along the flashing, being sure to push out any air pockets that may have appeared. Barricade suggests finishing with Barricade Bear Caulk commercial sealant to ensure a tight seal around the edges of the penetration.

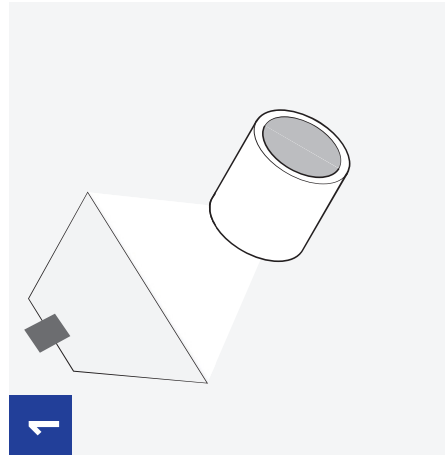


Cut two 45° angles and peel back house wrap above the penetration.


Tip: Use Barricade Seam Tape to hold the flap up while not in use.

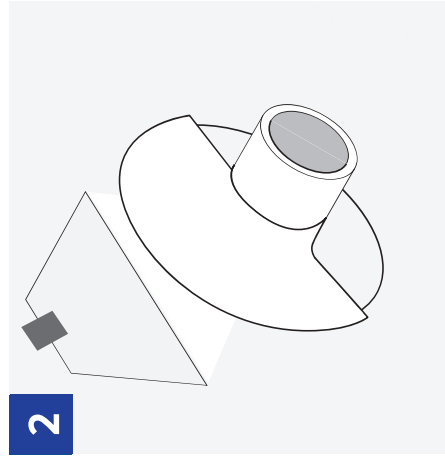

Apply Barricade Flash Conform to the underside of penetration, shingling the above side after. Use a roller to apply even pressure along the flashing.

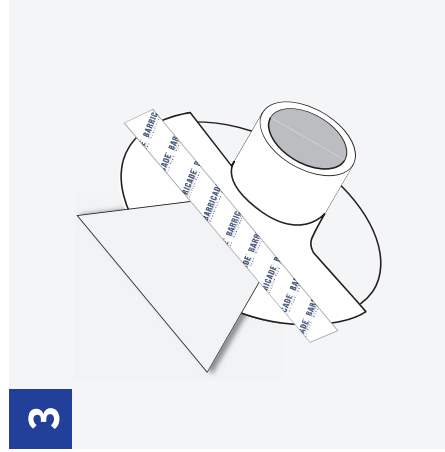

Replace house wrap flap over the flashing and tape across using Barricade Seam Tape.

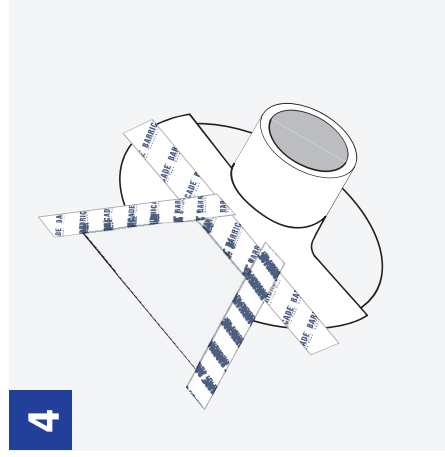


Tape over the 45° cuts using Barricade Seam Tape.

ROUND PENETRATION

**FLASHING
PENETRATIONS**
WHEN INSTALLED
UNDER THE HOUSE WRAP


SQUARE PENETRATION

1

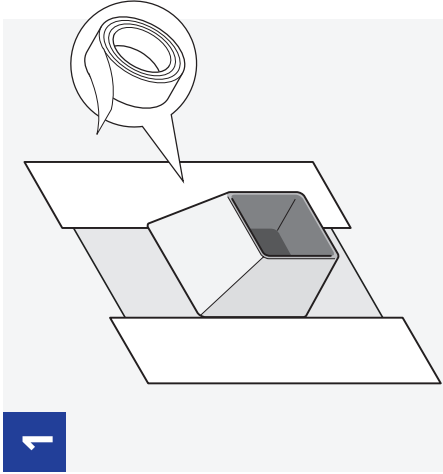


Apply flashing along the sides first, leaving the bottom unflashed. We recommend using Barricade Flash Ulti, Barricade Flash Extreme, or Barricade Flash Right.

2

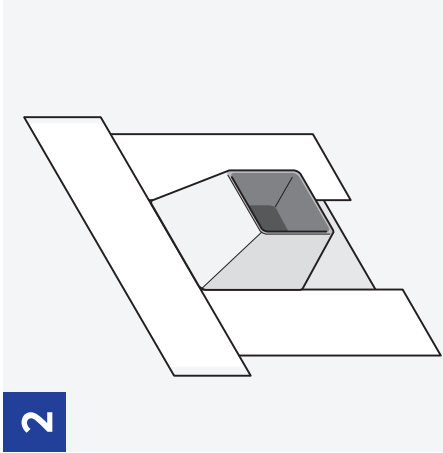

Next apply flashing over the top, shingling the side flashing.

3

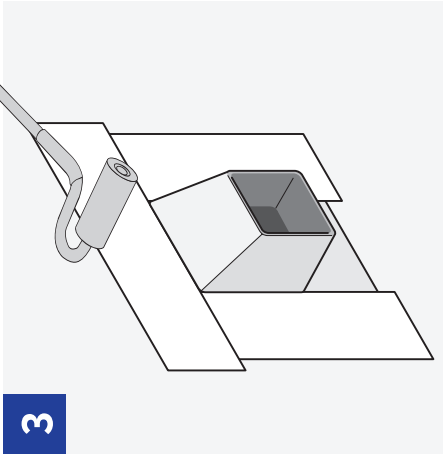

Use a roller to apply even pressure along the flashing, being sure to push out any air pockets that may have appeared. Barricade suggests finishing with Barricade Bear Caulk commercial sealant to ensure a tight seal around the edges of the penetration.

**FLASHING
PENETRATIONS**
WHEN INSTALLED
OVER THE HOUSE WRAP

OTHER DETAILS:

All installation instructions and procedures contained within this brochure are recommended by Barricade Building Products and should be followed. Failure to follow these instructions and procedures may compromise the integrity of the product and impact its performance.

All Barricade Building Products are manufactured to meet the full intent of all applicable building codes and their governing bodies.

Barricade Thermo-Brace is a weather-resistive barrier (WRB) designed to provide a secondary line of defense against bulk water penetration. It is not

designed or intended for use as a primary waterproofing membrane.

Wind-driven rain can penetrate exterior sidings/cladding such as vinyl, wood, brick, aluminum, hardboard, cementitious, etc. Vinyl and aluminum siding are manufactured with built-in weep holes to allow proper drainage of water that gets past it. Wood, hardboard, and brick exteriors are porous, allowing water to be absorbed into them. Most brick facades also have weep holes built into the wall system to promote water drainage.

Any rips, tears, breaks, holes, etc. that happen during normal construction

should be repaired by taping or patching. Other holes, gaps, or cracks created in the exterior wall around items such as faucets, dryer vents, electrical outlets, etc. should also be properly taped, flashed, and sealed. Any of these occurrences that go unrepaired will diminish the products performance and contribution to the overall water-resistance of the wall system.

It's always a wise construction practice to use and integrate properly installed flashings around all window and door openings as well as other exterior penetrations as part of an overall design strategy to control moisture movement and transport. Please contact your

builder or Barricade Building Products for more details.

The information contained in this installation guide is to the best of our knowledge, true and accurate and is presented in good faith. Barricade Building Products assumes no liability, expressed or implied as to the architecture, engineering, or workmanship of any project. This information may be concurrent with, or superseded by other applicable documents.

Contact Barricade Building Products for further information or technical support at 877-832-0333.

