
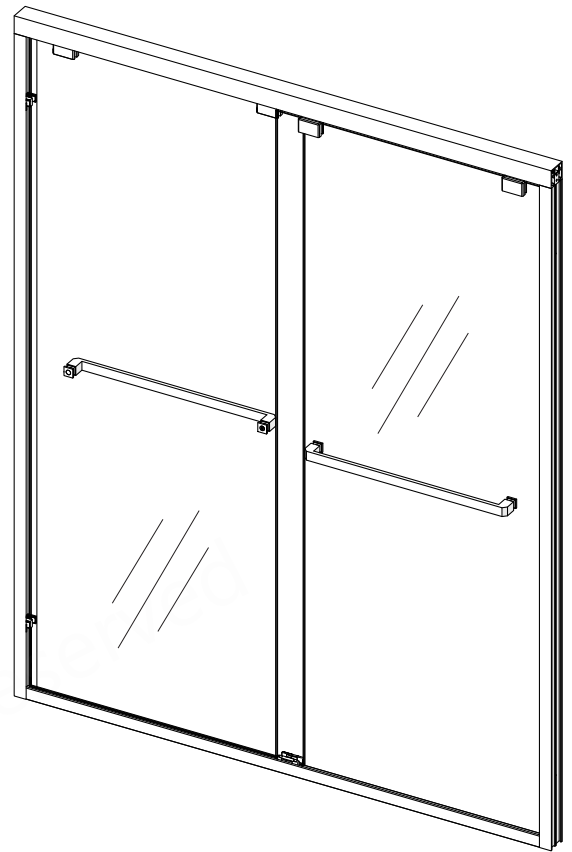


DOUBLE SLIDER

SHOWER DOOR & BASE INSTALLATION INSTRUCTIONS

PLEASE REVIEW THIS ENTIRE MANUAL PRIOR TO INSTALLATION

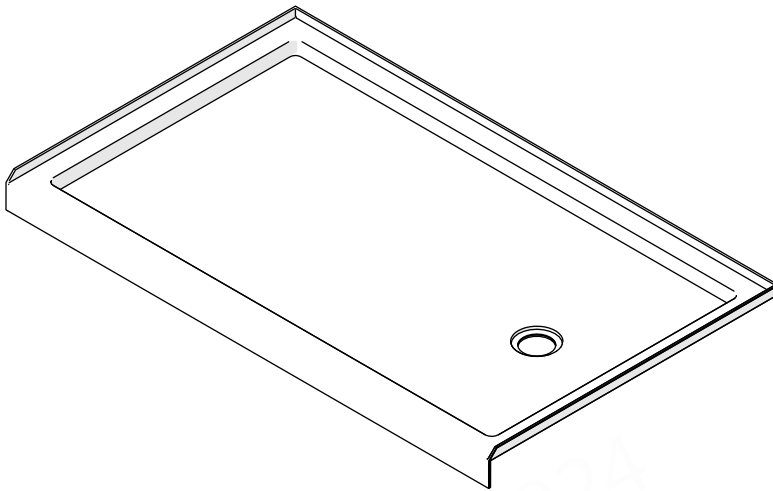

STEP 1: [Shower Base Installation Instructions](#)

STEP 2: [Shower Door Installation Instructions](#)

IMPORTANT!

The manufacturer reserves the right to alter, modify or redesign products at any time without prior notice for the purpose of product improvement and customer experience. Please refer to the manufacturer's web page for the latest technical drawings, installation manuals, warranty information or additional product details.




Low Profile Acrylic Shower Base

SHOWER BASE DIMENSIONS AND INSTALLATION INSTRUCTIONS


PLEASE REVIEW THIS ENTIRE MANUAL PRIOR TO INSTALLATION

© 2025 All Rights Reserved


Single Threshold Left, Center, Right drain (Certain models do not have all 3 drain locations)

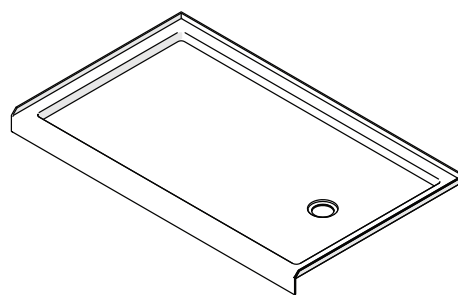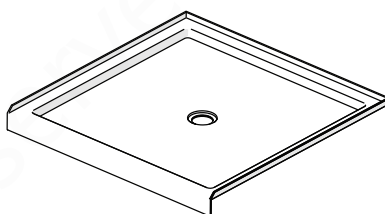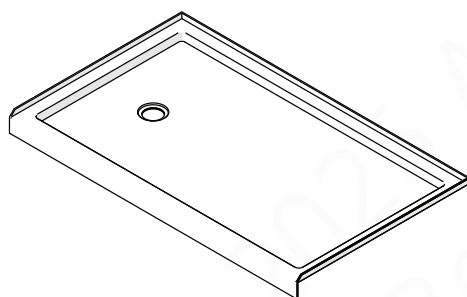




Neo Angle

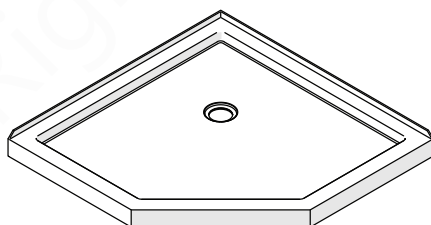

Quarter Round

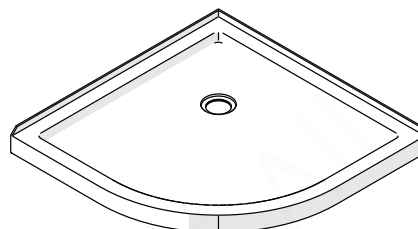

Double Threshold Left, Corner, Right drain

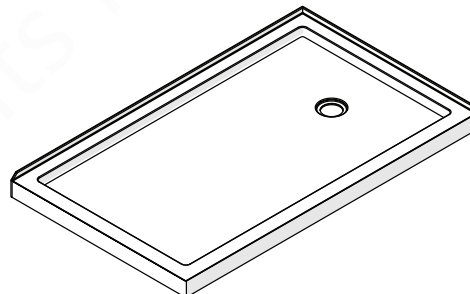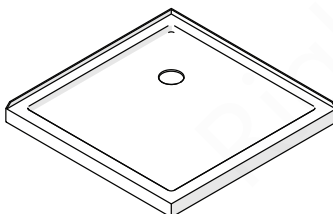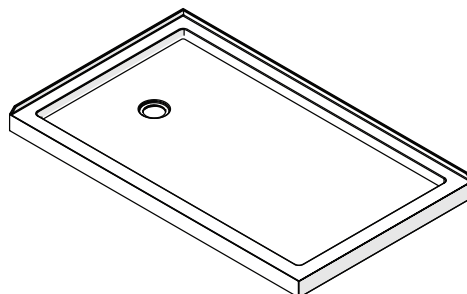

IMPORTANT!

The manufacturer reserves the right to alter, modify or redesign products at any time without prior notice for the purpose of product improvement and customer experience.

Record the following purchase information for your records or in the event you need to contact the manufacturer:

Purchase Order
Number _____

Store/Vendor
Purchased From _____

Installation Date _____

OD Number
(Optional) _____
*found on shipping box/label

Installed by _____

SKU Number _____

Table of Contents

Section Title	Page #
Warnings and General Preparation	2
Tools and Materials	3
Model Specific Preparation	4-5
Model Types and Dimensions Guides	6-13
Detailed Cross Section Diagram	14
Installation Steps	15-23
Product Maintenance	25



TIP - for ease of installation.



CORRECT - recommended.



NOTE - take note of special feature; additional information.




INCORRECT - not recommended.



REQUIRED - requires special attention; signifies a warning.

Average Installation Time

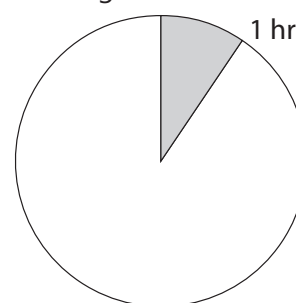

Warning Disclosure Statement

IMPORTANT

- The manufacturer reserves the right to alter, modify or redesign products any time without prior notice for product improvement and customer experience.
- This product should be installed by someone familiar with the construction requirements for this type of project and the care necessary for the safe installation and operation of the product.
- The safety of any installation is the responsibility of the installer.
- Professional installation recommended. (*All Models*)
- Professional installation required.
- To prevent damage or serious injury, Do Not lean against the installed panel/door/glass.
- To prevent damage or serious injury: Do Not attempt to lift or move a heavy lite of glass alone. Use an assistant and/or a professional grade glass suction cup.
- The installation of some models may require drilling down into the threshold. Contact the manufacturer of the base, tub, or threshold material with any questions regarding the drilling of holes into their product.
- All drawings in this installation manual are for illustrative purposes only and are not drawn to scale.

TEMPERED GLASS WARNING

- Your Shower Door Glass Could Shatter Without Warning if Improperly Installed or Mishandled
- Do Not install or operate a shower door if the glass has chipped corners, slivered edges or is otherwise damaged and/or has been dropped or banged into a hard surface such as tile, marble or glass.
- **The main causes of tempered glass breakage are:**
 - Improper handling, storage or installation
 - Misuse/abuse
 - Lack of maintenance
 - Failure to replace damaged glass
 - **Improper handling during storage, unpacking and installation:**
 - Corners and edges are the most susceptible area to damage on a lite of tempered glass and should be protected and handled with care during storage, unpacking, installation and operation. A concentrated point of pressure or impact with a surface harder than itself may cause the tempered glass to shatter. The tempered glass may release immediately, within several hours or even days later.
 - **Incorrect installation of door hardware, rollers, hinges, channels, stopper or glass:**
 - Improper installation may include: loose hardware and/or lack of proper gaskets between the hardware and glass. Additionally, improper alignment of guide rails, wall profiles or other hardware during installation or operation may place stress on the glass edges and cause it to break.
 - This product must be installed by a professional and experienced installer familiar with the safe handling of tempered glass.
 - **Improper use of this product:**
 - Aggressively opening or closing the door may cause trauma to the glass, which can lead to breakage. This may occur immediately or hours or even days later.
 - **The shower door hardware and glass should be inspected periodically:**
 - Instruct the homeowner how to perform a periodic inspection of the shower hardware and glass - some minor adjustments may be necessary based upon the use (or misuse) of the shower door. Ensure that the hardware remains tight and that the door alignment and operation are correct. Any adjustments should be made upon discovery to prevent damage to the product.
 - Additional considerations should be given to the installation of frameless tempered glass products in households with young children or an elderly person due to an increased chance of improper handling. In such cases, alternatives such as shower curtains or grab bars should be considered.

GENERAL PREPARATION

- After opening all boxes and packages, read this introduction carefully. Check that all the items are included in the package by marking off the components on the “**Detailed Diagram of Product Components**” page. Examine all boxes and packages for shipping damage. If the unit has been damaged, has a finishing defect, or is missing parts; please contact the manufacturer within 3 business days of the delivery date.
Please note that the manufacturer will not replace any damaged products or missing parts free of charge after 3 business days or if the product has been installed. Please contact the manufacturer if you have any questions.
- **Please note that you should refer to your local building codes with questions on installation compliance standards. Building and plumbing codes may vary by location, and the manufacturer is not responsible for code compliance standards for your project and will not accept any returns on that basis.**
- If this unit is going to be installed in a new construction, install all the required plumbing and drainage before installing the shower. **Use a competent and licensed (if required by local code) plumber for all plumbing installation.**
- Make sure that prior to beginning the installation, the surfaces are leveled and solid and will be able to support the total weight of the unit. Also make sure the walls are at right angles. Irregular installation surface level, radius corners or improper angle of side walls will result in serious problems for your installation. Please note that some adjustments and drilling will be necessary during the installation process.
- Protect all primary surfaces of the product during installation. Never set your glass down directly onto a tile floor. Leave corner protectors in place until it is necessary to remove them. Always use a piece of wood or cardboard to protect the bottom edge and corners of the glass prior to and during installation.
- This unit must be installed upon a finished threshold and against finished walls.
- *Shower doors are not designed to be installed into a fiberglass surround due to the radius corners and lack of a solid surface to mount the hardware.*

WARNING: TO AVOID THE RISK OF DAMAGE OR INJURY:

- **Follow all recommendations and requirements as shown in the installation instructions.**
- Perform a thorough inspection of the glass and all parts for any damage prior to installation. Any damage to tempered glass can cause breakage.
Do Not install damaged glass!
- Do Not install or operate a shower or tub door if the glass has chipped corners, slivered edges or is otherwise damaged. Do Not install or operate a shower or tub door that has been dropped or banged into a hard surface such as tile, marble or glass.
- **CAUTION:** Contact with any hard surface can damage tempered glass and cause it to shatter.
- This product uses tempered glass. Glass cannot be cut after it has been tempered.
Do Not attempt to cut tempered glass.
- Glass Shower doors, Tub doors, Inline panels, and Return panels can shatter due to improper handling or lack of maintenance. Conduct periodic inspections of glass and all parts for possible damage, missing or loose parts.
- Always wear proper safety equipment such as: safety goggles, work gloves and appropriate footwear during the installation process.
- **WARNING. Risk of leakage and/or damage.** Follow all instructions regarding the application of silicone sealant or caulk. Allow 24 hours for the sealant to cure before the initial use of the shower or tub product. Follow the silicone manufacturer’s recommendations regarding the use of their product.
- **Thoroughly read these instructions before installing or using this product.**
- **Leave this manual for the end-user of the product.**




This product should be installed by someone familiar with the construction requirements for this type of project and the care necessary for the safe installation and operation of the product



**Professional Installation
Recommended**


Tools




Tape Measure




Pencil




Caulk Gun

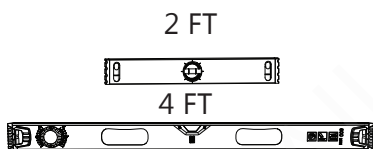

Levels

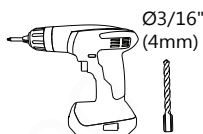


Power Drill

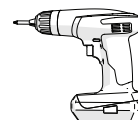

Screw Gun

Materials

OPTION # 1




Drain Assembly



Mortar Mix
(option # 1)


OPTION # 2



Acrylic-Safe
Adhesive



Wood Shims
(Various Sizes)



1-1/4" Stainless Steel
Corrosion-Resistant
Truss Head #8 Screws

NOTE: Some shower base models are sold as a kit with an option to purchase a compatible drain assembly with the shower base. If you purchased a kit with a drain assembly, the drain will be packaged in the same box as the shower base.

- ☒ Verify that the correct model size has been ordered; measure the opening before proceeding with the installation.
- ☒ Confirm that the opening is plumb and that the sub-floor is level.
- ☒ Make sure that all required plumbing and drainage is installed before installing the product.
- ☒ Purchase all required materials needed for your specific installation type.





Unpack your unit carefully and inspect it. If any parts are damaged or missing, please contact the manufacturer for replacement. The shipping boxes may contain extra parts not used in your model configuration. Retain these instructions for future reference.

Shower Bases for Alcove Installation (Single Threshold)



When installing an alcove shower base, consider how the **total thickness of the wall treatment (wallboard tile, acrylic walls, etc.)** will affect the **finished opening size for a shower door**. Always order a shower door based on the **finished opening dimensions after the finished wall treatment has been installed**.

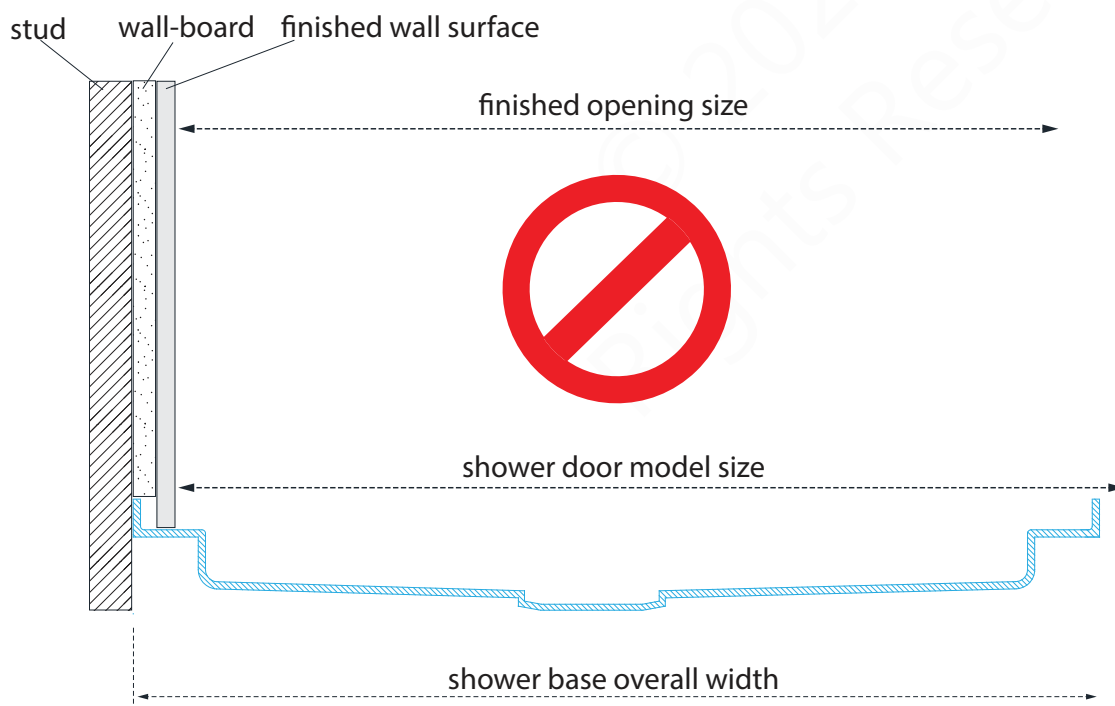
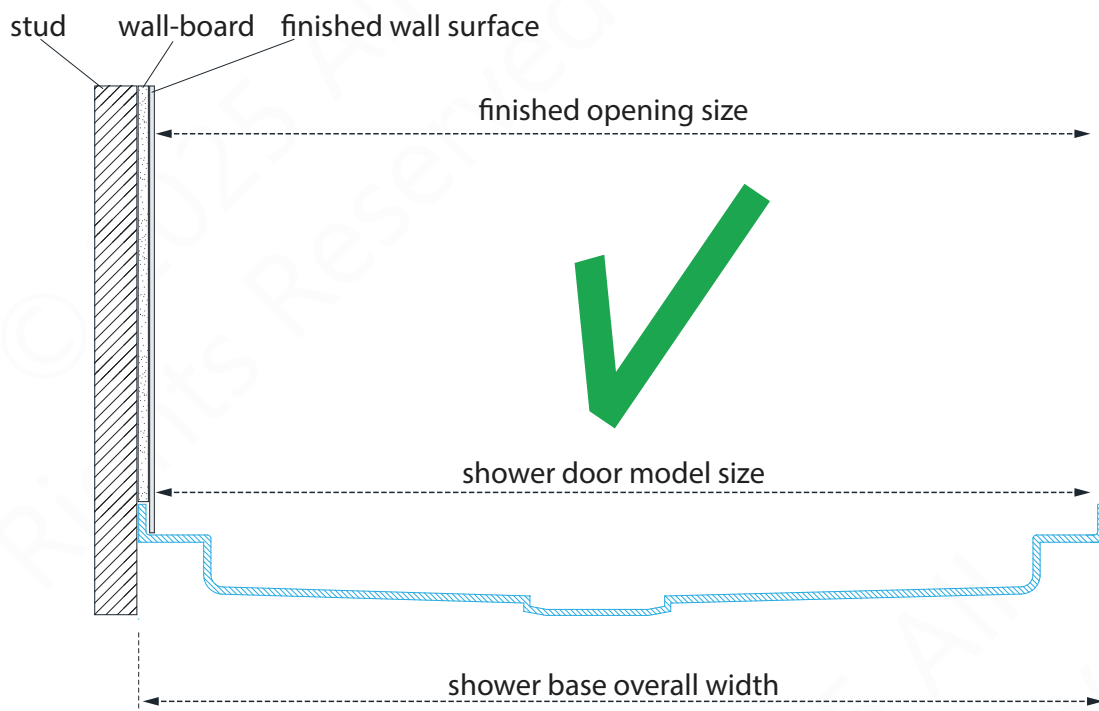


Shower Bases for Corner Installation

(Double Threshold, Neo Angle, Quarter Round)





When installing a shower base designed for corner installation, consider how the **total thickness of the wall treatment (wallboard tile, acrylic walls, etc.) will affect where the shower enclosure will sit on the threshold.** Always order a shower enclosure based on the **finished opening dimensions after the finished wall treatment has been installed.**

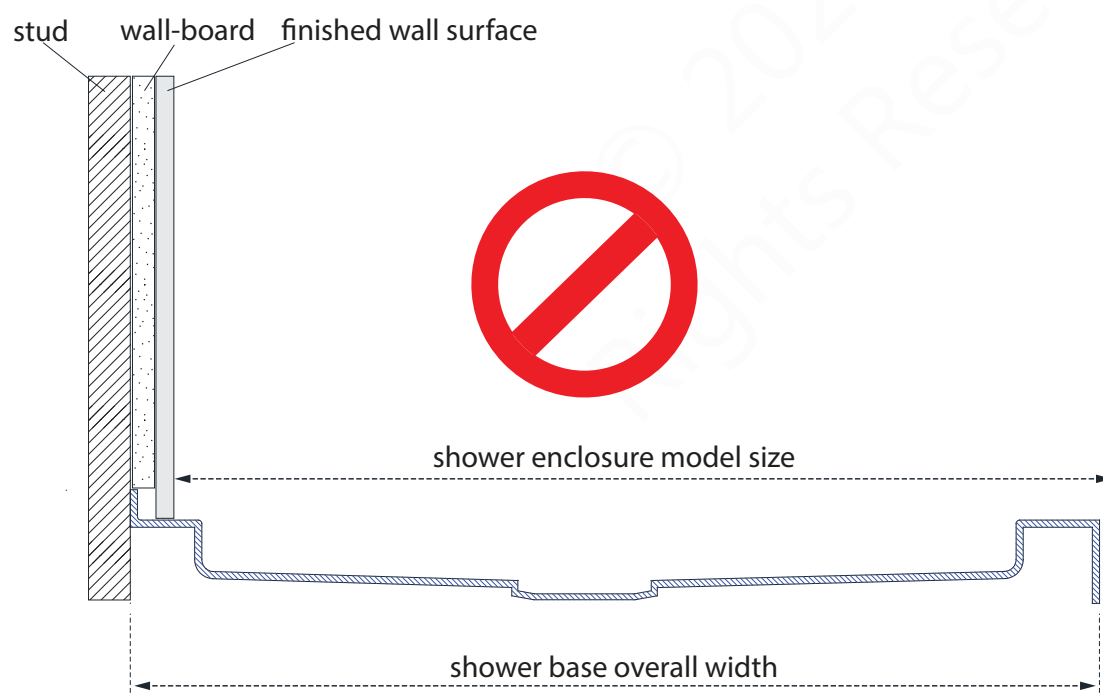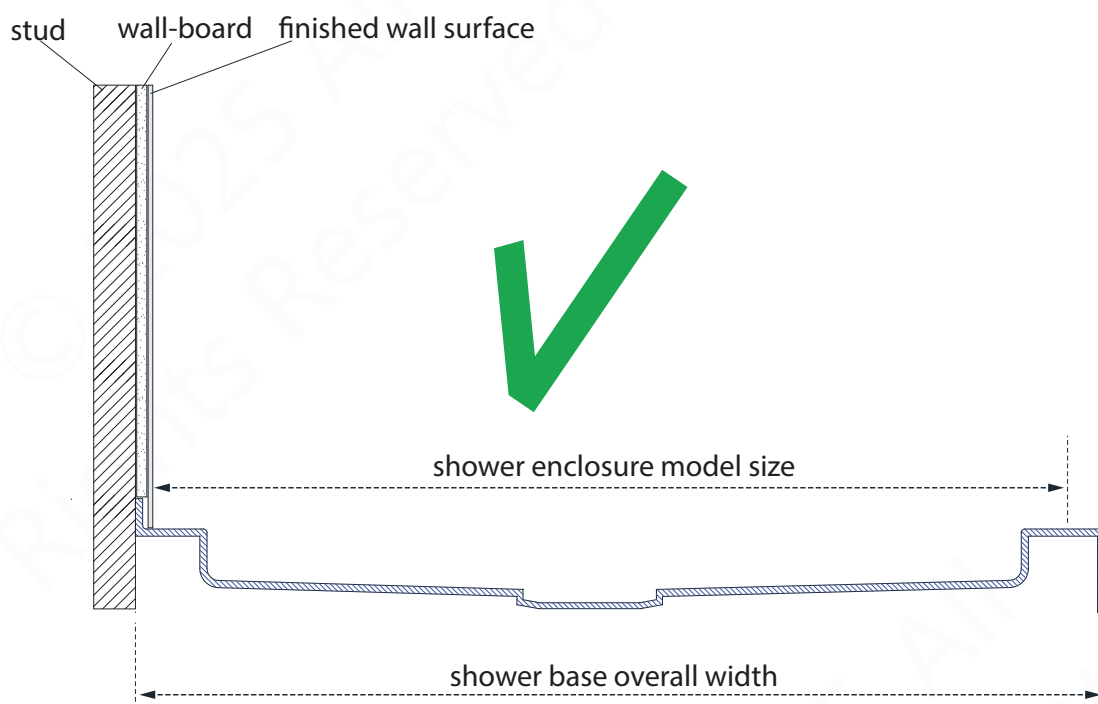

SINGLE THRESHOLD SHOWER BASE



Center Drain Configuration

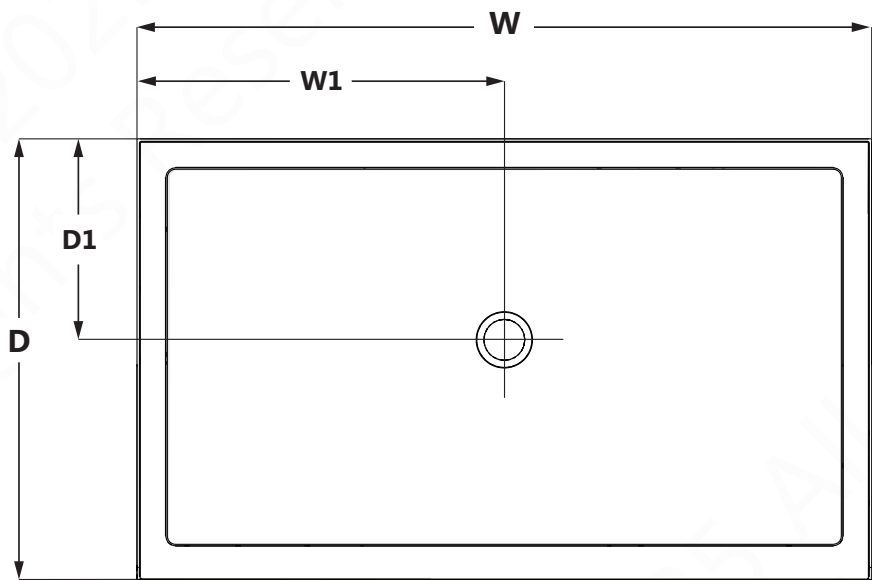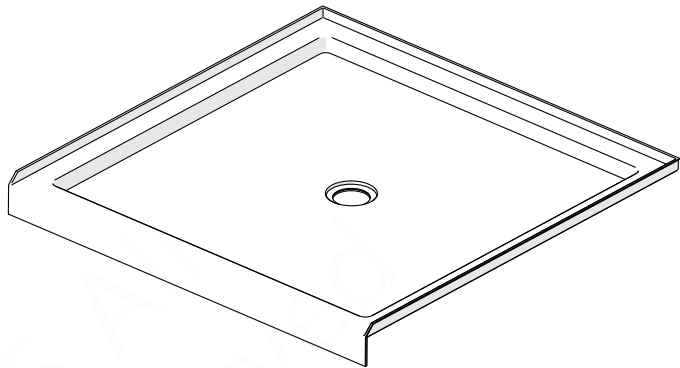

SPECIFICATION	D (in)	W (in)	D1 (in)	W1 (in)
32" x 32"	32"	32"	15"	16"
36" x 36"	36"	36"	15"	18"
32" x 42"	32"	42"	15"	21"
34" x 42"	34"	42"	15"	21"
36" x 42"	36"	42"	15"	21"
42" x 42"	42"	42"	15"	21"
32" x 48"	32"	48"	15"	24"
34" x 48"	34"	48"	15"	24"
36" x 48"	36"	48"	15"	24"
32" x 54"	32"	54"	15"	27"
34" x 54"	34"	54"	15"	27"
36" x 54"	36"	54"	15"	27"
30" x 60"	30"	60"	15"	30"
32" x 60"	32"	60"	15"	30"
34" x 60"	34"	60"	15"	30"
36" x 60"	36"	60"	15"	30"
42" x 36"	36"	42"	21"	18"
42" x 48"	42"	48"	21"	24"

SINGLE THRESHOLD SHOWER BASE



Left-Hand Drain Configuration

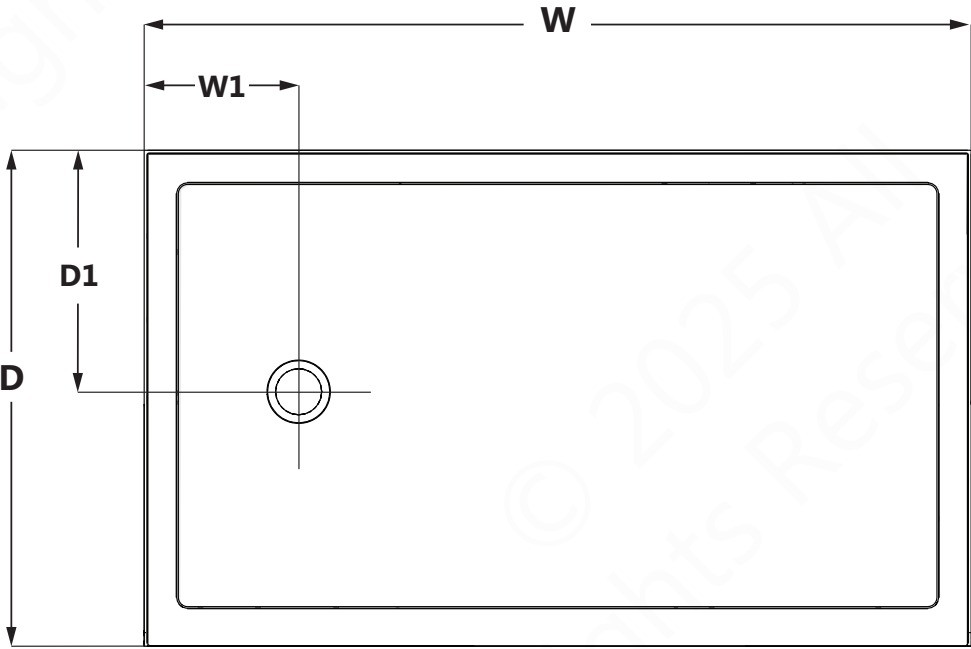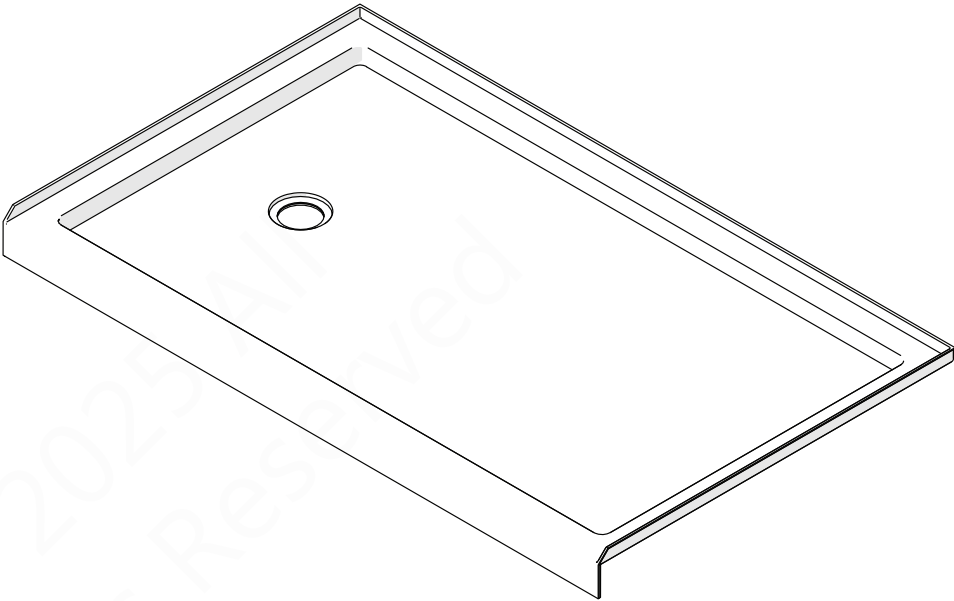

SPECIFICATION	D (in)	W (in)	D1 (in)	W1 (in)
30" x 60"	30"	60"	15"	12"
32" x 60"	32"	60"	15"	12"
34" x 60"	34"	60"	17"	12"
36" x 60"	36"	60"	18"	12"
42" x 60"	42"	60"	21"	12"



SINGLE THRESHOLD SHOWER BASE

Right-Hand Drain Configuration

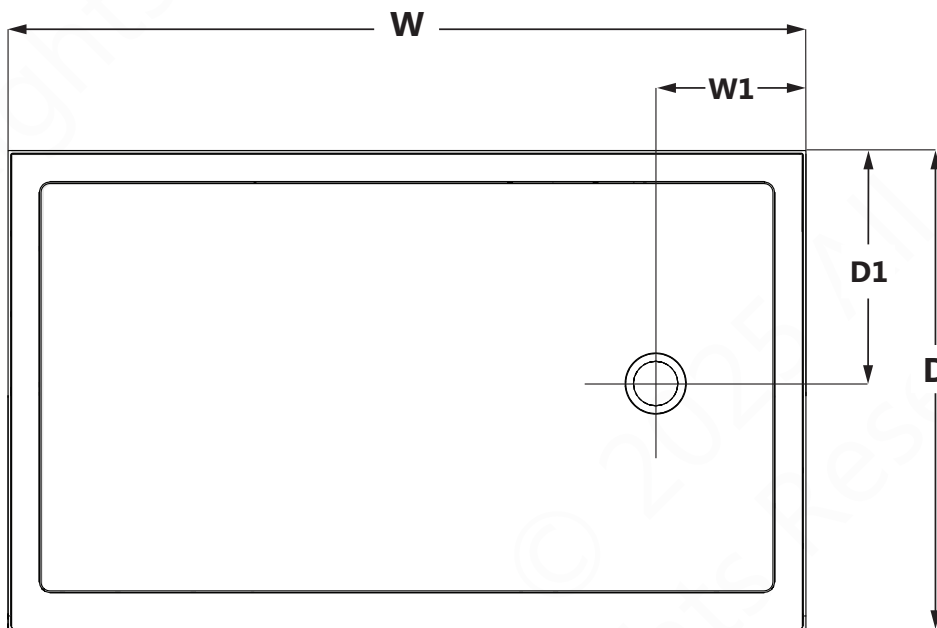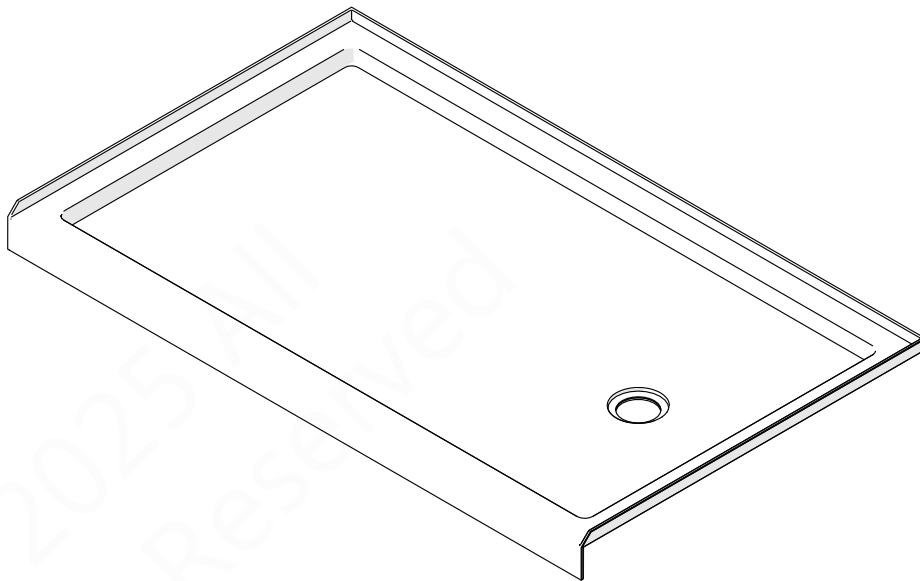



SPECIFICATION	D (in)	W (in)	D1 (in)	W1(in)
30" x 60"	30"	60"	15"	12"
32" x 60"	32"	60"	15"	12"
34" x 60"	34"	60"	17"	12"
36" x 60"	36"	60"	18"	12"
42" x 60"	42"	60"	21"	12"
42" x 48"	42"	48"	21"	24"
44" x 36"	42"	36"	21"	18"

NEO ANGLE SHOWER BASE

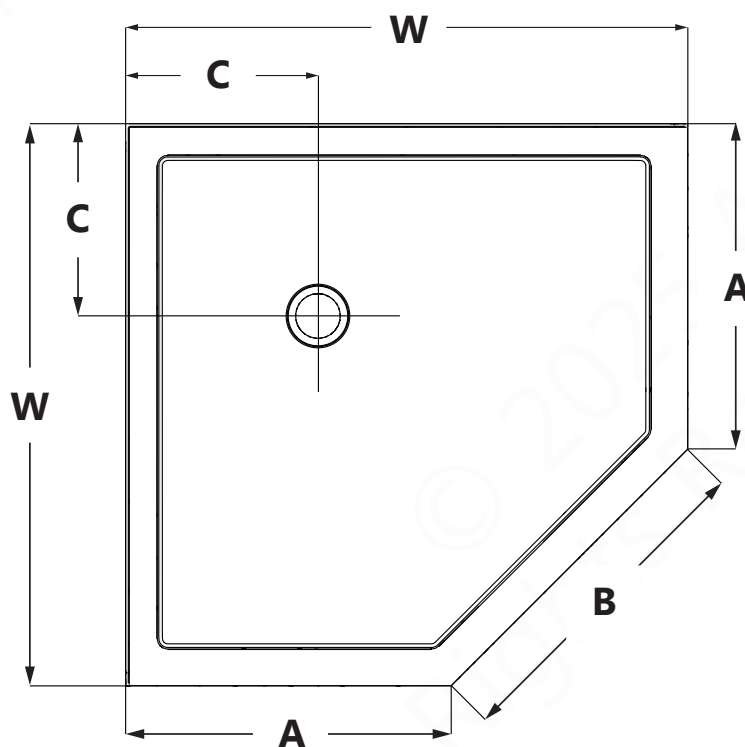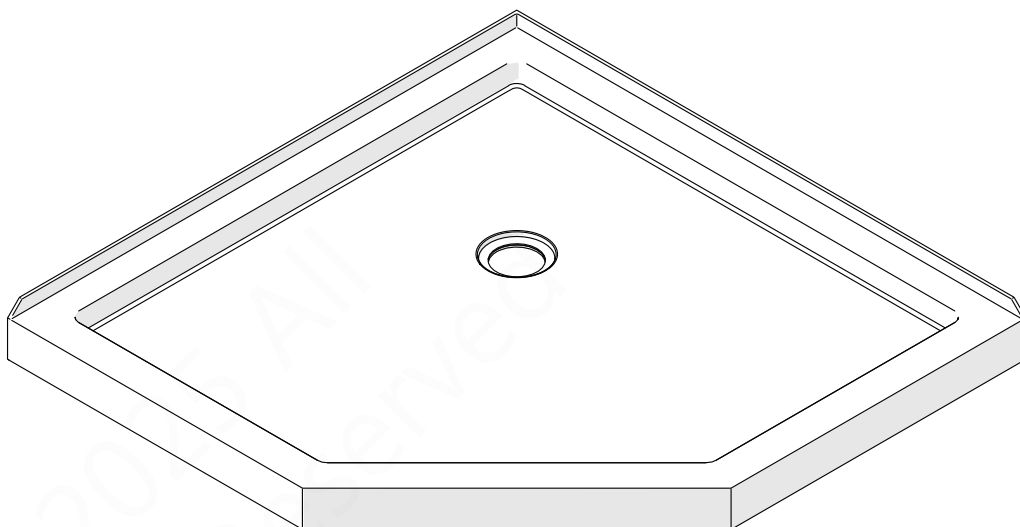

SPECIFICATION	W (in)	A (in)	B (in)	C (in)
36" x 36"	36"	18 5/16"	25"	12"
38" x 38"	38"	20 5/16"	25"	12"
40" x 40"	40"	22 5/16"	25"	14 3/8"
42" x 42"	42"	24 5/16"	25"	14 3/8"



QUARTER ROUND SHOWER BASE

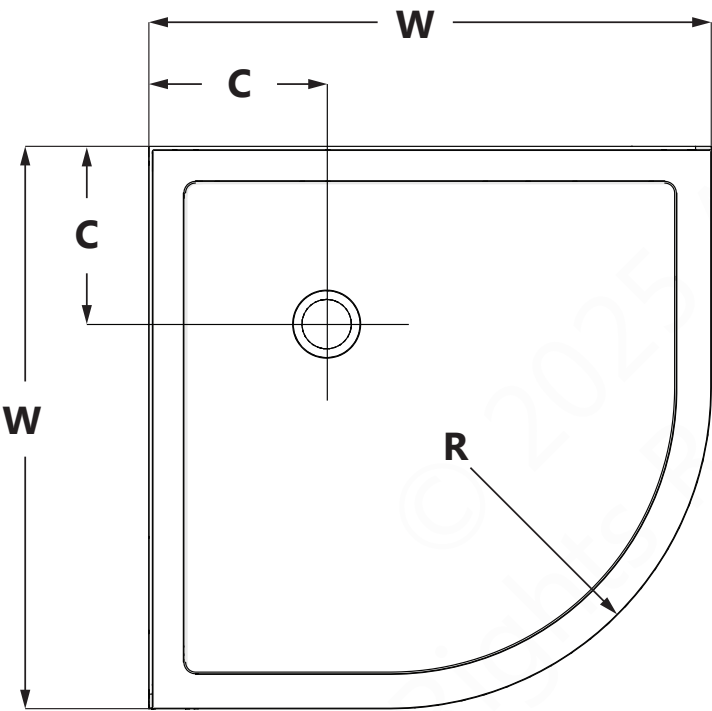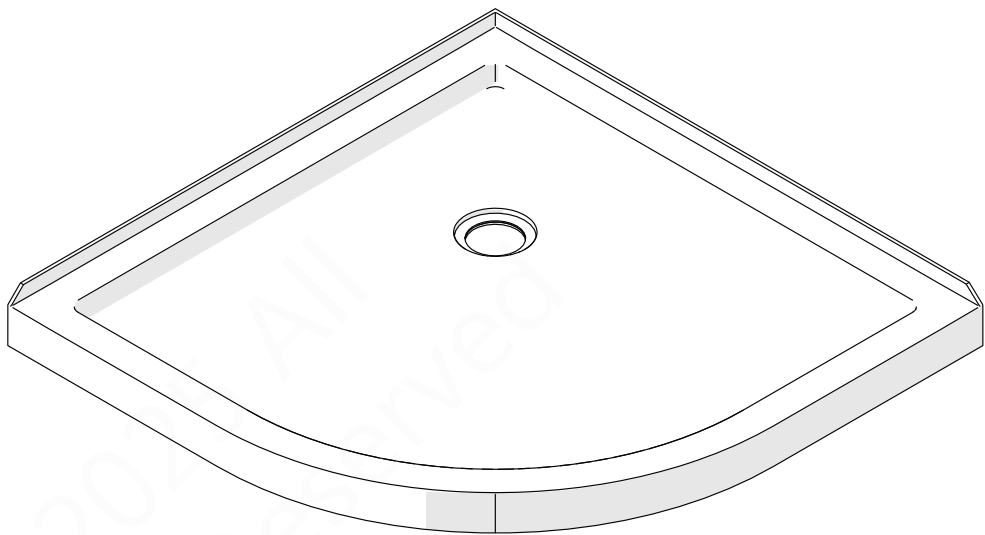

SPECIFICATION	W (in)	C (in)	R (in)
33" x 33"	33"	12"	21 5/8"
36" x 36"	36"	12"	21 5/8"
38" x 38"	38"	12"	21 5/8"

DOUBLE THRESHOLD SHOWER BASE



Corner Drain Configuration

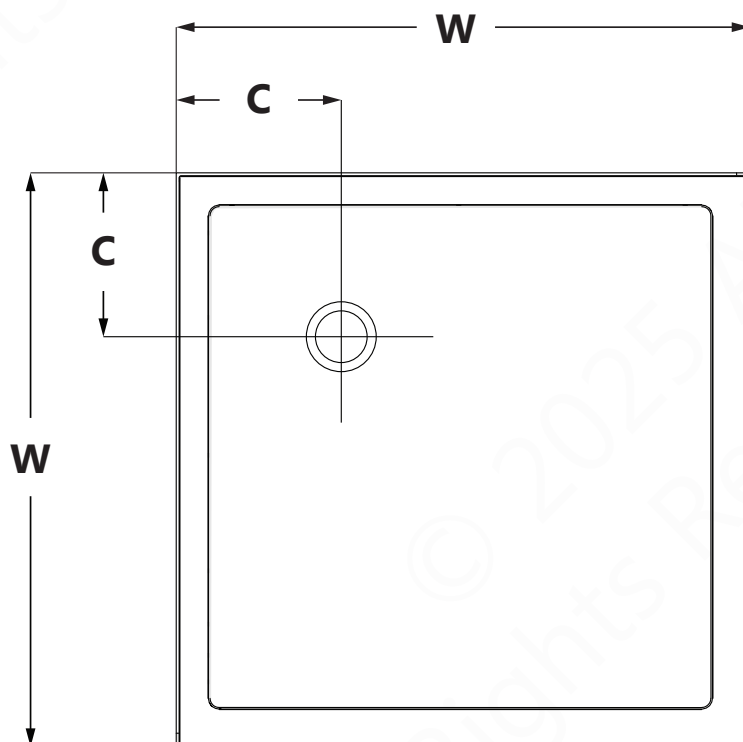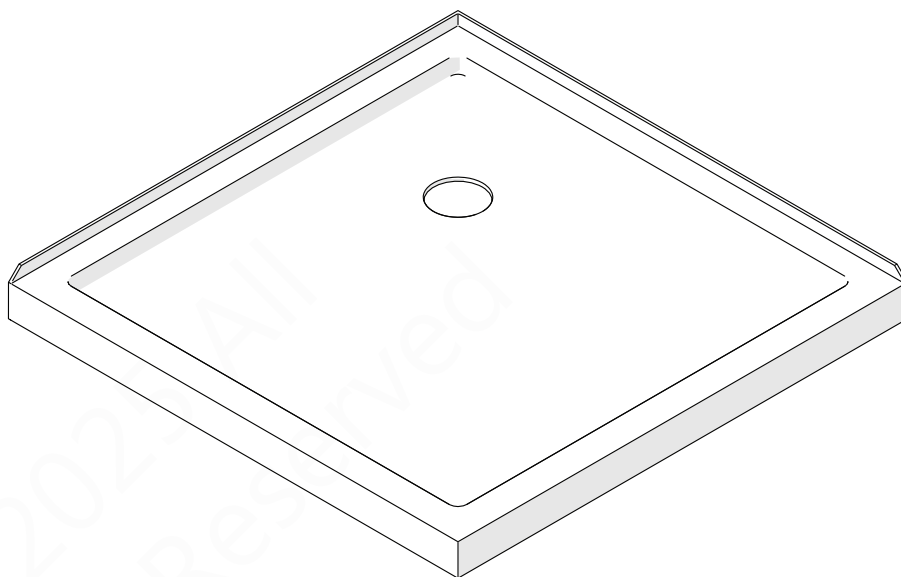

SPECIFICATION	W (in)	C (in)
32" x 32"	32"	12"
36" x 36"	36"	12"
42" x 42"	42"	12"

DOUBLE THRESHOLD SHOWER BASE



Left-Hand Drain Configuration

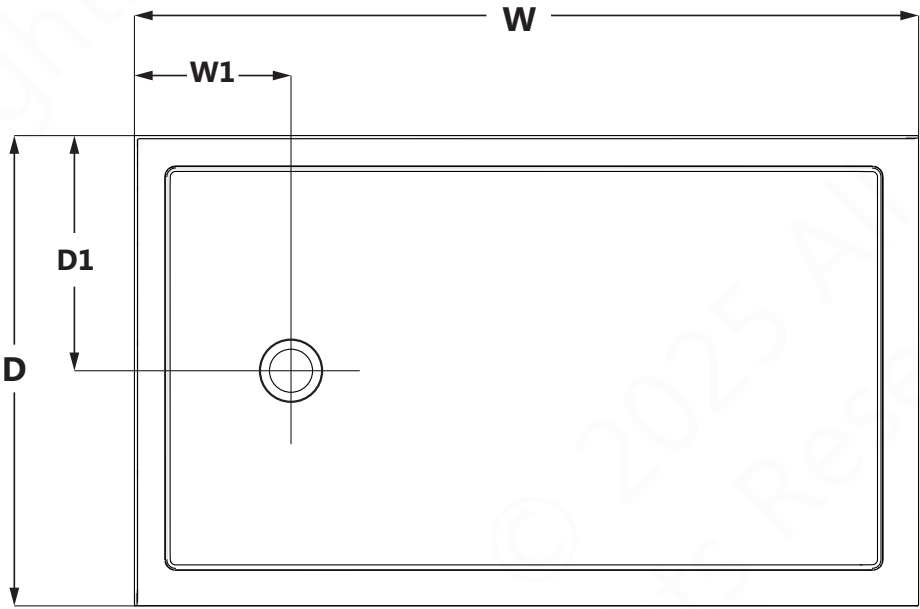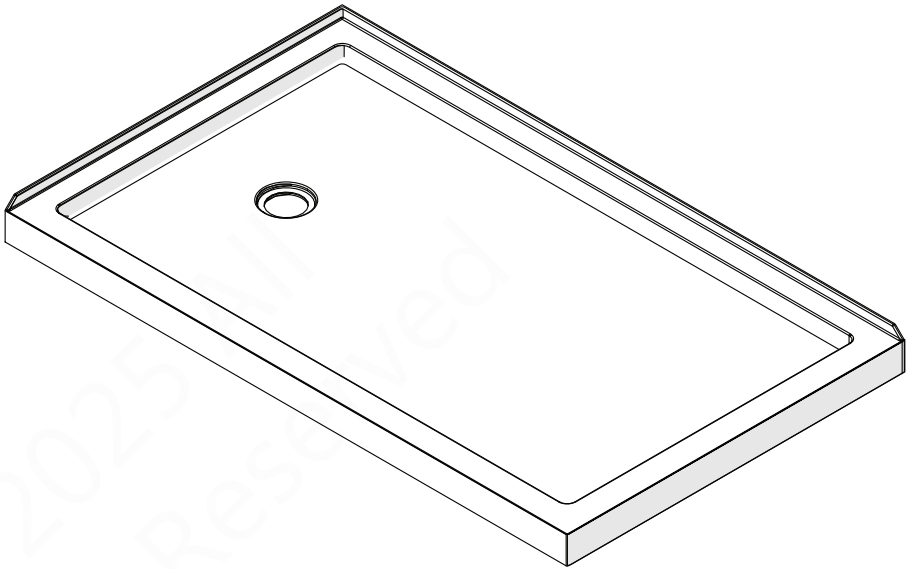

SPECIFICATION	D (in)	W (in)	D1 (in)	W1(in)
32" x 60"	32"	60"	15"	12"
36" x 60"	36"	60"	18"	12"
36" x 54"	36"	54"	18"	12"
32" x 48"	32"	48"	16"	12"
34" x 48"	34"	48"	17"	12"
36" x 48"	36"	48"	18"	12"


DOUBLE THRESHOLD SHOWER BASE

Right-Hand Drain Configuration

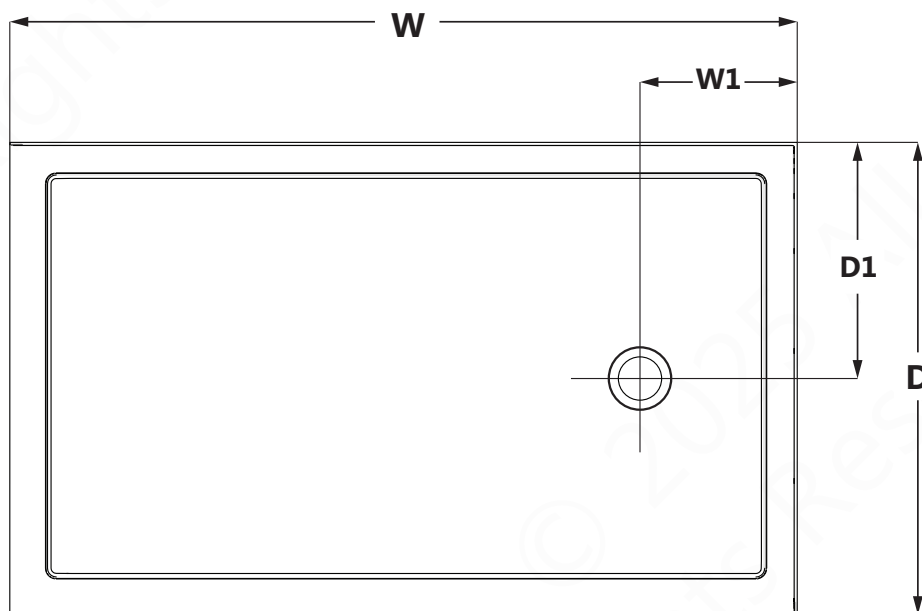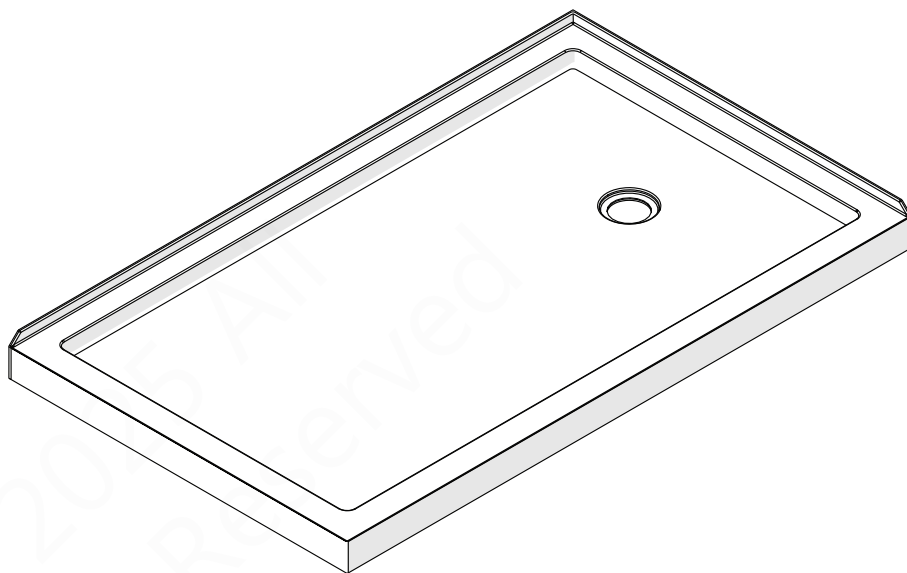


SPECIFICATION	D (in)	W (in)	D1 (in)	W1(in)
32" x 60"	32"	60"	15"	12"
36" x 60"	36"	60"	18"	12"
36" x 54"	36"	54"	18"	12"
32" x 48"	32"	48"	16"	12"
34" x 48"	34"	48"	17"	12"
36" x 48"	36"	48"	18"	12"

Shower Base Cross Section Diagram

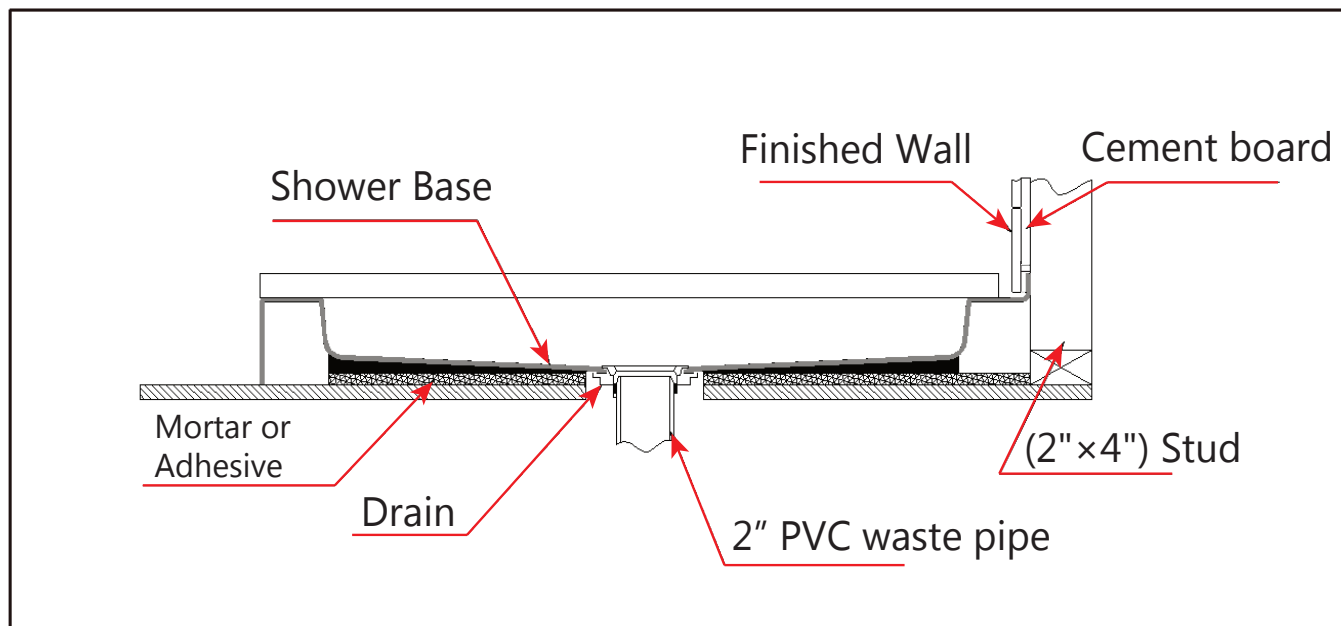


This product should be installed by someone familiar with the construction requirements for this type of project and the care necessary for the safe installation and operation of the product.

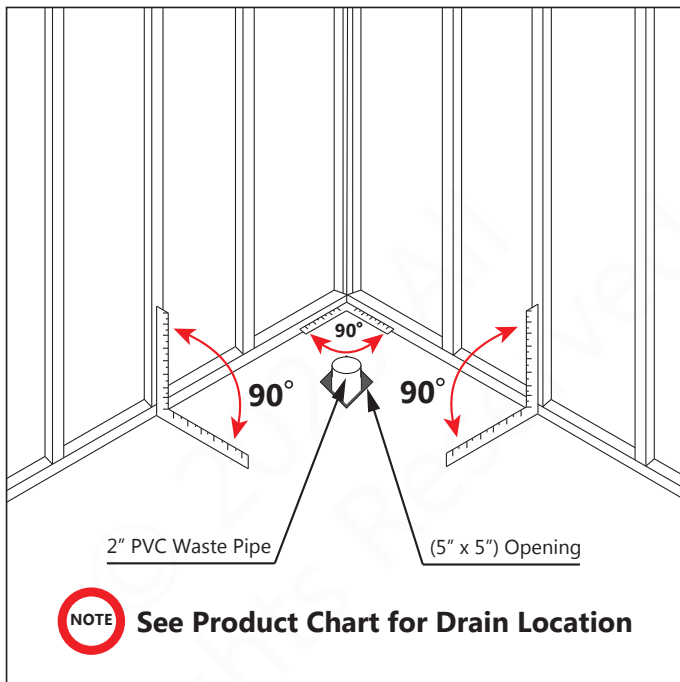1**Corner Installation****Fig 1a**

- Ensure that the floor and the studs are at right angles.
- Provide a 5" x 5" opening in the sub-floor for the drain.
- The 2" PVC waste pipe should extend above the surface of the sub-floor according to the drain installation instructions and the height of the shower base.
- Refer to the product drawings and tables in this installation manual for the drain location (**Fig 1a & Fig 1b**)



**Sub-floor must
be leveled before
beginning the
shower base
installation!**

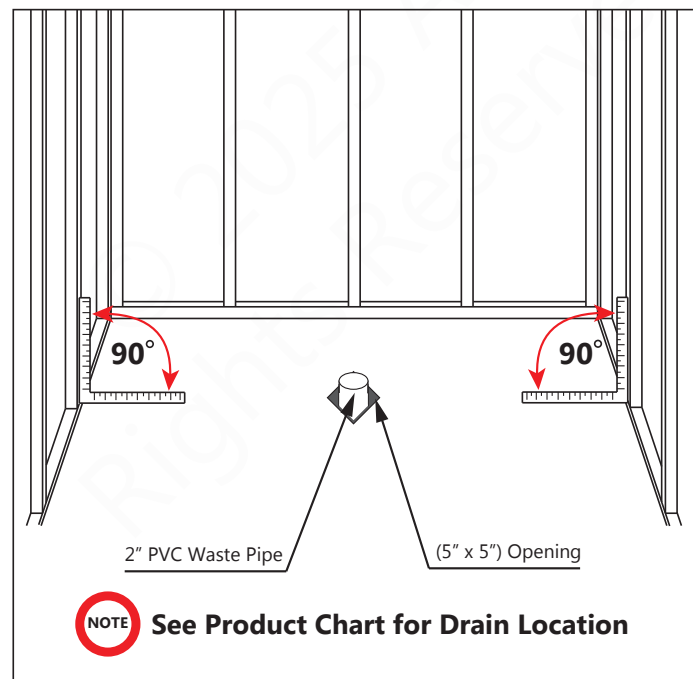Alcove Installation**Fig 1b**

2



This shower base is designed to accept a standard 2" shower drain.



Please carefully read and follow all the installation instructions and requirements that come with the drain assembly you use for this shower base installation.

Install the shower drain according to the drain installation manual (supplied with the drain), then place the shower base into the designated position so that it butts up against the studs and the drain cutout drops around the drain pipe



If your shower drain requires plumbers putty for installation, you **must** use an acrylic-safe plumbers putty on this shower base to prevent damage and/or staining of the shower base. Please read the plumbers putty specifications carefully before applying plumbers putty to the shower base.

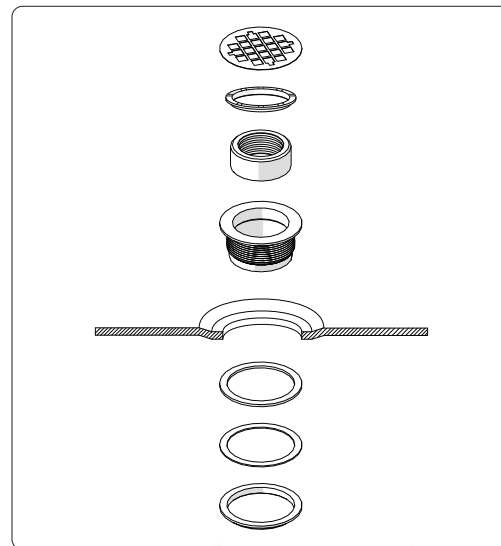


Fig 2a

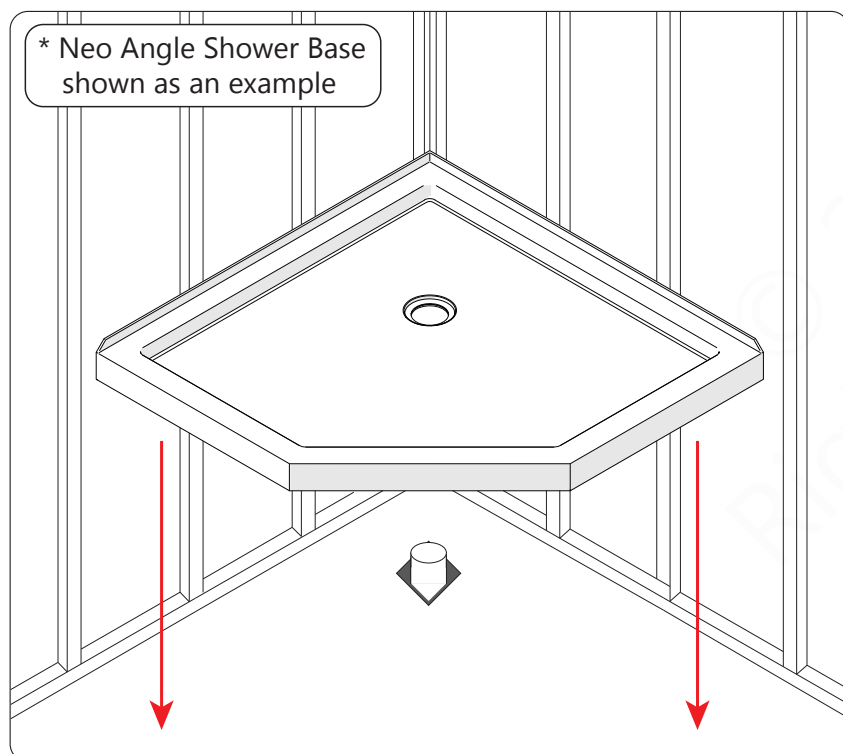


Fig 2b

Lower the base over the drain pipe and set it into place against the studs.

Level the base in two directions (left-to-right, and front-to-back). Once the base is perfectly level, place marks on the studs above the upper edge of the tile flanges.

NOTE: For proper drainage, the shower base **must** be installed level on **all** sides.

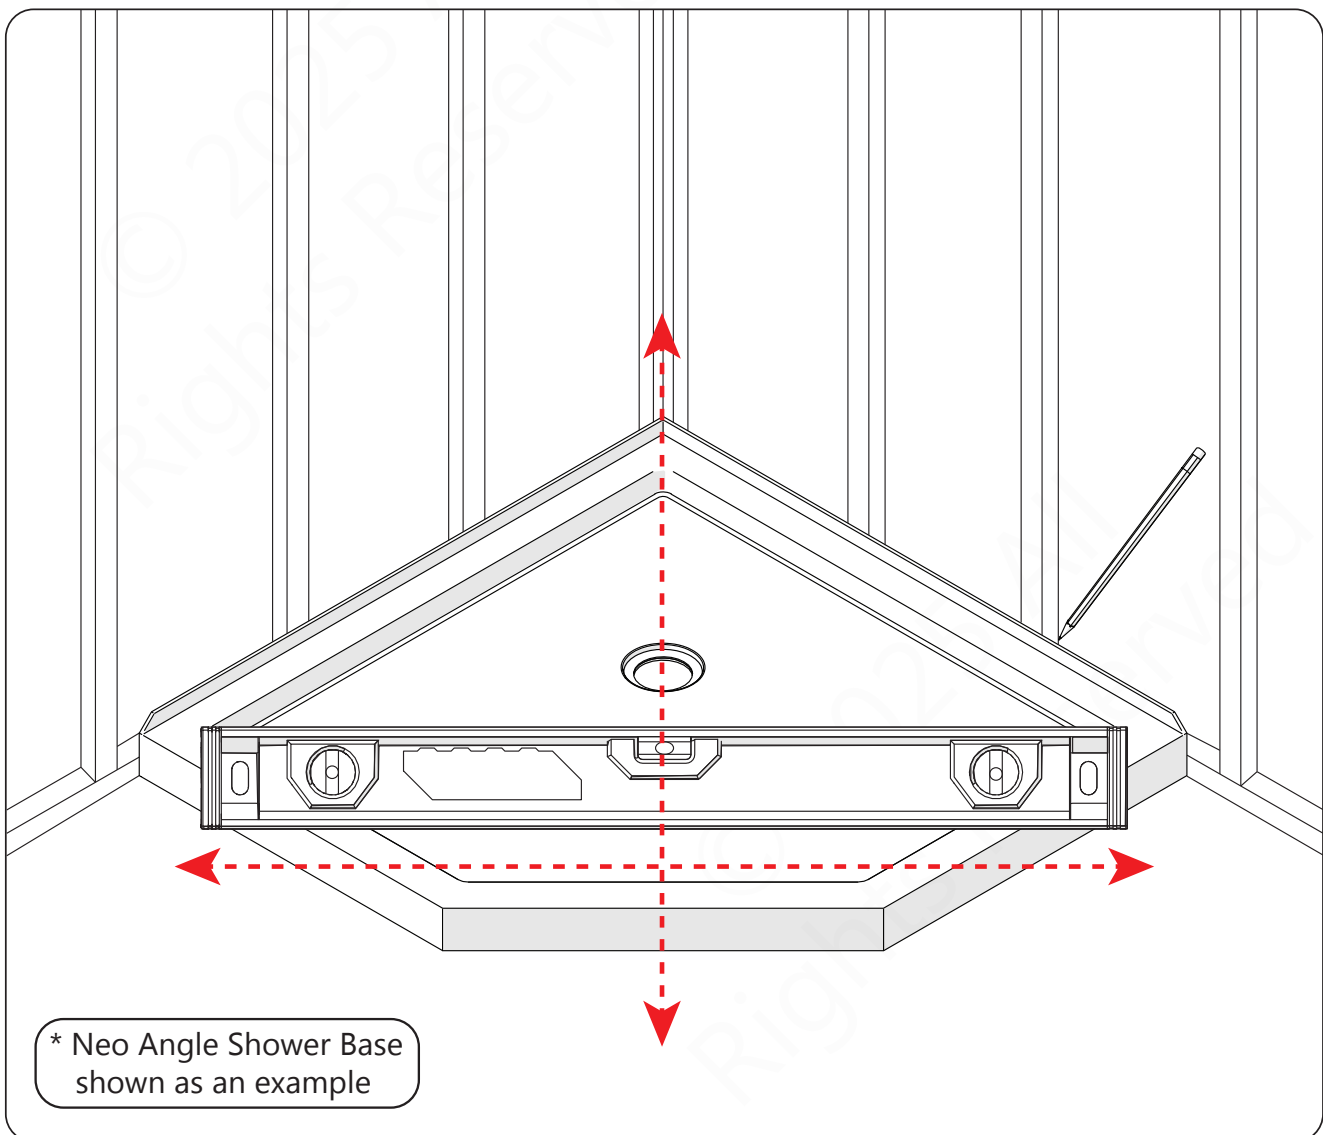


Fig 3

4.1

INSTALLATION OPTION # 1 INSTALL SHOWER BASE IN A BED OF MORTAR (Recommended Installation Method)

NOTE

A sand-mix, topping/bedding mortar type is recommended for installation of this shower base. **Do Not** use concrete or plaster.

Carefully read the mixing directions on the bag of mortar. Mix the bedding material accordingly, then spread it onto the sub-floor. Apply enough bedding material to support the entire bottom of the shower base. This will provide additional stability and prevent the base from shifting position.

(Fig 4.1a)

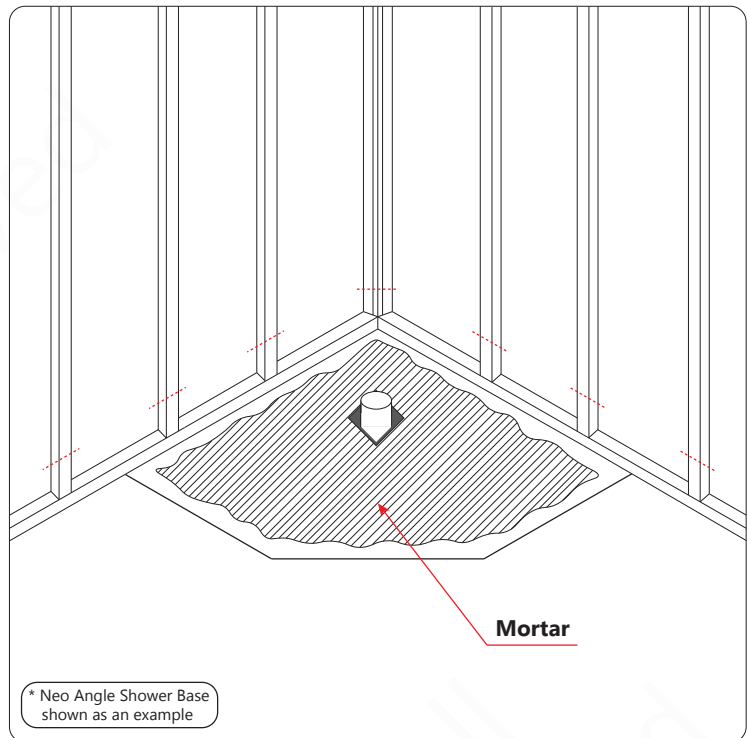


Fig 4.1a

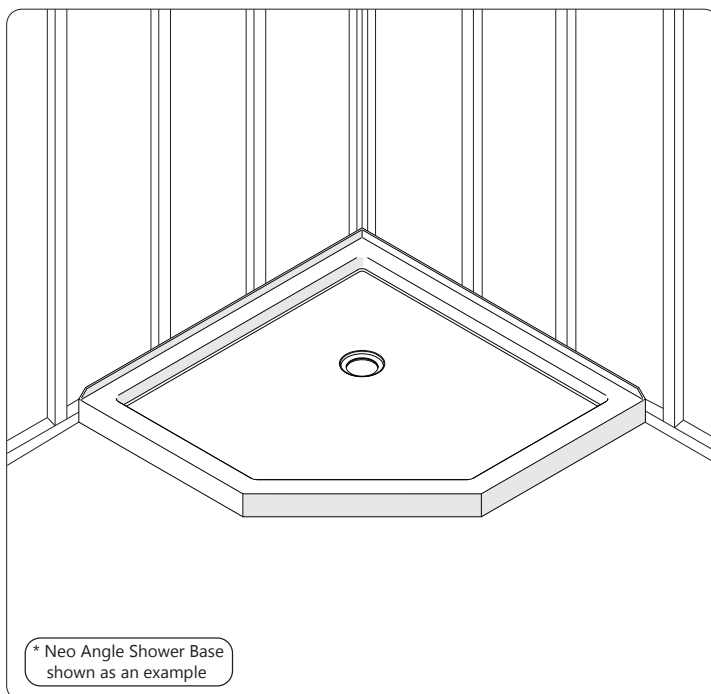


Fig 4.1b

After the bedding material has been poured and before it sets, place the shower base into position with the drain assembly sliding over the PVC waste pipe. It will be necessary to push the shower base down until the top edges of the tile flanges align with the marks drawn on the studs and the front edge is contacting the sub-floor along the entire length of the shower base. Ensure that the base is level in all directions. You may need to use shims to hold the base level until the bedding material fully sets and hardens. Remove all excess mortar.

(Fig 4.1b)

4.2

INSTALLATION OPTION # 2 INSTALL SHOWER BASE WITH SCREWS AND ADHESIVE



The shower base must be installed on a level sub-floor. If installation option # 2 is selected and the sub-floor is not level, self-leveling compound can be used to level the sub-floor prior to installation.



IMPORTANT! Be sure to follow **all** recommendations and guidelines provided by the manufacturer of the self-leveling compound to ensure best results and **always** check the sub-floor for level after the product has cured to confirm the floor meets the shower base installation requirement for a level sub-floor. **DO NOT** proceed with shower base installation until it is confirmed that the sub-floor is level.

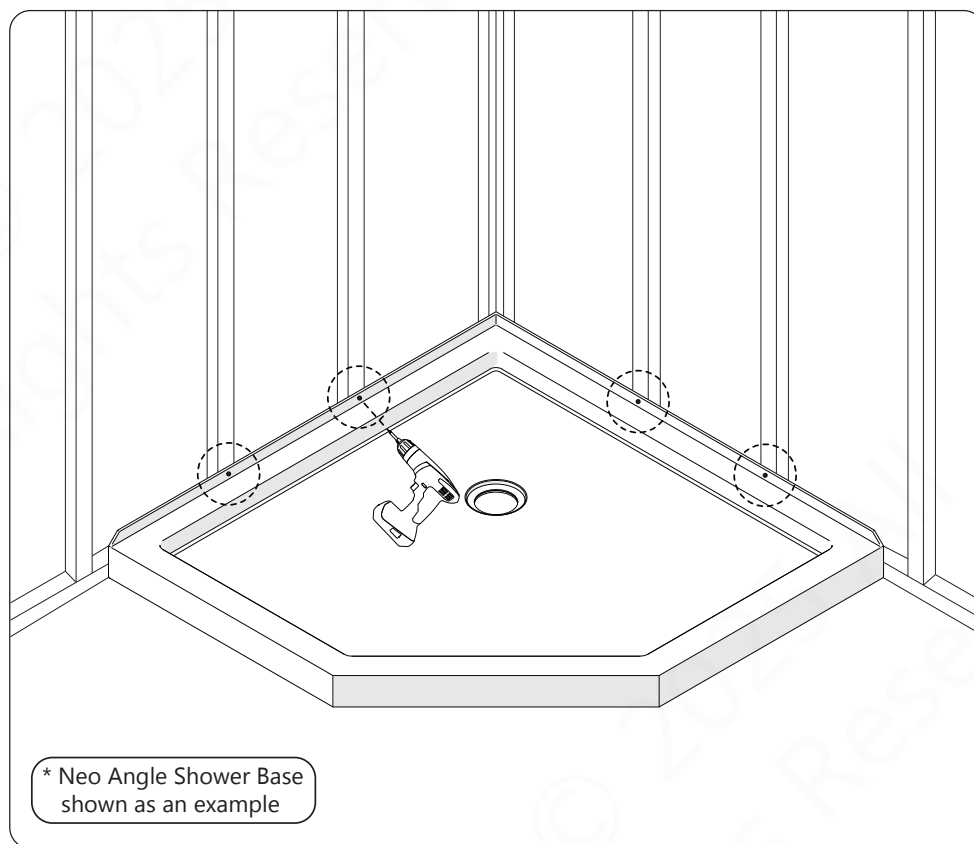


Fig 4.2a

Once it is confirmed that the shower base is level, fit the base into the opening and butt the tile flanges directly up to the studs so that the base is now positioned in its final installation location. Using a 3/16" drill bit, carefully drill holes in the tiling flanges making sure that the hole locations will align with the centers of the studs. Remove the shower base from the opening once all of the holes are drilled.

4.2 (CONTINUED)



The adhesive used for this step must be an acrylic-safe adhesive. Please carefully read the packaging of the adhesive to be sure it specifies it is safe for use on acrylic and ABS plastic

Apply several tubes of acrylic-safe construction adhesive to the sub-floor making sure to thoroughly cover the area where the base will be installed. **(Fig 4.2b)**

NOTE: The total number of adhesive tubes will depend on the size of the shower base you are installing. Please read the coverage guidelines on the adhesive packaging to help determine how much adhesive you will need to purchase for your installation.

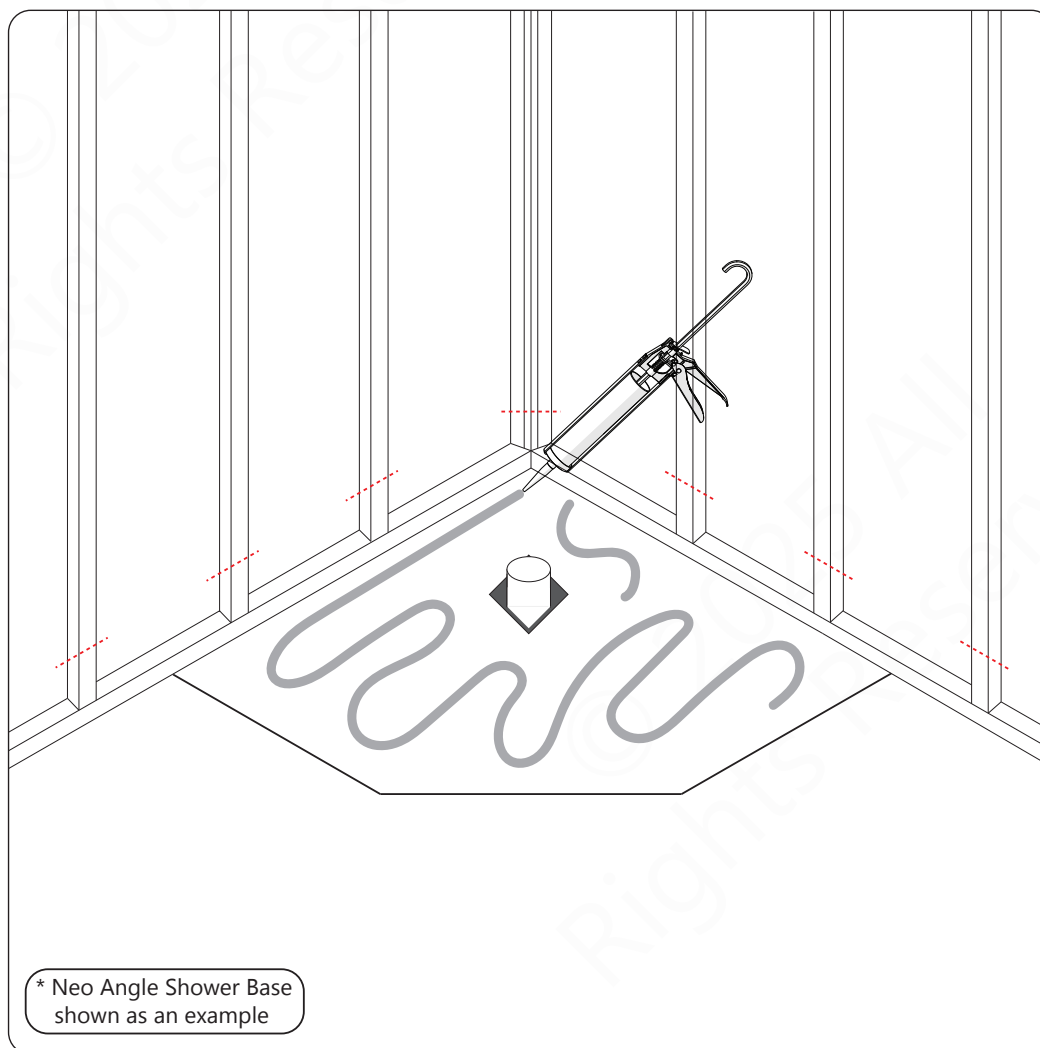


Fig 4.2b



Use a "U" or square notched trowel to spread the adhesive evenly.

4.2 (CONTINUED)

Install the shower base back into the opening and firmly press it down into the adhesive making sure the tile flanges are butted up to the studs and making sure the shower base is level on all sides.

IMPORTANT! Make sure the shower base remains level the entire time as you perform the next step.

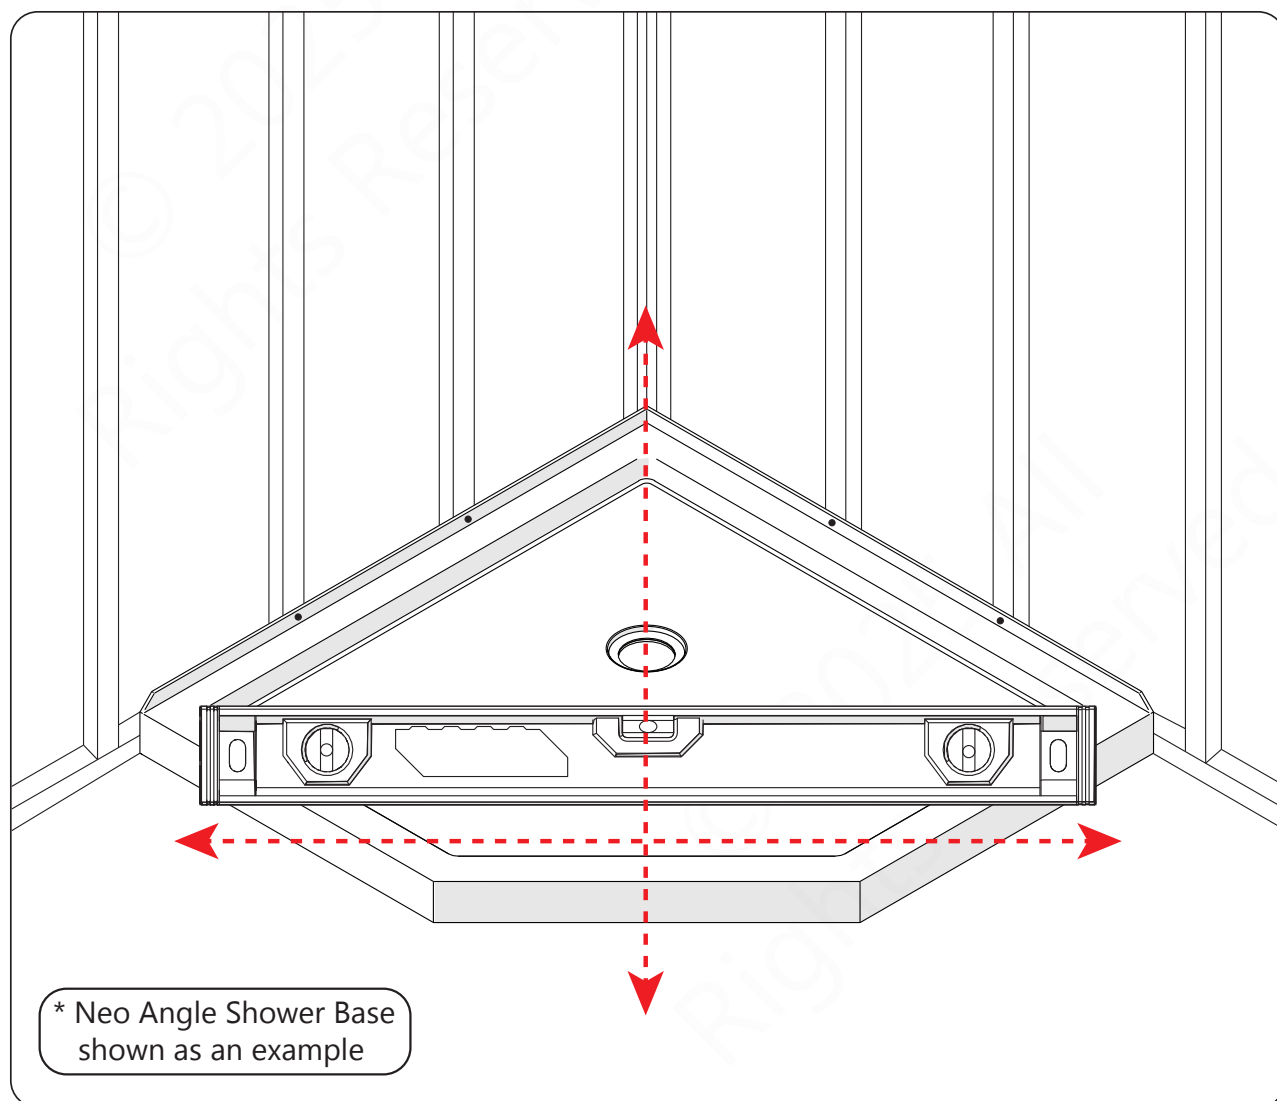


Fig 4.2c

4.2 (CONTINUED)

There may be some parts of the tile flanges where there is a slight rim that creates some dead space between the stud and the base. Use small wooden shims between the flanges and the stud in any area where this small void is apparent. Make sure the wooden shim is placed below the rim of the tile flange and that the shim only fills the dead space (see **Side View - Fig 4.2d**).

Carefully fasten the tile flanges to the studs with the 1-1/4" Stainless Steel Corrosion-Resistant Truss Head #8 Screws. To avoid the risk of cracking the shower base, **Do Not** over-tighten the screws.

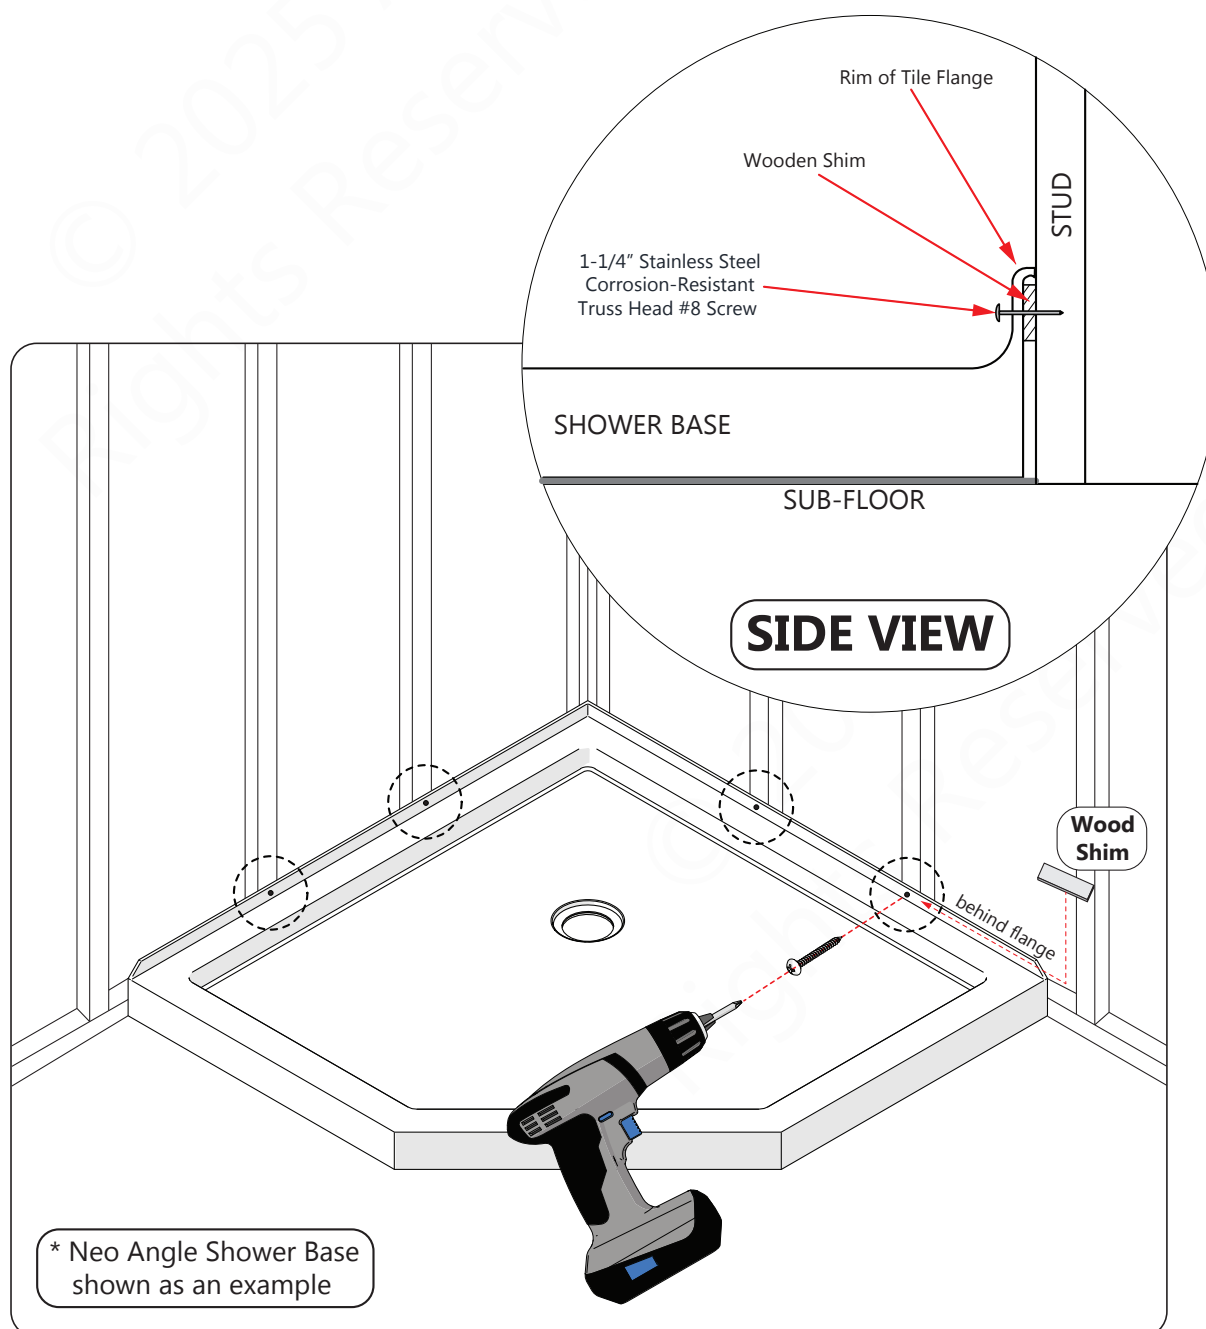


Fig 4.2d





5


NOTE

If you used installation option # 1, allow the mortar to completely cure and harden before applying weight to the bottom of the shower base.

Install the cement board (or wallboard) above the tile flanges and secure it to the studs

Put the tiles (or other finishing wall material) over the cement board leaving a 1/8" gap between the bottom of the tile (or wall kit) and the shower base. Use 100% silicone caulk to fill the gap.

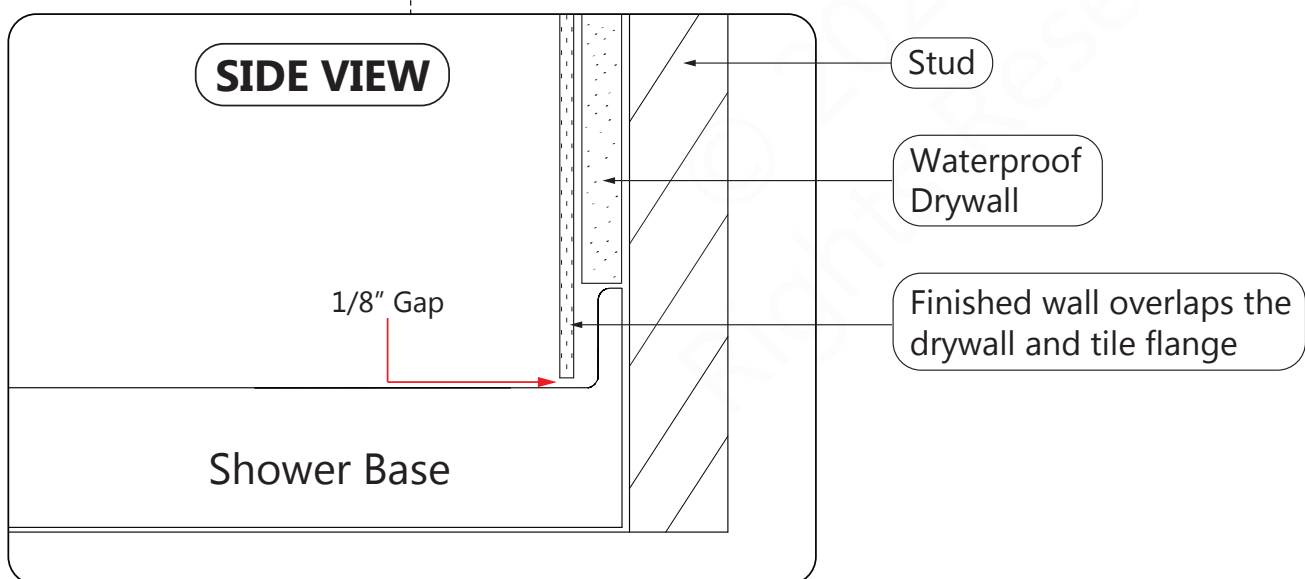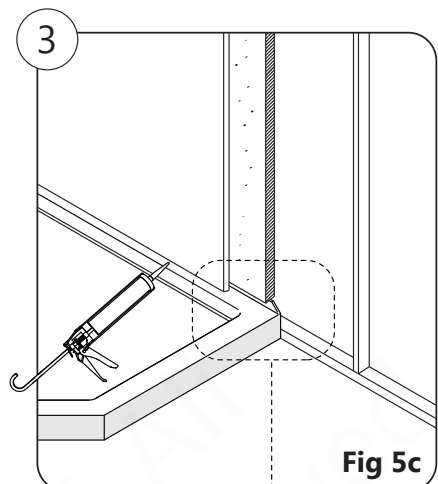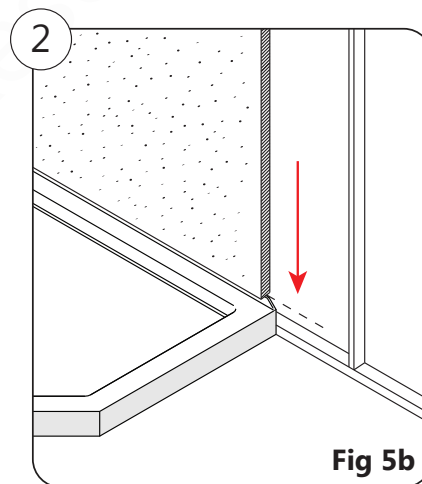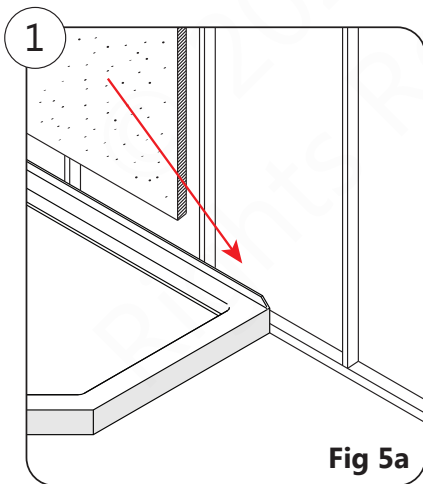

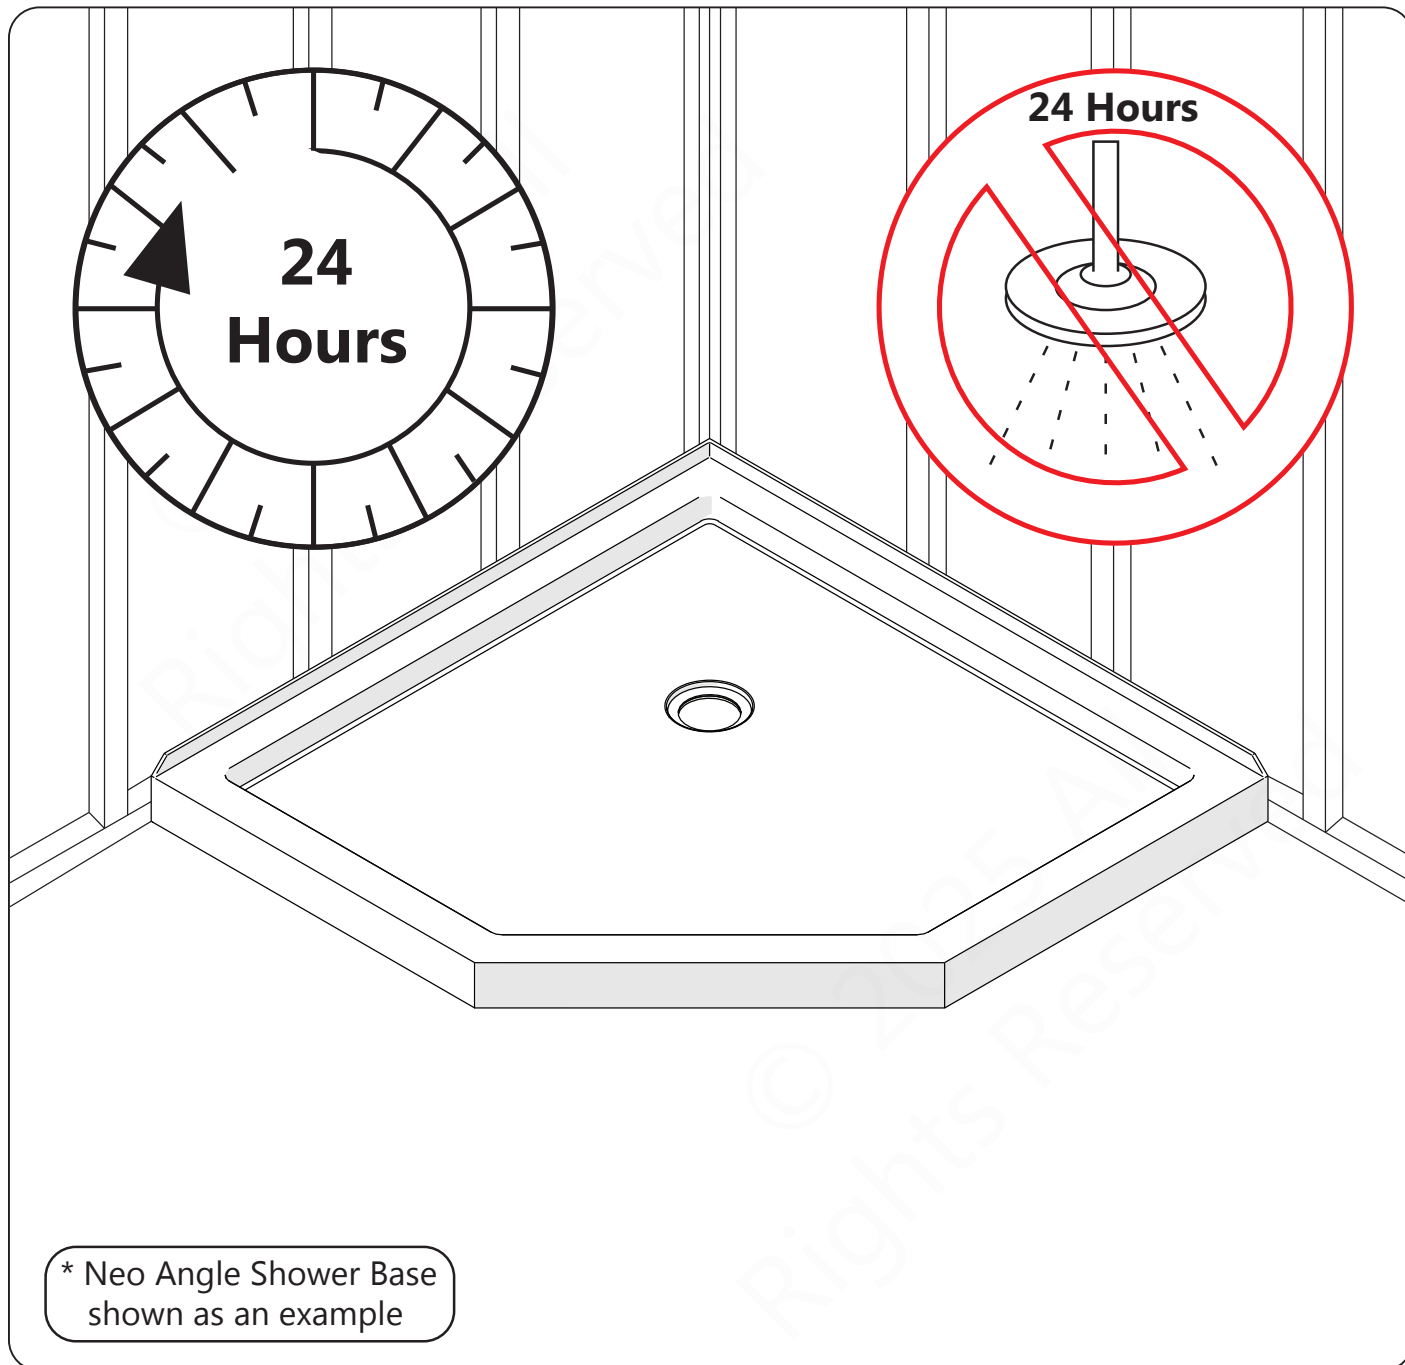

Product Maintenance

ACRYLIC BASES and BACK WALLS: To ensure long-lasting life for your acrylic base and/or back walls, wipe them off after each use with a soft cloth. To clean the acrylic base and/or back walls, use only non-abrasive sprays or cream-based cleaners. Avoid the use of aerosol spray cleaners. Never use abrasive cleansers, metal brushes, or scrapers that could scratch, damage, or dull the surface.



IMPORTANT!

The product owner should keep this installation manual for their records so they have it for future reference.

If you are a contractor installing this unit for a customer, it is recommended that you complete the section below, cut it out of the manual with scissors, then leave the rest of the manual with your client.

Contact the manufacturer directly for more information on warranty, troubleshooting, replacement parts, customer support, etc.



Record the following purchase information for your records or in the event you need to contact the manufacturer:

Purchase Order
Number _____

Store/Vendor
Purchased From _____

Installation Date _____


OD Number
(optional) _____

*found on the shipping box
or label if available

Installed By _____

SKU Number _____

Low Profile Acrylic Shower Base

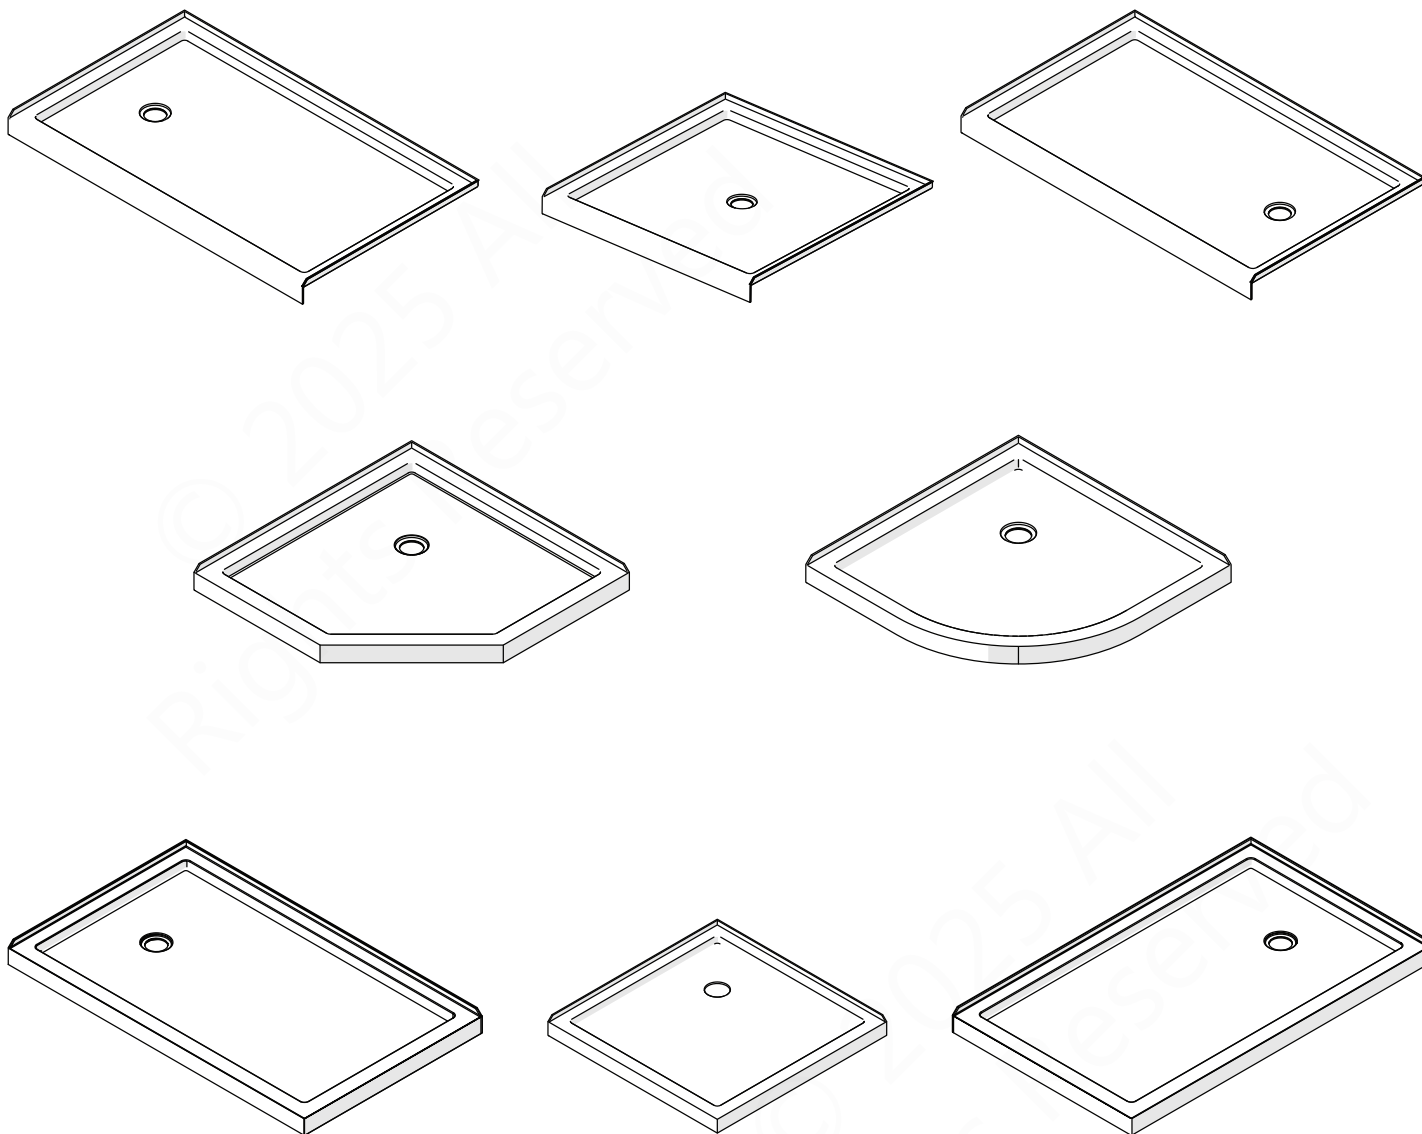

Prior to contacting the manufacturer, please have the following information readily available:

- Purchase Order information
 - Name, PO Number, Dealer/Vendor Name, etc.
- SKU/Model Number
- Factory Part Information


IMPORTANT!

The manufacturer reserves the right to alter, modify, or redesign products at any time without prior notice for the purpose of product improvement and customer experience.

DOUBLE SLIDER

SHOWER AND TUB DOOR INSTALLATION INSTRUCTIONS

PLEASE REVIEW THIS ENTIRE MANUAL PRIOR TO INSTALLATION

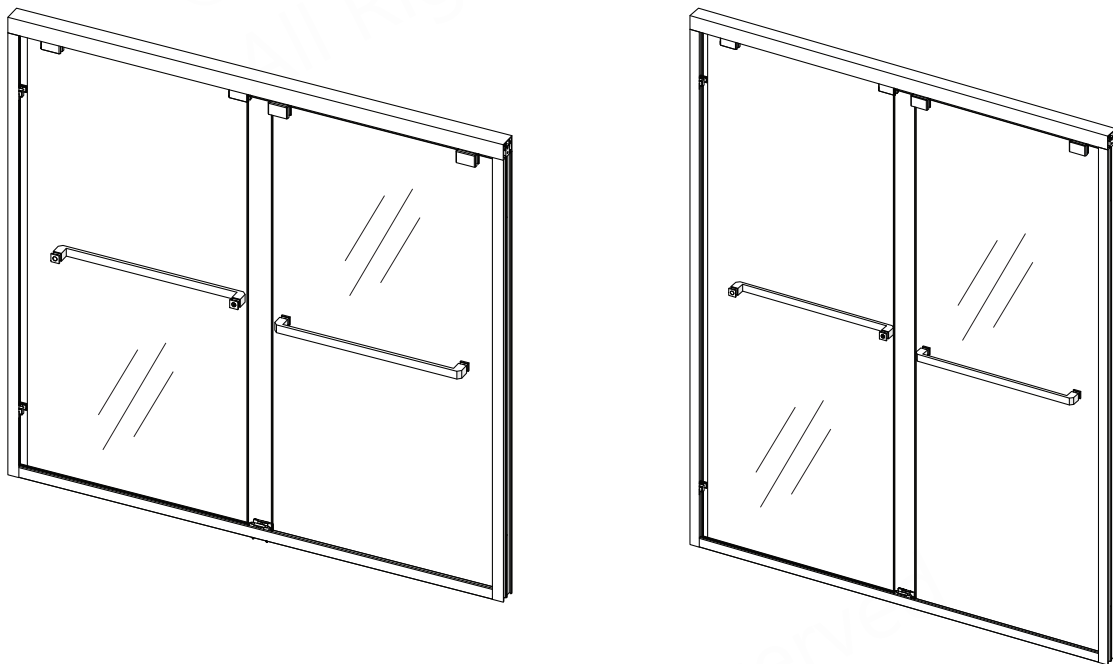

##=Finish Options

- 01 - Chrome
- 04 - Brushed Nickel
- 05 - Brushed Gold
- 06 - Oil Rubbed Bronze
- 09 - Matte Black

IMPORTANT!

The manufacturer reserves the right to alter, modify or redesign products at any time without prior notice for the purpose of product improvement and customer experience. Please refer to the manufacturer's web page for the latest technical drawings, installation manuals, warranty information or additional product details.



This model is treated with a specially formulated coating that helps reduce the appearance of soap build-up and water spots.

For this specific model, the protective coating will only be on one side of the glass which will be marked with a removable sticker.

Install the surface with the sticker towards the inside of the shower.

Do not remove sticker until the glass is installed.

For best results, squeegee the glass after each use and dry with a soft cloth.



Do not remove the stickers until glass is installed.

Record the following purchase information for your records or in the event you need to contact the manufacturer.

Purchase Order
Number _____

Store/Vendor
Purchased From _____

Installation Date _____

OD Number
(optional) _____
*found on the shipping box or label if available.

Installed By: _____

SKU Number _____

Table of Contents

Section Title	Page #
Protective Coating Information	—
Warnings and General Preparations	2
Model Specific Preparations	3
Tools	4
Detailed Diagram of Shower Door Components	5
Parts List	6-7
Installation Steps	8-21
Towel Bar Installation	20
Product Maintenance	22
Troubleshooting	23
Roller Assembly Adjustment Procedure	21
Factory Parts Information	24-27

Symbol Legend



TIP - for ease of installation.



CORRECT - recommended.



NOTE - take note of special feature; additional information.




INCORRECT - not recommended.



REQUIRED - requires special attention; signifies a warning.

Average Installation Time

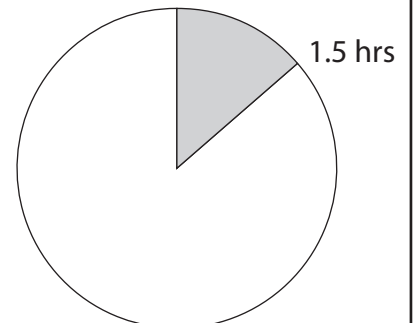

Important Product Information

IMPORTANT

- The manufacturer reserves the right to alter, modify or redesign products any time without prior notice for product improvement and customer experience. Please refer to the manufacturer's web page for the latest technical drawings, installation manuals, warranty information or additional product details.
- This product should be installed by someone familiar with the construction requirements for this type of project and the care necessary for the safe installation and operation of the product.
- The safety of any installation is the responsibility of the installer.
- Professional installation recommended. (*All Models*)
- Professional installation required. (*Enigma Series*)
- To prevent damage or serious injury, Do Not lean against the installed panel/door/glass.
- To prevent damage or serious injury: Do Not attempt to lift or move a heavy lite of glass alone. Use an assistant and/or a professional grade glass suction cup.
- The installation of some models may require drilling down into the threshold. Contact the manufacturer of the base, tub, or threshold material with any questions regarding the drilling of holes into their product.
- All drawings in this installation manual are for illustrative purposes only and are not drawn to scale.

TEMPERED GLASS WARNING

- Your Shower Door Glass Could Shatter Without Warning if Improperly Installed or Mishandled
- Do Not install or operate a shower door if the glass has chipped corners, slivered edges or is otherwise damaged and/or has been dropped or banged into a hard surface such as tile, marble or glass.
- **The main causes of tempered glass breakage are:**
 - Improper handling, storage or installation
 - Misuse/abuse
 - Lack of maintenance
 - Failure to replace damaged glass
 - **Improper handling during storage, unpacking and installation:**
 - Corners and edges are the most susceptible area to damage on a lite of tempered glass and should be protected and handled with care during storage, unpacking, installation and operation. A concentrated point of pressure or impact with a surface harder than itself may cause the tempered glass to shatter. The tempered glass may release immediately, within several hours or even days later.
 - **Incorrect installation of door hardware, rollers, hinges, channels, stopper or glass:**
 - Improper installation may include: loose hardware and/or lack of proper gaskets between the hardware and glass. Additionally, improper alignment of guide rails, wall profiles or other hardware during installation or operation may place stress on the glass edges and cause it to break.
 - This product must be installed by a professional and experienced installer familiar with the safe handling of tempered glass.
 - **Improper use of this product:**
 - Aggressively opening or closing the door may cause trauma to the glass, which can lead to breakage. This may occur immediately or hours or even days later.
 - **The shower door hardware and glass should be inspected periodically:**
 - Instruct the homeowner how to perform a periodic inspection of the shower hardware and glass - some minor adjustments may be necessary based upon the use (or misuse) of the shower door. Ensure that the hardware remains tight and that the door alignment and operation are correct. Any adjustments should be made upon discovery to prevent damage to the product.
 - Additional considerations should be given to the installation of frameless tempered glass products in households with young children or an elderly person due to an increased chance of improper handling. In such cases, alternatives such as shower curtains or grab bars should be considered.

GENERAL PREPARATION

- After opening all boxes and packages, read this introduction carefully. Check that all the items are included in the package by marking off the components on the "**Detailed Diagram of Product Components**" page. Examine all boxes and packages for shipping damage. If the unit has been damaged, has a finishing defect, or is missing parts; please contact our Customer Support department within 3 business days of the delivery date. **Please note that the manufacturer will not replace any damaged products or missing parts free of charge after 3 business days or if the product has been installed.** Please contact the manufacturer if you have any questions.
- **Please note that you should refer to your local building codes with questions on installation compliance standards. Building and plumbing codes may vary by location, and the manufacturer is not responsible for code compliance standards for project and will not accept any returns.**
- If this unit is going to be installed in a new construction, install all the required plumbing and drainage before installing the shower. **Use a competent and licensed (if required by local code) plumber for all plumbing installation.**
- Make sure that prior to beginning the installation, the surfaces are leveled and solid and will be able to support the total weight of the unit. Also make sure the walls are at right angles. Irregular installation surface level, radius corners or improper angle of side walls will result in serious problems for your installation. Please note that some adjustments and drilling will be necessary during the installation process.
- Protect all primary surfaces of the product during installation. Never set your glass down directly onto a tile floor. Leave corner protectors in place until it is necessary to remove them. Always use a piece of wood or cardboard to protect the bottom edge and corners of the glass prior to and during installation.
- This unit must be installed upon a finished threshold and against finished walls.
- *These shower doors are not designed to be installed into a fiberglass surround due to the radius corners and lack of a solid surface to mount the hardware.*

WARNING: TO AVOID THE RISK OF DAMAGE OR INJURY:

- **Follow all recommendations and requirements as shown in the installation instructions.**
- Perform a thorough inspection of the glass and all parts for any damage prior to installation. Any damage to tempered glass can cause breakage. **Do Not install damaged glass!**
- Do Not install or operate a shower or tub door if the glass has chipped corners, slivered edges or is otherwise damaged. Do Not install or operate a shower or tub door that has been dropped or banged into a hard surface such as tile, marble or glass.
- **CAUTION:** Contact with any hard surface can damage tempered glass and cause it to shatter.
- This product uses tempered glass. Glass cannot be cut after it has been tempered. **Do Not attempt to cut tempered glass.**
- Glass Shower doors, Tub doors, Inline panels, and Return panels can shatter due to improper handling or lack of maintenance. Conduct periodic inspections of glass and all parts for possible damage, missing or loose parts.
- Always wear proper safety equipment such as: safety goggles, work gloves and appropriate footwear during the installation process.
- **WARNING. Risk of leakage and/or damage.** Follow all instructions regarding the application of silicone sealant or caulk. Allow 24 hours for the sealant to cure before the initial use of the shower or tub product. Follow the silicone manufacturer's recommendations regarding the use of their product.
- **Thoroughly read these instructions before installing or using this product.**
- **Leave this manual for the end-user of the product.**




This product should be installed by someone familiar with the construction requirements for this type of project and the care necessary for the safe installation and operation of the product.



Model Specific Preparation

! REQUIRED:


3/8" Out-of-Plumb Adjustment; Verify threshold and walls with a level

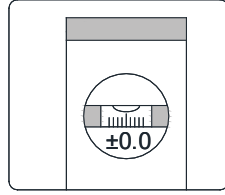

Threshold must be level

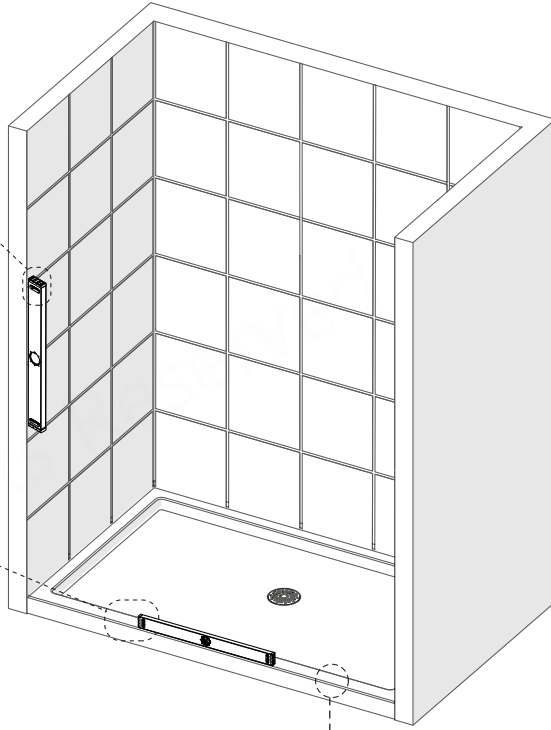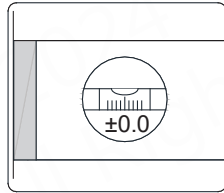


DO NOT loosen or detach any part of the **Roller Assemblies (#06)** until instructed to do so later in this manual. Doing so risks damaging the Roller Assemblies and preventing the successful installation of your shower door.


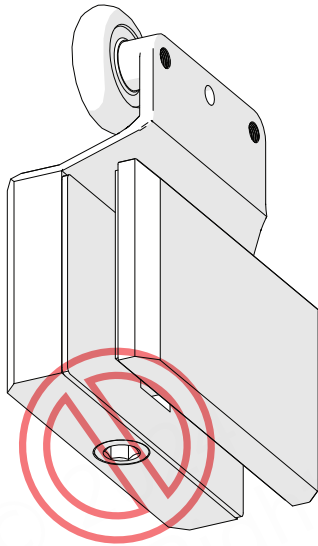


2-1/4" minimum threshold

2-1/4" minimum threshold

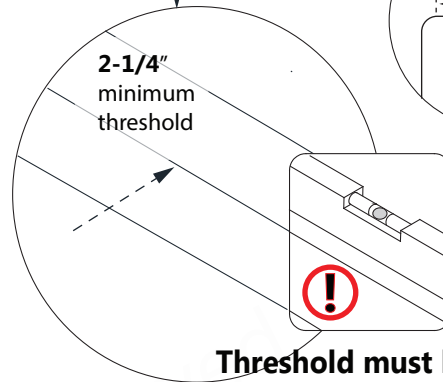

Threshold must be level across the opening and pitched slightly inward

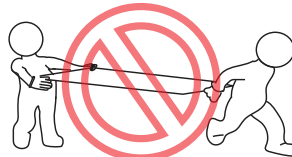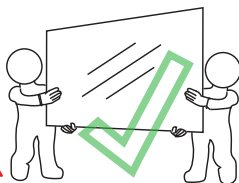


Professional installation recommended. Two installers required.


Tools




Level




Tape Measure




Pencil



Phillips Screwdriver



Silicone

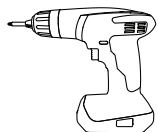

Power Drill



Drill Bit
Ø1/8"
(3mm)




Drill Bit
Ø3/16"
(4mm)




Drill Bit
Ø5/16"
(8mm)



Soft Head Hammer

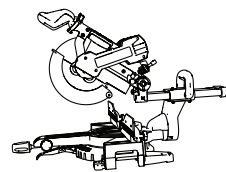

Mitre Saw




Hacksaw



1" thick
wood block



Painter's Tape

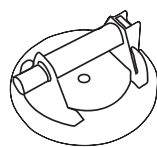

Professional-grade
Glass suction cup



Safety Glasses



Work Gloves



Verify that the correct model size has been ordered; measure the finished opening **before** proceeding with the installation.

Confirm that the finished walls are plumb and the threshold is level and pitched into the shower area.


Use a good quality waterproof, mildew-resistant 100% silicone caulk.

Cover the shower/tub drain with tape prior to installation to prevent the loss of screws or small parts.















Unpack your unit carefully and inspect it. Lay it out and identify all parts using the **Detailed Diagram** on page 5; and packing list in this manual as a reference. Before discarding the carton, check for small hardware bags that may have fallen to the bottom of the box. If any parts are damaged or missing, please contact the manufacturer for replacement. The shipping boxes may contain extra parts not used in your model configuration. Retain these installation instructions for future reference.

Detailed Diagram of Double Slider Door Components

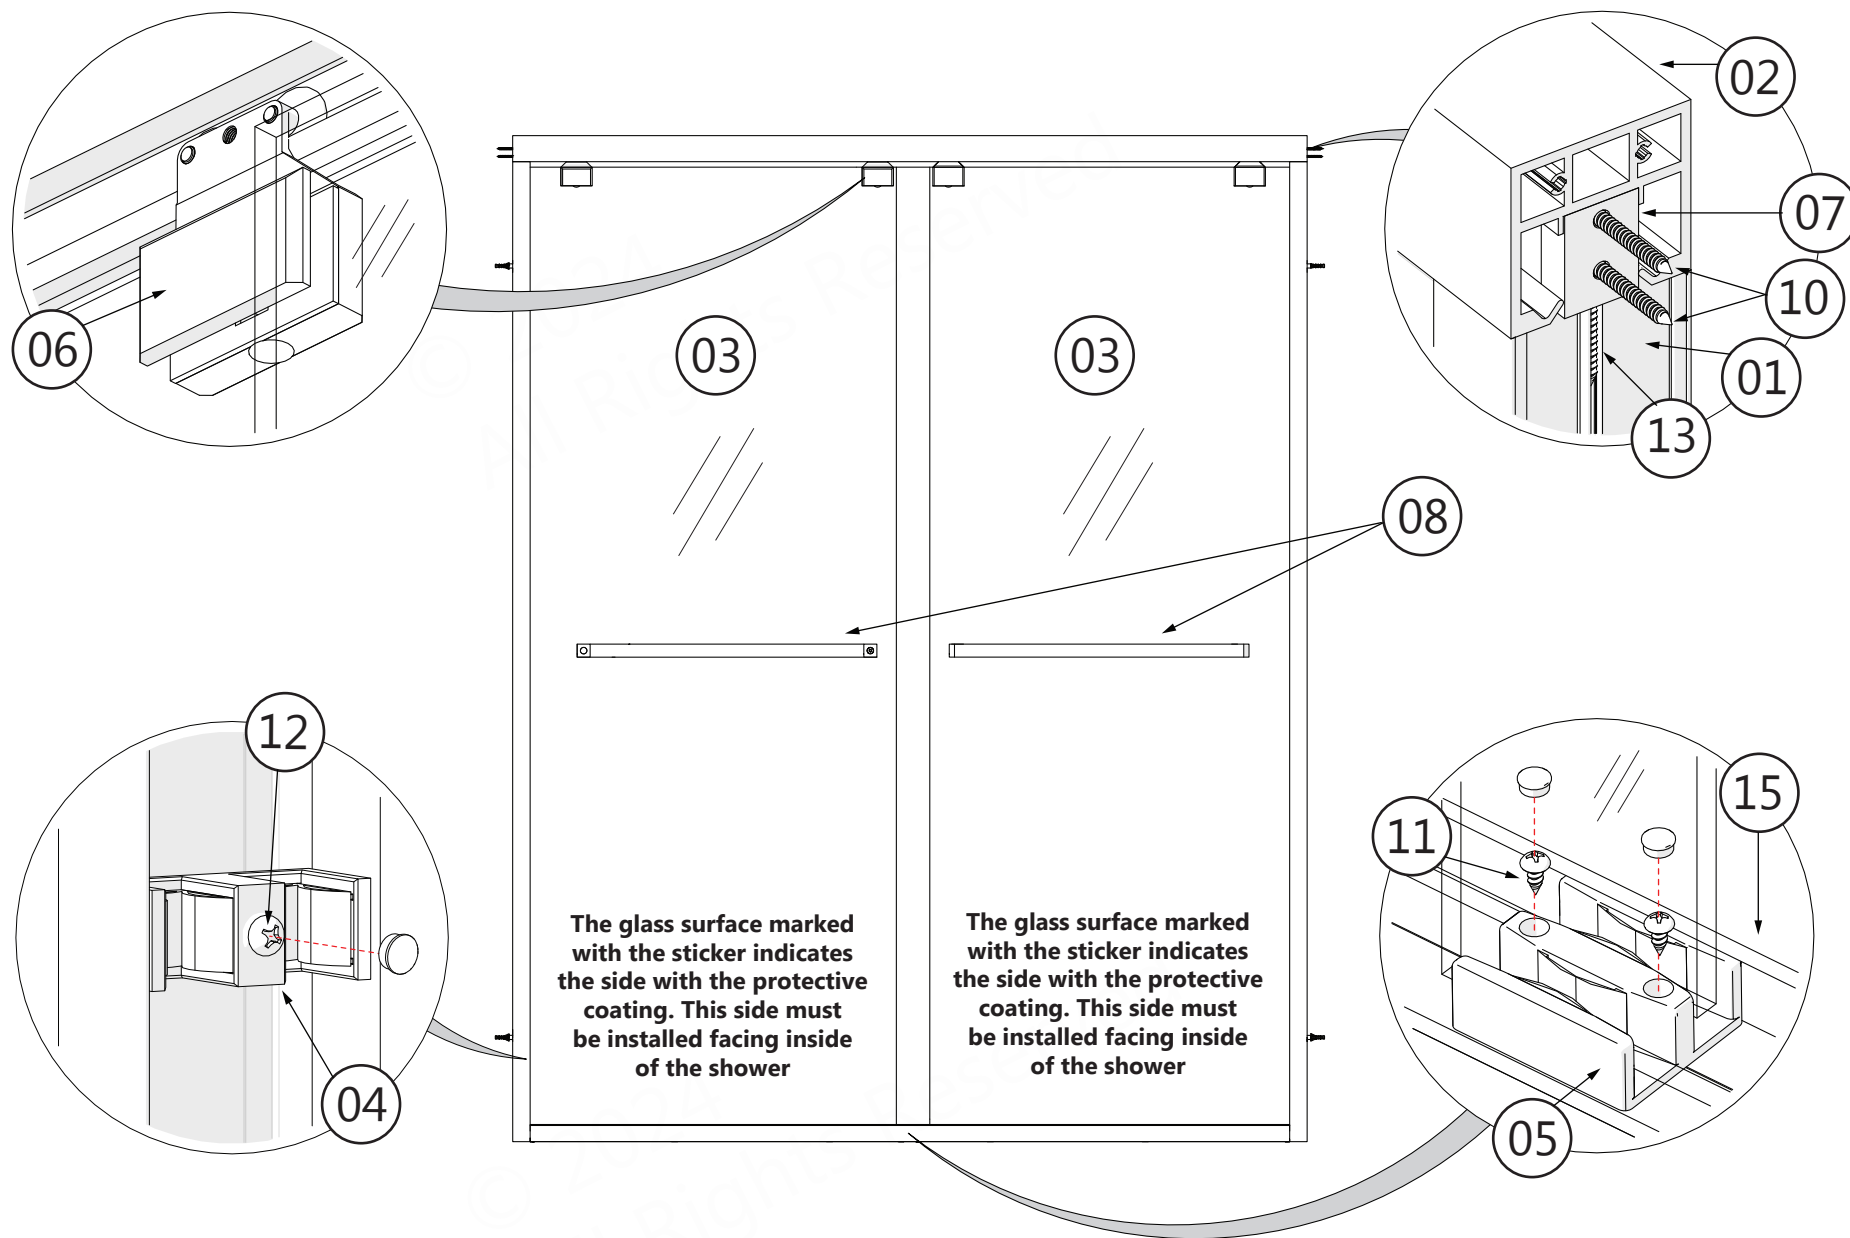


Parts List

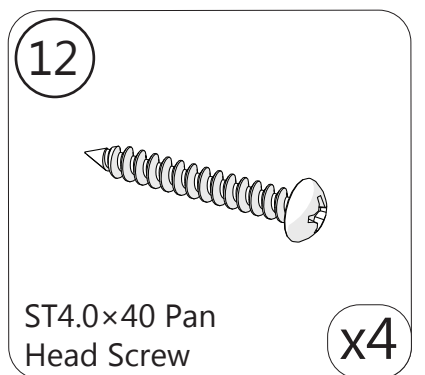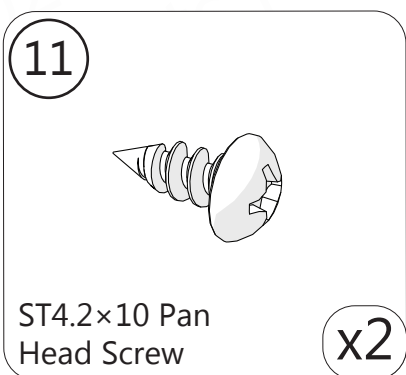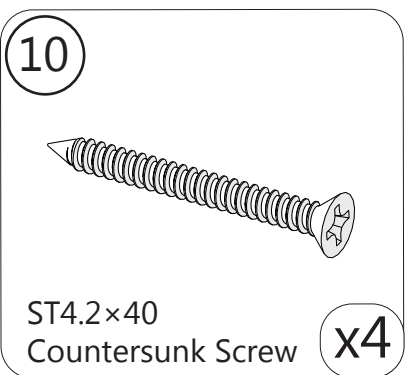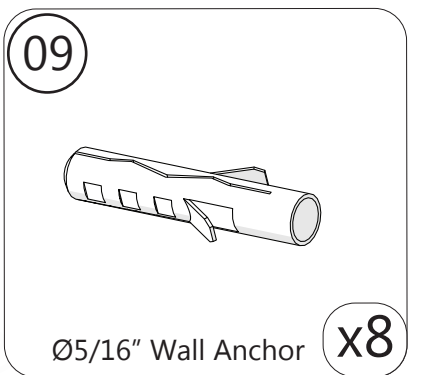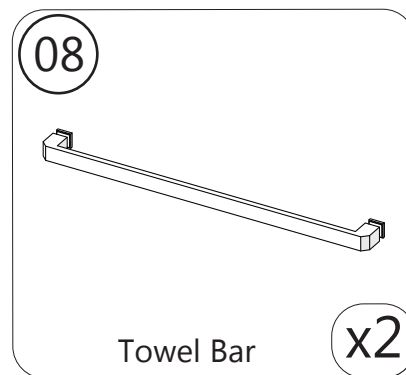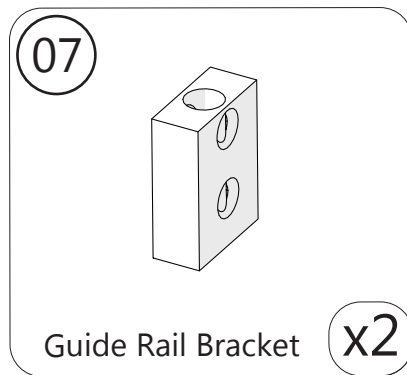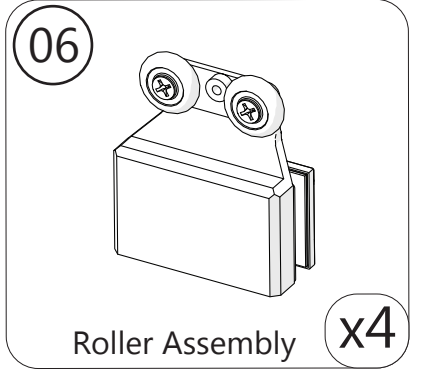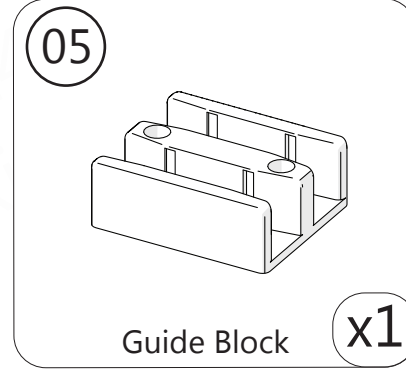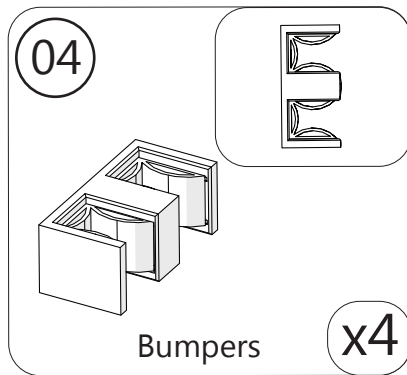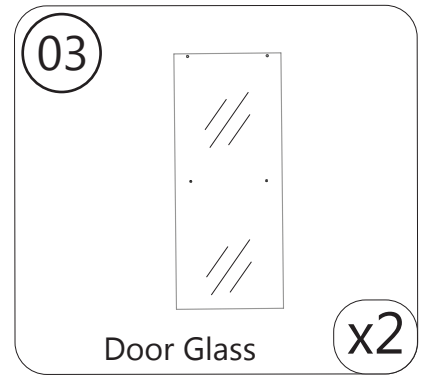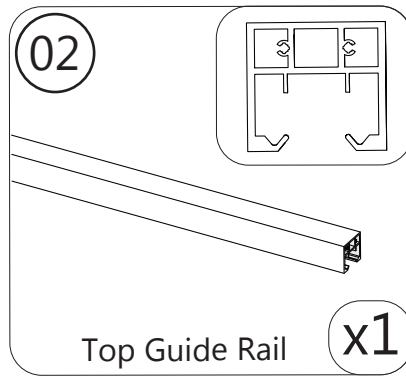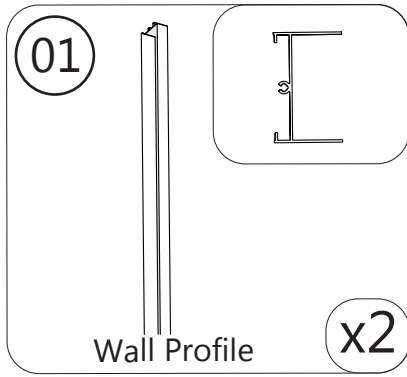

Parts List (Cont'd.)


13



ST4.0×30 Pan
Head Screw

x2


14

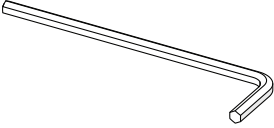

Allen Wrench (3mm)

x1

15

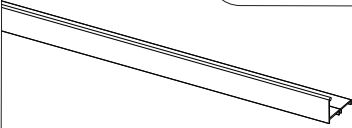


Bottom Guide Rail

x1

1

Checking the Opening

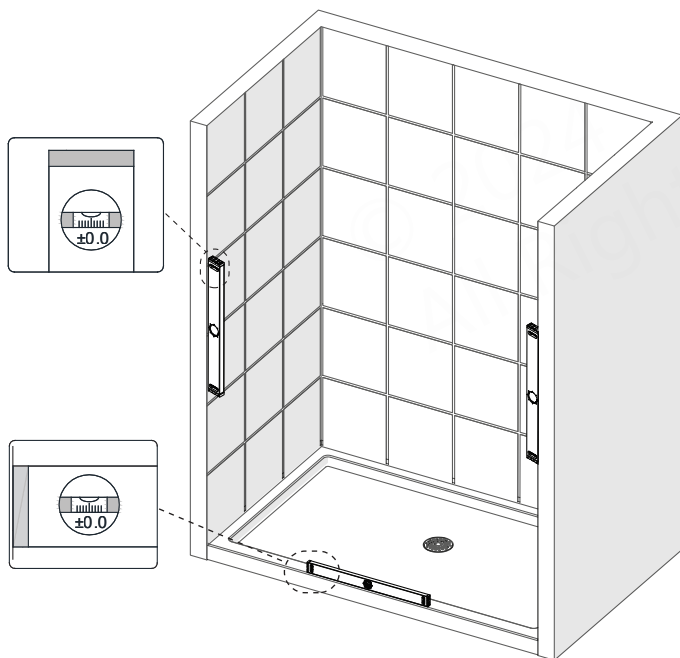

W: Top
*at model height
_____ "

W: Bottom
_____ "


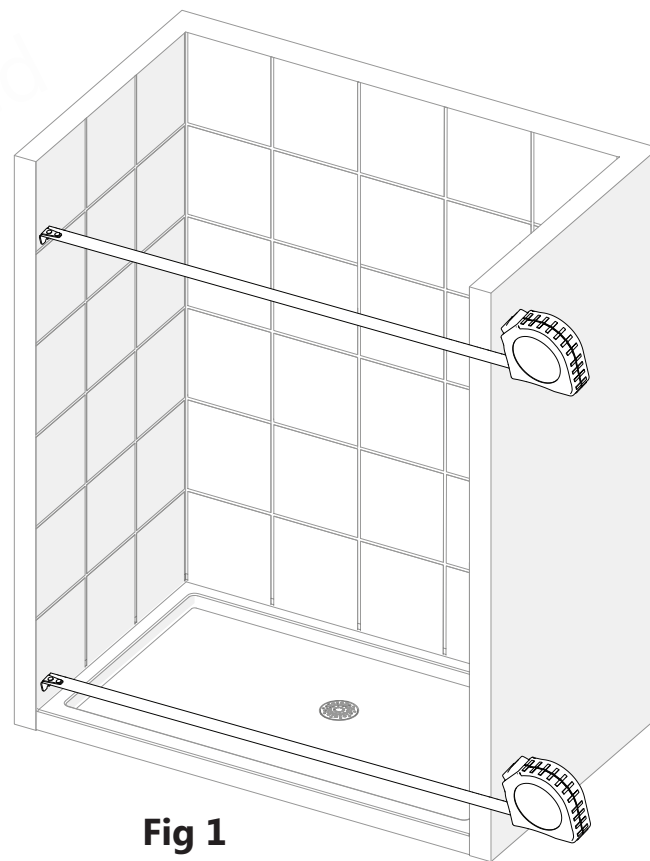


Fig 1

Parts Needed

Tools Needed

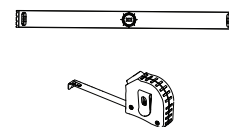

Double Slider Model Height:




Tub door: 58"

Shower door: 76"

NOTE


2

Cutting the Top Guide Rail

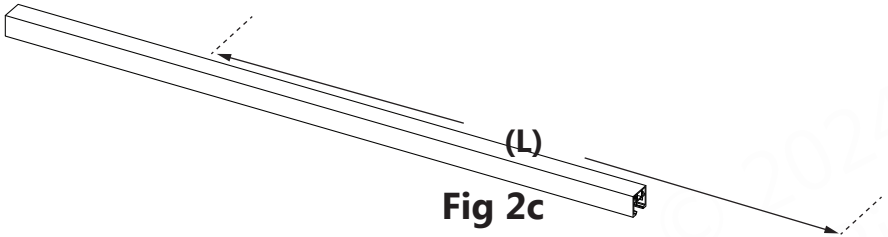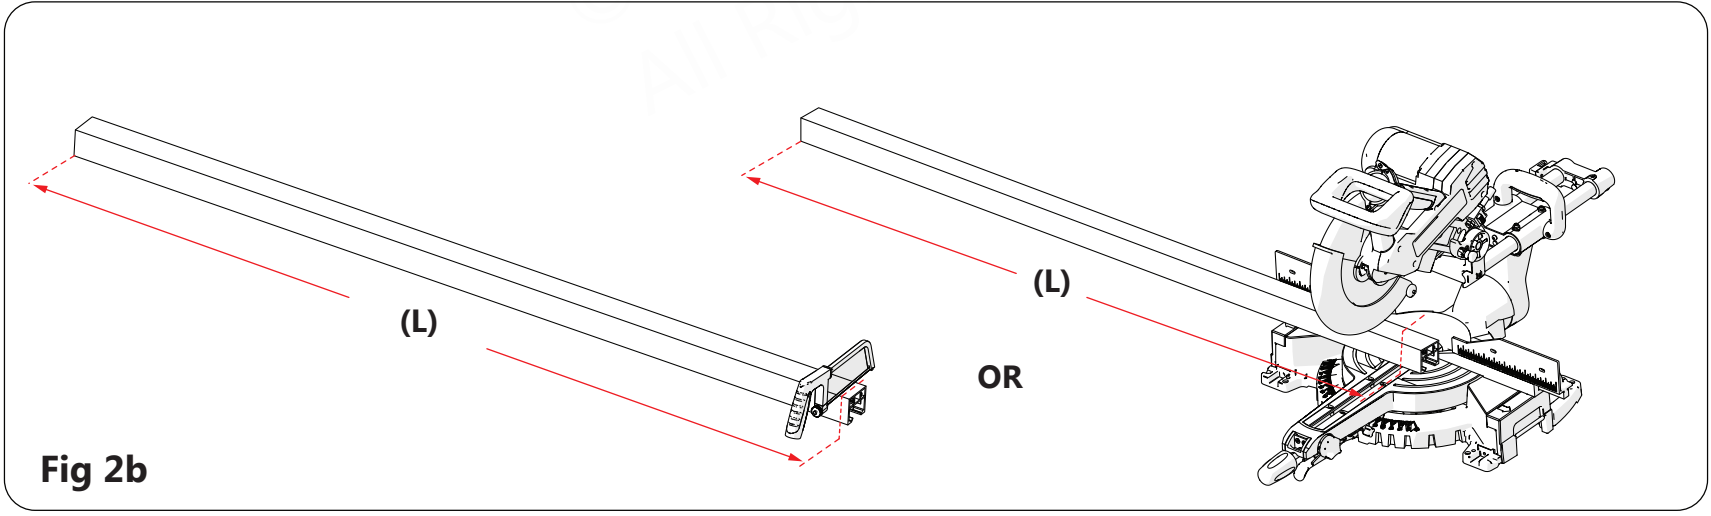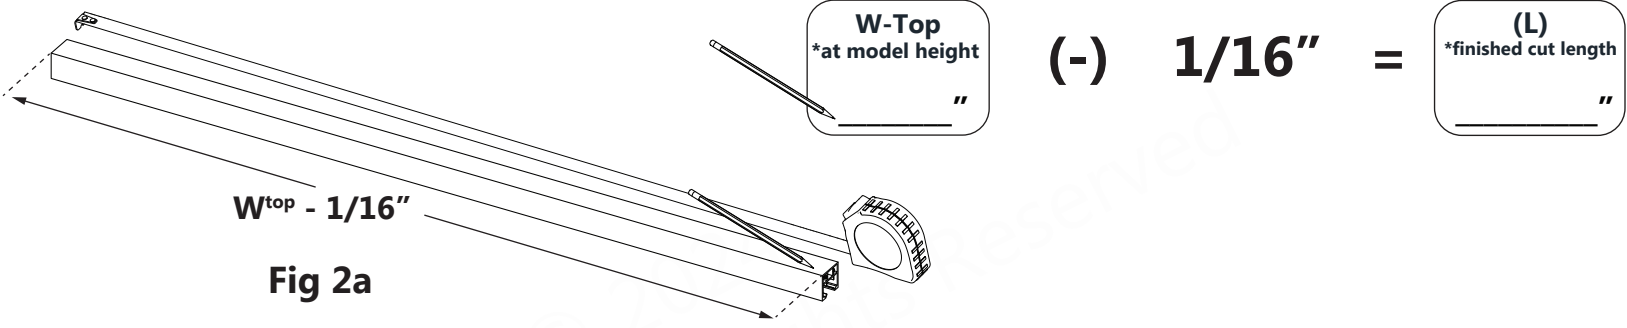


Use a metal file to deburr the cut end

Parts Needed

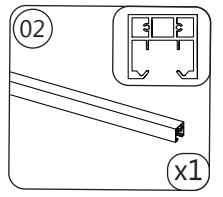


Tools Needed

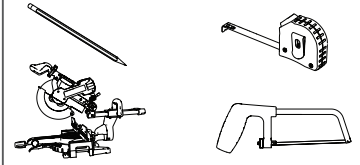

The **Top Guide Rail (#02)** fits wall-to-wall and can be cut from either end.

3

Cutting the Bottom Guide Rail

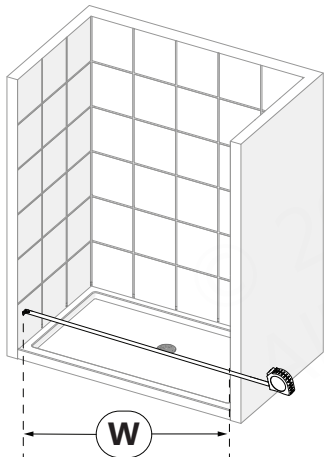

NOTE

The **Bottom Rail (#15)** must be cut equally from both ends to keep the center guide holes centered. The **Bottom Rail (#15)** has been precut for the model size. **(See Table A below).** 1) Compare the Finish Cut Length (**W-3/4"**) of Bottom Rail (**L**) to the Bottom Rail (#15) and measure the difference (**X**). 2) Divide X in half. 3) Cut that amount equally from both ends of the **Bottom Rail (#15)**

$(W - 3/4" = L)$ (Finished Cut Length of Bottom Rail)


NOTE

Measure the width of the bottom of the shower opening (**W**) and **subtract 3/4"** to get the finished cut length (**L**).

$(W - 3/4" = L)$

L = Finished Cut Length of Bottom Rail

1

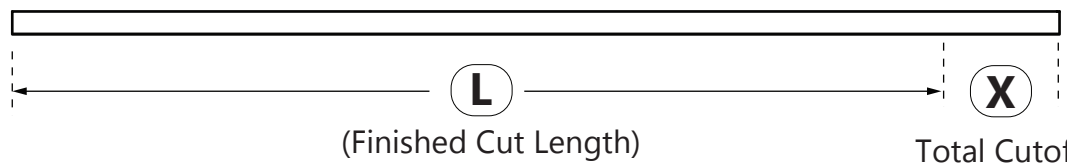

2

$(X \div 2 = Z)$

3


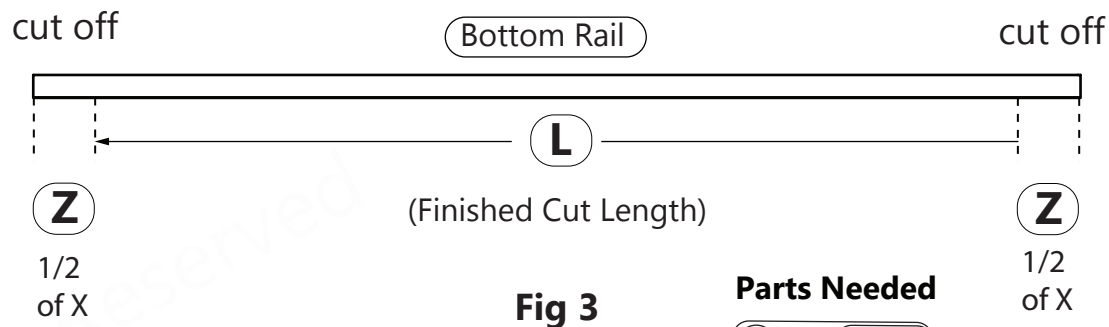


Fig 3

Parts Needed

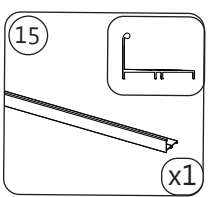


1/2 of X

Table A

Model Size	Precut Bottom Rail Length
60" Shower or Tub Door	59-3/8" (1508 mm)
54" Shower Door	53-3/8" (1362 mm)
48" Shower Door	47-3/8" (1203 mm)

Tools Needed

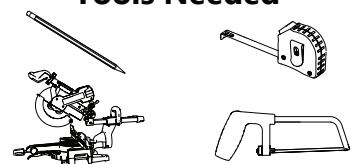

NOTE

For Example Only: If the finished opening (**W**) = 59", then 59" - 3/4" = 58-1/4". The finished cut length (**L**) will be 58-1/4". The 60" model rail length = 59-3/8" **(See Table A)** 59-3/8" - 58-1/4" (**L**) = 1-1/8" (**X**) 1-1/8" **divided by 2** = 9/16" (**Z**) Cut 9/16" off from each end to a finished cut length of 58-1/4". **Note that this is an example and the the actual cut-off amount will vary based on the actual finished opening dimension.**

4

Installing the Bottom Guide Rail

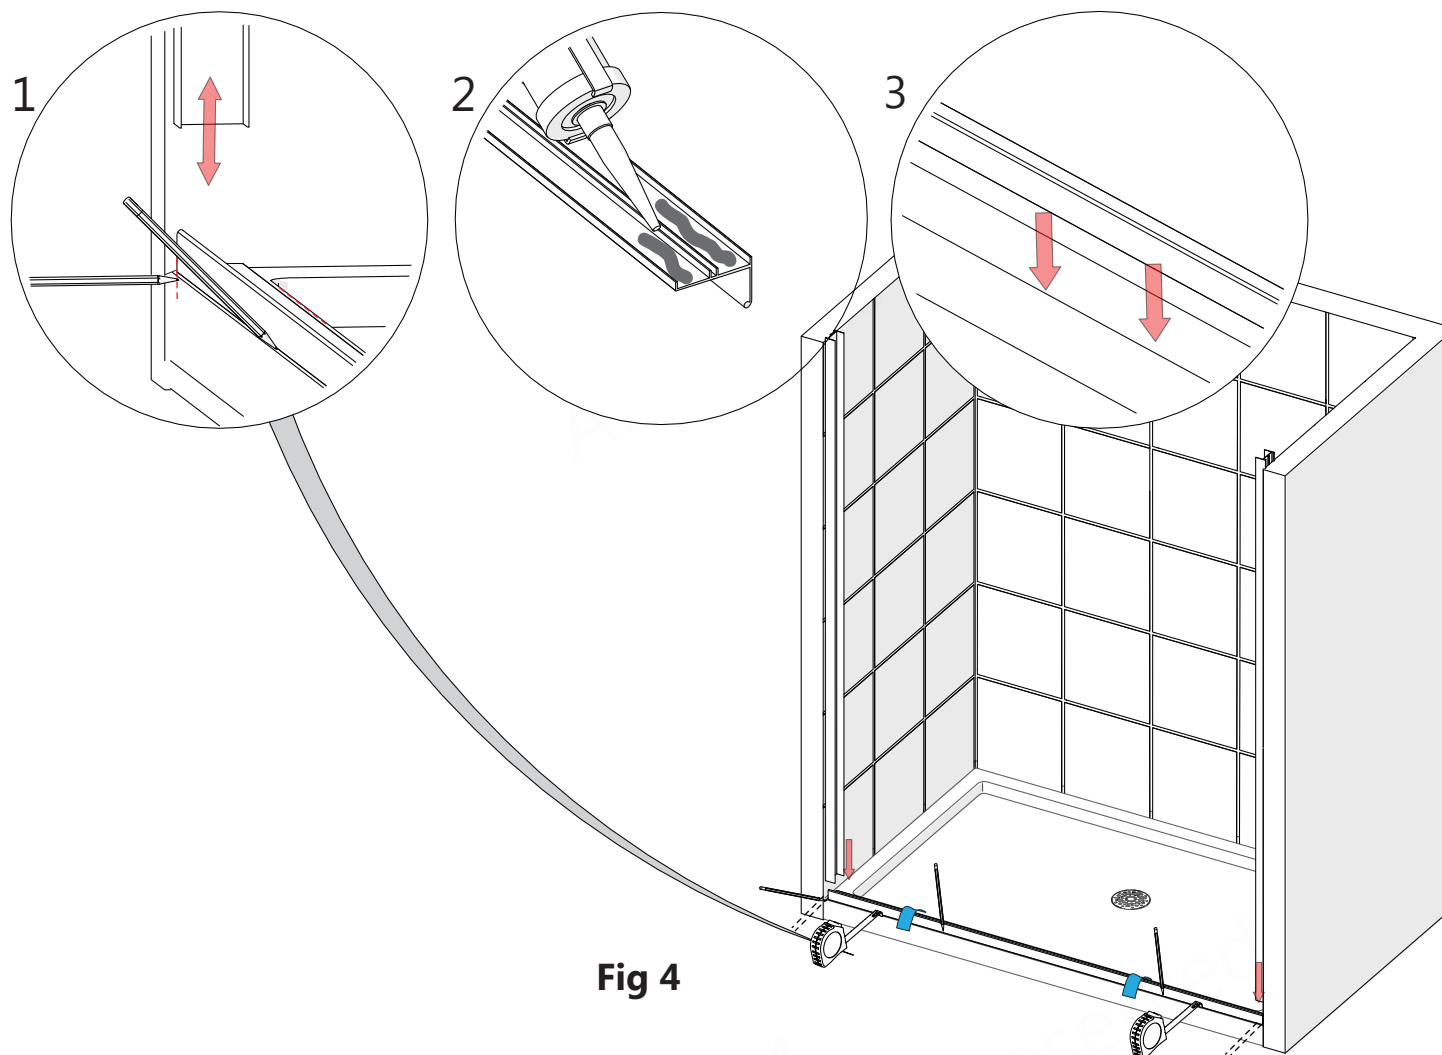


Fig 4


NOTE

The **Bottom Guide Rail (#15)** fits between the **Wall Profiles (#01)** and should be even with and parallel to the front edge of the threshold.. Use both, the left and right wall profiles to create the proper spacing for installation of the bottom guide rail.


TIP

Secure the **Bottom Guide Rail (#15)** to the threshold with several strips of painter's tape to hold it in position until the silicone caulk cures.

Parts Needed

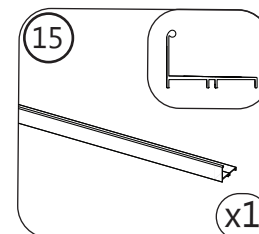

Tools Needed

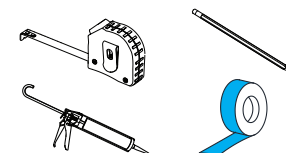

5

Installing the Guide Block and the Guide Rail Brackets

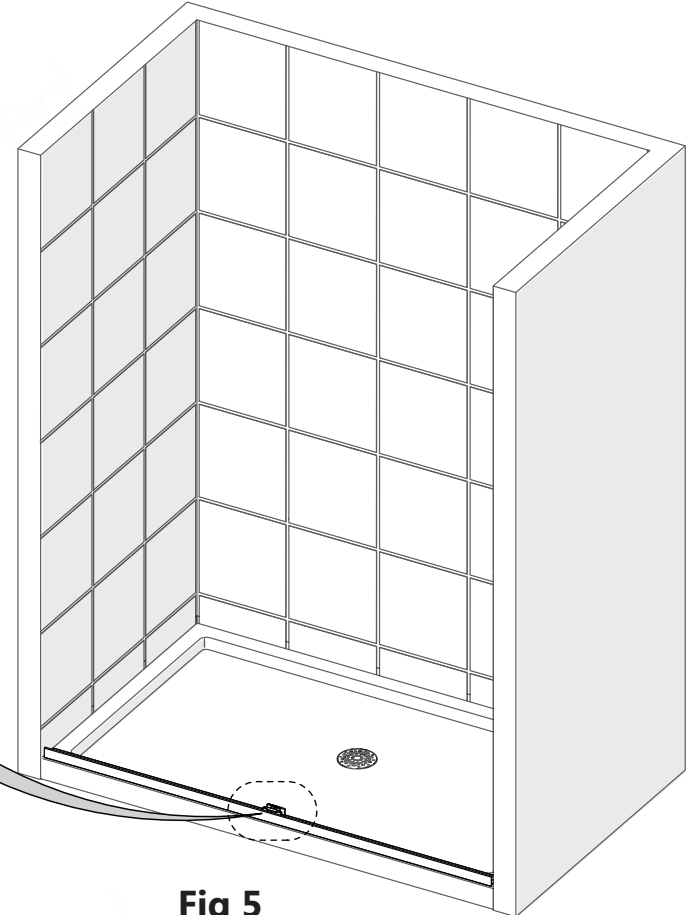
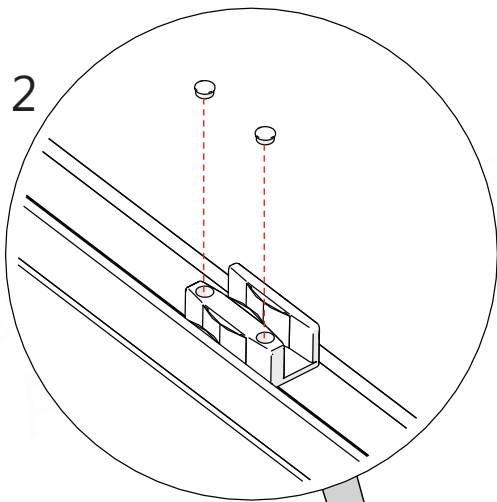
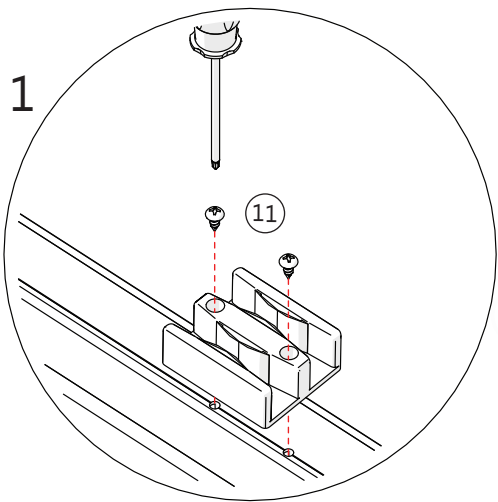


Fig 5


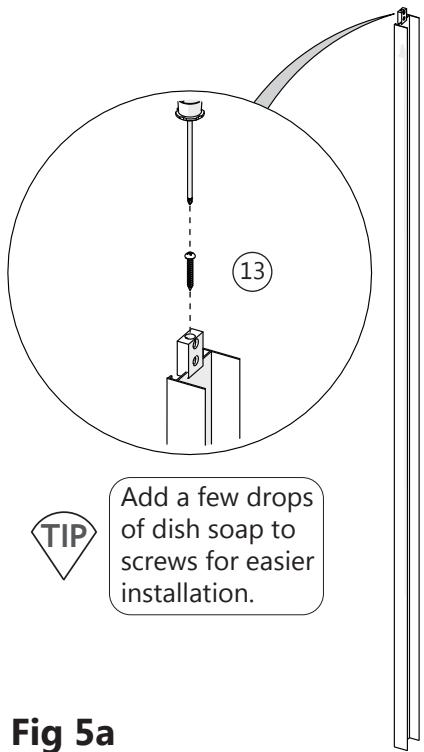



Fig 5a

Secure the **Guide Rail Brackets (#07)** to the **Wall Profiles (#01)** using the **ST4.0×30 Pan Head Screws (#13)**. Set aside for later use.

Tools Needed



Parts Needed

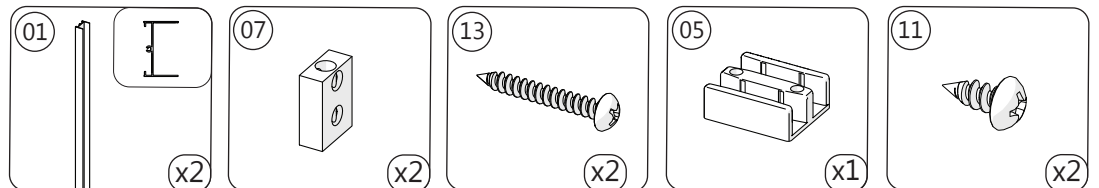

6

Marking and Drilling for the Wall Profiles


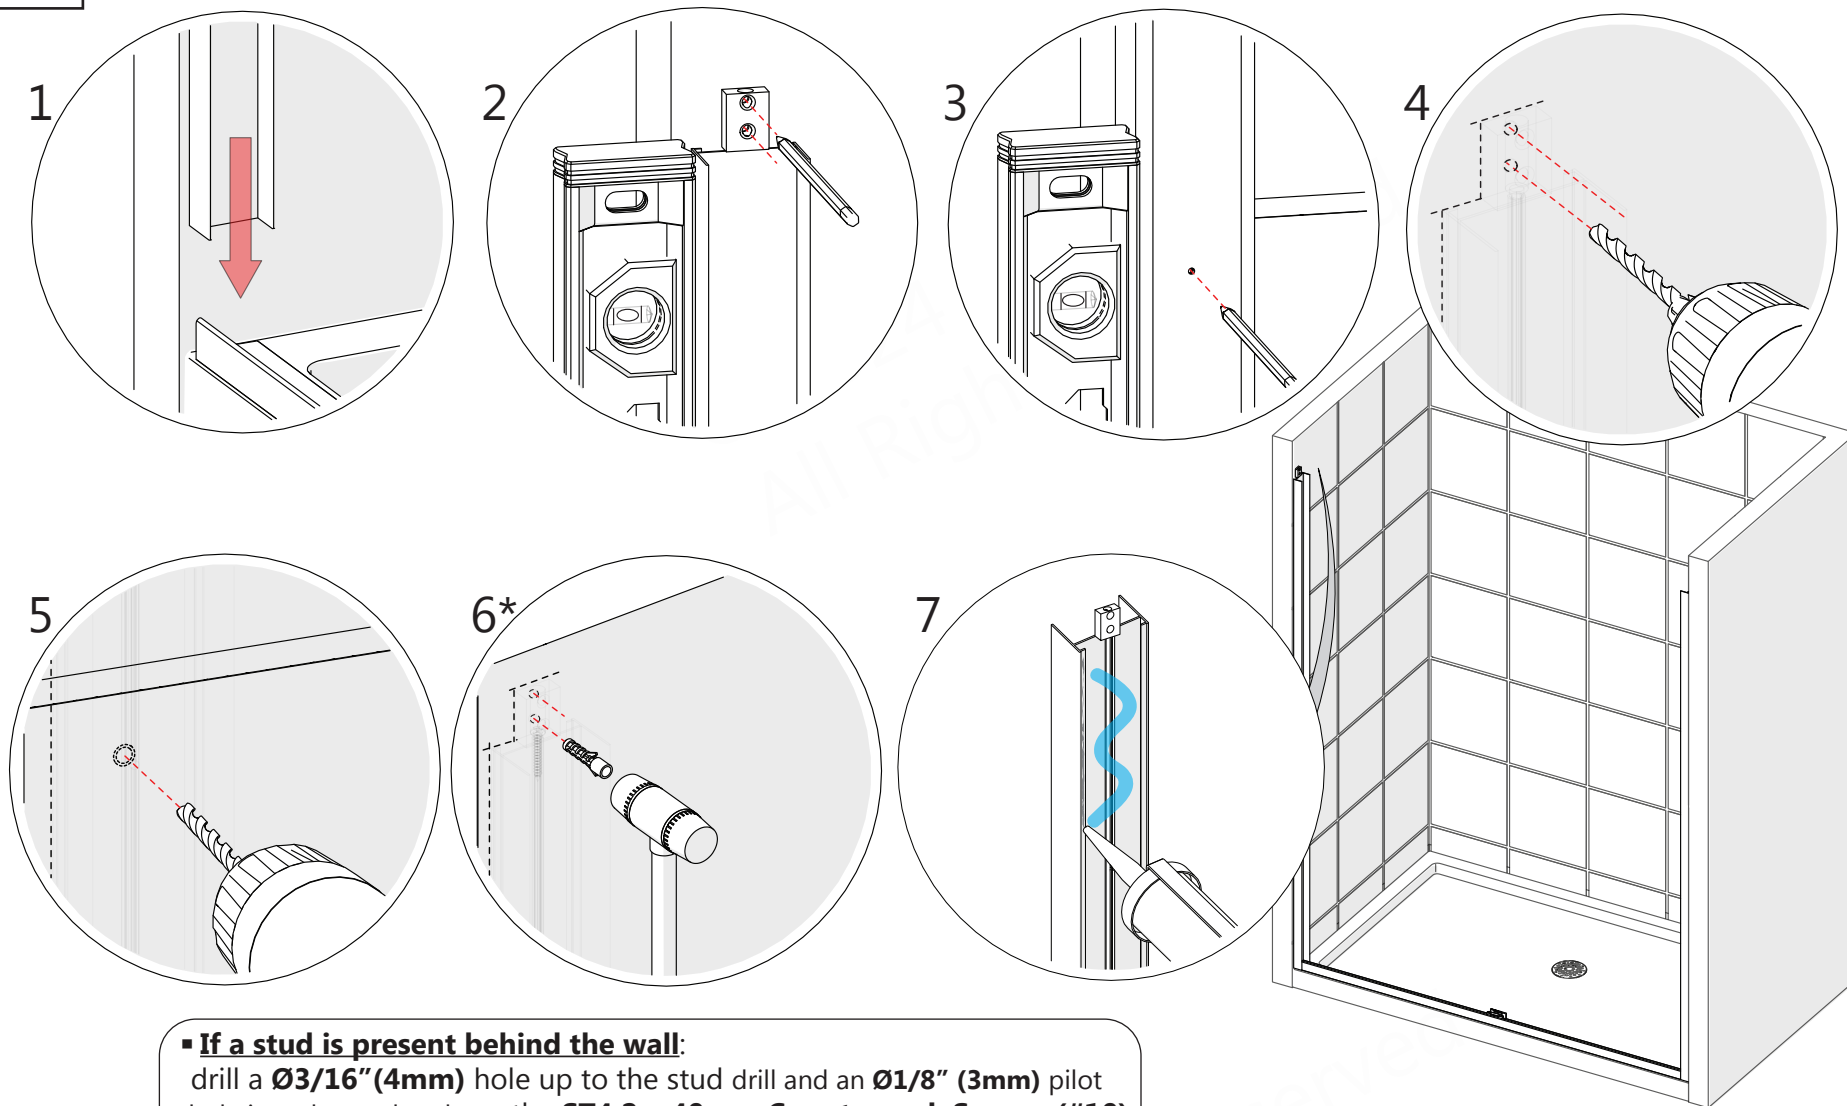


Fig 6

NOTE

- **If a stud is present behind the wall:**
drill a $\text{Ø}3/16''$ (4mm) hole up to the stud drill and an $\text{Ø}1/8''$ (3mm) pilot hole into the stud and use the **ST4.2 x 40mm Countersunk Screws (#10)** for the **Guide Rail Bracket (#07)** and the **ST4.0 x 40mm Pan Head Screws (#12)** for the **Wall Profile (#01)**.
- OR
- *** If no stud is present behind the wall:**
drill a $\text{Ø}5/16''$ (7mm) hole and insert the **Wall Anchors (#09)** and use the **ST4.2 x 40mm Countersunk Screws (#10)** for the **Guide Rail Bracket (#07)** and the **ST4.0 x 40mm Pan Head Screws (#12)** for the **Wall Profile (#01)**.

Tools Needed

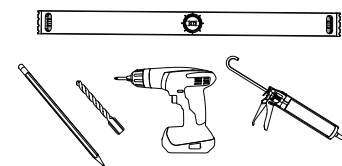

7

Installing the Wall Profiles and Bumpers





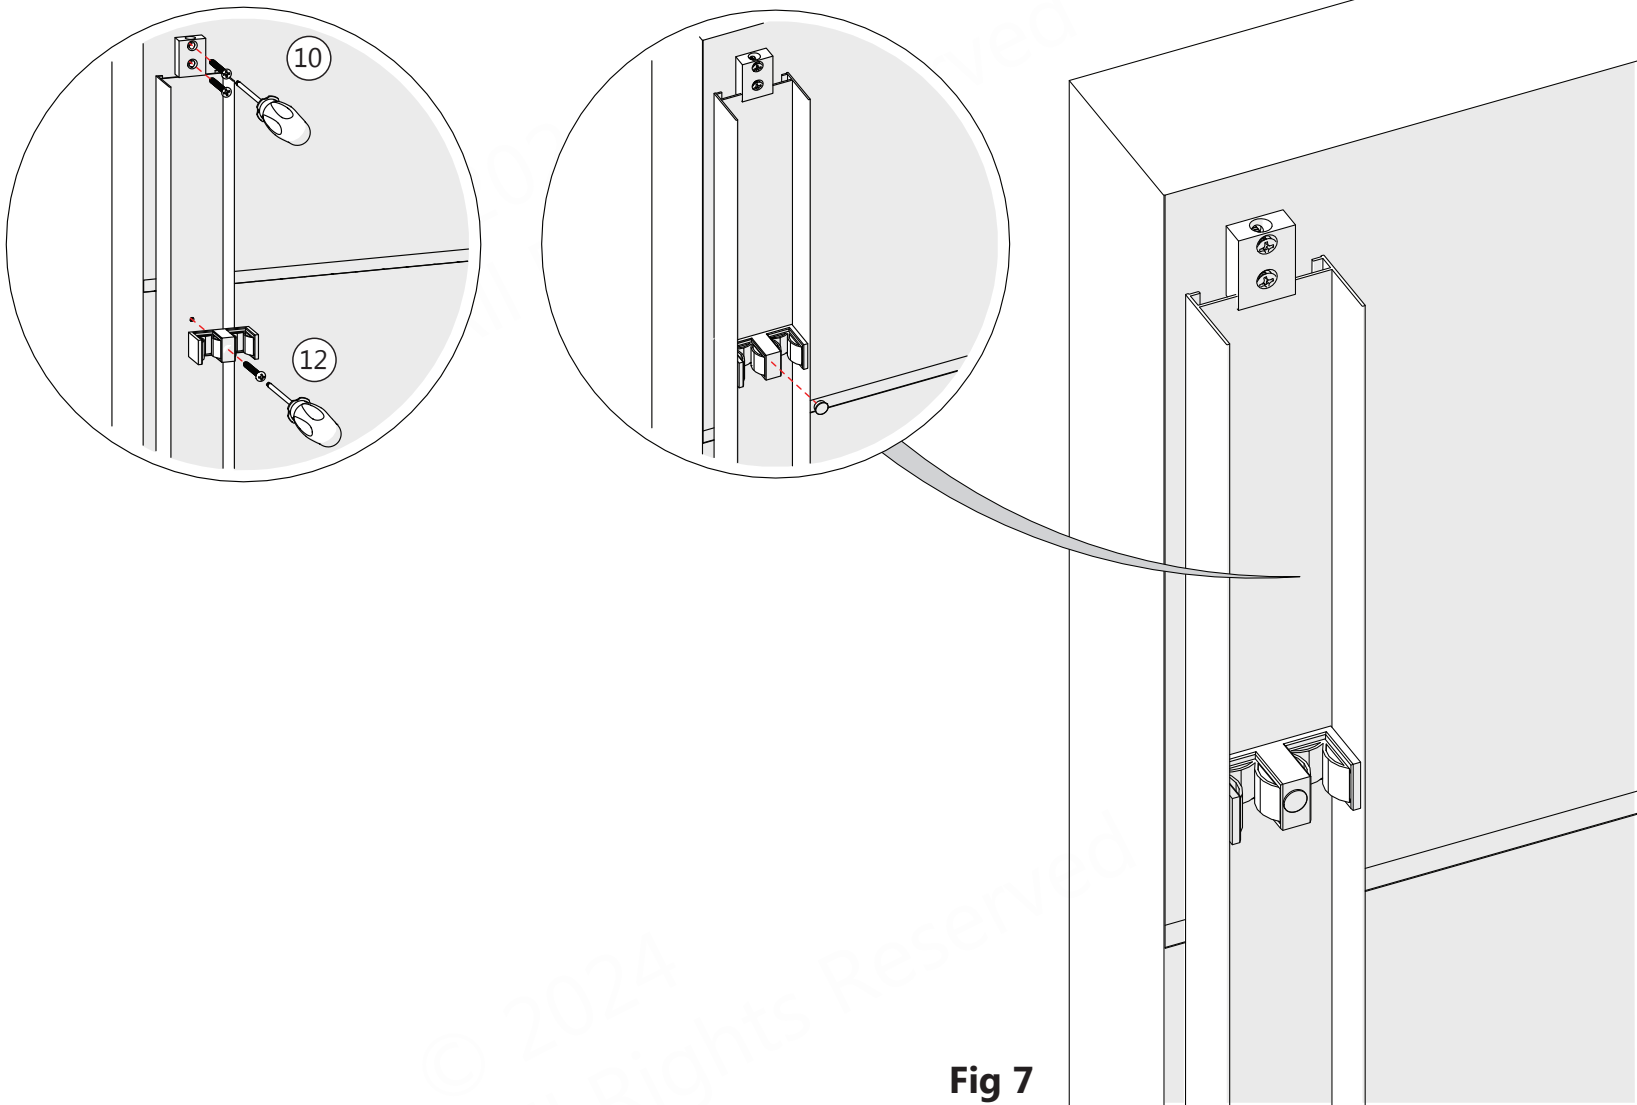


Fig 7

Parts Needed

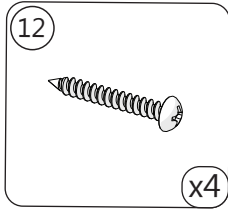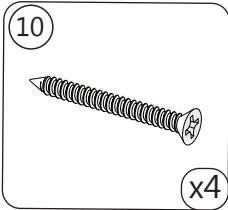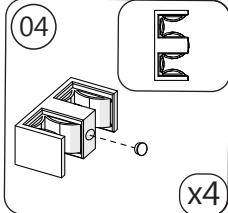

Tools Needed




Repeat **Steps 5a-7** to install the opposite **Wall Profile (#01)** before proceeding on to the next step.

8

Installing the Roller Wheels

Fig 8a

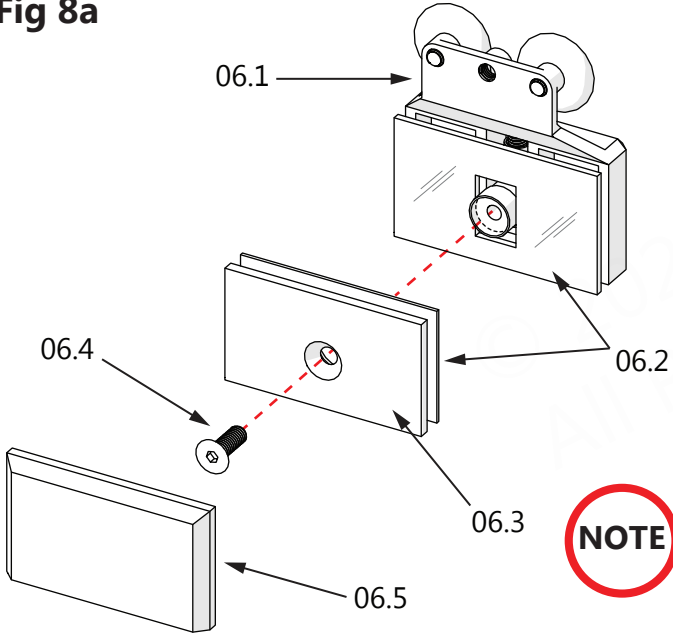


Roller Assembly (#06)		
Item	Item Description	Quantity
06.1	Roller Assembly Body	1 pc
06.2	Roller Assembly Gasket	2 pc
06.3	Roller Assembly Back Plate	1 pc
06.4	Roller Assembly Mounting Bolt	1 pc
06.5	Roller Assembly Decorative Cover Plate	1 pc

Do Not fully disassemble the Roller Assemblies!
See the Roller Assembly Adjustment Procedure
on page 24 for additional details.

NOTE

Only remove the **Decorative Cover Plate (#06.5)**,
Mounting Bolt (#06.4), and the **Back Plate (#06.3)** from
the **Roller Assembly (#06)** before sliding them into the
Top Guide Rail (#02). See Figures 8b-8c.
Set aside for later installation.

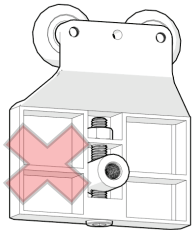

DO NOT adjust
the Roller
Assembly
at this point

Parts Needed





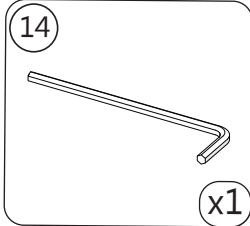


Fig 8b

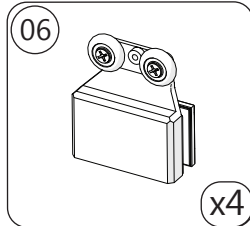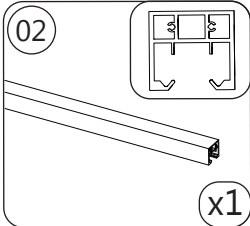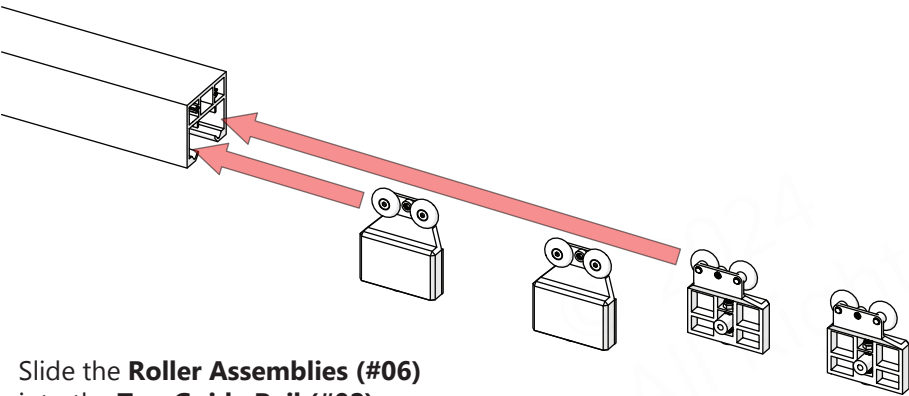

Slide the **Roller Assemblies (#06)**
into the **Top Guide Rail (#02)**.


Fig 8c

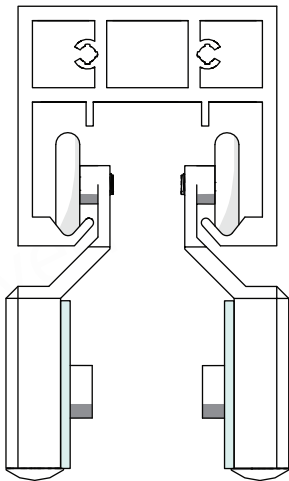

Side view of
Roller Assemblies (#06)
inserted into the
Top Guide Rail (#02).

9

Installing the Top Guide Rail

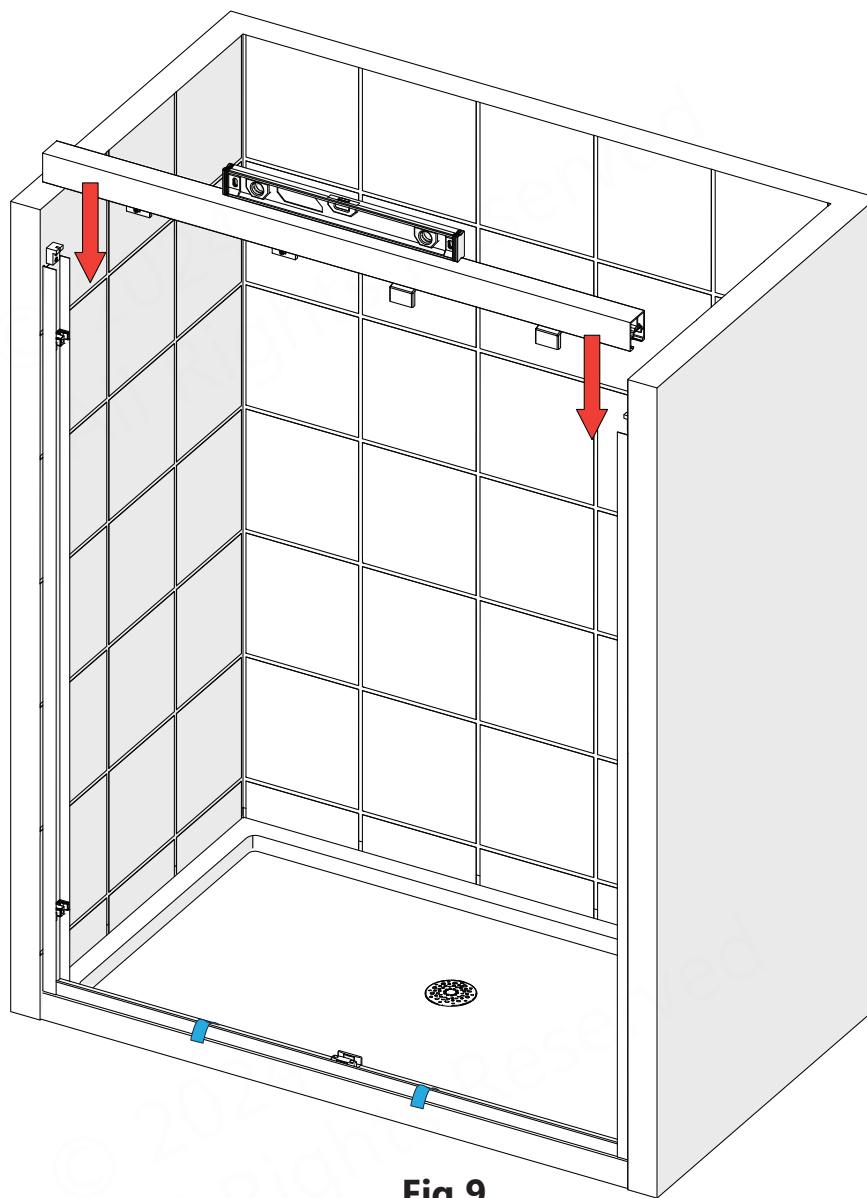**Fig 9**

Use caution to prevent the Roller Assemblies from rolling out of the Top Guide Rail during this step.



Make sure the **Top Guide Rail (#02)** sits firmly onto the **Guide Rail Brackets (#07)** and is level across the opening.

Tools Needed


10

NOTE

Install the **Inside Door Glass** with the side of the glass marked with the **glass coating sticker** facing towards the inside of the shower.


TIP

Slide the outside Roller Assemblies (#06) to the far side of the shower before installing the **Outside Door Glass (#03)** in the next step.

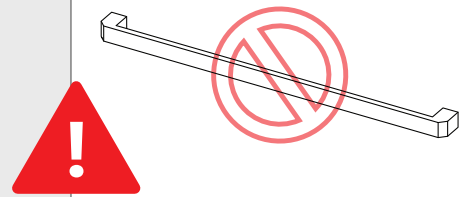

Do Not attach the **Towel Bars (#08)** to the **Door Glass (#03)** until instructed.
Do Not attempt to lift the glass with the towel bars. Use an assistant and/or a professional-grade glass suction cup to handle the glass.

Parts Needed

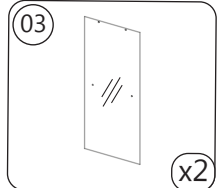

Tools Needed




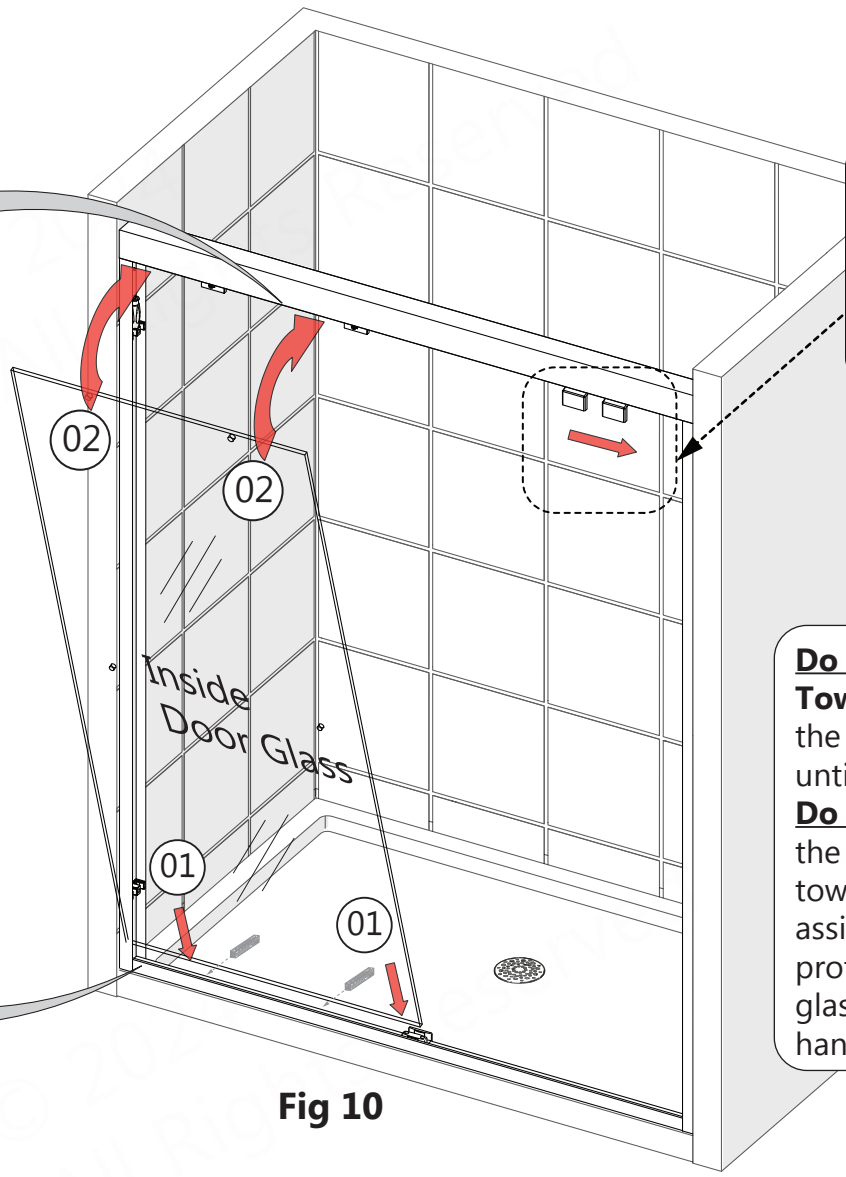


Fig 10

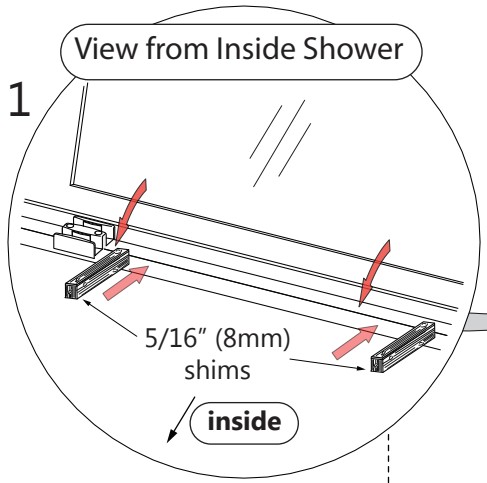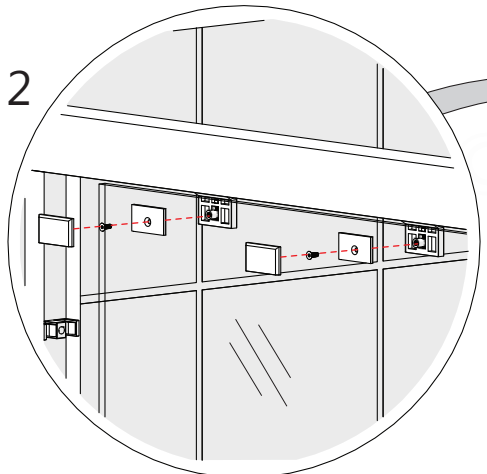


For ease of installation and to prevent glass-to-metal contact, place two 5/16" (8mm) shims onto the **Bottom Guide Rail (#15)** when positioning the **Inside Door Glass (#03)** into the appropriate groove of the **Guide Block (#05)**; remove the shims once the Roller Assemblies are secured to the door glass.

11

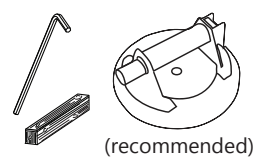

Install the **Outside Door Glass** with the side of the glass marked with the **glass coating sticker** facing towards the inside of the shower.

Fig 11a

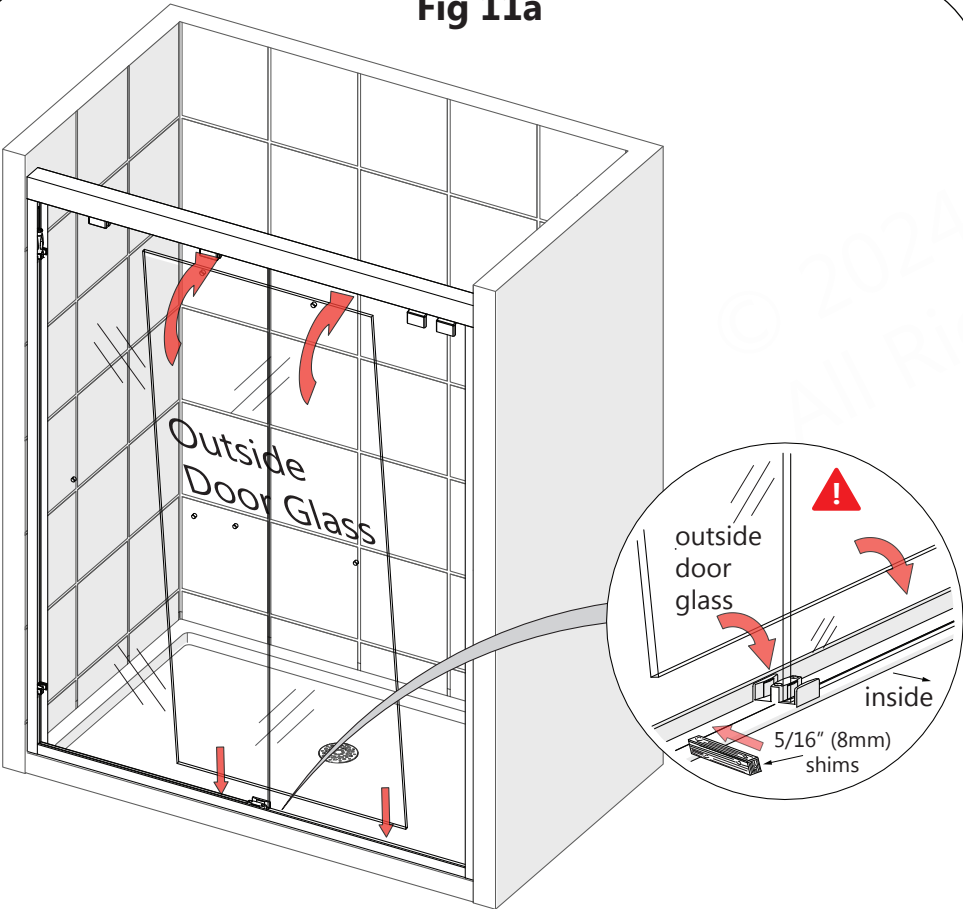


For ease of installation and to prevent glass-to-metal contact, place two 5/16" (8mm) shims onto the **Bottom Guide Rail (#15)** when positioning the outside **Door Glass (#03)** into the appropriate groove of the **Guide Block (#05)**; remove the shims once the **Roller Assemblies** are secured to the door glass.




Once the outside **Door Glass (#03)** has been positioned on the shims and in the outside groove in the **Guide Block (#05)**, align the two available **Roller Assemblies (#06)** with the holes in the **Door Glass (#03)** and attach as shown.


Fig 11b

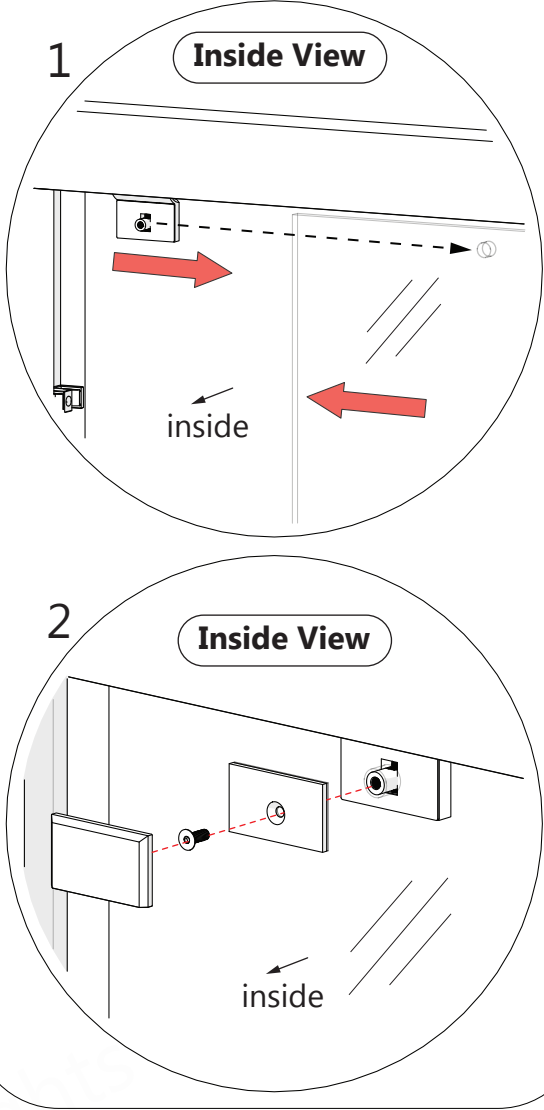

Parts Needed

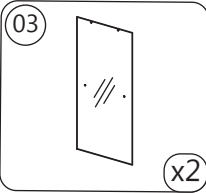

Tools Needed

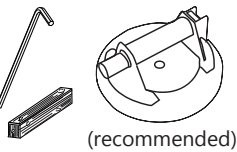

12

Adjusting the Roller Wheels (Only If Needed)

Fig 2

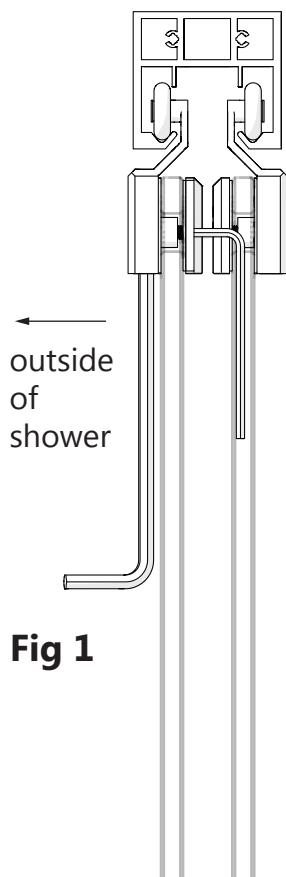
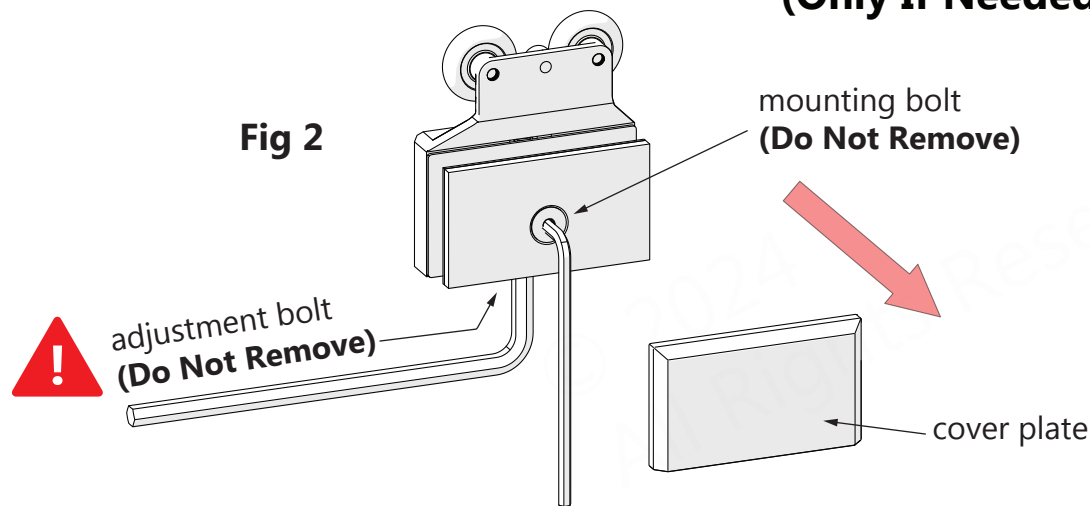


Fig 1

To adjust the Door Glass with the Roller Assemblies:

1. Remove the Roller Assembly Cover Plate by pulling it off by hand
2. Loosen the mounting bolt
3. Rotate the adjustment bolt:
 - Counter-clockwise to raise the door glass
 - Clockwise to lower the door glass

If the Adjustment Bolt is in a neutral position, Do Not rotate the Adjustment Bolt more than 4 rotations!

Do Not rotate the adjustment bolt past when the point of resistance. Excessive rotations can strip the bolt!

Do Not remove the bolts or fully disassemble the Roller Assemblies.



Use the adjustment bolt on the Roller Assembly to adjust the Door Glass so it closes evenly into the Wall Profiles.



Place shims beneath the door glass when adjusting the Rollers to avoid the Door Glass making contact with the Bottom Guide Rail.


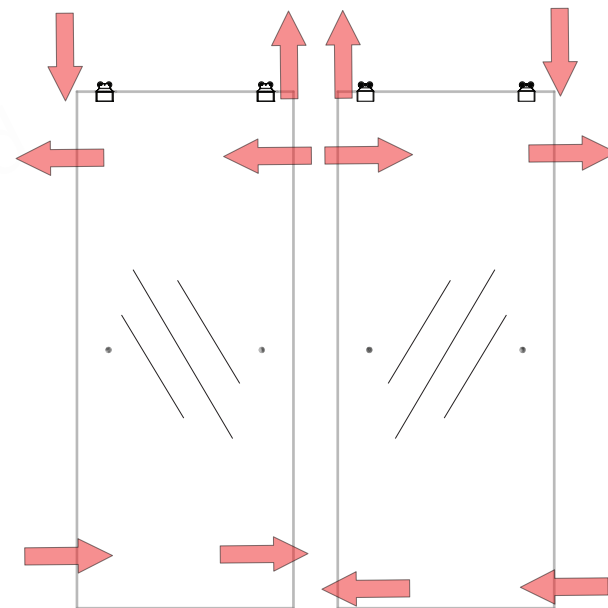


Fig 3

Parts Needed

14



x1

13

Towel Bar Installation

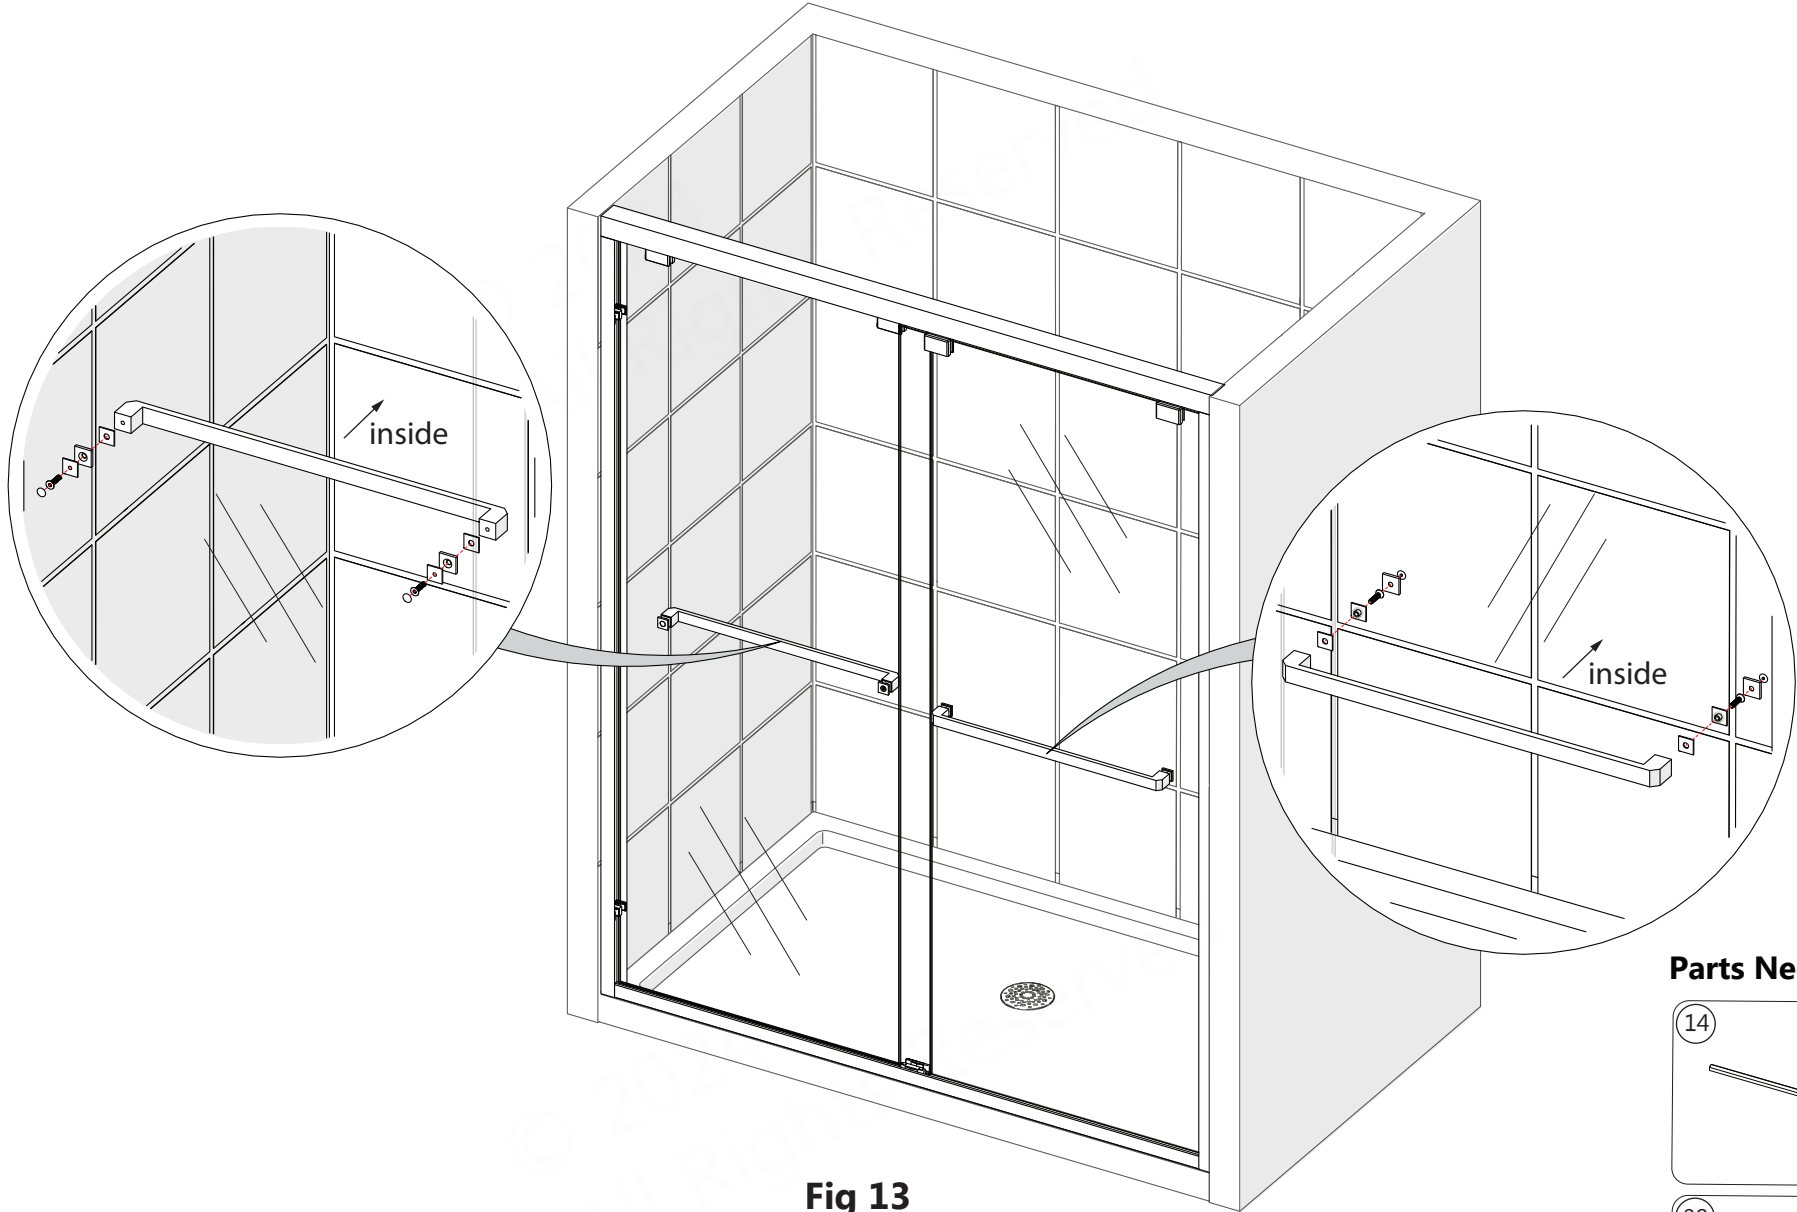




Fig 13

Parts Needed

- 14  x1
- 08  x2

14

Application of Silicone

NOTE

The surfaces need to be clean and free of debris before applying silicone


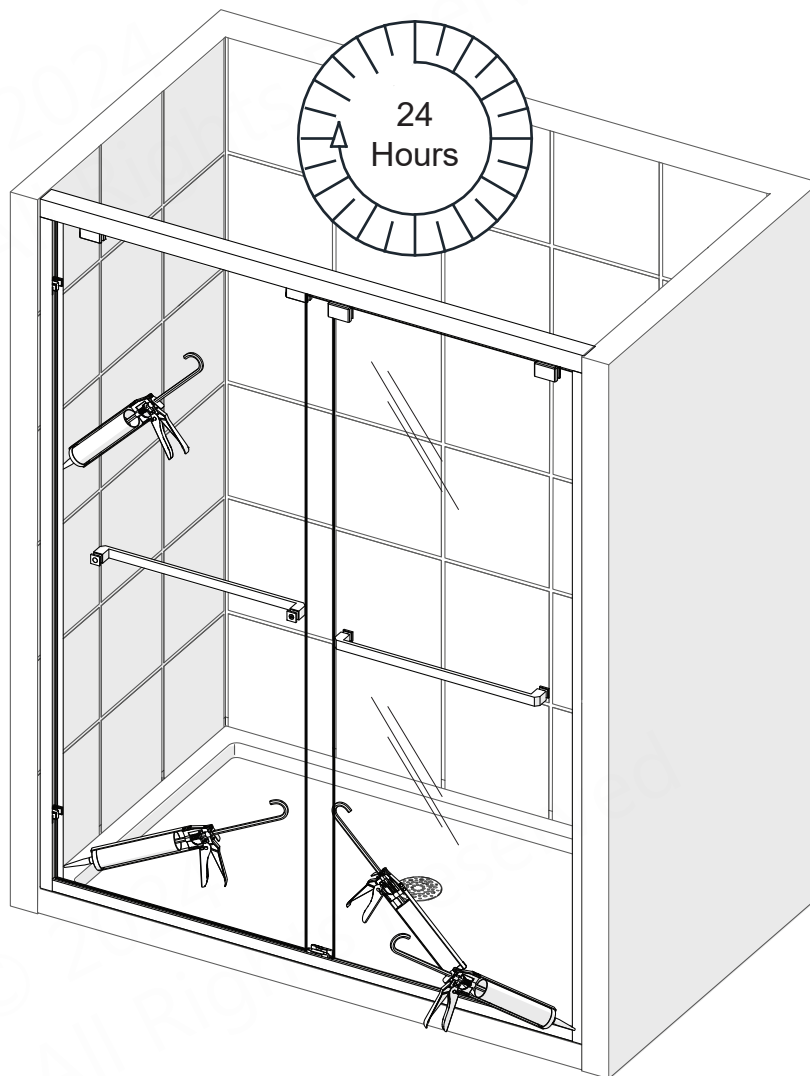


Fig 14



Allow 24 hours for the silicone caulk to cure before using shower

Tools Needed



Product Maintenance

BASES and BACKWALLS: To ensure long lasting life for your acrylic back walls: wipe them off after each use with a soft cloth. To clean the acrylic back walls use non-abrasive sprays or cream based cleaners. Avoid the use of aerosol spray cleaners. Never use abrasive cleansers, metal brushes or scrapers that could permanently scratch or dull the surface.

GLASS: To ensure long lasting life for your glass shower products: wipe them off after each use with a soft cloth. Rinse and wipe off the glass using either a soft cloth or a squeegee to prevent soap buildup and water spots (Hard water can etch the surface of the glass over time if left to dry). To prevent scratching the surface: never use abrasive cleaners or cleaning products that contain scouring agents. Never use bristle brushes or abrasive sponges that may scratch the surface of the glass.

HARDWARE: To ensure a long lasting finish: wipe off all metal parts after each use with a soft cloth. Do not use abrasive cleaners or cleaning products containing ammonia, bleach or acid. If accidentally used, rinse the surface as soon as possible to prevent damage to the finish (peeling or corrosion). After cleaning the polished finishes, rinse thoroughly and wipe dry with a soft clean-cloth.

Clean stainless steel surfaces at least once a week. When applying stainless steel cleaner or polish to stainless steel hardware, work with the grain (not across the grain). Never use an abrasive sponge or cloth, steel wool or wired brush as these may permanently scratch the surfaces.



To maximize the life of your door, it is important to regularly inspect the glass and other hardware for misalignment, proper attachment, and/or damage. contact the manufacturer with any questions or concerns.

DOUBLE SLIDER Maintenance Checklist

- ☐ **Top Guide Rail** level and tight
- ☐ **Wall Profiles** and **Guide Rail Brackets** tight to the walls
 - ☐ All screws are tight
- ☐ Both lites of **Door Glass** are secure and level
- ☐ **Guide Block** square to the threshold and glass
- ☐ **Bottom Guide Rail** secured to the threshold
 - ☐ **Bottom Guide Rail** screws are tight
- ☐ Proper clearance beneath the door glass between the bottom rail and within the guide block
- ☐ **Door Glass** adjusted so that the **Bumpers** smoothly catch and release the glass during operation
- ☐ **Roller Assemblies** tight
 - ☐ **Roller Assembly cover plates** secure
 - ☐ **Roller Assembly adjustment bolts** tight
- ☐ **Towel Bar** screws are tight and secured to each door and gaskets are in place to prevent glass-to-metal contact
- ☐ Both doors operate smoothly through the guide block and do not make contact with one another
- ☐ Inspect and replace silicone as necessary to prevent water leakage

Troubleshooting

Problem/Symptom	Suggested Solution
Missing Parts	<ul style="list-style-type: none"> •Check all shipping/packageing material for missing parts/components. •If not found, contact the manufacturer to order factory part replacement.
Top Guide Rail (#02) was cut too short.	<ul style="list-style-type: none"> •If the Top Guide Rail (#02) is cut too short, contact the manufacturer to order factory part replacement.
Water Leakage	<ul style="list-style-type: none"> •Confirm the Bumpers (#04) are installed correctly inside of the Wall Profiles (#01). •Confirm that the entire unit has been properly sealed with silicone caulk; allow at least <u>24 hours</u> to allow the silicone to cure and set before using the shower unit. •Direct the shower head/water flow away from the area.
The doors roll or make noise during operation	<ul style="list-style-type: none"> •Confirm the Top Guide Rail (#02) is level. •Check the Roller Assemblies (#06) to ensure they are properly set onto the Top Guide Rail (#02) track. •Confirm the doors seat smoothly into the Bumpers (#04) by adjusting the Roller Assemblies adjustment bolts; Do not allow the Door Glass to make contact with the Bottom Guide Rail (#15).
Towel Bar (#08) is loose.	<ul style="list-style-type: none"> •Verify that the gaskets and screws are in place and tightly secured.



Prior to contacting the manufacturer, please have the following information readily available:

- Purchase Order Information
- Name, PO Number, Dealer/Vendor Name, etc.
- SKU/Model Number and Factory Part Information (see Pages 24-27)

Factory Parts Information

Double Slider 60 x 58 Factory Parts Information

ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION	QTY
01	041740 X 1-1423	Left or Right Wall Profile	2 pcs
02	041710 X 1-1524	Top Guide Rail	1 pc
03	010280006	Door Glass	2 pcs
04	0755 X 065	Bumper for 8mm (5/16in) Glass	4 pcs
05	0755 X 064	Bottom Guide Block for 8mm (5/16in) Glass	1 pc
06	0731 X 020	Roller Assembly for 8mm (5/16in) Glass	4 pcs
07	0702 X 166	Guide Rail Bracket	2 pcs
08	0722 X 073	Towel Bar	2 pcs
09	07550045	Wall Anchor 8mm (5/16in)	6 pcs
10	092108	ST4.2 x 40 Countersunk Screw	4 pcs
11	091101	ST4.0 x 10 Pan Head Screw	4 pcs
12	091102	ST4.0 x 16 Pan Head Screw	2 pcs
13	091105	ST4.0 x 30 Pan head Screw	2 pcs
14	098003	Allen Wrench 3mm	1 pc
15	041750 X 1-1506	Bottom Guide Rail	1 pc

BOLD ("X") indicates finish color:

1 = Chrome

4 = Brushed Nickel

5 = Brushed Gold

6 = Oil Rubbed Bronze

9 = Matte Black

Contact the manufacturer for Part replacement, installation assistance or additional information.

Factory Parts Information

Double Slider 48 x 76 Factory Parts Information			
ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION	QTY
01	041740 X 1-1880	Left or Right Wall Profile	2 pcs
02	041710 X 1-1219	Top Guide Rail	1 pc
03	010280009	Door Glass	2 pcs
04	0755 X 065	Bumper for 8mm (5/16in) Glass	4 pcs
05	0755 X 064	Bottom Guide Block for 8mm (5/16in) Glass	1 pc
06	0731 X 020	Roller Assembly for 8mm (5/16in) Glass	4 pcs
07	0702 X 166	Guide Rail Bracket	2 pcs
08	0722 X 032	Towel Bar	2 pcs
09	07550045	Wall Anchor 8mm (5/16in)	6 pcs
10	092108	ST4.2 x 40 Countersunk Screw	4 pcs
11	091101	ST4.0 x 10 Pan Head Screw	4 pcs
12	091102	ST4.0 x 16 Pan Head Screw	2 pcs
13	091105	ST4.0 x 30 pan head Screw	2 pcs
14	098003	Allen Wrench 3mm	1 pc
15	041750 X 1-1201	Bottom Guide Rail	1 pc

BOLD ("X") indicates finish color:

- 1** = Chrome
- 4** = Brushed Nickel
- 5** = Brushed Gold
- 6** = Oil Rubbed Bronze
- 9** = Matte Black

Contact the manufacturer for Part replacement, installation assistance or additional information.

Factory Parts Information

Double Slider - 54 x 76 Factory Parts Information			
ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION	QTY
01	041740 X 1-1880	Left or Right Wall Profile	2 pcs
02	041710 X 1-1372	Top Guide Rail	1 pc
03	010280010	Door Glass	2 pcs
04	0755 X 065	Bumper for 8mm (5/16in) Glass	4 pcs
05	0755 X 064	Bottom Guide Block for 8mm (5/16in) Glass	1 pc
06	0731 X 020	Roller Assembly for 8mm (5/16in) Glass	4 pcs
07	0702 X 166	Guide Rail Bracket	2 pcs
08	0722 X 072	Towel Bar	2 pcs
09	07550045	Wall Anchor 8mm (5/16in)	6 pcs
10	092108	ST4.2 x 40 Countersunk Screw	4 pcs
11	091101	ST4.0 x 10 Pan Head Screw	4 pcs
12	091102	ST4.0 x 16 Pan Head Screw	2 pcs
13	091105	ST4.0 x 30 pan head Screw	2 pcs
14	098003	Allen Wrench 3mm	1 pc
15	041750 X 1-1354	Bottom Guide Rail	1 pc

BOLD ("X") indicates finish color:

1 = Chrome

4 = Brushed Nickel

5 = Brushed Gold

6 = Oil Rubbed Bronze

9 = Matte Black

Contact the manufacturer for Part replacement, installation assistance or additional information.

Factory Parts Information

Double Slider - 60 x 76 Factory Parts Information			
ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION	QTY
01	041740 X 1-1880	Left or Right Wall Profile	2 pcs
02	041710 X 1-1524	Top Guide Rail	1 pc
03	010280007	Door Glass	2 pcs
04	0755 X 065	Bumper for 8mm (5/16in) Glass	4 pcs
05	0755 X 064	Bottom Guide Block for 8mm (5/16in) Glass	1 pc
06	0731 X 020	Roller Assembly for 8mm (5/16in) Glass	4 pcs
07	0702 X 166	Guide Rail Bracket	2 pcs
08	0722 X 073	Towel Bar	2 pcs
09	07550045	Wall Anchor 8mm (5/16in)	6 pcs
10	092108	ST4.2 x 40 Countersunk Screw	4 pcs
11	091101	ST4.0 x 10 Pan Head Screw	4 pcs
12	091102	ST4.0 x 16 Pan Head Screw	2 pcs
13	091105	ST4.0 x 30 Pan head Screw	2 pcs
14	098003	Allen Wrench 3mm	1 pc
15	041750 X 1-1506	Bottom Guide Rail	1 pc

BOLD ("X") indicates finish color:

1 = Chrome

4 = Brushed Nickel

5 = Brushed Gold

6 = Oil Rubbed Bronze

9 = Matte Black

Contact the manufacturer for Part replacement, installation assistance or additional information.

NOTES

© 2024
All Rights Reserved

© 2024
All Rights Reserved


NOTES

© 2024
All Rights Reserved

© 2024
All Rights Reserved

DOUBLE SLIDER

SHOWER AND TUB DOOR INSTALLATION INSTRUCTIONS

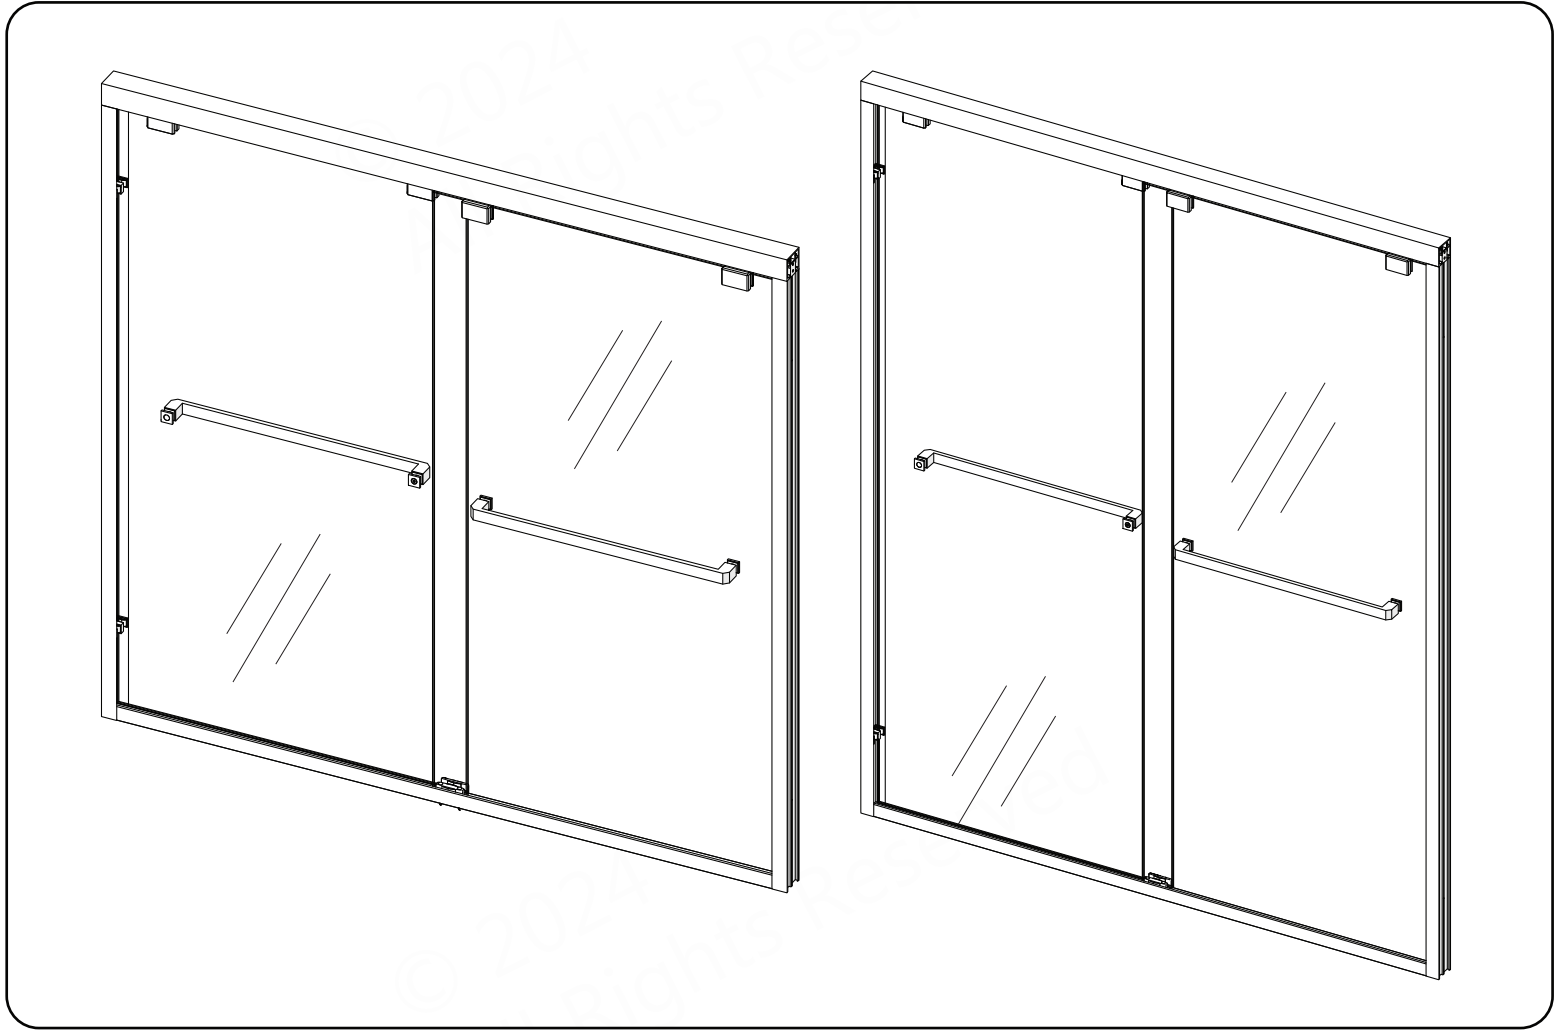

IMPORTANT!

The manufacturer reserves the right to alter, modify or redesign products at any time without prior notice for the purpose of product improvement and customer experience. Please refer to the manufacturer's web page for the latest technical drawings, installation manuals, warranty information or additional product details.