

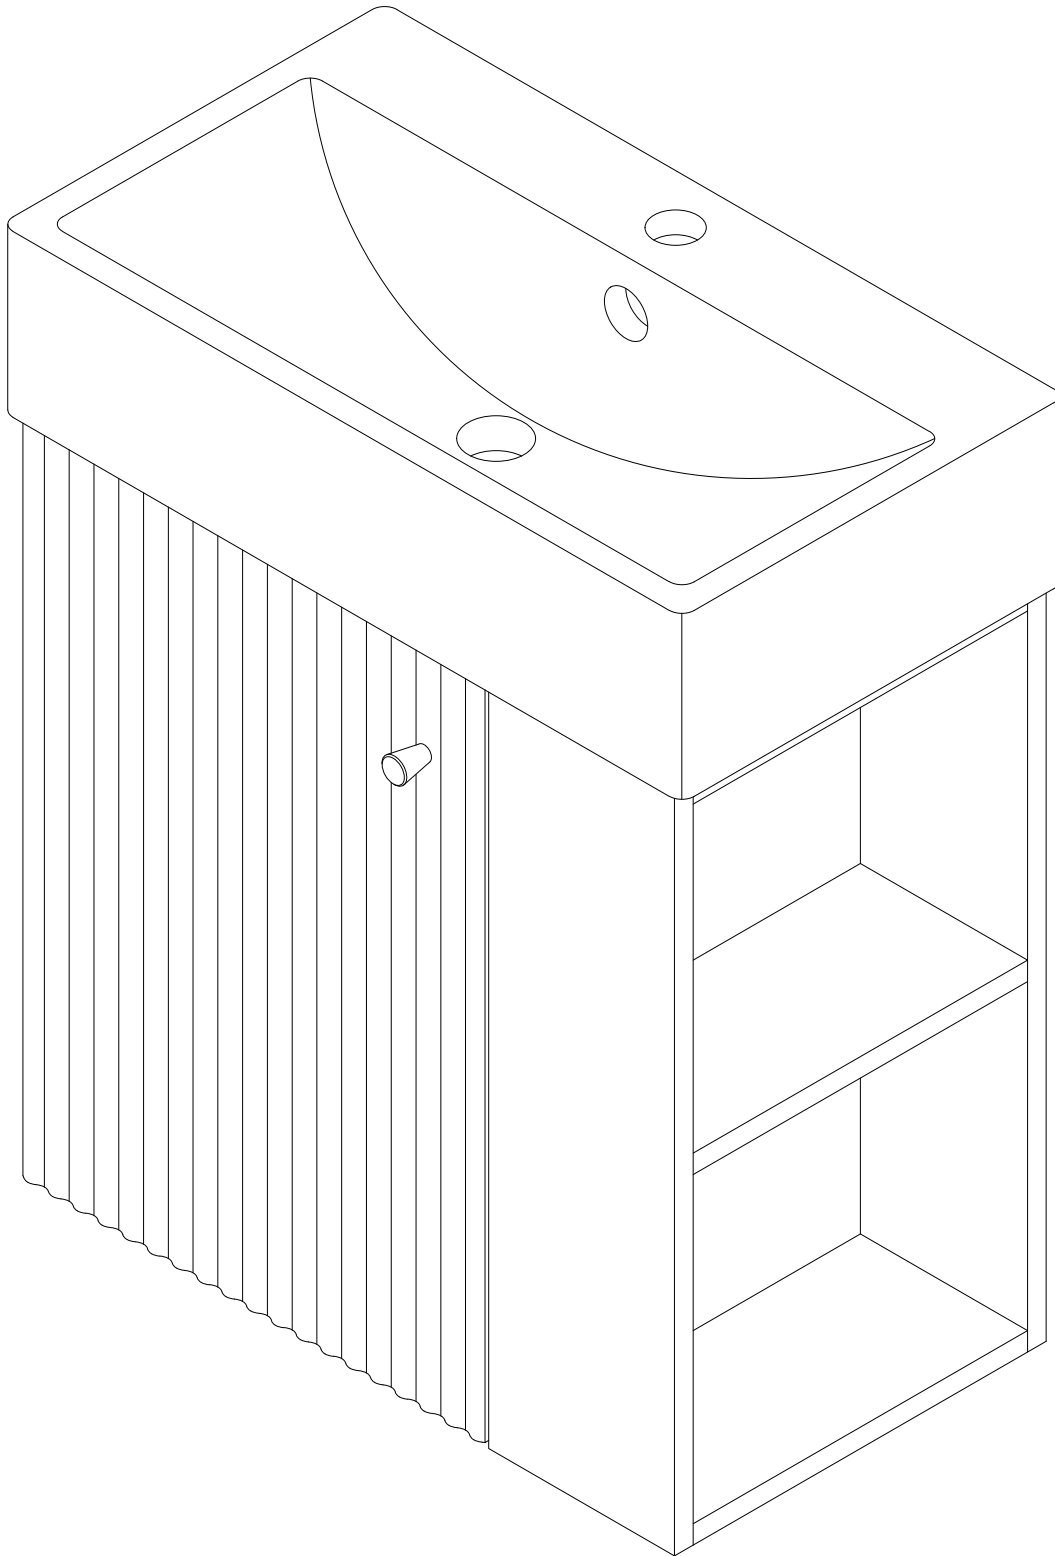
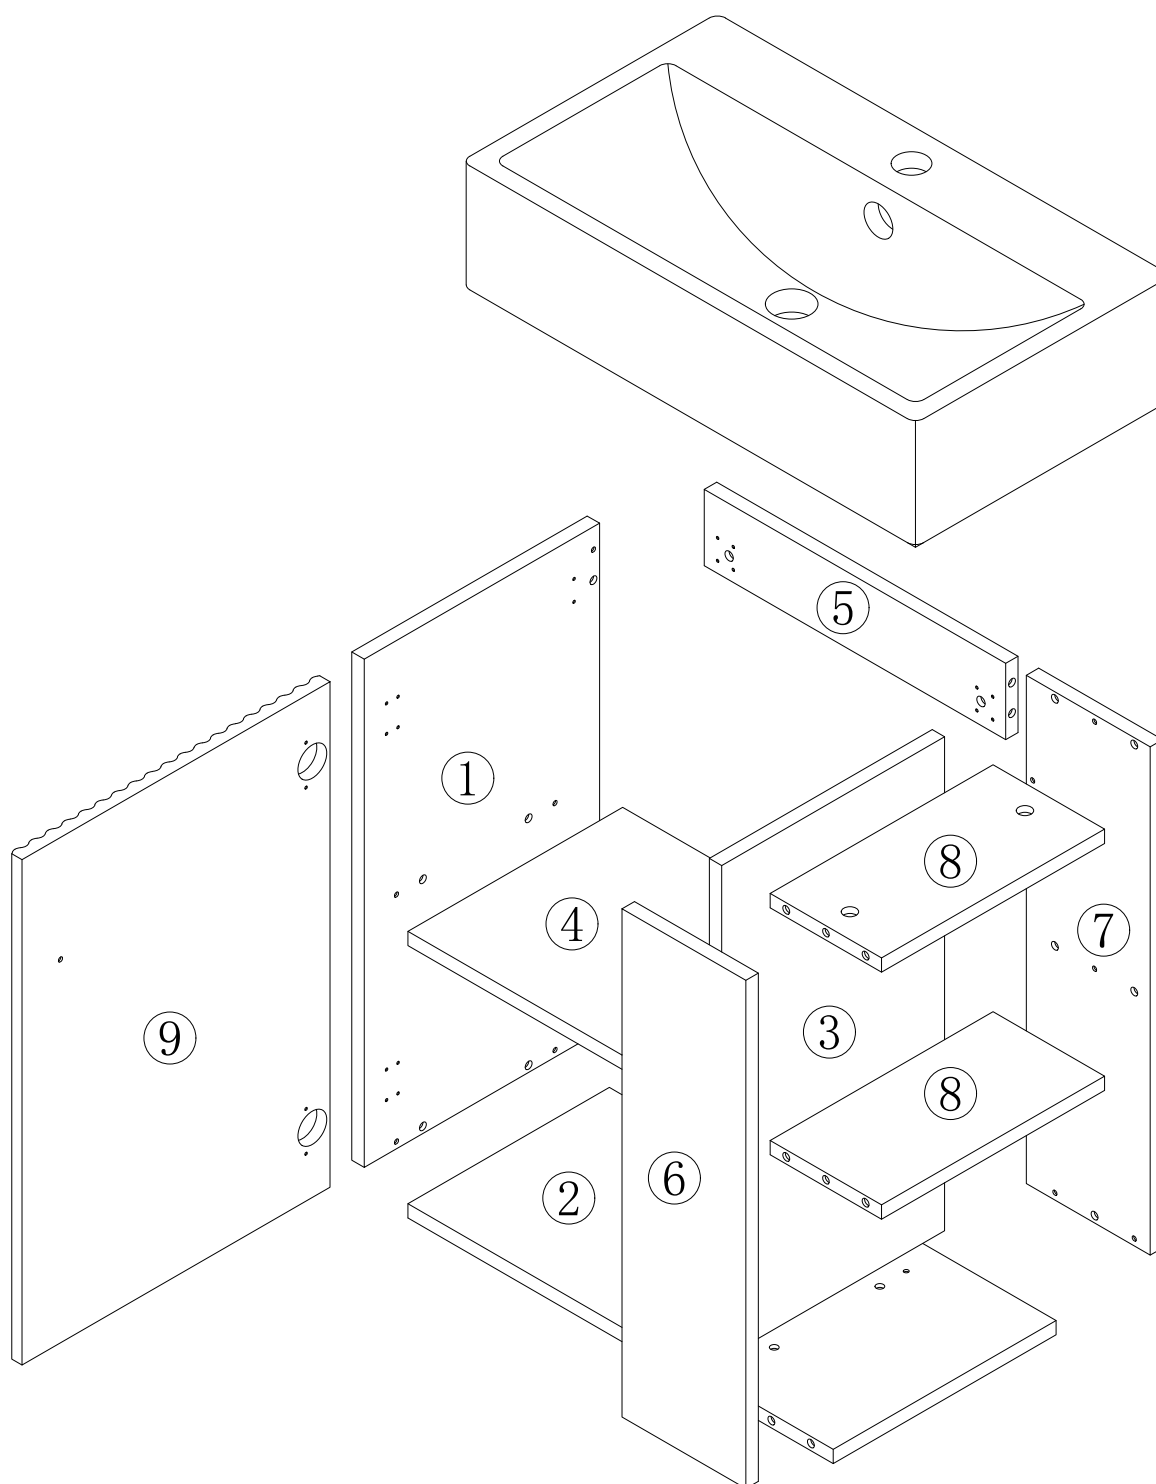
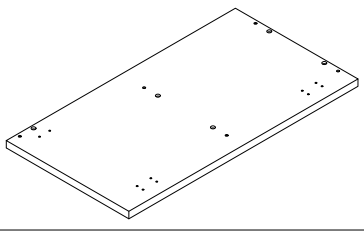
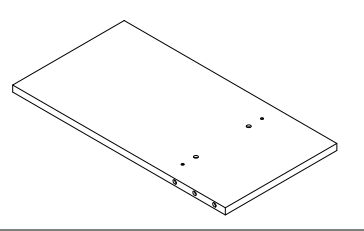
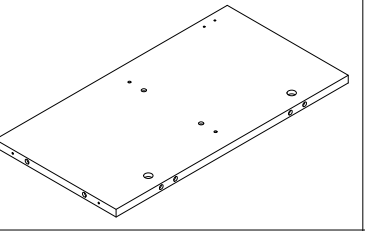
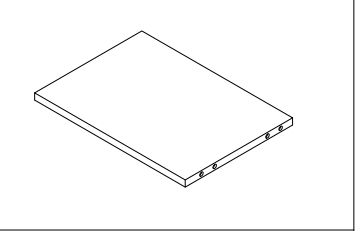
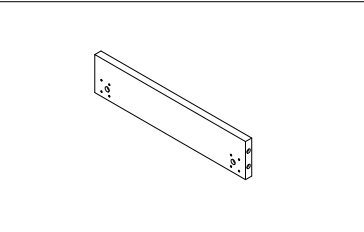
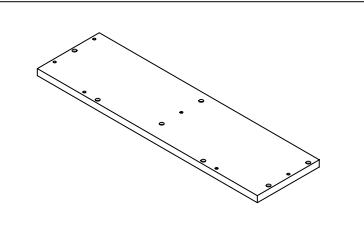
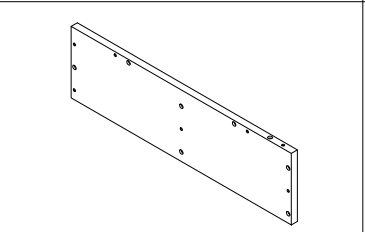


ASSEMBLY INSTRUCTION


N729P170388







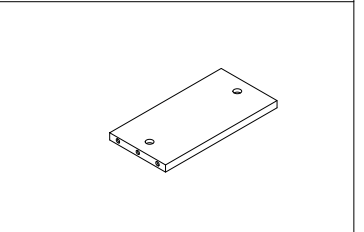


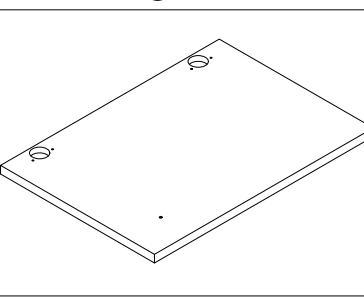


			
① x1	② x1	③ x1	④ x1
			
⑤ x1	⑥ x1	⑦ x1	⑧ x2
			
⑨ x1			










TOOLS

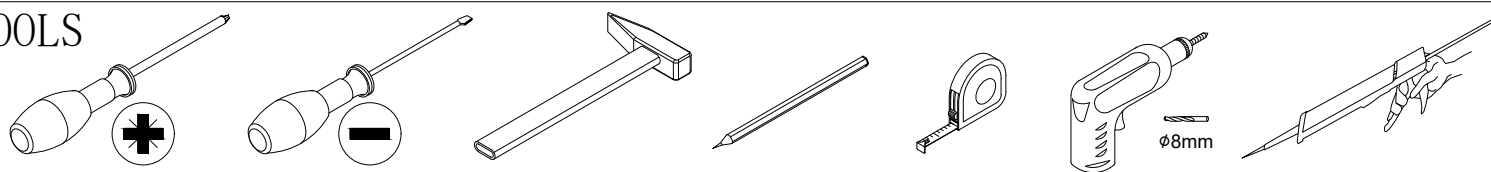

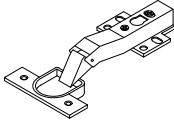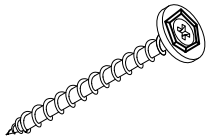
A * 16	B * 16	C * 24	D * 12	E * 12
 M6 X 35mm	 Ø15 x 12mm	 Ø8 x 30mm	 M4 x 14mm	 M4 x 14mm
F * 6	G * 1	H * 1	I * 2	J * 2
 M5 x 40mm	 M4 x 20mm			 Ø35
K * 2	L * 2	M * 2	N * 4	
 Ø8 x 40mm	 Ø20	 M6 x 60mm		



Step 1

A * 16	E * 4	J * 2
		
M6 X 35mm	M4 x 14mm	Ø35

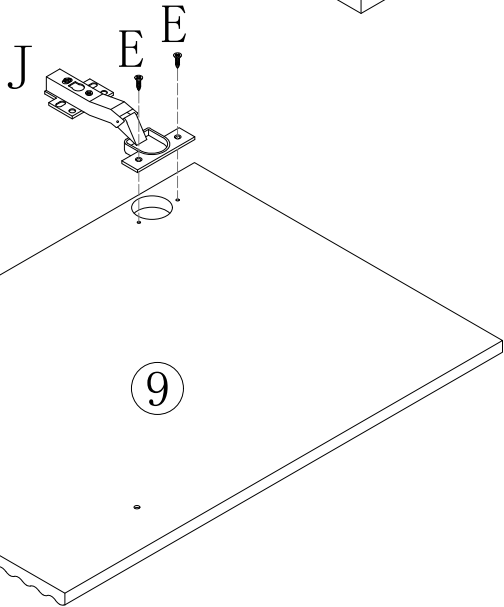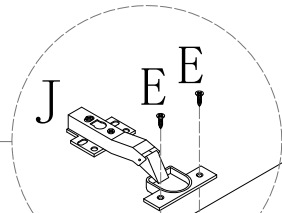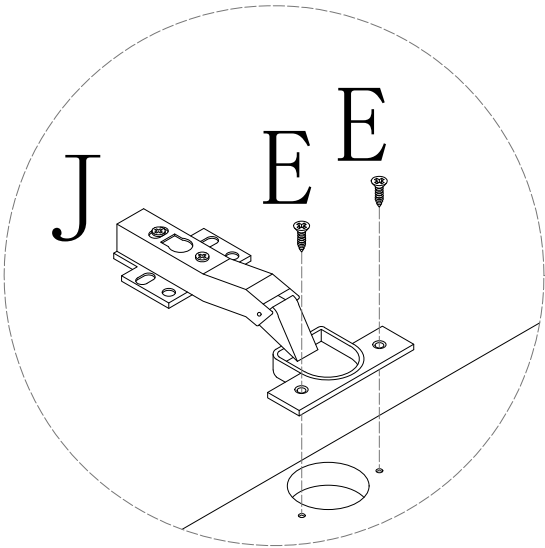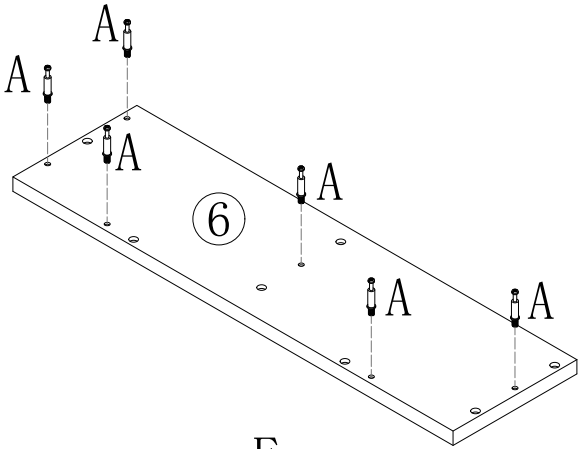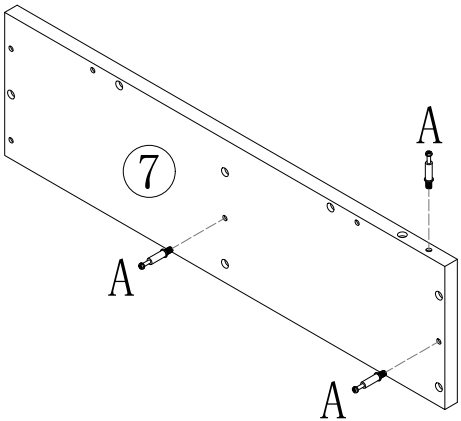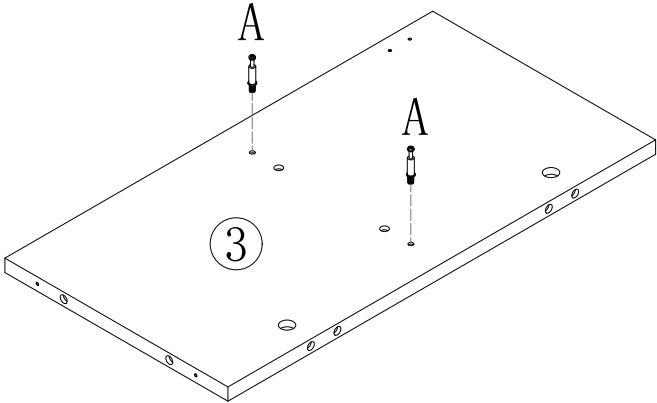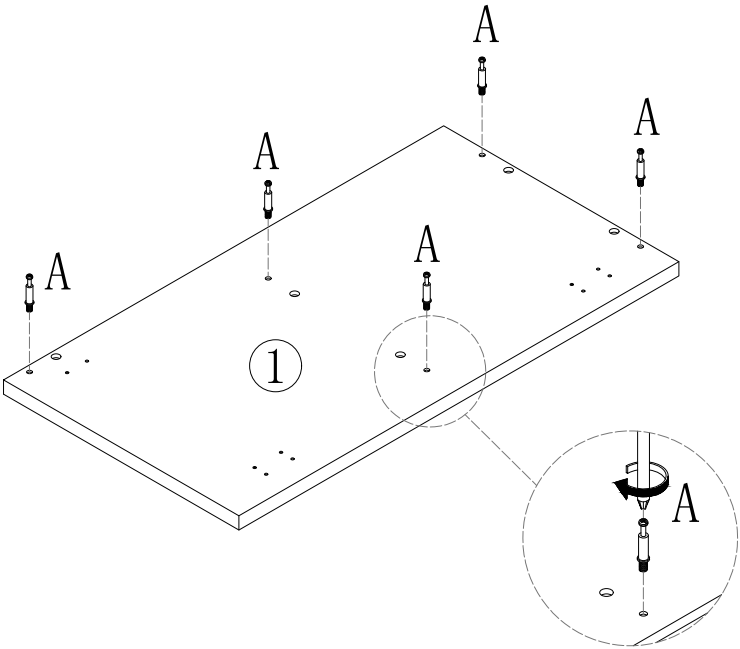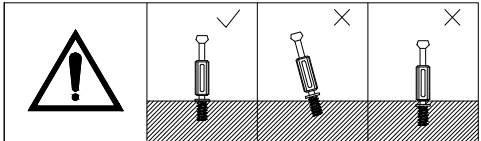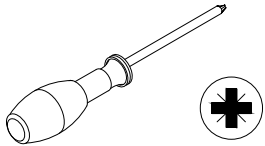








Step 2

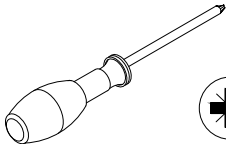
C * 5	F * 6	 
 Ø8 X 30mm	 M5 X 40mm	

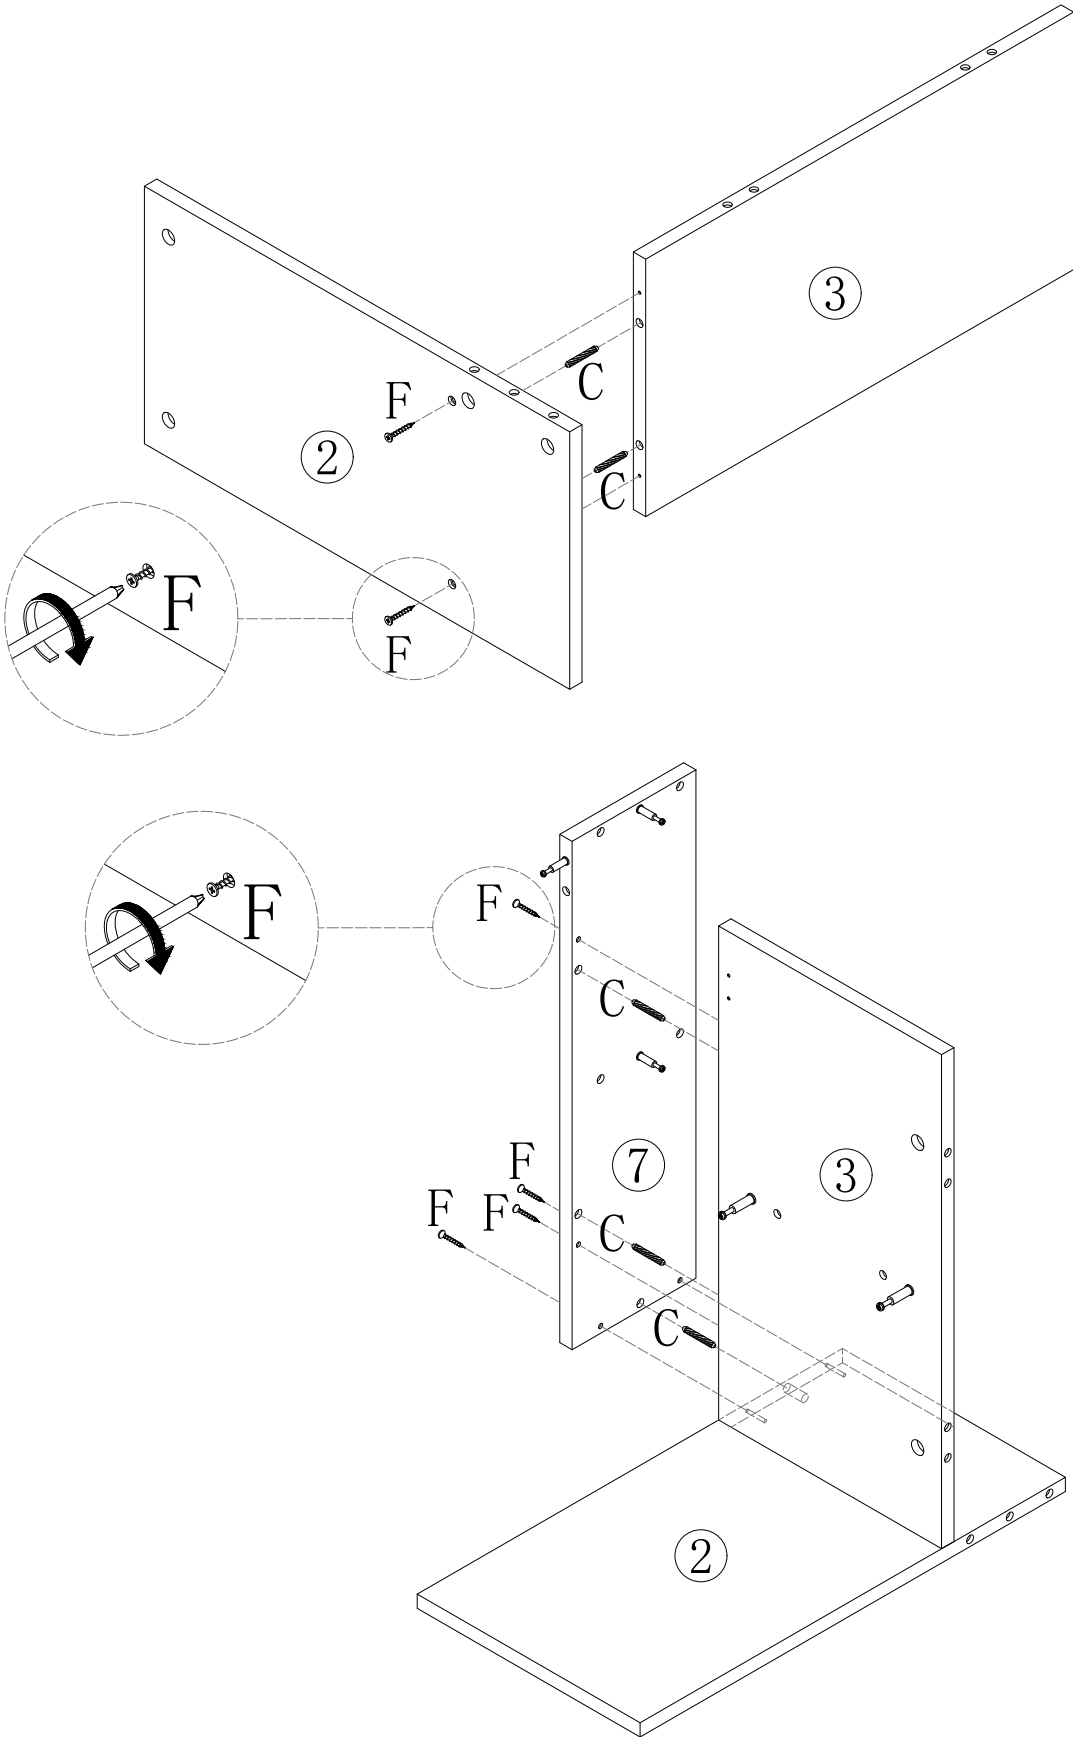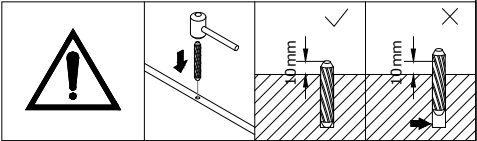

Step 3



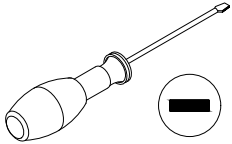
B * 2	C * 4	
 Ø15 x 12mm	 Ø8 x 30mm	

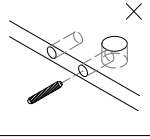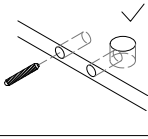

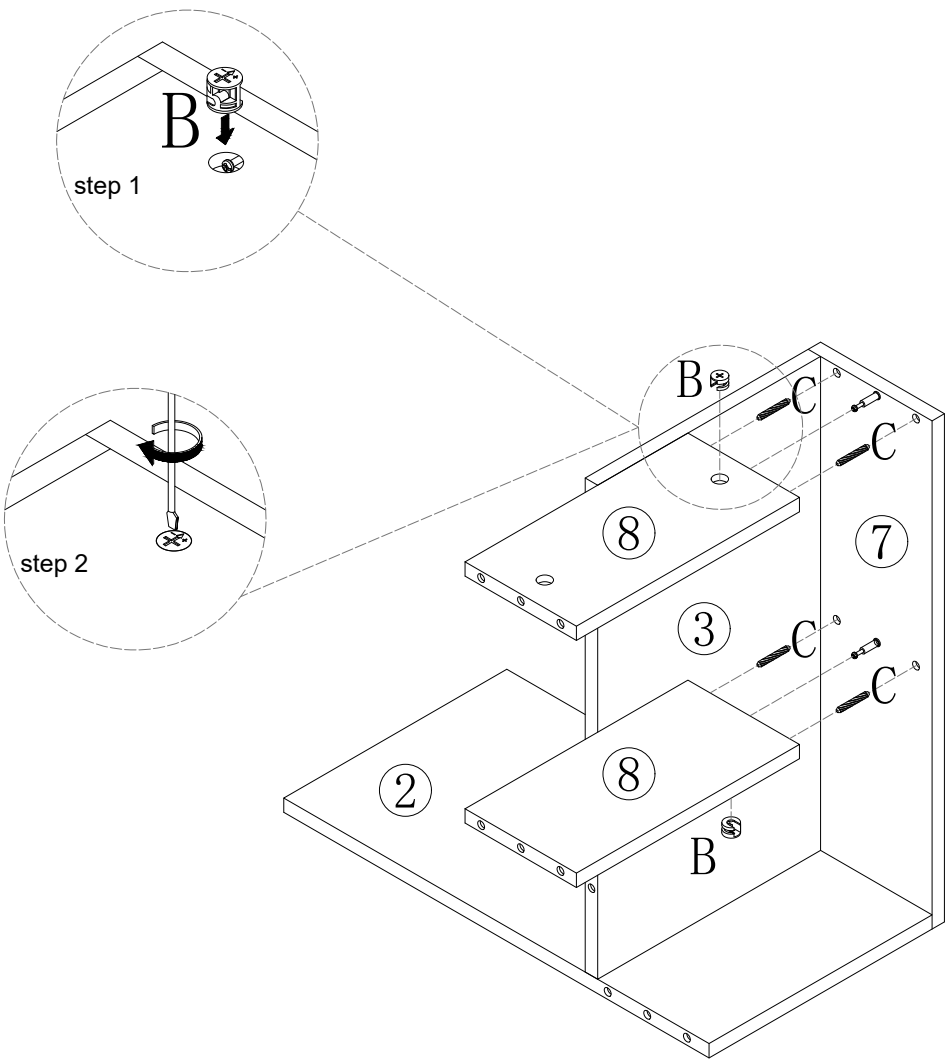








Step 4


B * 6	C * 7
 Ø15 x 12mm	 Ø8 x 30mm

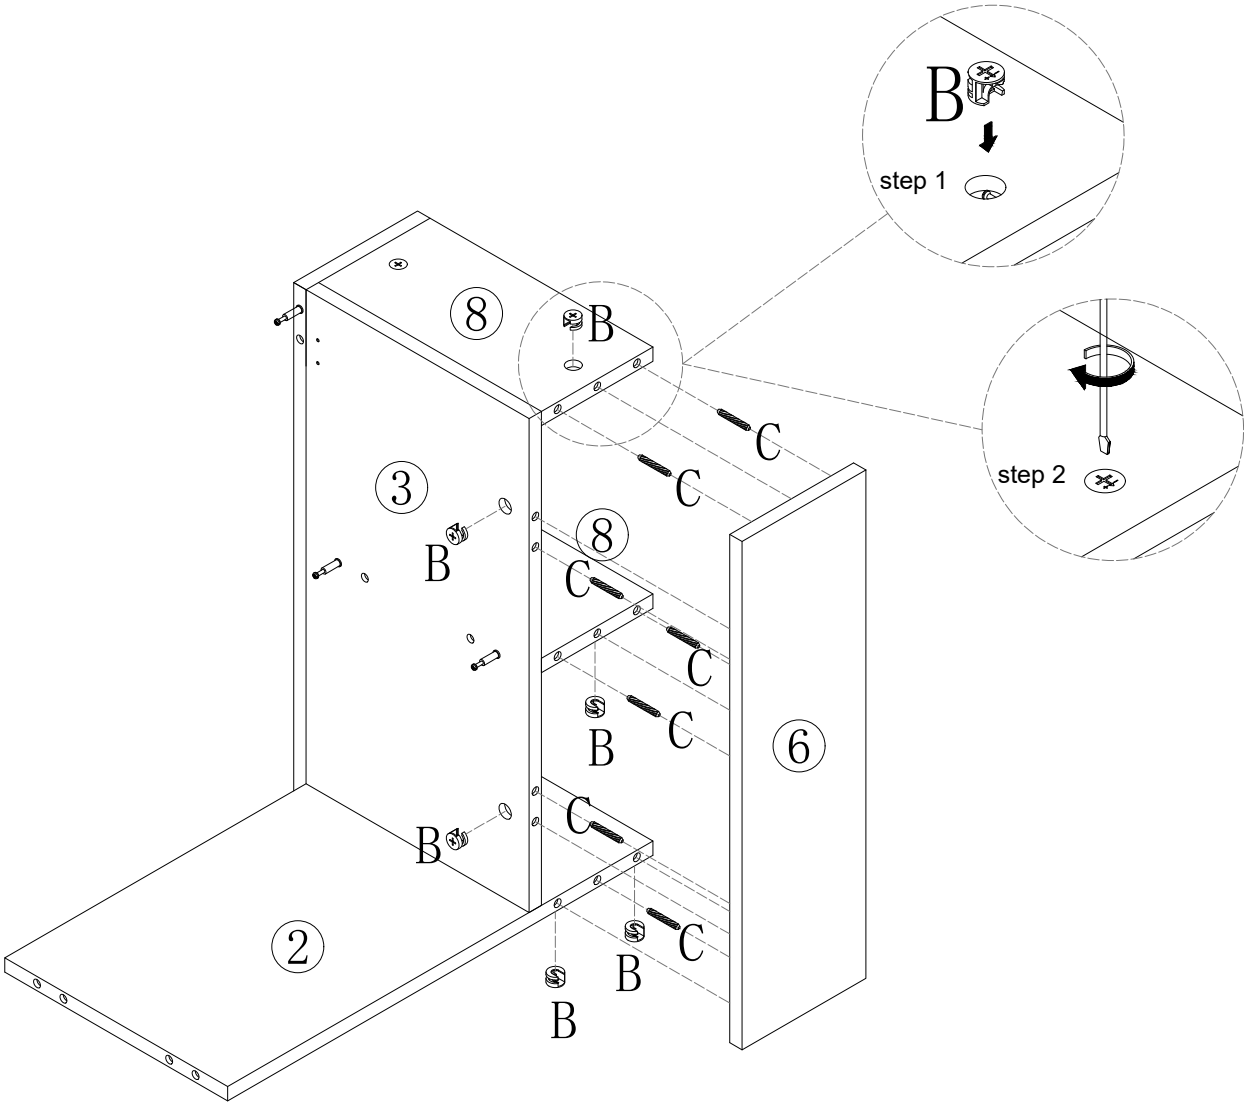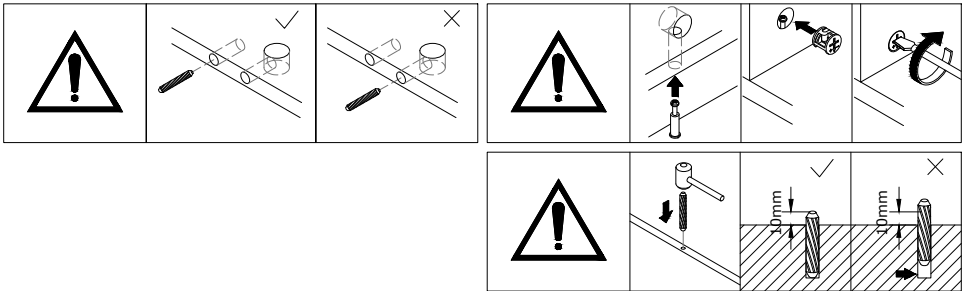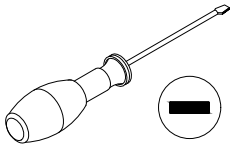


Step 5






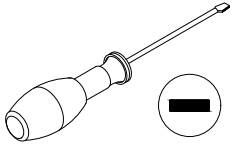
B * 3	C * 3	
 Ø15 x 12mm	 Ø8 x 30mm	

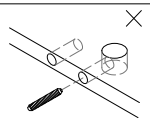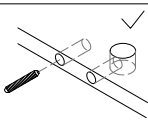


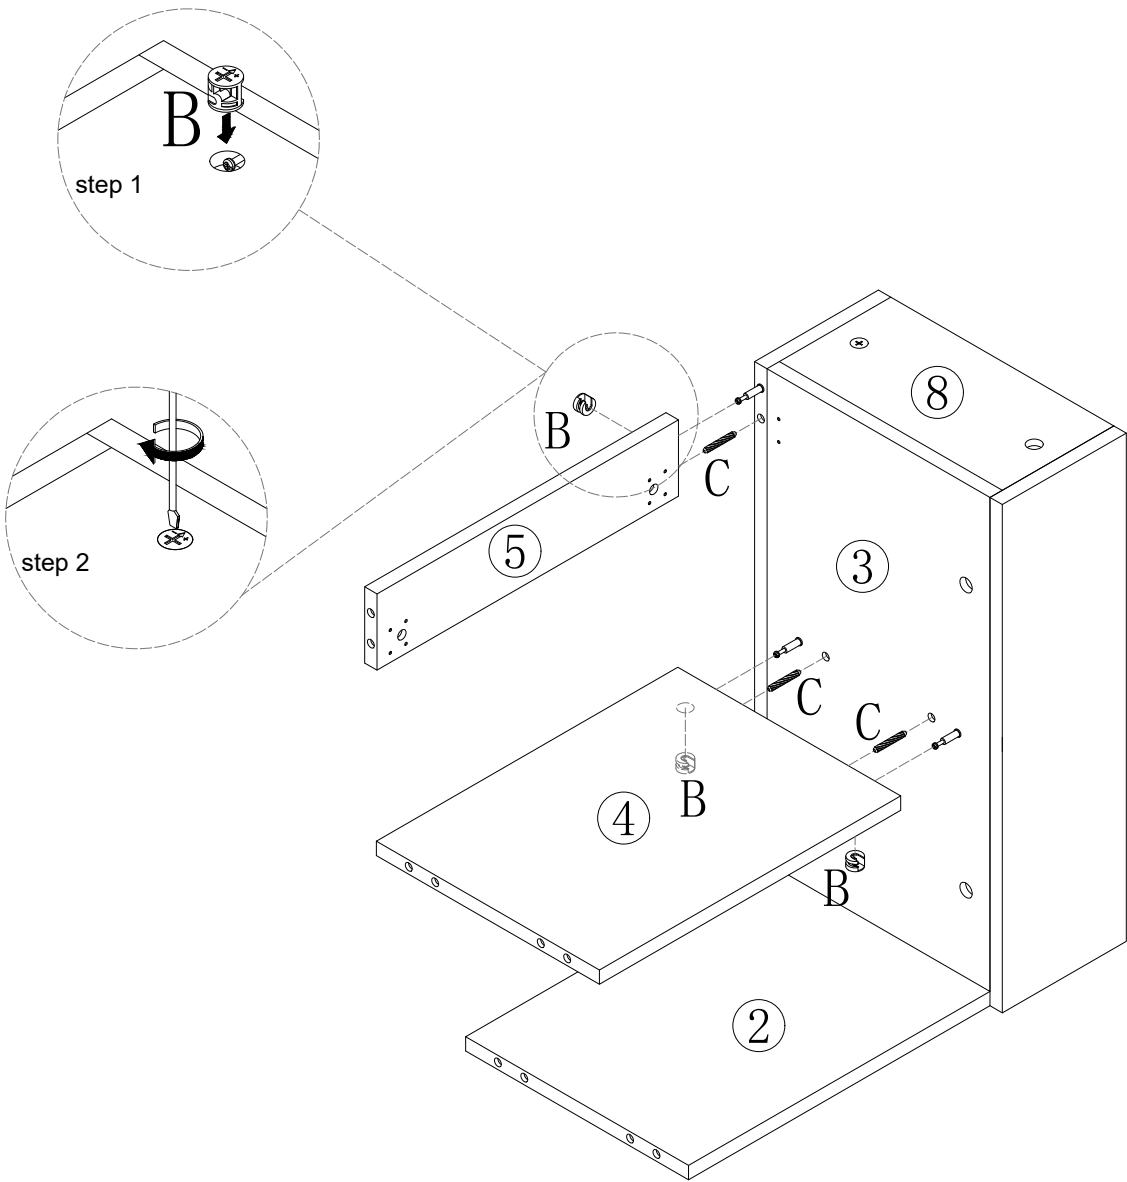


Step 6

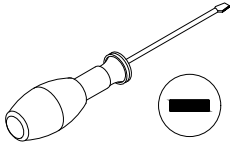
B * 5	C * 5	
 Ø15 x 12mm	 Ø8 x 30mm	

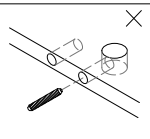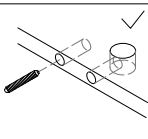


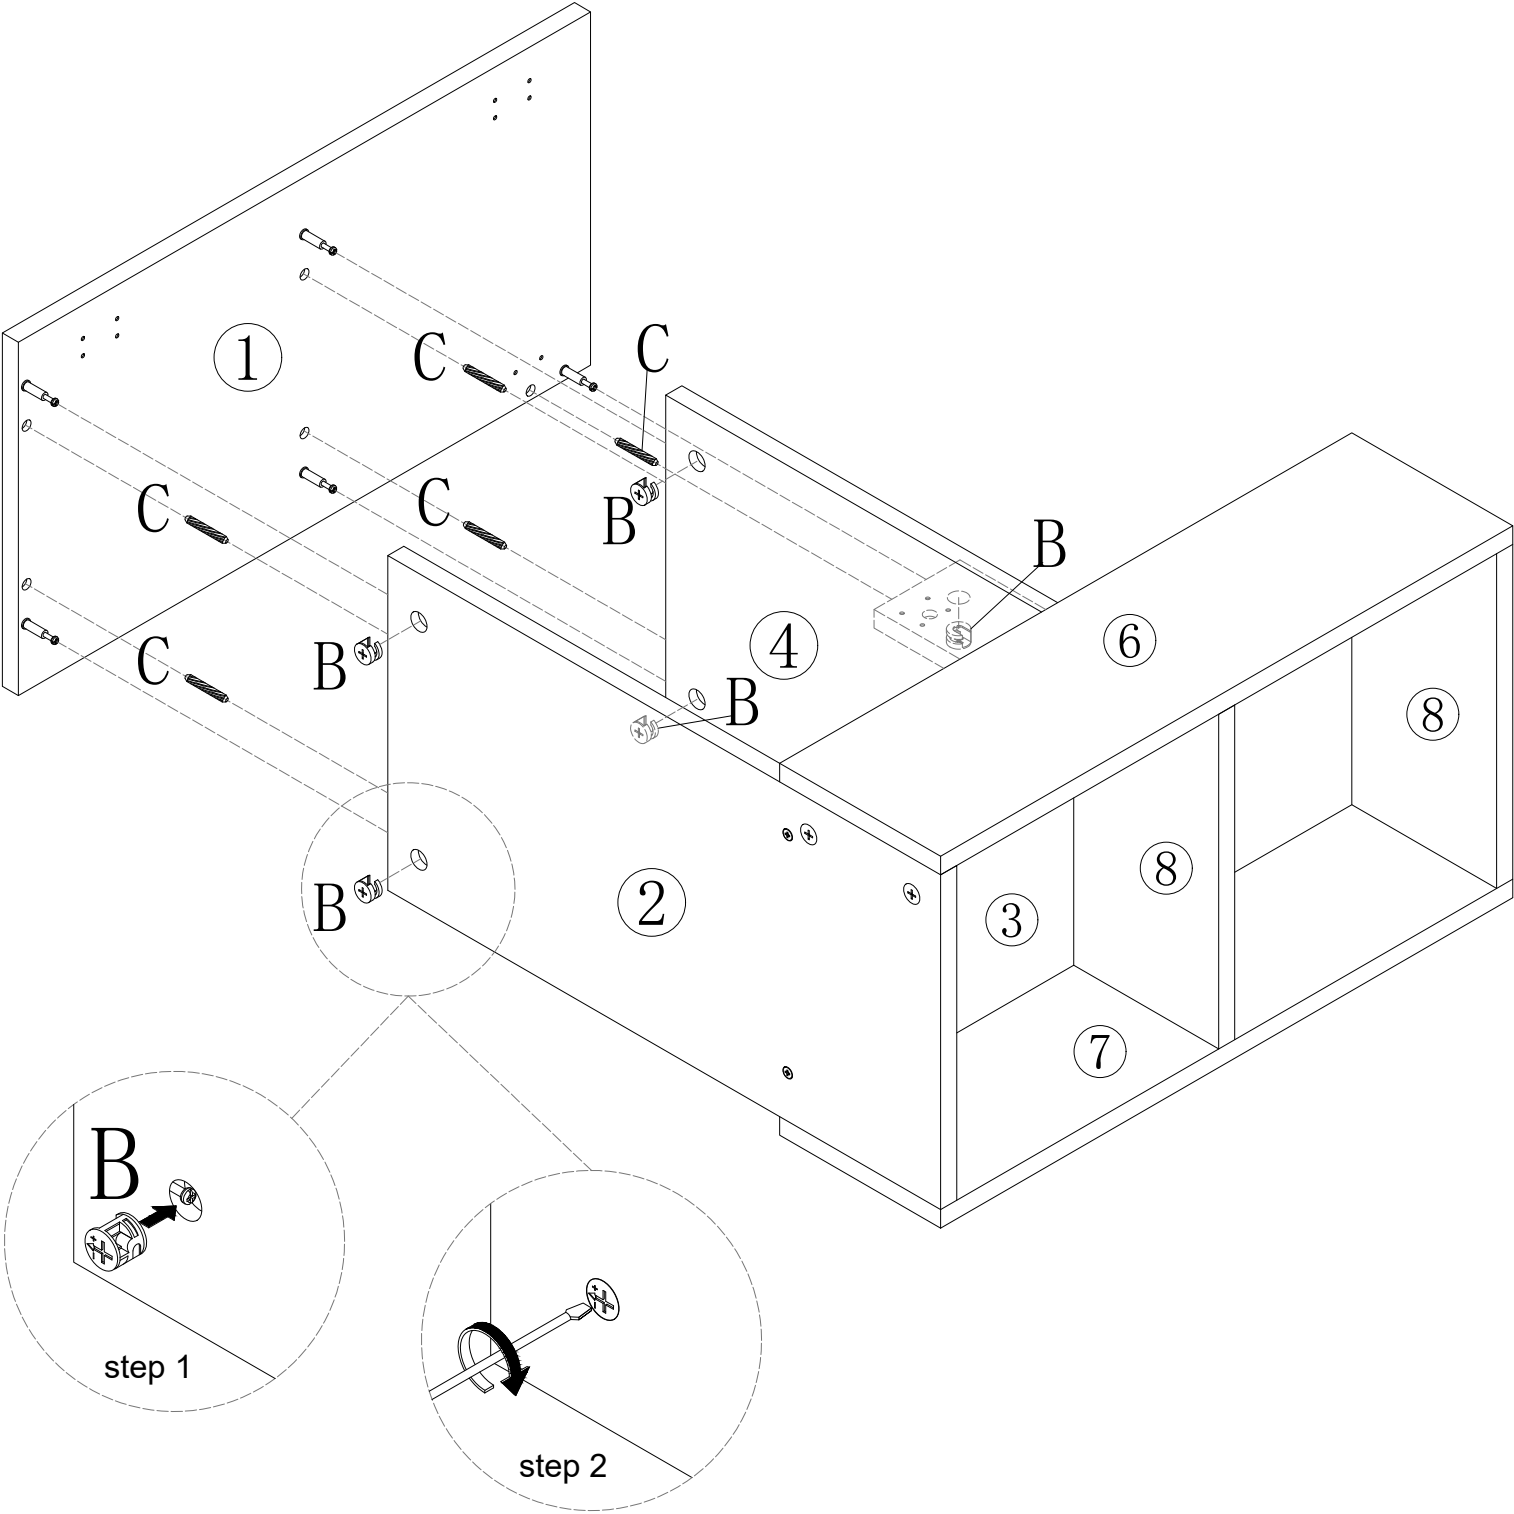


Step 7

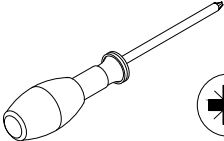
D * 12	I * 2	
 M4 x 14mm		 

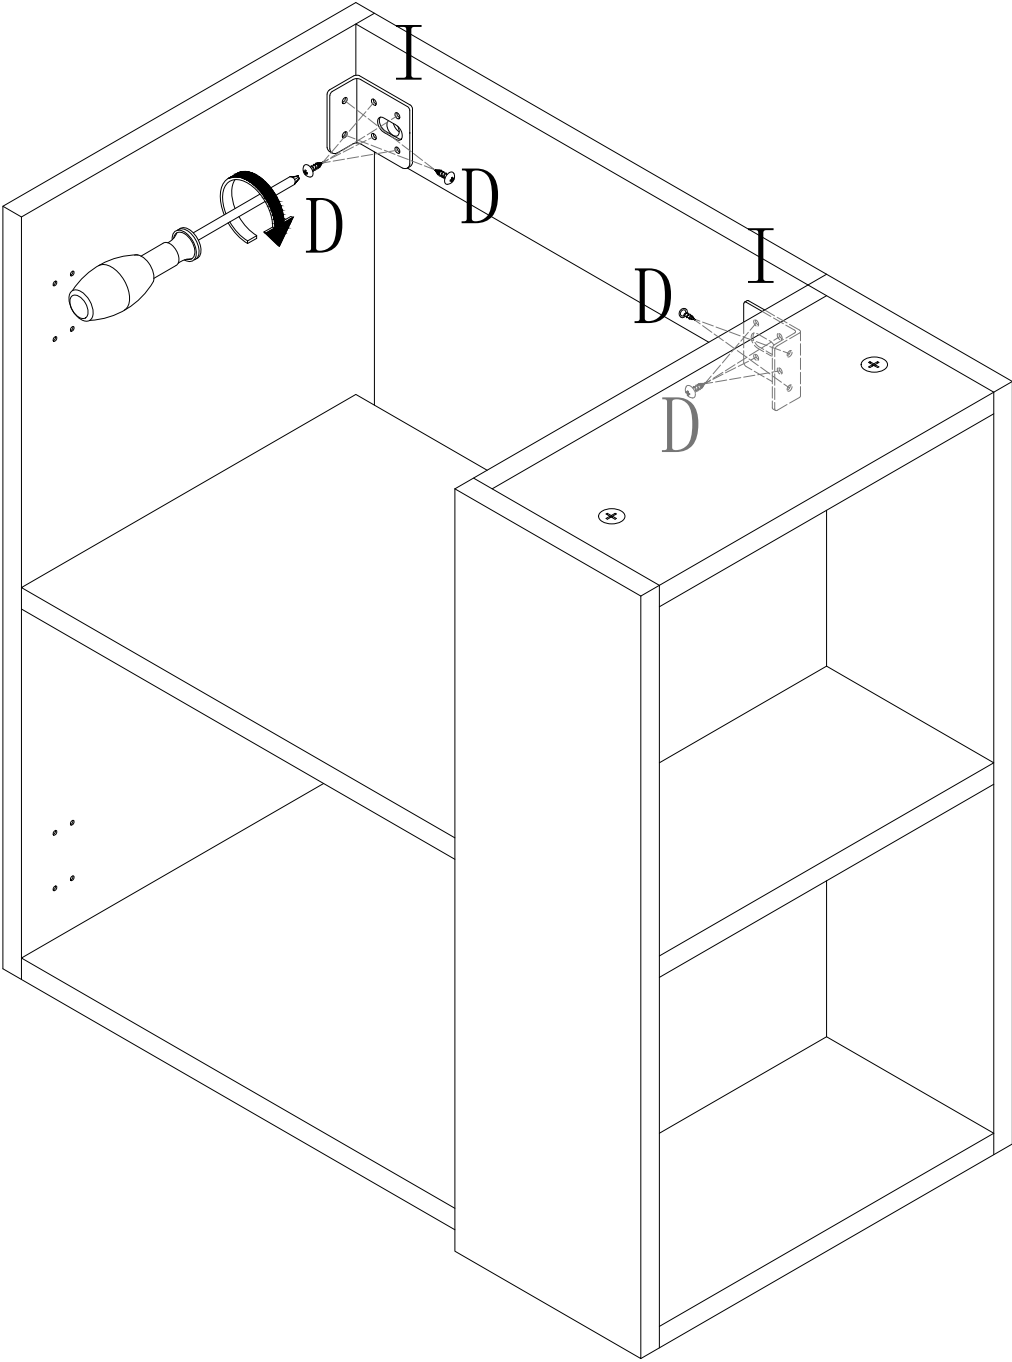

Step 8



Wall

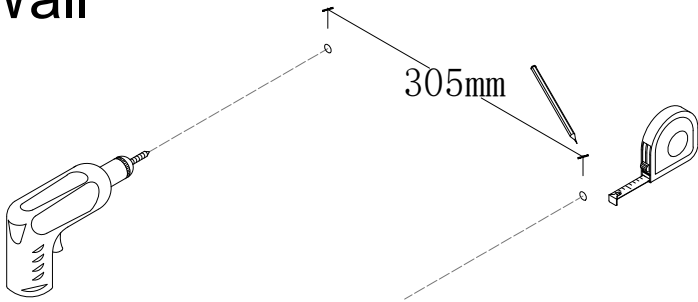


Please mark the location on the wall with a pencil, then punch the hole. You can determine the height of the vanity according to your needs.


Setp 9

K * 2

Ø8 x 40mm

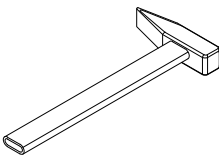


Wall

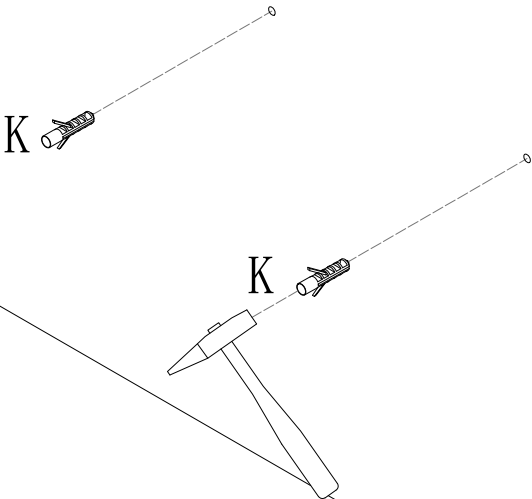


Step 10

L * 2	M * 2
 Ø16	 M6 x 60mm

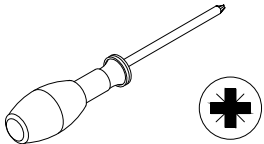


Wall

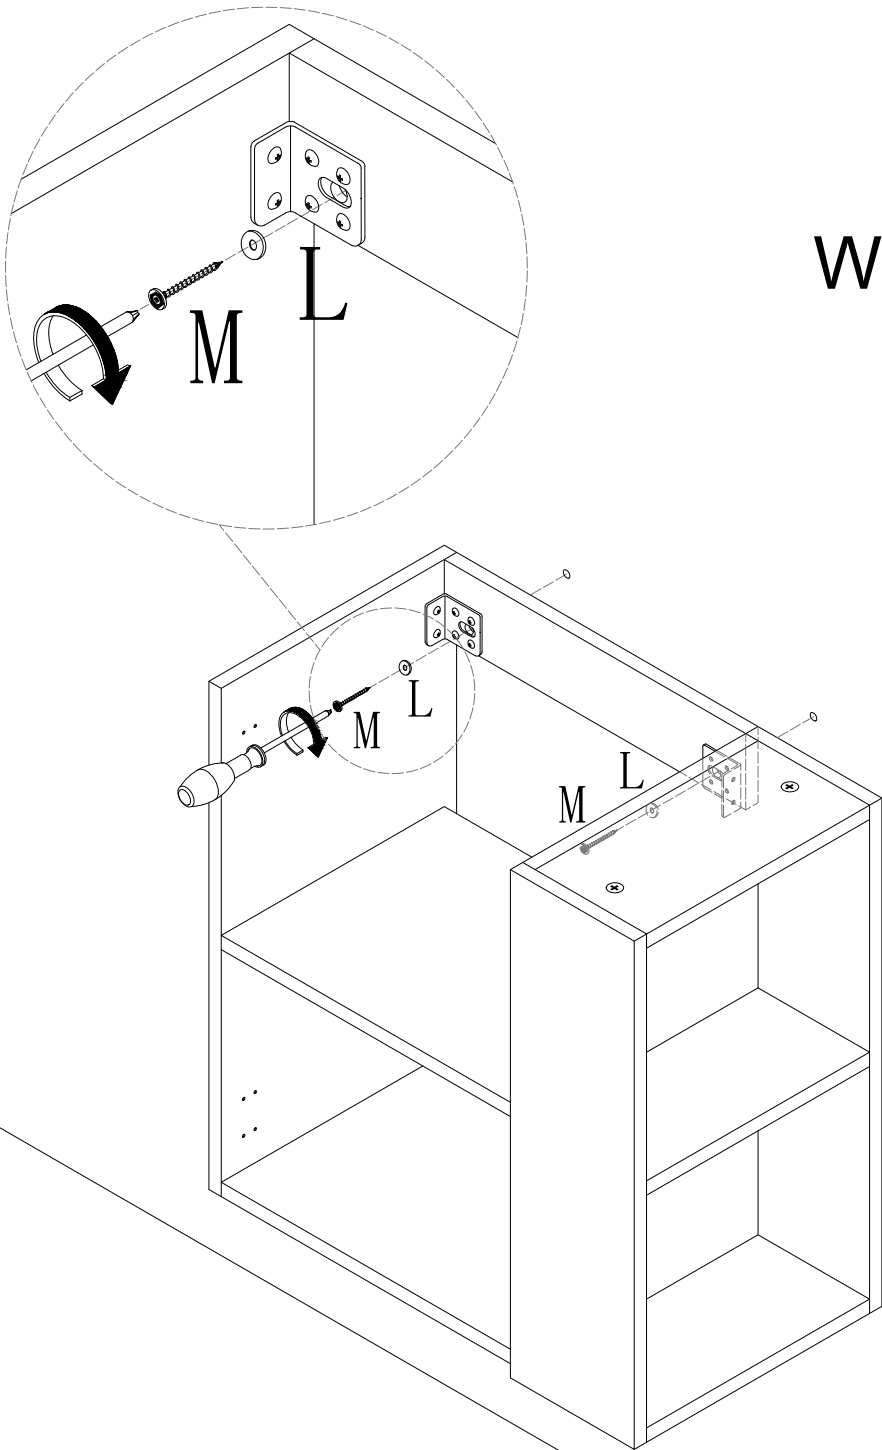


Step 11


E * 8	G * 1	H * 1
 M4 x 14mm	 M4 x 20mm	

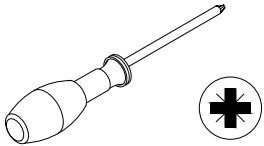


Wall

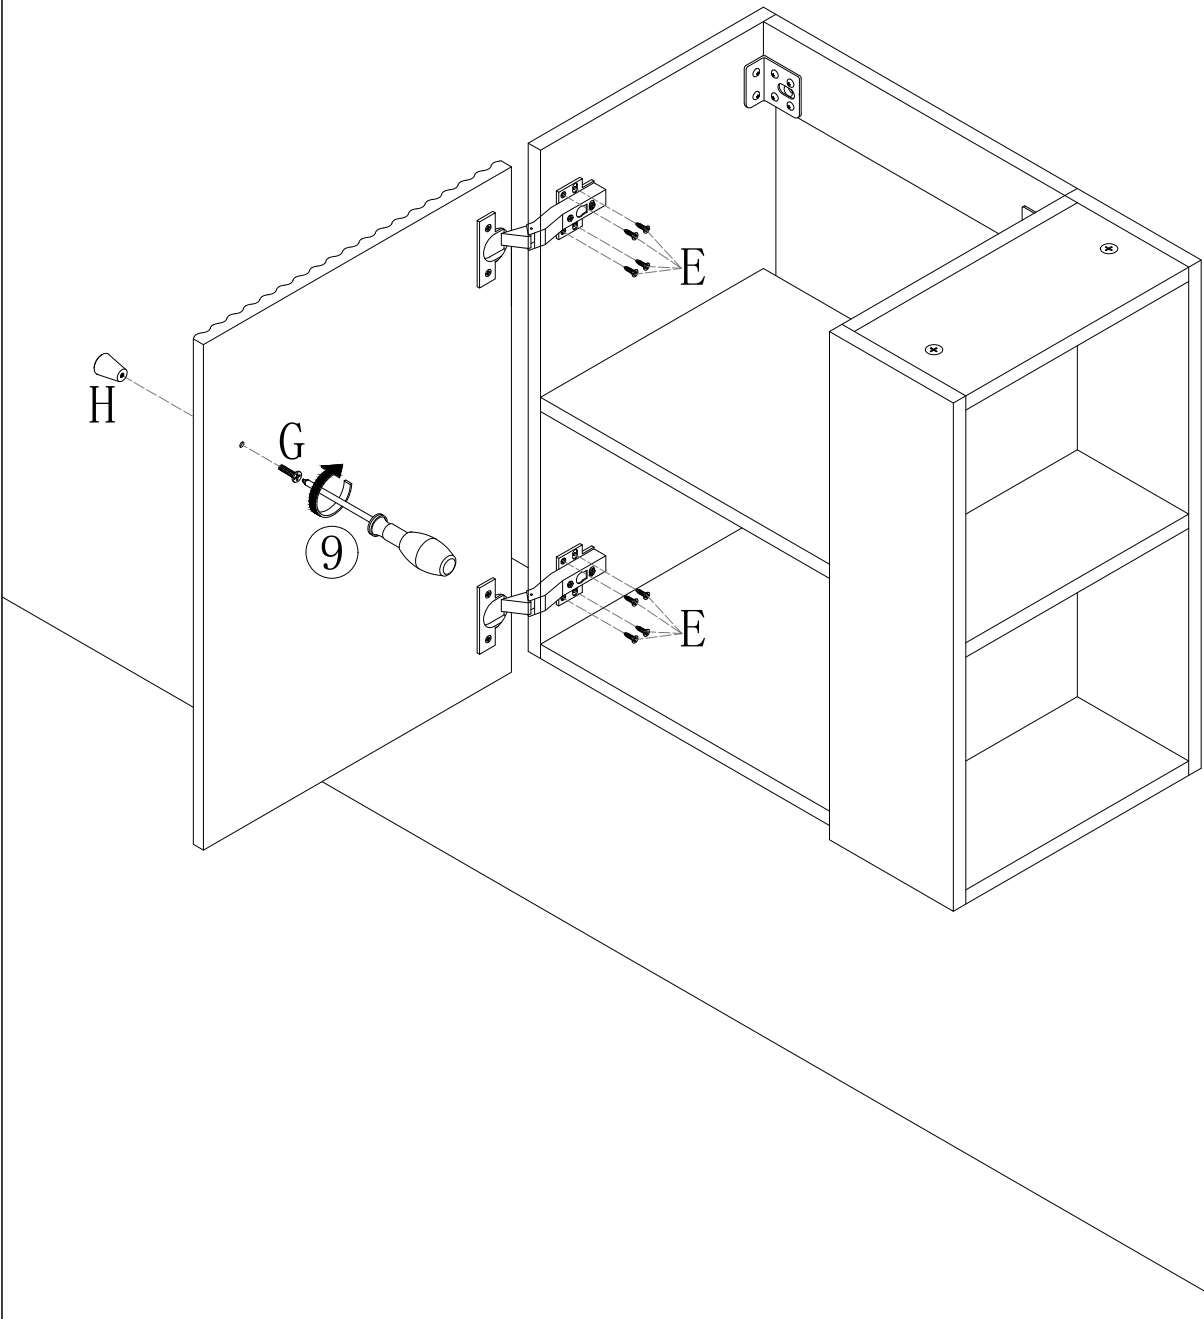




Step 12

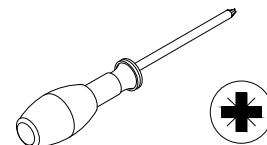

Adjust door following the direction.

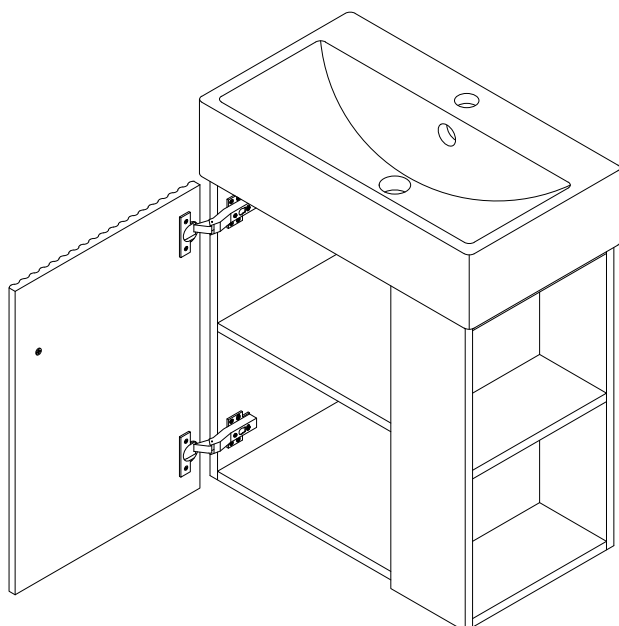

Adjust the door up and down to match the cabinet.

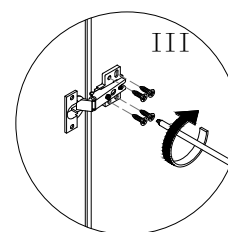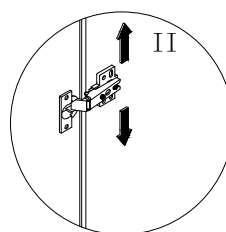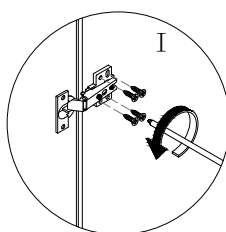

I:loosen the screw.



II:Adjust the upper and lower position.

II:tighten the screw.



When the door position is not standard,please adjust the door according to the right picture.

Adjust the door left and right to match the cabinet for suitable crack of the door

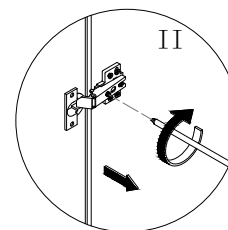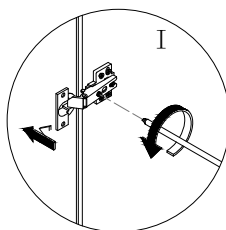



I:loosen the screw to keep hinge apply force toward the direction of arrow.

II:tighten the screw to keep hinge apply force toward the direction of arrow.



Please place the cabinet on the flat floor before adjustment.

Adjust the door backwards and forwards to match the cabinet.

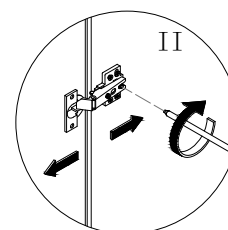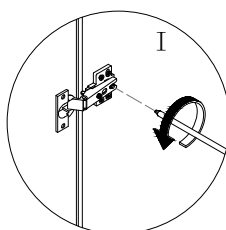


I:loosen the screw.


II:Adjust the distance between front and back.


Step 13

N * 4

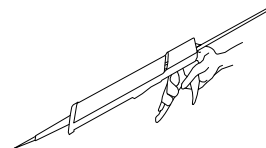


Wall

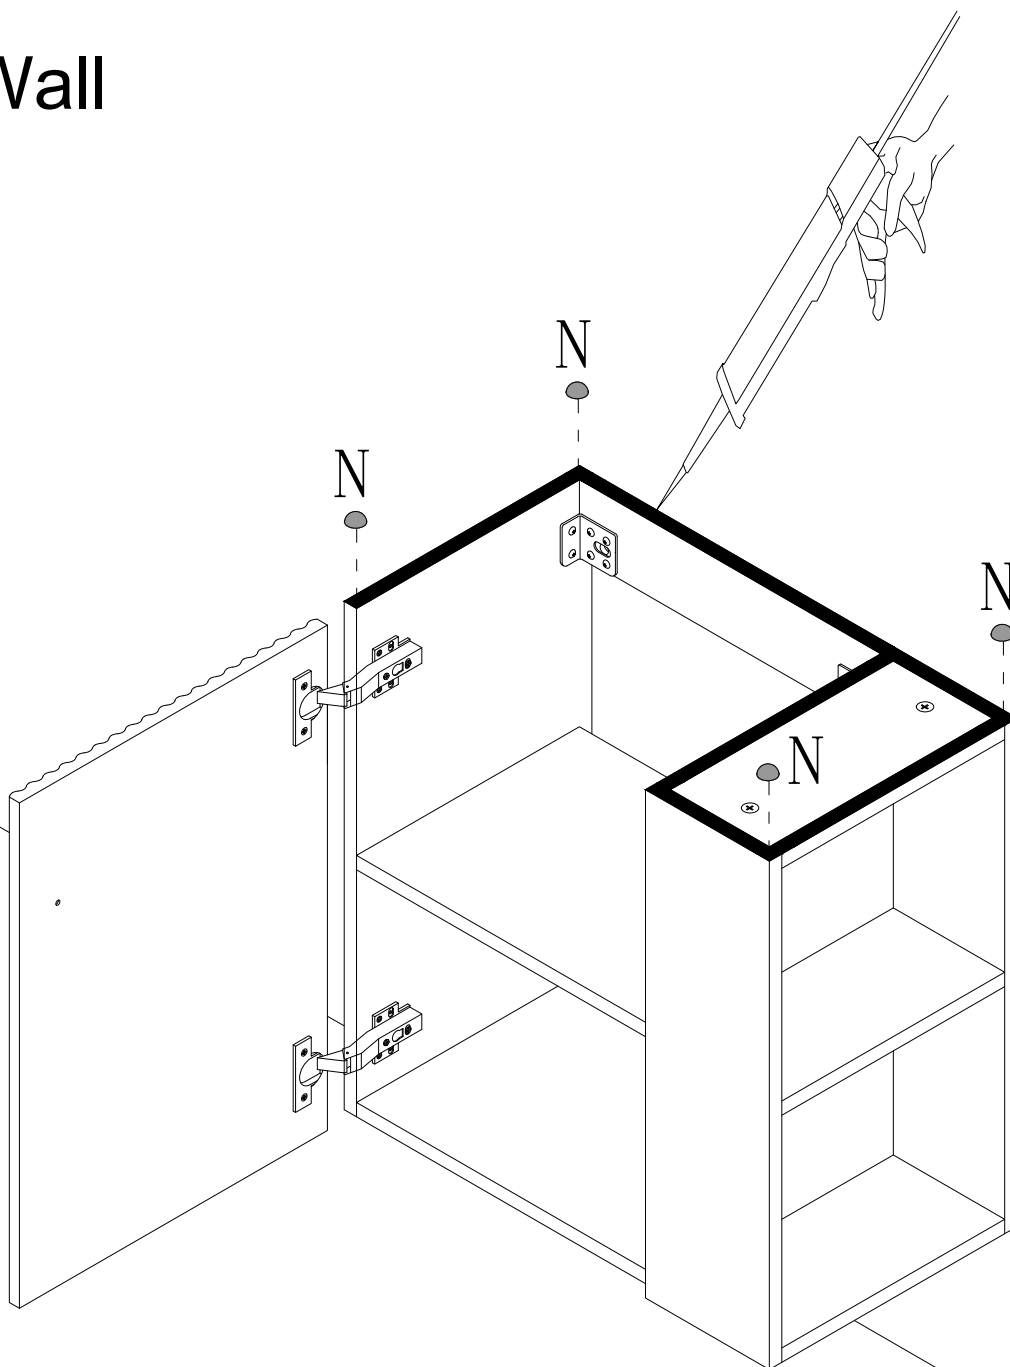

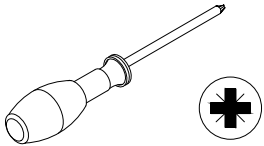

Wall

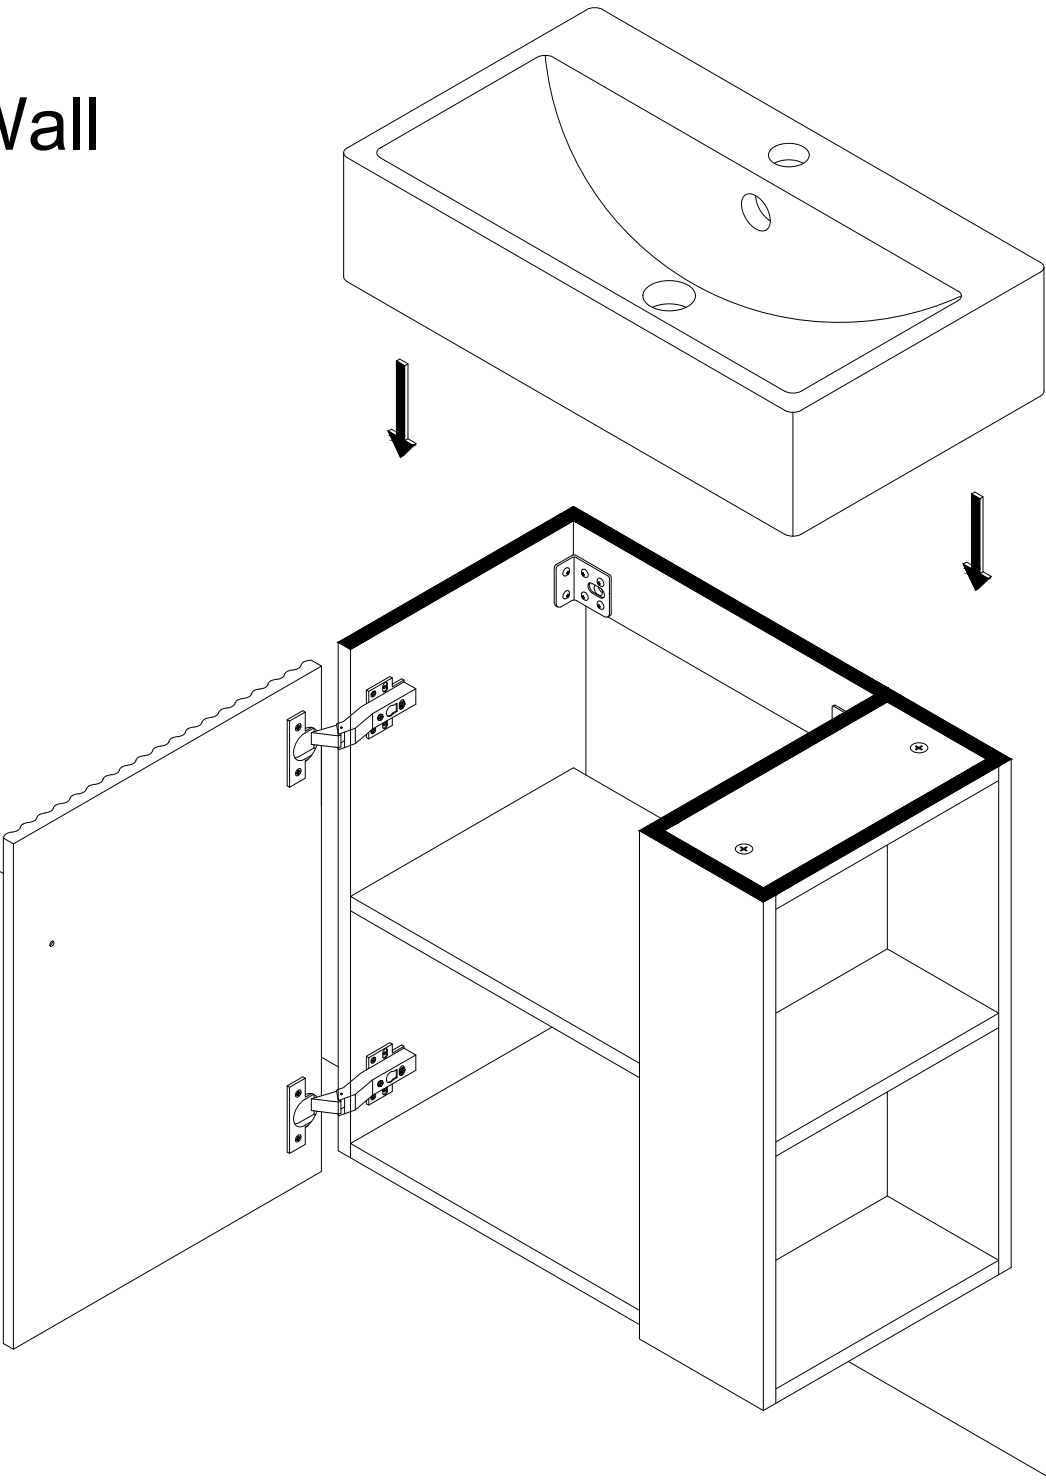

Step 15

