



# ASSEMBLY INSTRUCTIONS

ITEM NO.WF290169

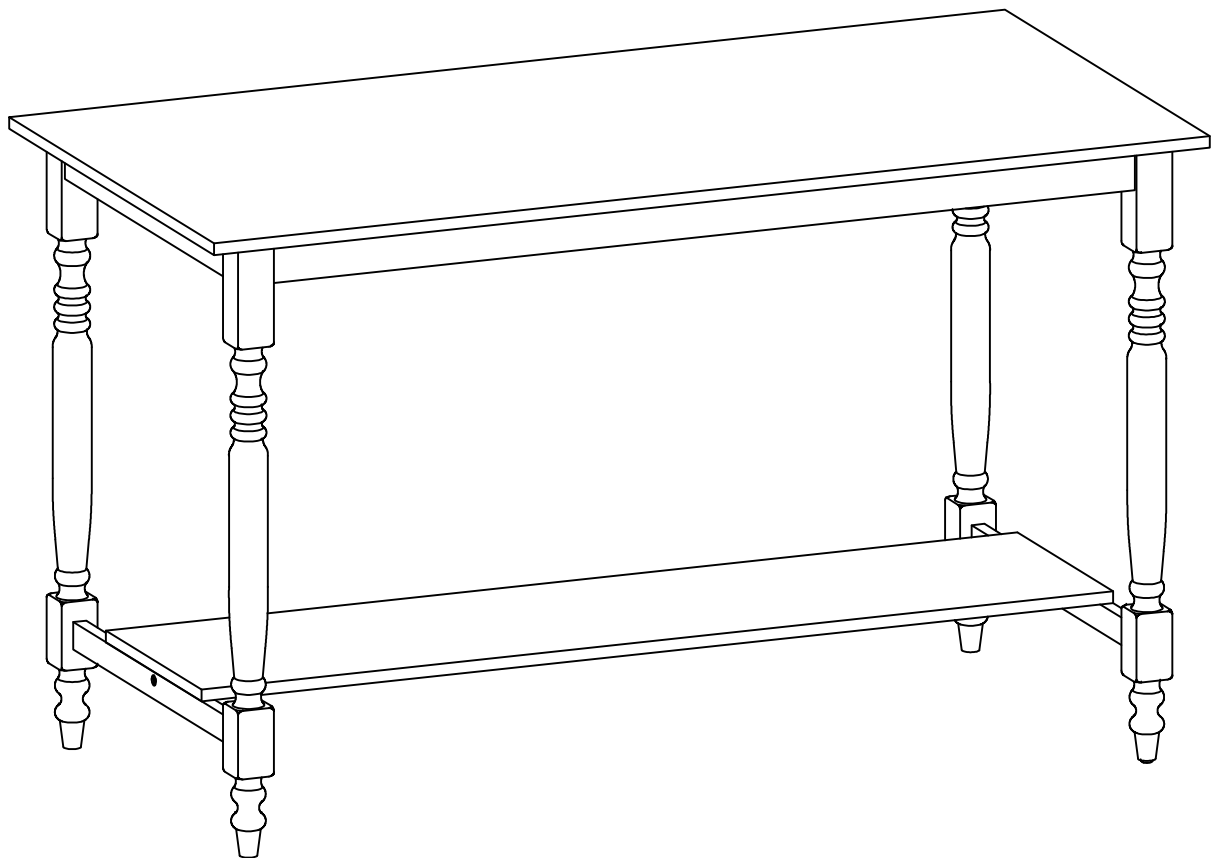







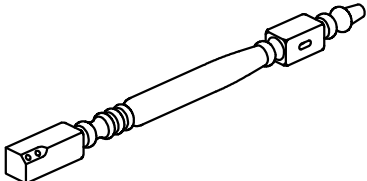

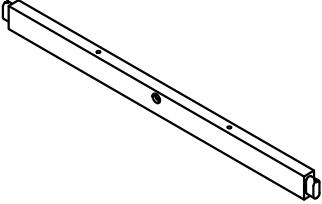


## IMPORTANT NOTE :

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN,KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE TABLE IS FULLY SET-UP.

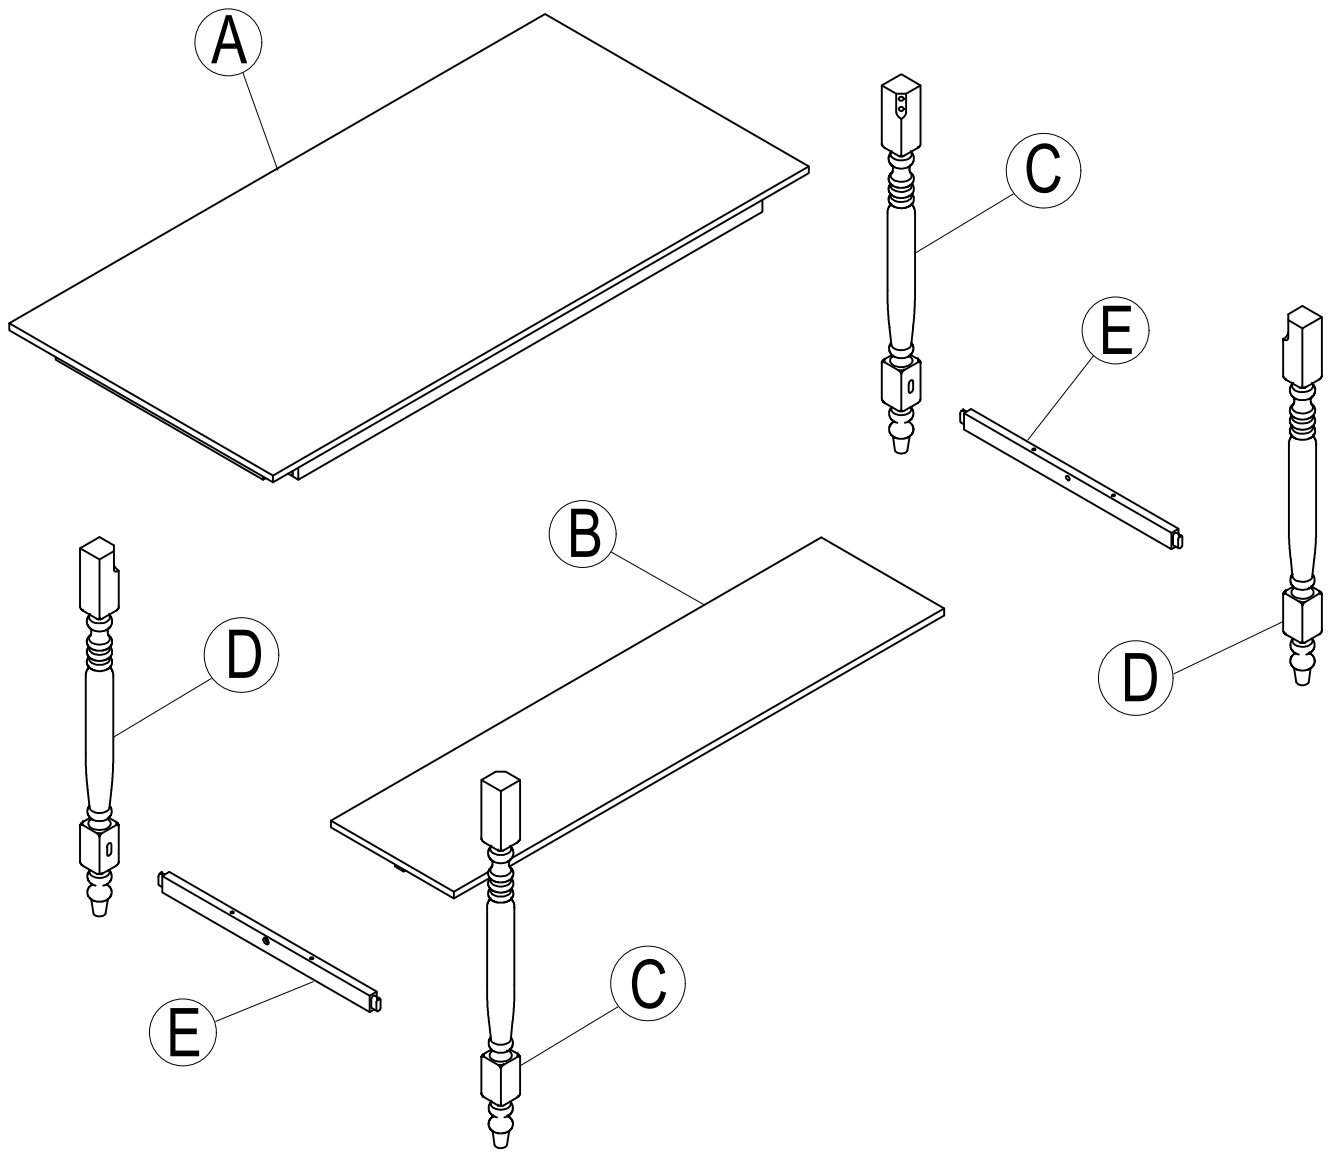


# Part List


# Hardware List
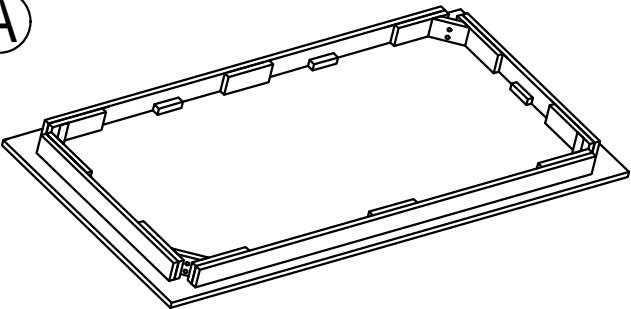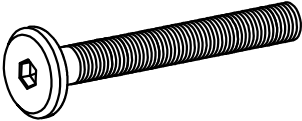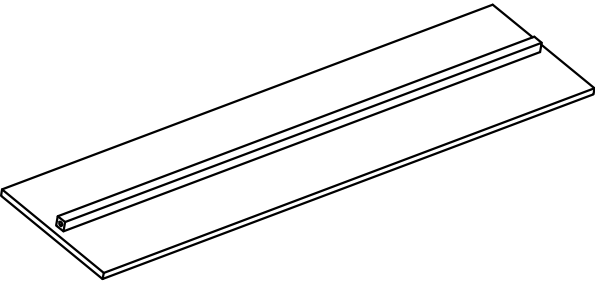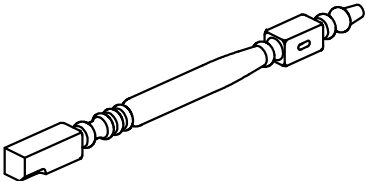
<p><b>A</b></p>  <p>TOP TABLE (1 pc)</p>	<p><b>1</b></p>  <p>Ø 5/16" x 55 mm</p> <p>BOLT (8 pcs)</p>
<p><b>B</b></p>  <p>TABLE SHELVES (1 pc)</p>	<p><b>2</b></p>  <p>Ø 1/4" x 30 mm</p> <p>BOLT (2 pcs)</p>
<p><b>C</b></p>  <p>LEG LEFT (2 pcs)</p>	<p><b>3</b></p>  <p>Ø5/16" x 13 mm</p> <p>FLAT WASHER (8 pcs)</p>
<p><b>D</b></p>  <p>LEG RIGHT (2 pcs)</p>	<p><b>4</b></p>  <p>Ø5/16" x 19 mm</p> <p>LOCK WASHER (8 pcs)</p>
<p><b>E</b></p>  <p>STRETCHER (2 pcs)</p>	<p><b>5</b></p>  <p>4 mm</p> <p>ALLEN KEY (1 pc)</p>
	<p><b>6</b></p>  <p>Ø4 x 38 mm</p> <p>WOOD SCREWS (8 pcs)</p>


## STEP 1:

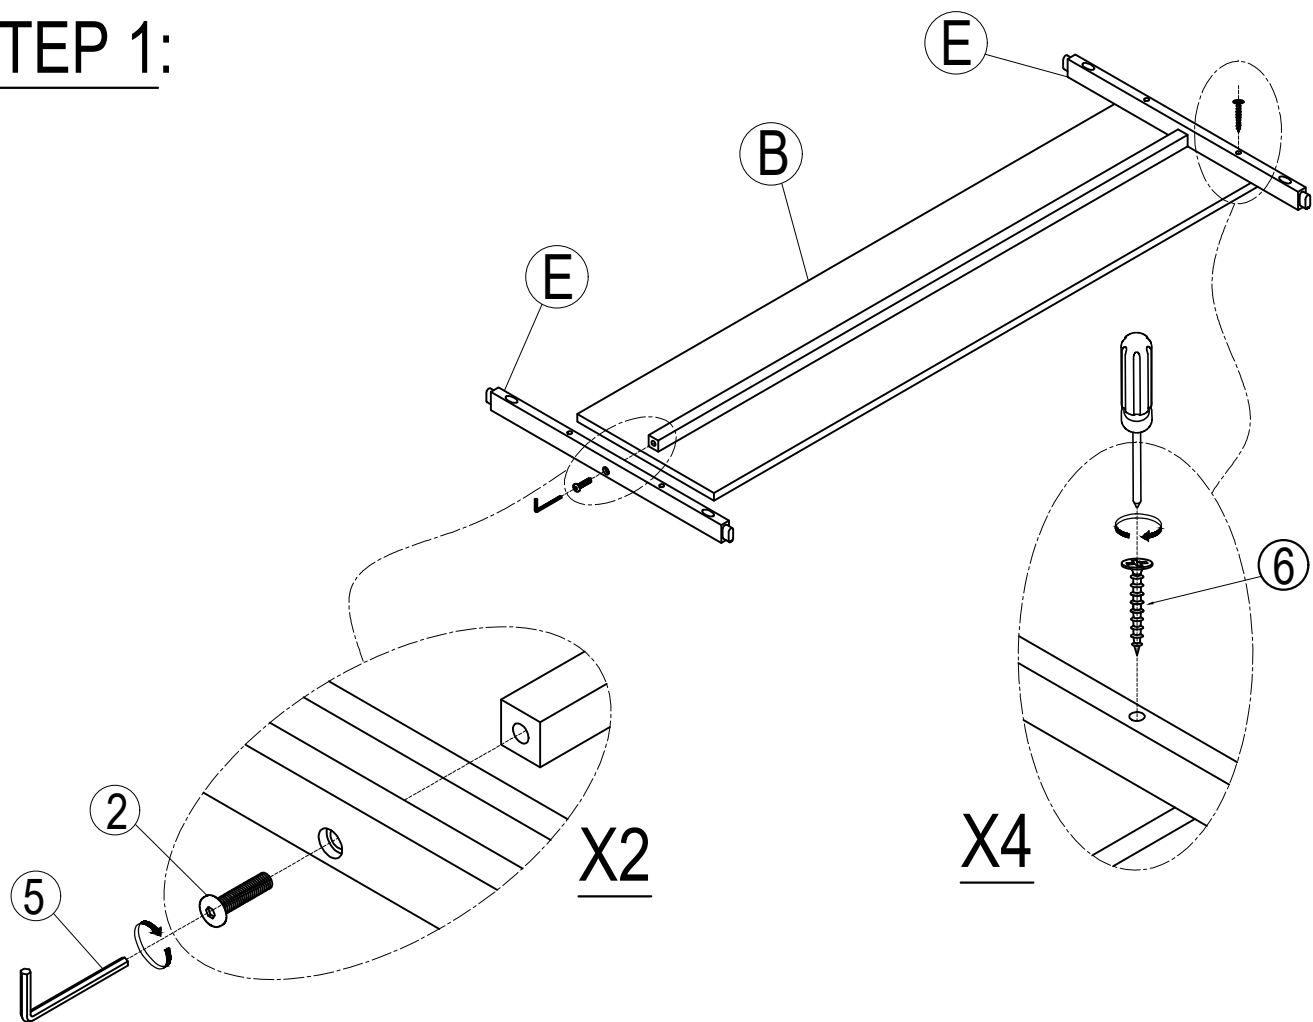

## STEP 2:

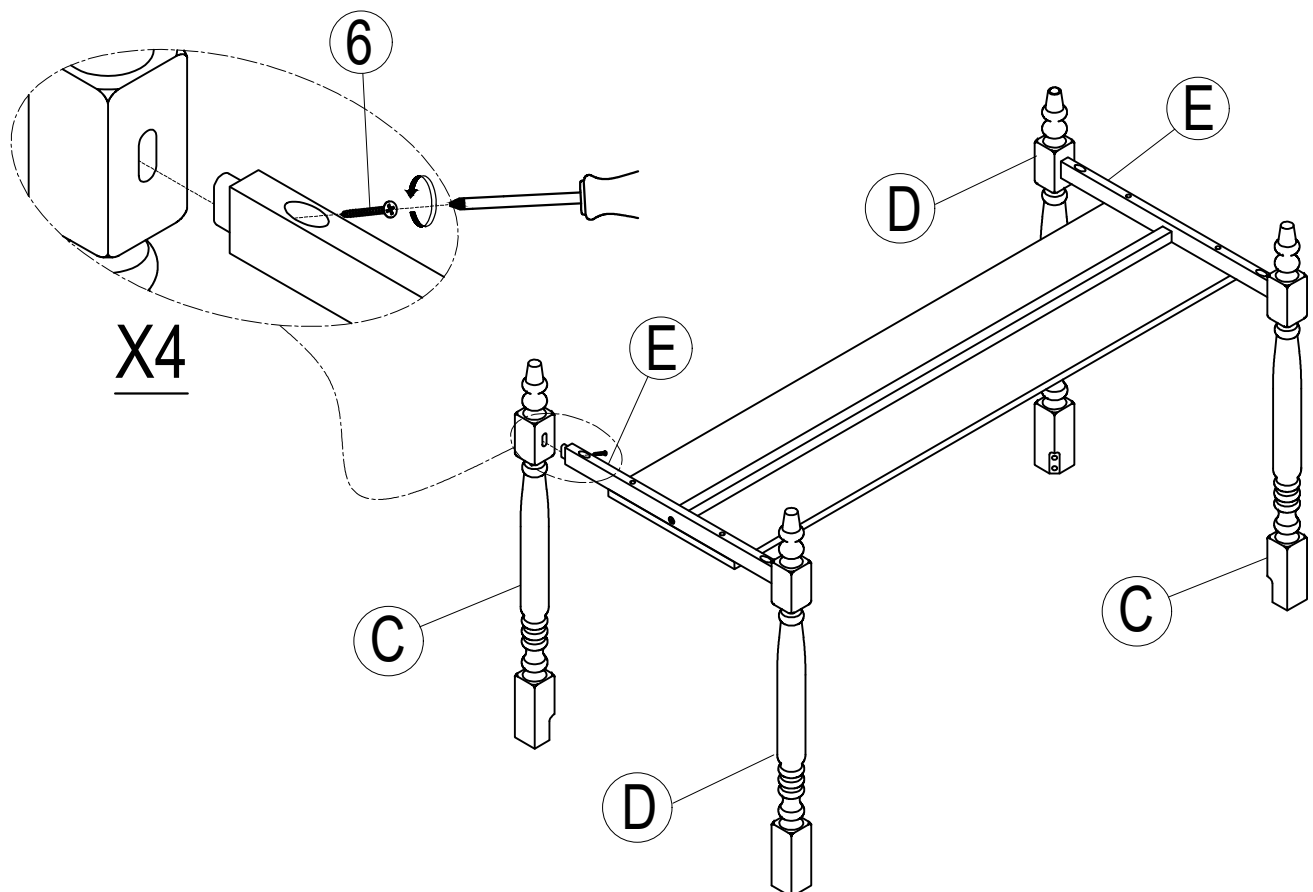


## STEP 3:

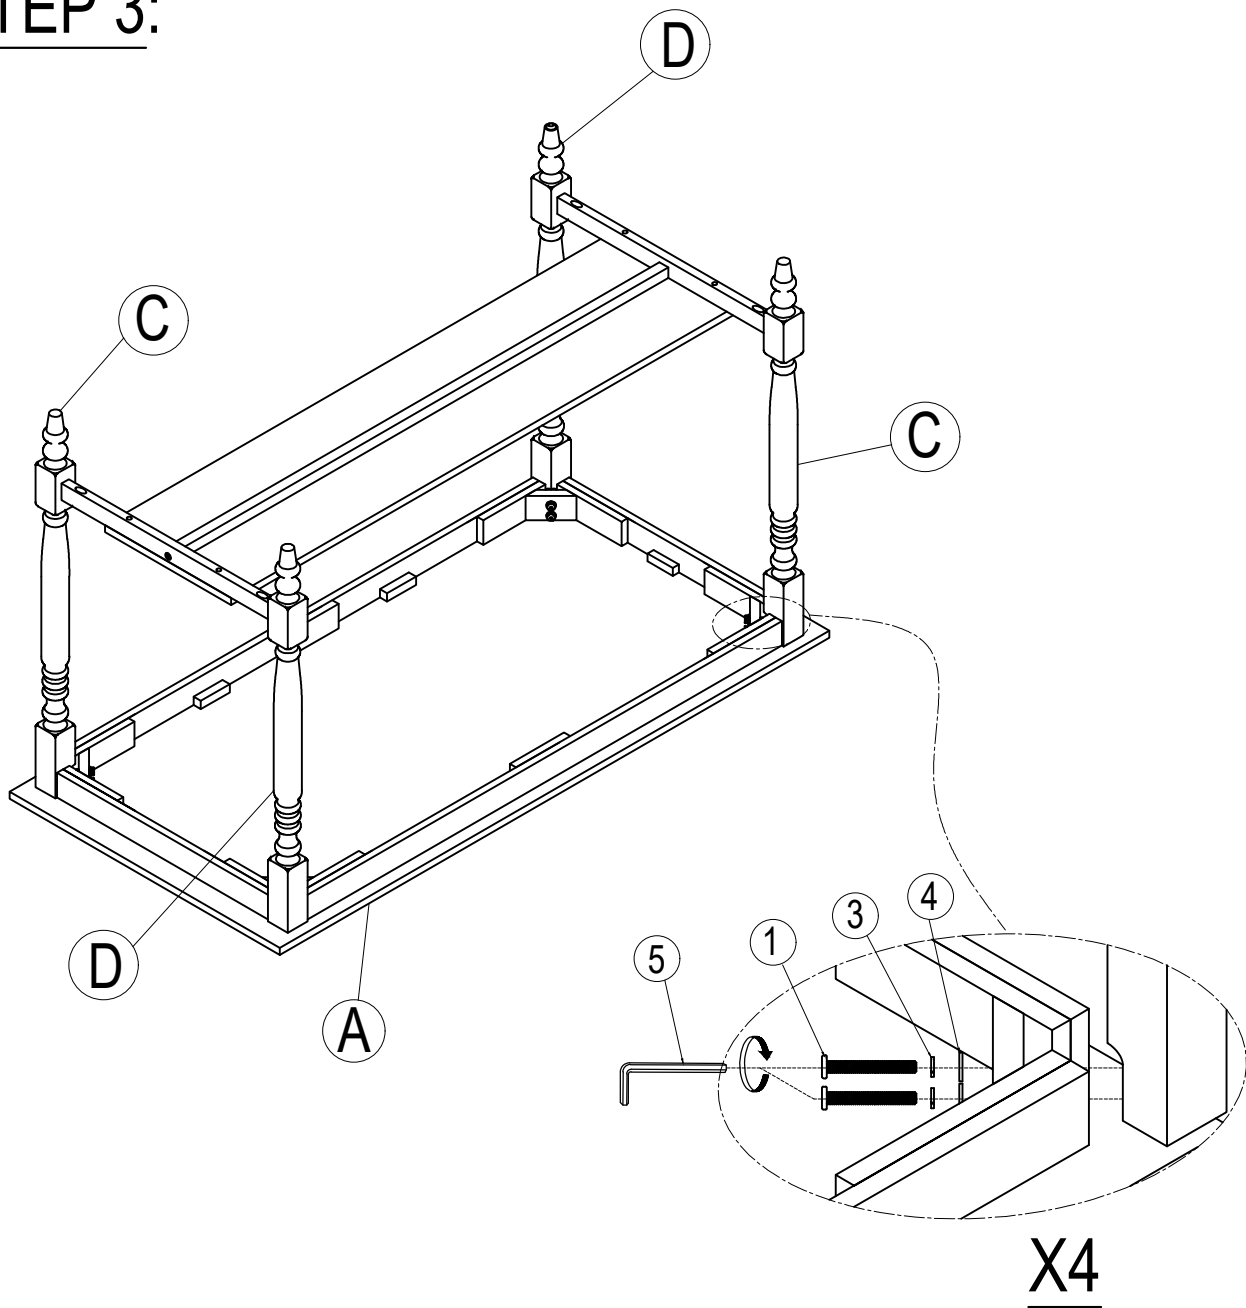


# ASSEMBLY INSTRUCTIONS

ITEM NO.WF290170

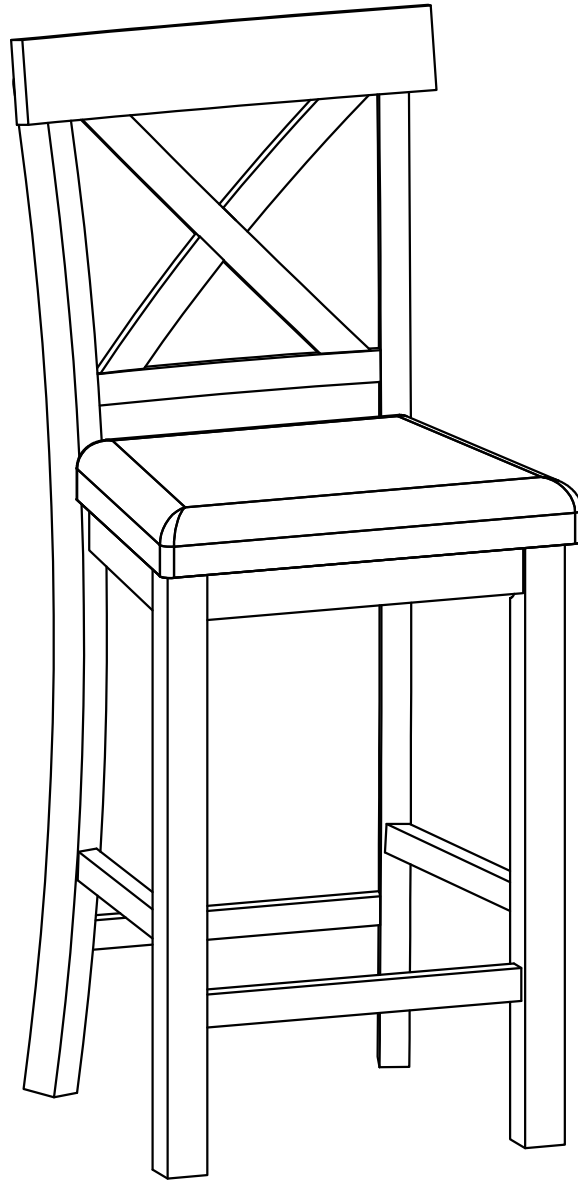









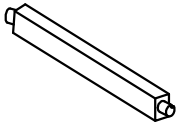





## IMPORTANT NOTE :

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN,KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

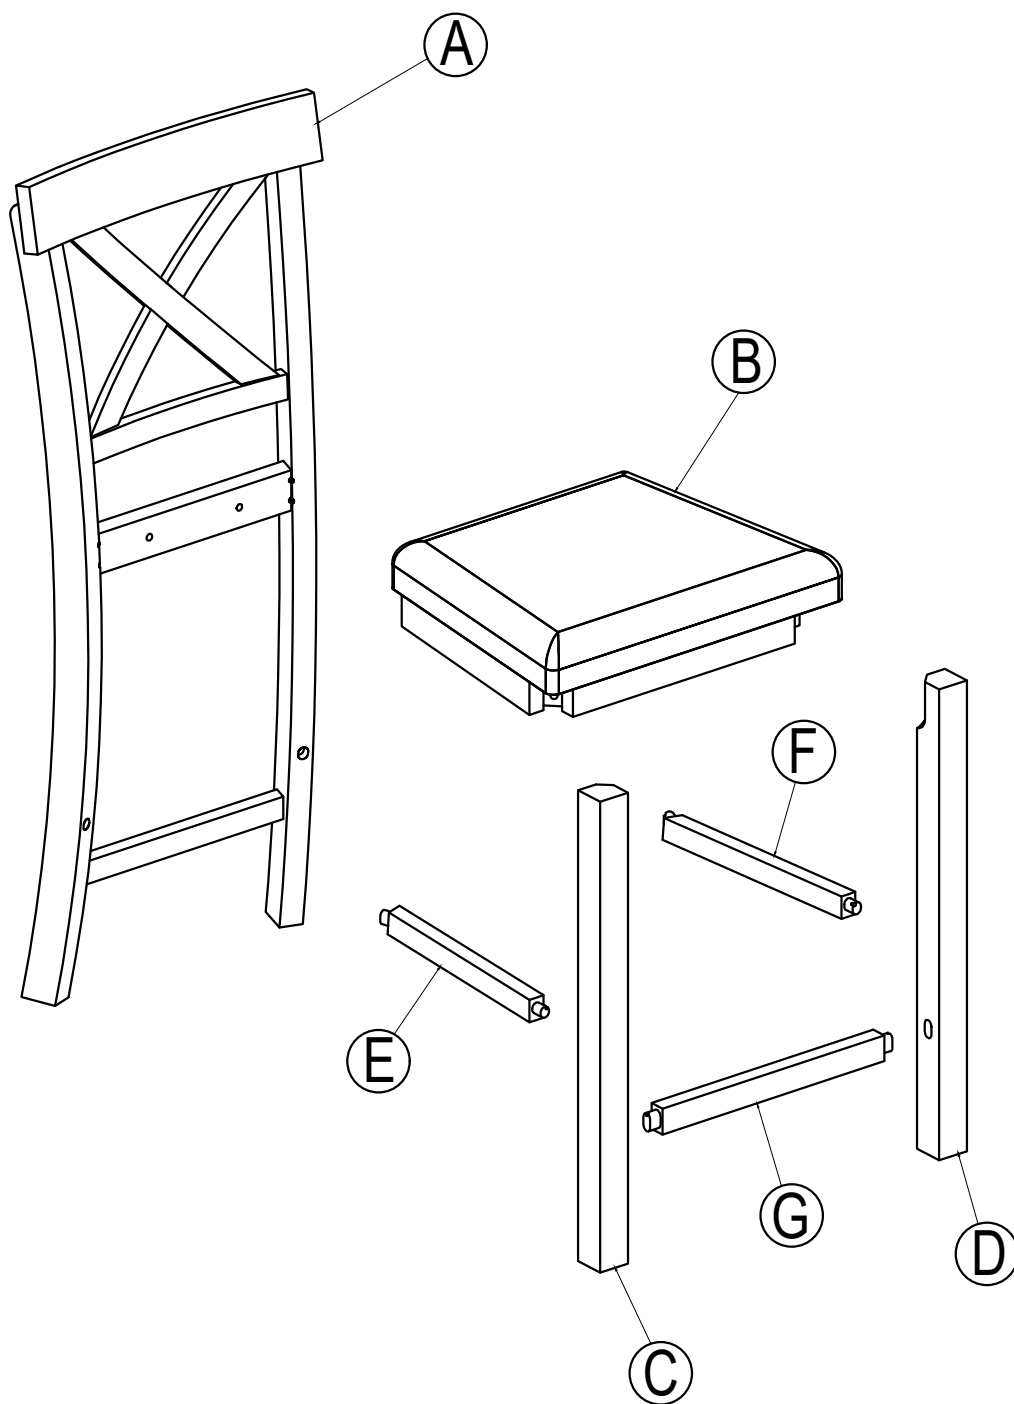


# Part List

# Hardware List

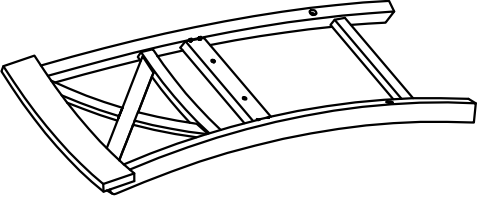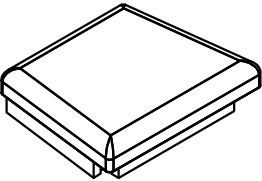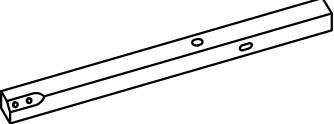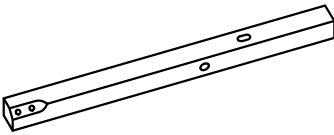
<p><b>(A)</b></p>  <p>BACK FRAME (4pcs)</p>	<p><b>①</b></p>  <p>Ø 1/4" x 40mm</p> <p>BOLT (8pcs)</p>
<p><b>(B)</b></p>  <p>SEAT FRAME (4pcs)</p>	<p><b>②</b></p>  <p>Ø 1/4" x 55mm</p> <p>BOLT (16pcs)</p>
<p><b>(C)</b></p>  <p>LEG LEFT (4pcs)</p>	<p><b>③</b></p>  <p>Ø 1/4" x 75mm</p> <p>BOLT (16pcs)</p>
<p><b>(D)</b></p>  <p>LEG RIGHT (4pcs)</p>	<p><b>④</b></p>  <p>Ø5/16" x 13mm</p> <p>FLAT WASHER (40pcs)</p>
<p><b>(E)</b></p>  <p>LEFT SIDE STRETCHER (4pcs)</p>	<p><b>⑤</b></p>  <p>Ø5/16" x 19mm</p> <p>LOCK WASHER (40pcs)</p>
<p><b>(F)</b></p>  <p>RIGHT SIDE STRETCHER (4pcs)</p>	<p><b>⑥</b></p>  <p>4mm</p> <p>ALLEN KEY (1pc)</p>
<p><b>(G)</b></p>  <p>FRONT STRETCHER (4pcs)</p>	<p><b>⑦</b></p>  <p>Ø4 x 38mm</p> <p>WOOD SCREWS (24pcs)</p>




## STEP 1:

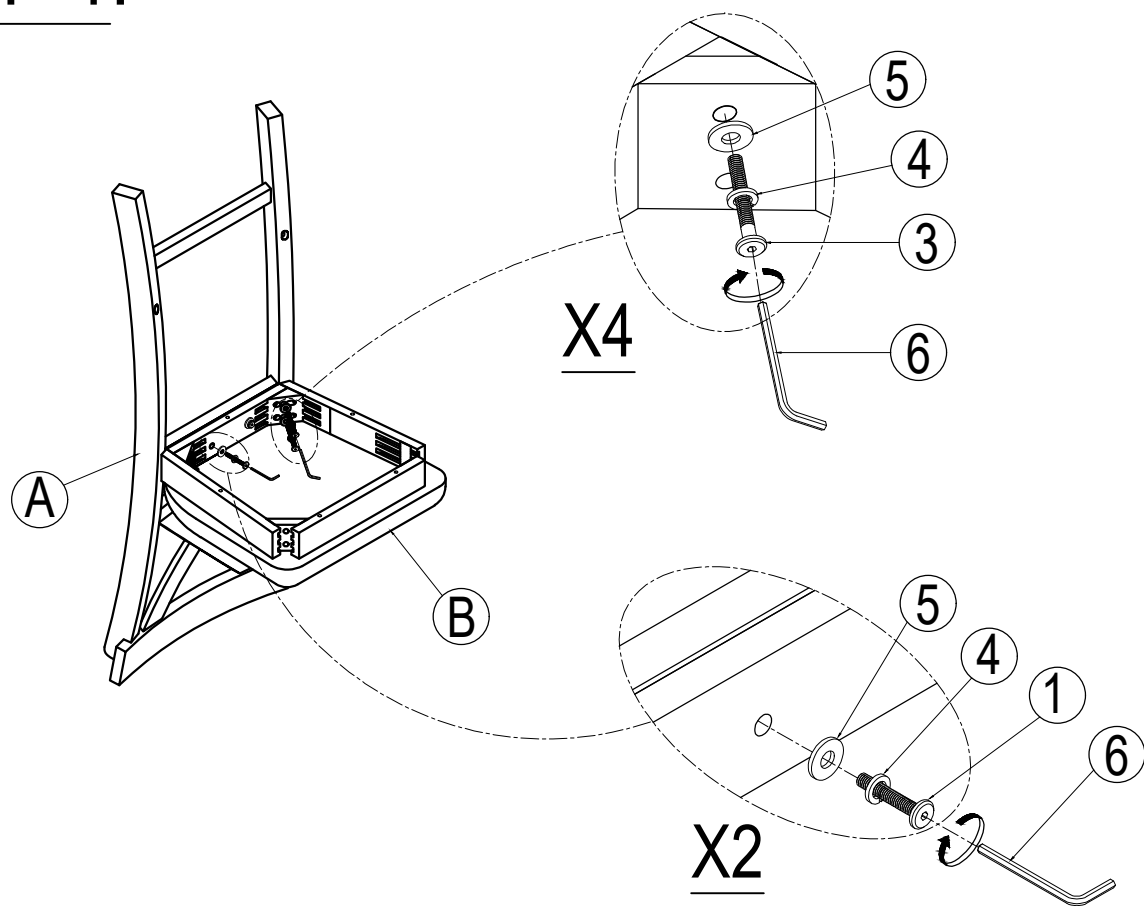

## STEP 2:

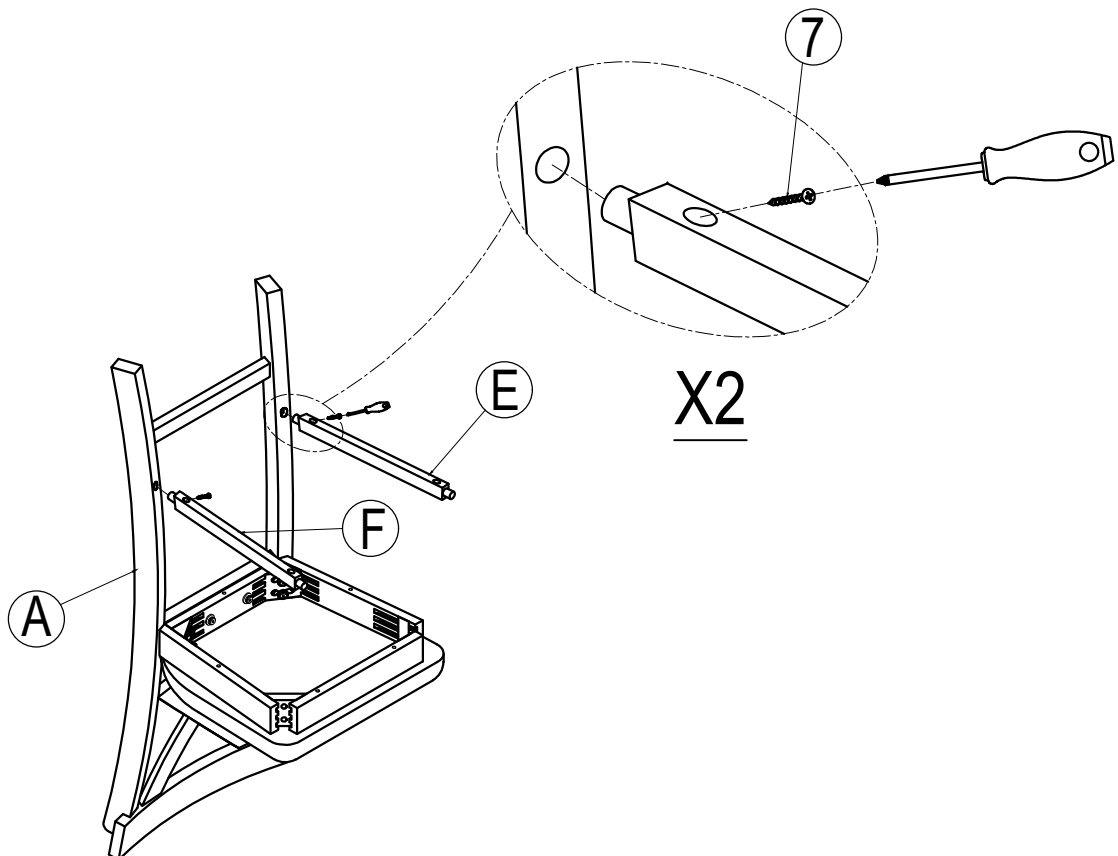


# STEP 3:

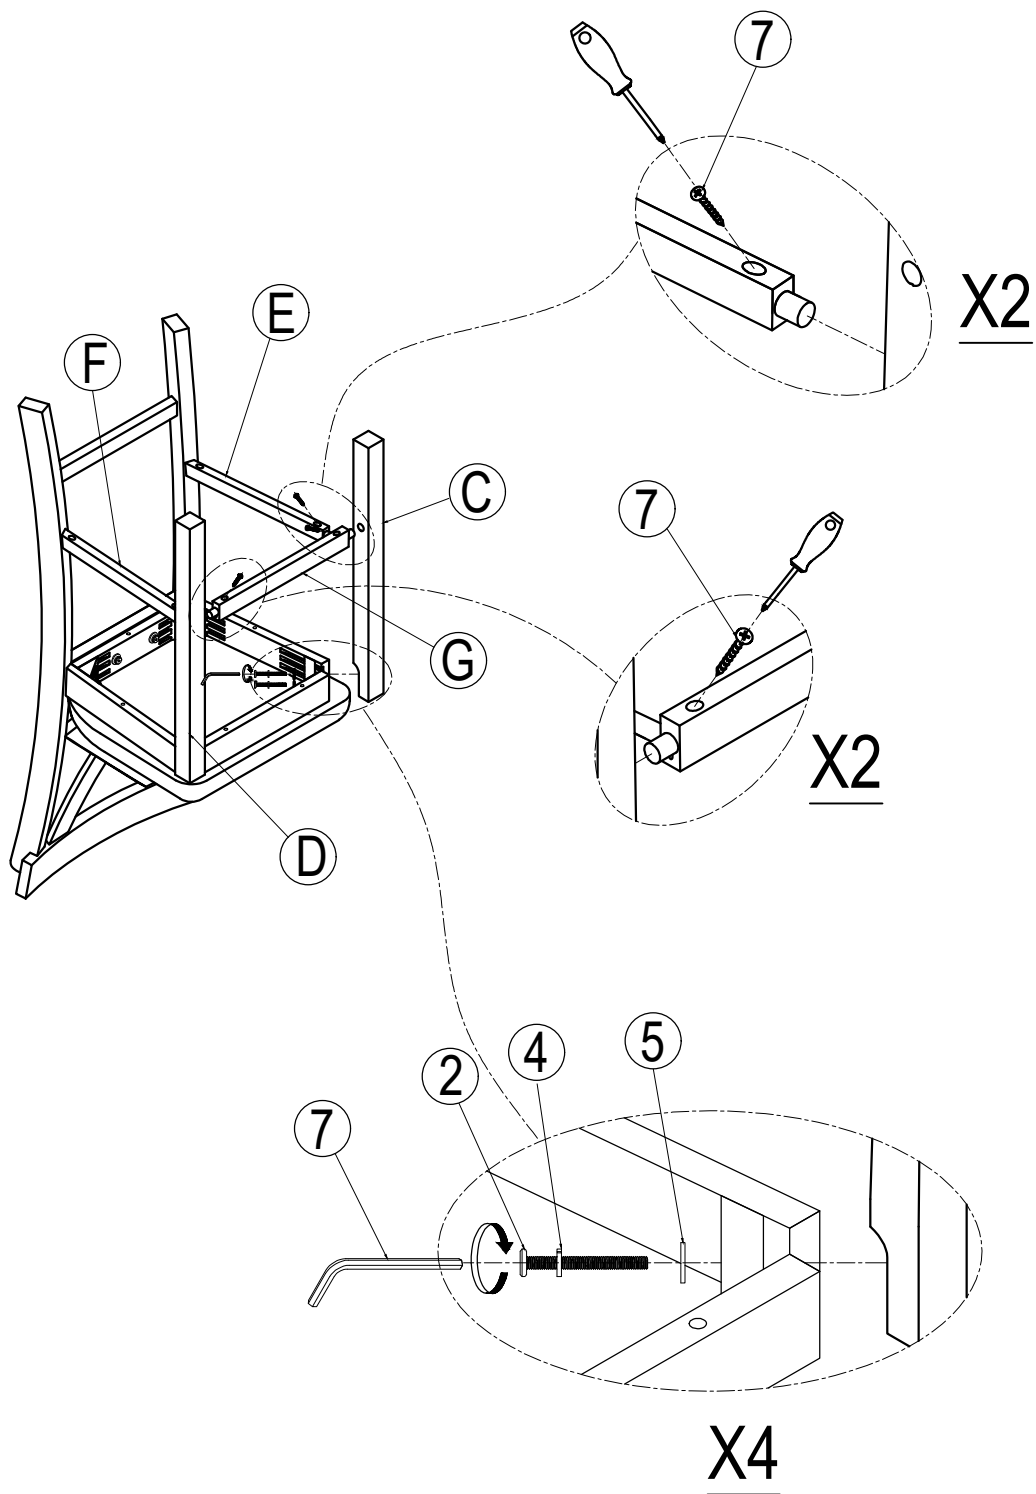


# ASSEMBLY INSTRUCTIONS

ITEM NO.WF290170

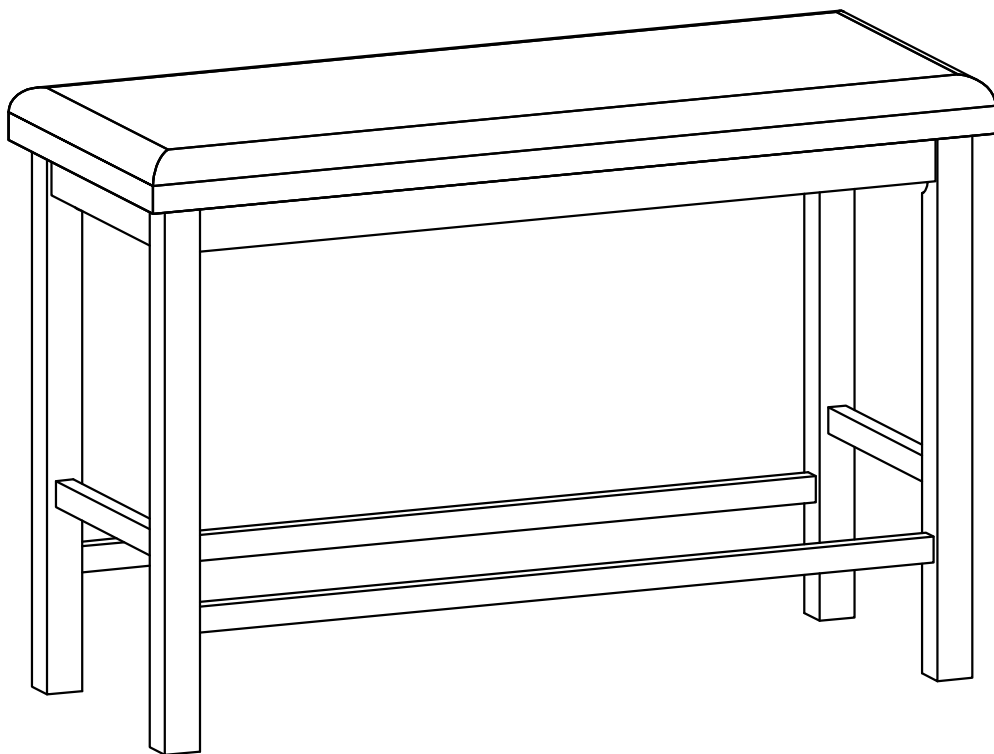





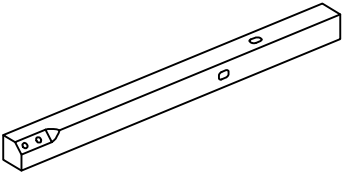

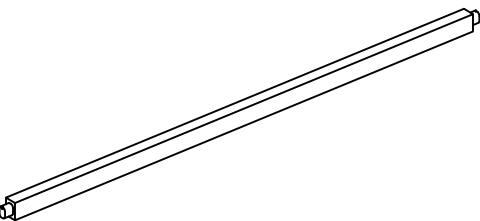
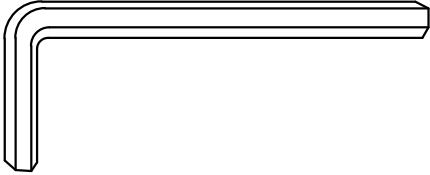

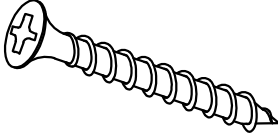
## IMPORTANT NOTE :

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN,KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BENCH IS FULLY SET-UP.

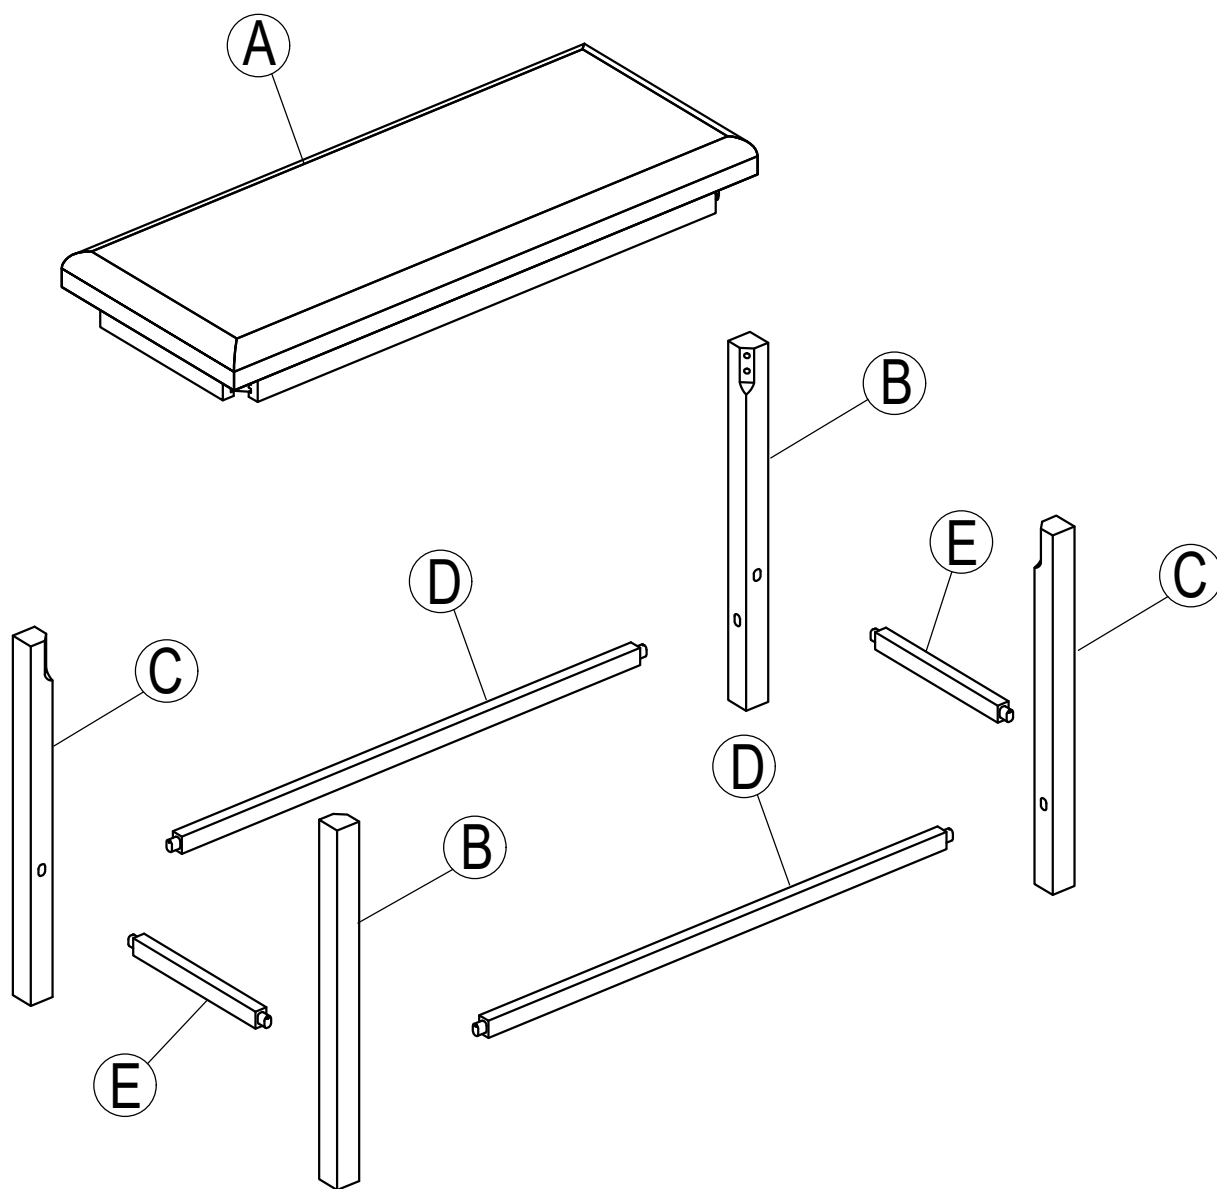


# Part List


# Hardware List
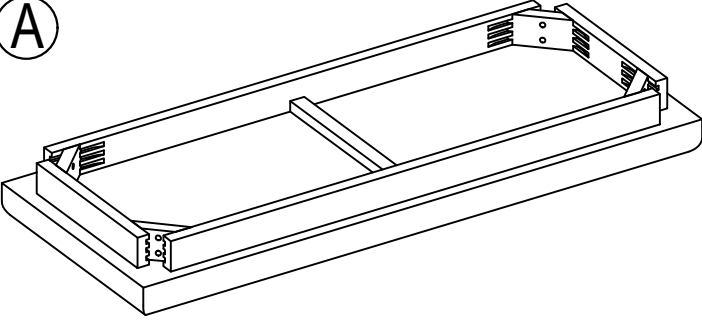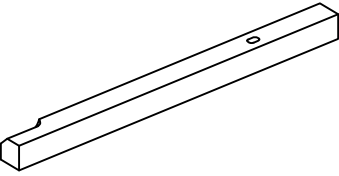
<p><b>A</b></p>  <p>TOP TABLE (1 pc)</p>	<p><b>1</b></p>  <p>Ø 1/4" x 50 mm</p> <p>BOLT (8 pcs)</p>
<p><b>B</b></p>  <p>LEG LEFT (2 pcs)</p>	<p><b>2</b></p>  <p>Ø5/16" x 13 mm</p> <p>FLAT WASHER (8 pcs)</p>
<p><b>C</b></p>  <p>LEG RIGHT (2 pcs)</p>	<p><b>3</b></p>  <p>Ø5/16" x 19 mm</p> <p>LOCK WASHER (8 pcs)</p>
<p><b>D</b></p>  <p>LONG STRETCHER (2 pcs)</p>	<p><b>4</b></p>  <p>4 mm</p> <p>ALLEN KEY (1 pc)</p>
<p><b>E</b></p>  <p>SHORT STRETCHER (2 pcs)</p>	<p><b>5</b></p>  <p>Ø4 x 38 mm</p> <p>WOOD SCREW (8 pcs)</p>


## STEP 1:

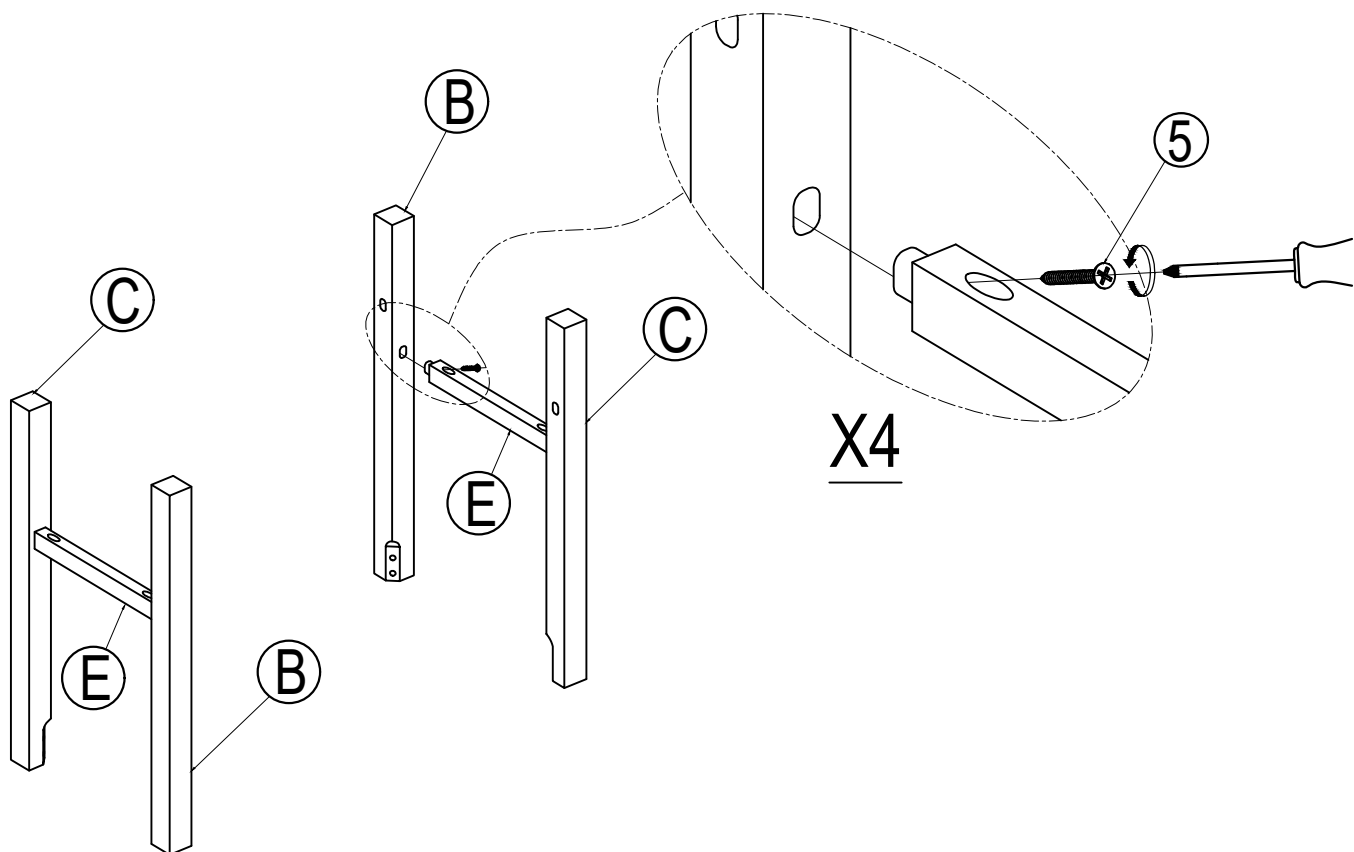

## STEP 2:

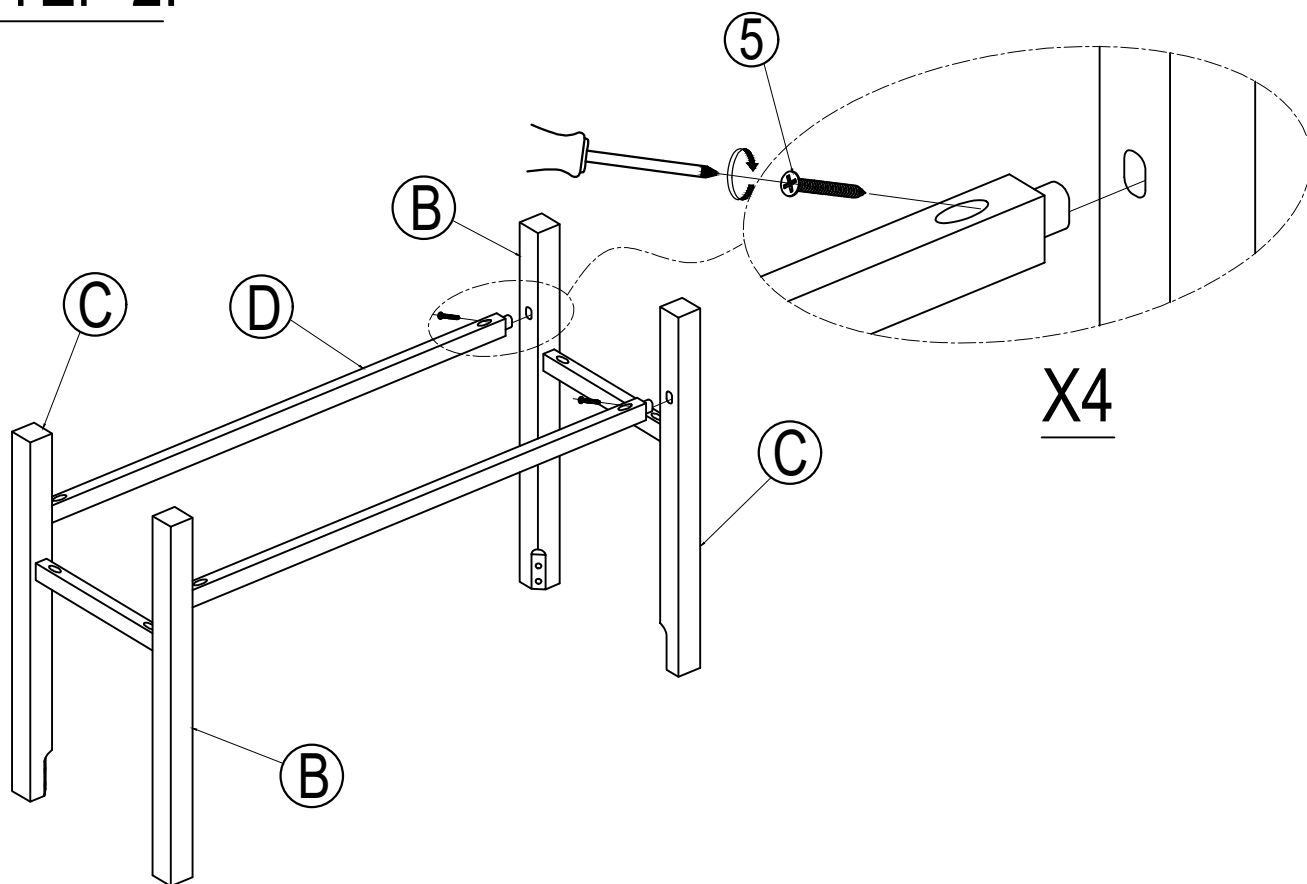

## STEP 3:

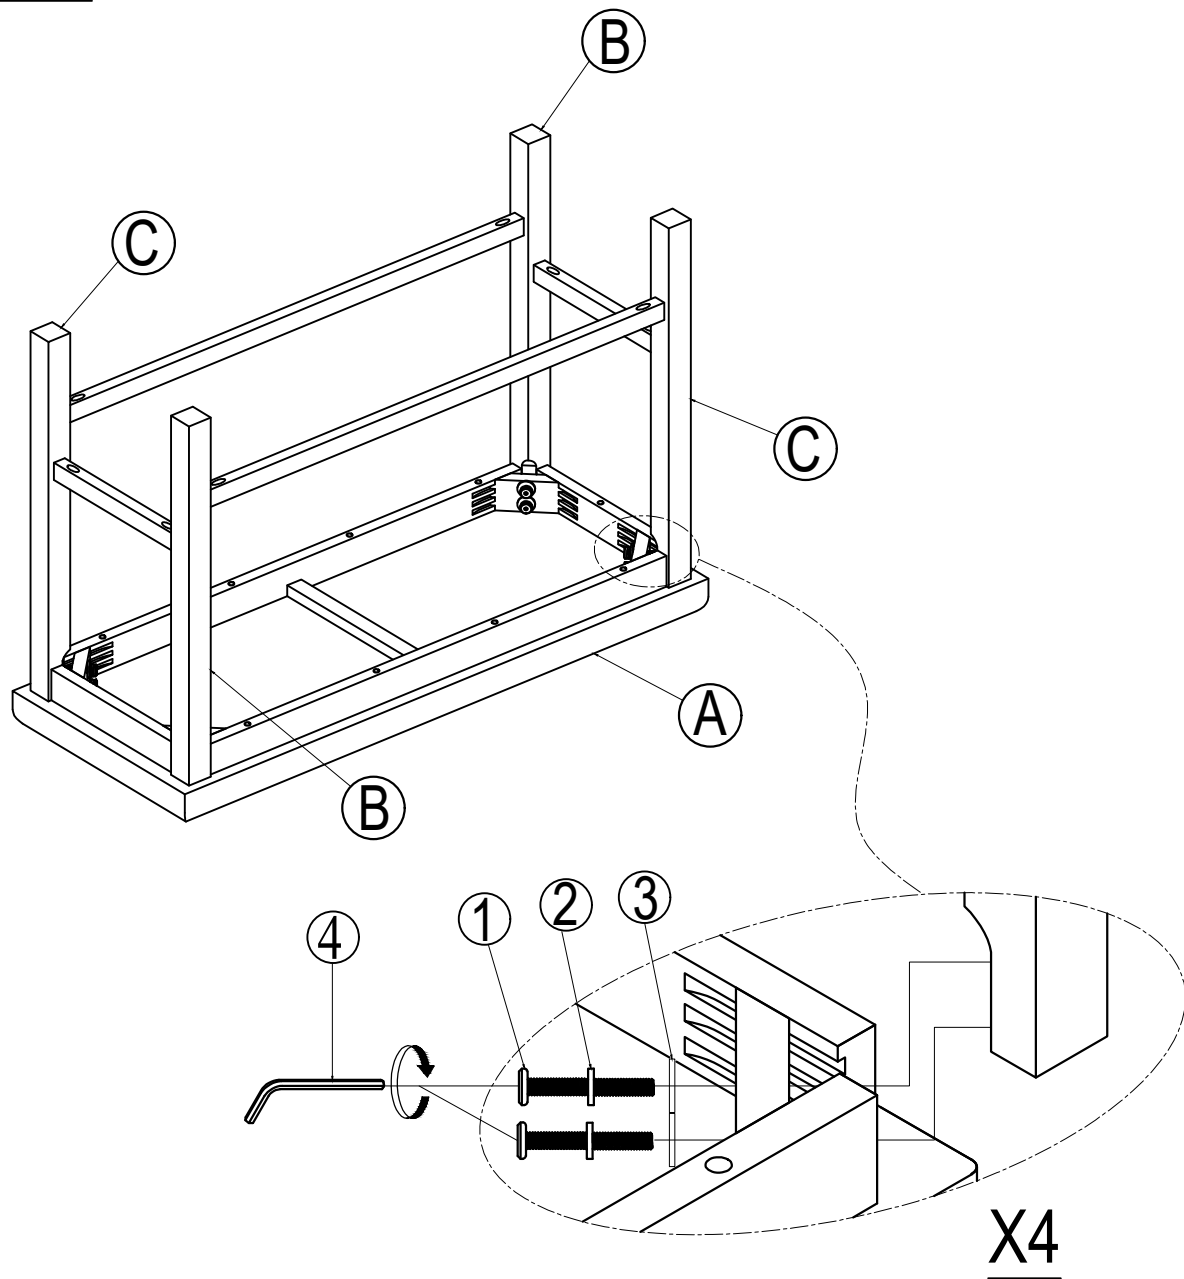

UNDER PENALTY OF LAW THIS TAG NOT TO BE REMOVED EXCEPT BY THE CONSUMER	<div>NOTICE</div> <p>THIS ARTICLE MEETS THE FLAMMABILITY REQUIREMENTS OF CALIFORNIA BUREAU OF HOUSEHOLD GOODS AND SERVICES TECHNICAL BULLETIN 117-2013. CARE SHOULD BE EXERCISED NEAR OPEN FLAME OR WITH BURNING CIGARETTES.</p> <p>THE UPHOLSTERY MATERIALS IN THIS PRODUCT: ____ CONTAIN ADDED FLAME RETARDANT CHEMICALS <u> X </u> CONTAIN NO ADDED FLAME RETARDANT CHEMICALS THE STATE OF CALIFORNIA HAS UPDATE THE FLAMMABILITY STANDARD AND DETERMINED THAT THE FIRE SAFETY REQUIREMENTS FOR THIS PRODUCT CAN BE MET WITHOUT ADDING FLAME RETARDANT CHEMICALS. THE STATE HAS IDENTIFIED MANY FLAME RETARDANT CHEMICALS AS BEING KNOWN TO, OR STRONGLY SUSPECTED OF, ADVERSELY IMPACTING HUMAN HEALTH OR DEVELOPMENT.</p>
ALL NEW MATERIAL CONSISTING OF 93% POLYURETHANE FOAM PAD 7% RESIN TREATED POLYESTER FIBER BATTING	
REGISTRY NO. UT7062(IN)	
CERTIFICATION IS MADE BY THE MANUFACTURER THAT MATERIALS IN THE ARTICLE ARE DESCRIBED IN ACCORDANCE WITH LAW.	
MADE FOR: GIGACLOUD TECHNOLOGY(USA)INC 4388 SHIRLEY AVENUE EL MONTE, CA 91731	
DATE OF DELIVERY: 11/2024 MADE IN VIETNAM	
Complies with U.S. CPSC requirements for upholstered furniture flammability.	