

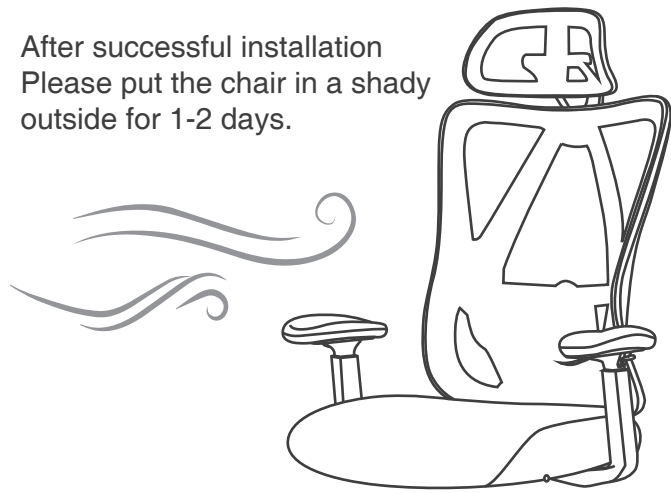


After successful installation
Please put the chair in a shady
outside for 1-2 days.

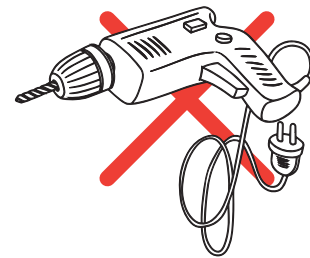

For longer use

Re-tighten bolts every 6 months by using
the enclosed allen-key.
*Using an electric drill can damage the chair.
Please re-tighten bolts manually.

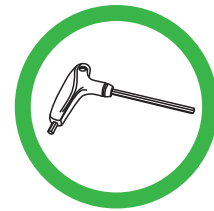

Safety Information



Sit in the center of the
chair, let your back fit the
backrest



Do not sit at the front
edge of the chair



Do not stand on the
chair



Do not use the chair
with more than one
person




Do not push the chair
around when a person
is sitting in it



Do not push down
the backrest when a person
is reclining



Do not place all your
weight on only the
backrest

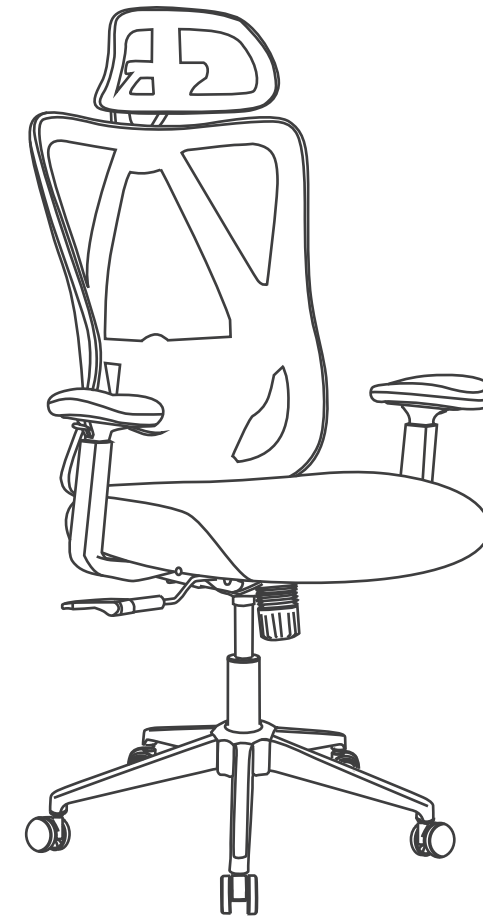


Package List




(A)*1
Backrest




(B)*1
Seat Cushion

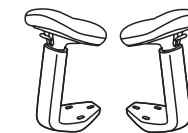

(C)*1(L)*1(R)
Armrests



(D)*1
Mechanism



(E)*1
Gas Lift



(F)*1
Base



(G)*1
Head Pillow



(H)*5
Casters



(I)*5
Legs



(J)*3
Bolts
M8*20mm



(K)*4
Bolts
M6*20mm



(L)*2
Bolts
M6*25mm



(M)*2
Bolts
M6*35mm



(N)*4
Bolts
M6*45mm



(O)*10
Bolts
M6*14mm




(P)*1
Plastic Cover



(Q)*1
Wrench


Assembly Instruction

Step 1

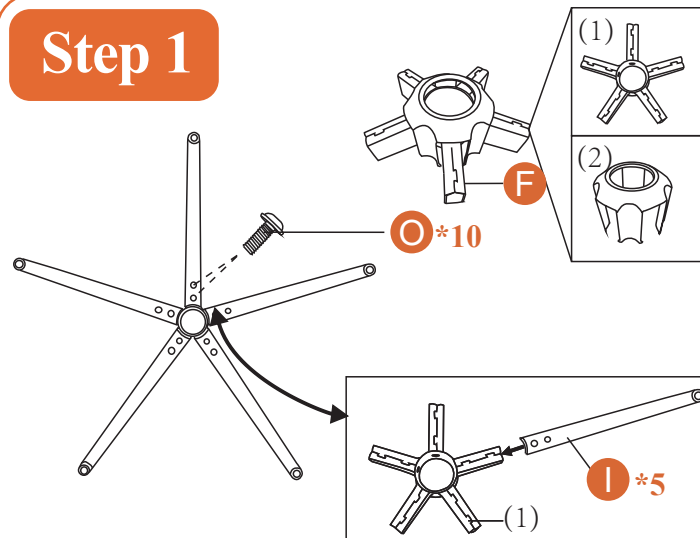


Divide Base (F) into two parts, (1) and (2). Using Wrench (Q), install Legs (I)*5 to the Base (1) with Bolts (O)*10.

Step 2

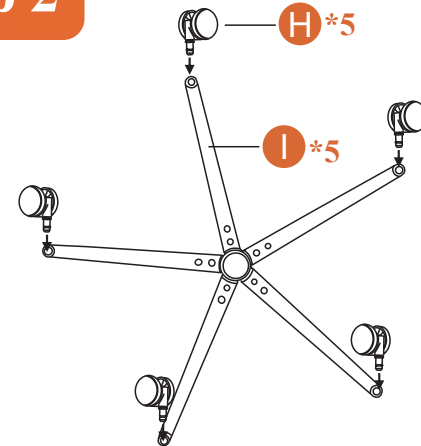


Press Casters (H)*5 into the holes at the end of Legs (I)*5.

Step 3

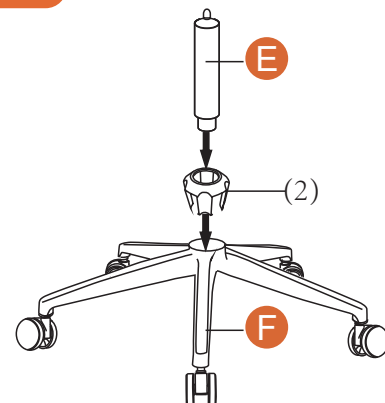

Put Base Cover (2) back on the Base. Then insert Gas Lift (E) into the center hole of the Base (F).


Step 4

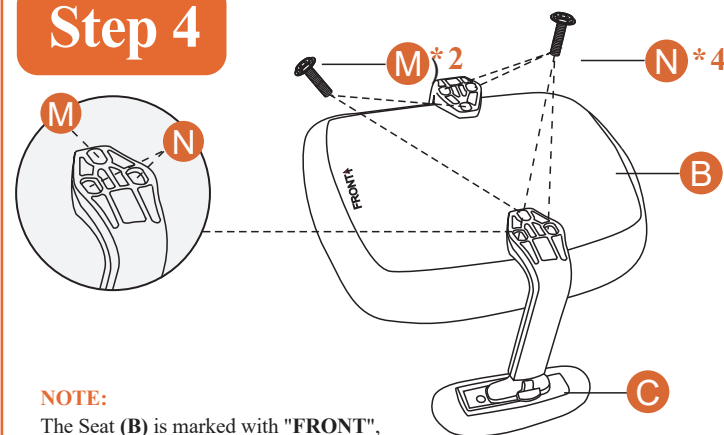

NOTE:
The Seat (B) is marked with "FRONT", please make sure the installation direction is correct.

Turn the Seat Cushion(B) upside down. Install Armrests (C)*1L*1R to the Seat (B) with Bolts (M)*2 and (N)*4.


Step 5

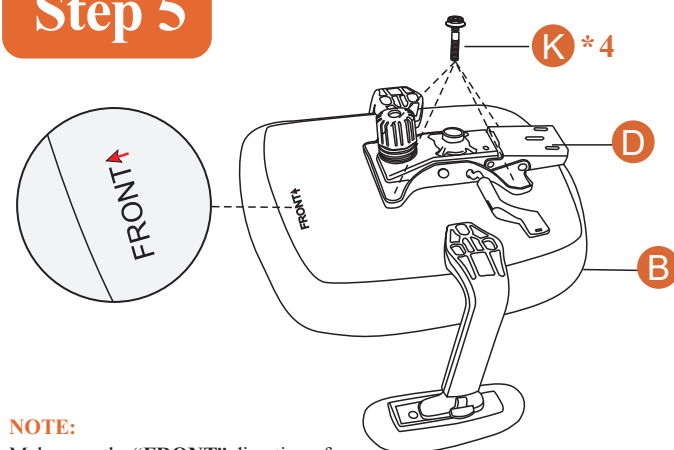

NOTE:
Make sure the "FRONT" direction of Mechanism (D) and Seat (B) are the same.


Attach Mechanism (D) to the Seat Cushion (B) with Bolts (K)*4.

Step 6

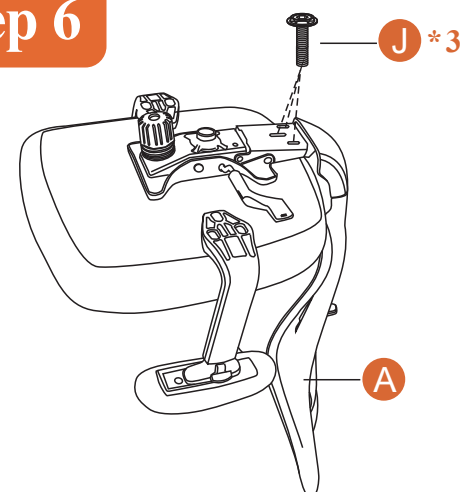


Align the screw holes of the Backrest (A) and Mechanism (D). Using Wrench (Q), secure both completely with Bolts (J)*3.

Step 7

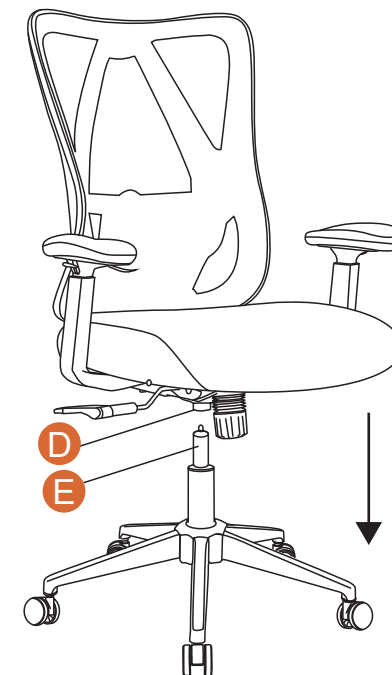

Align the hole on Mechanism (D) with Gas Lift (E), and press the Chair down until it is fully secured.

Step 8

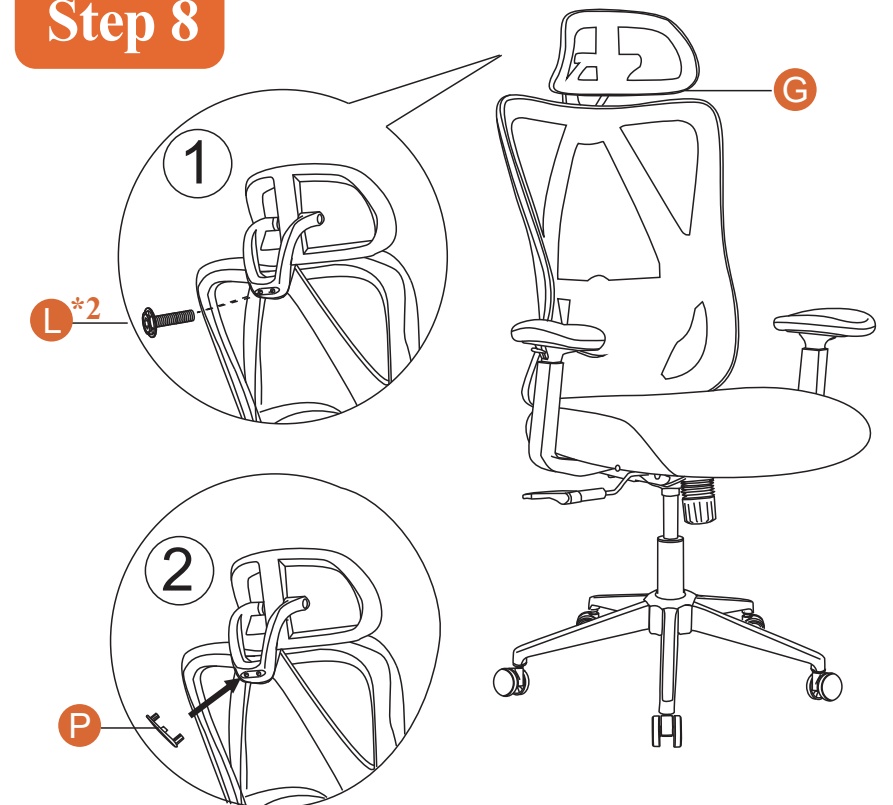

Using Wrench (Q), attach Head Pillow (G) to the Backrest (A) with Bolts (L)*2. Then, attach the Plastic Cover (P) to the hole.

Instructions For Use



CAUTION:

- * Before using the chair, check to ensure that all bolts are fully tightened.
- * Lubricate all parts and tighten all bolts every 6 months or whenever needed.