


WF316953AAE / WF316954AAE / WF316953AAP / WF316954AAP

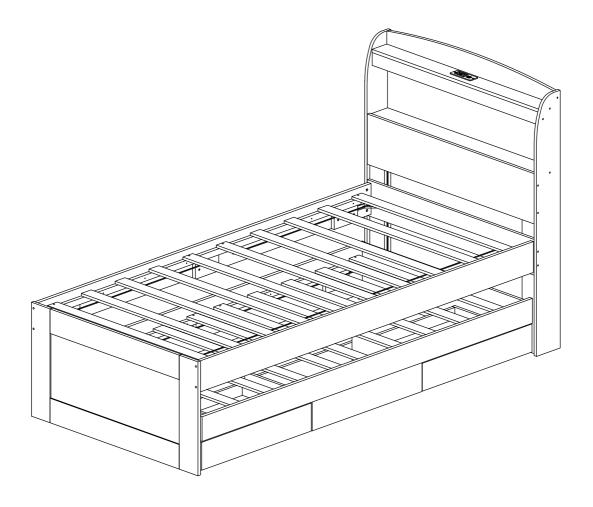



IMPORTANT NOTE


- ** PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED
- ** BEFORE YOU BEGIN, KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP
- ** DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP

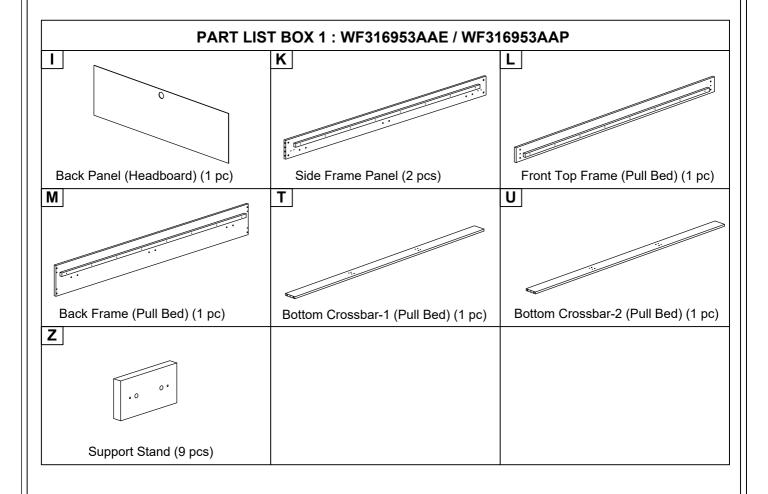


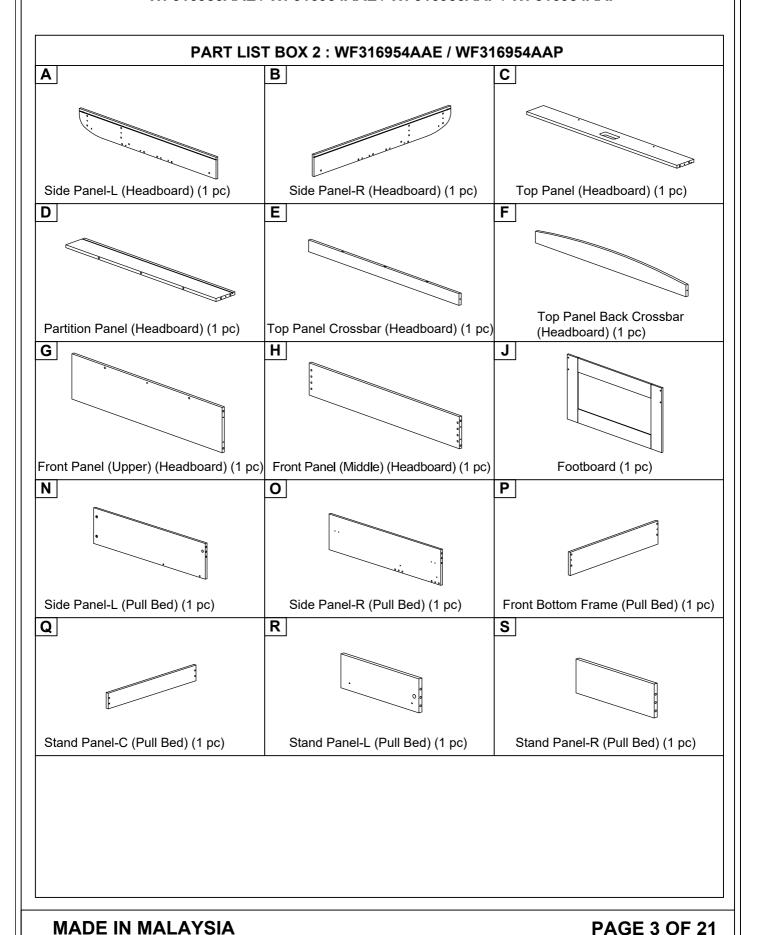

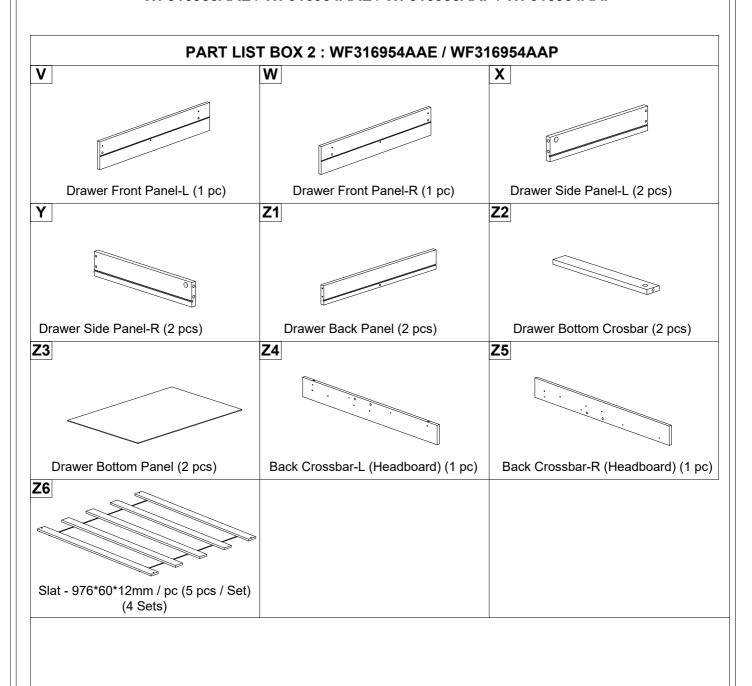


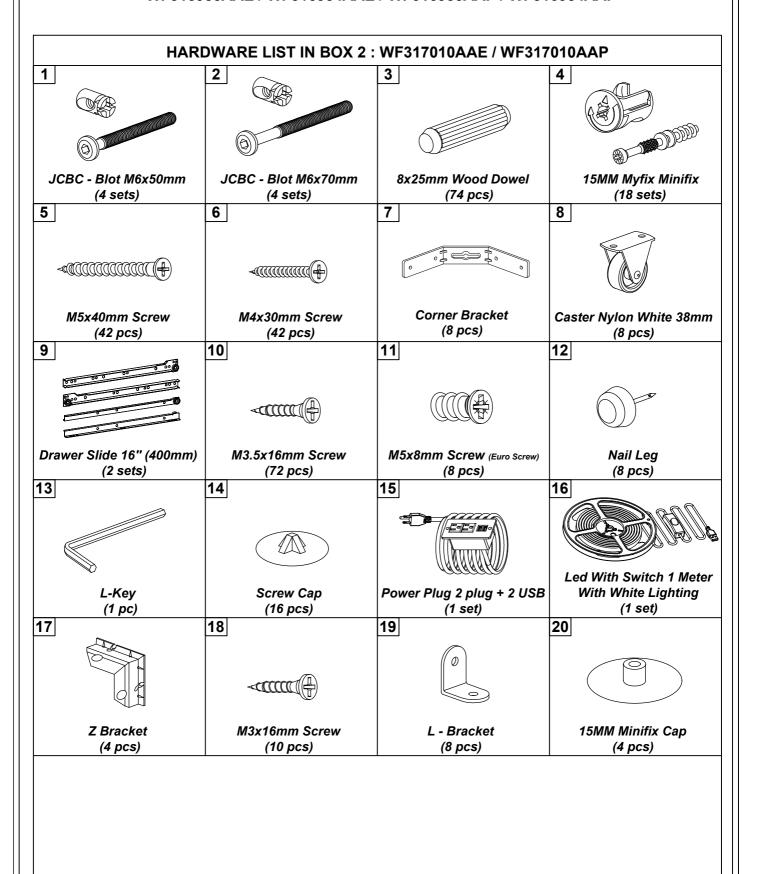

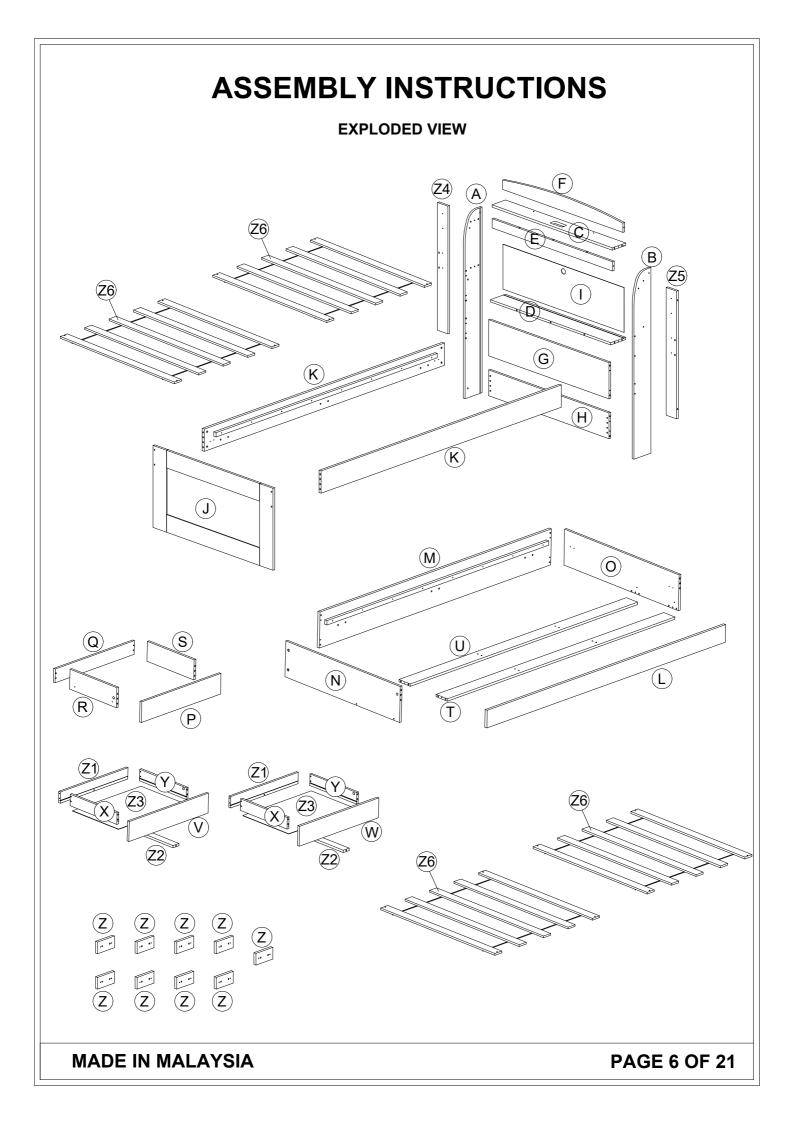

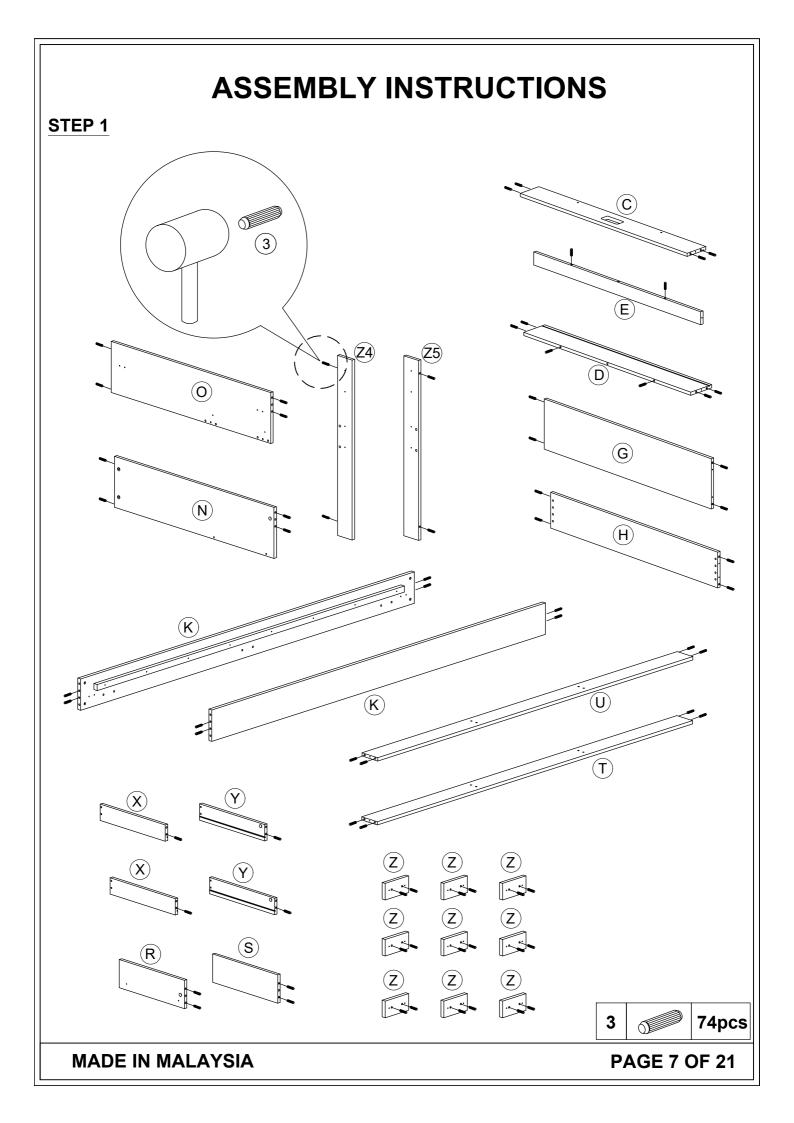


STEP 2

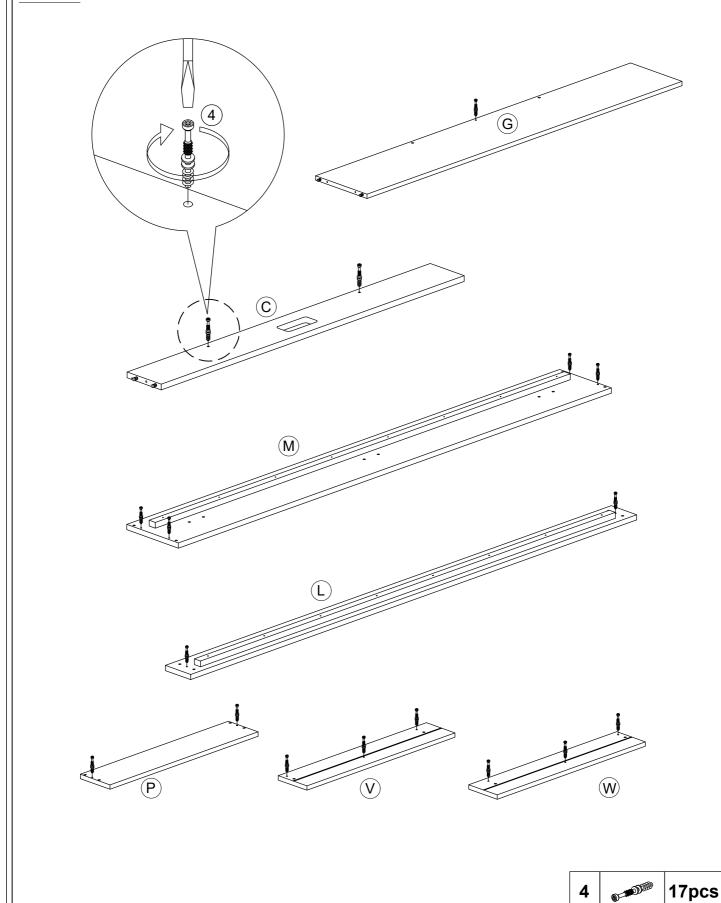


MADE IN MALAYSIA

PAGE 8 OF 21

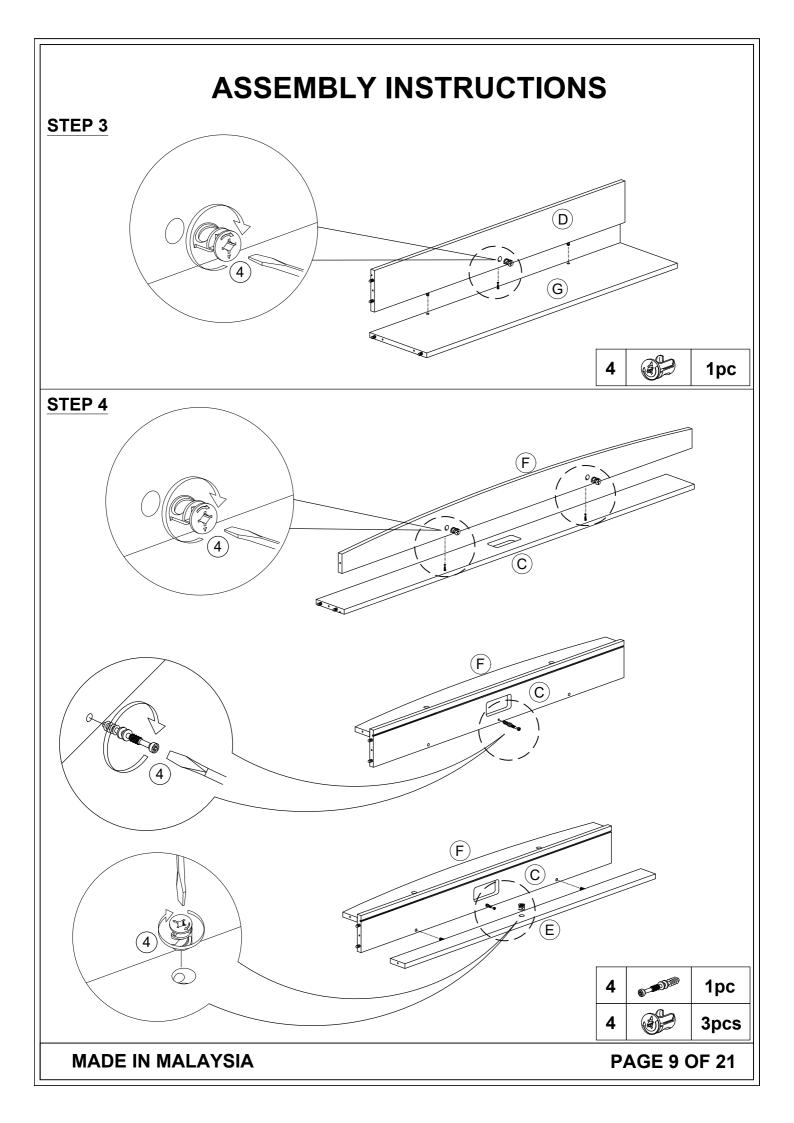






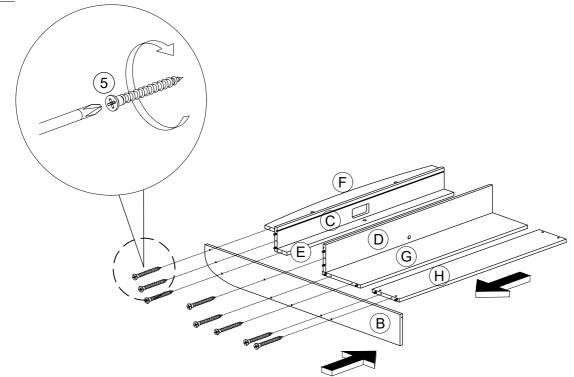


STEP 6

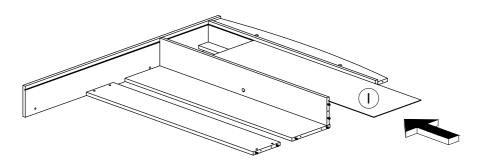


MADE IN MALAYSIA

PAGE 10 OF 21

STEP 7

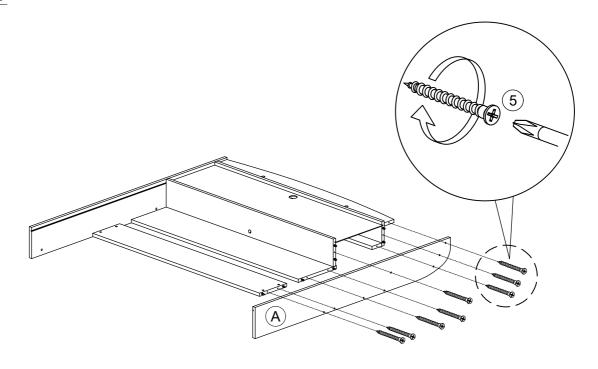



STEP 8

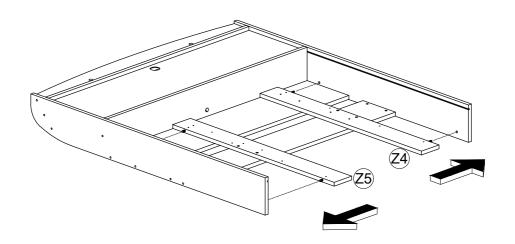


MADE IN MALAYSIA


PAGE 11 OF 21

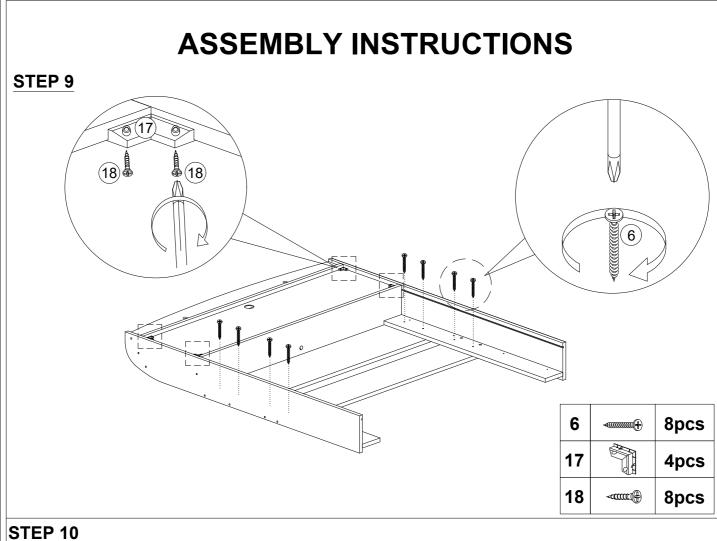

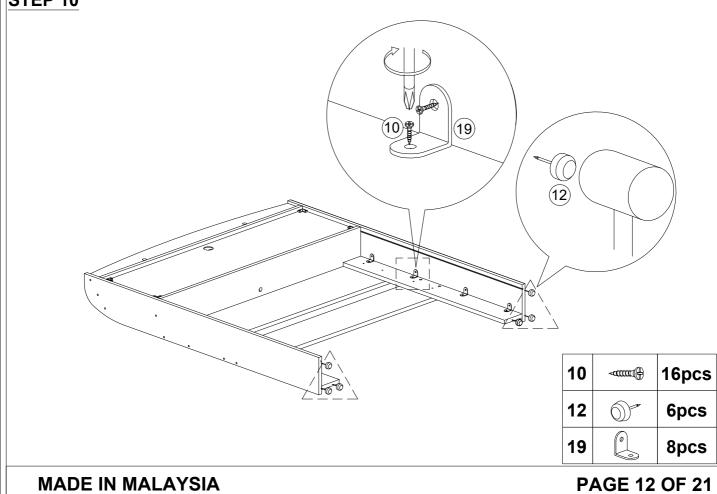


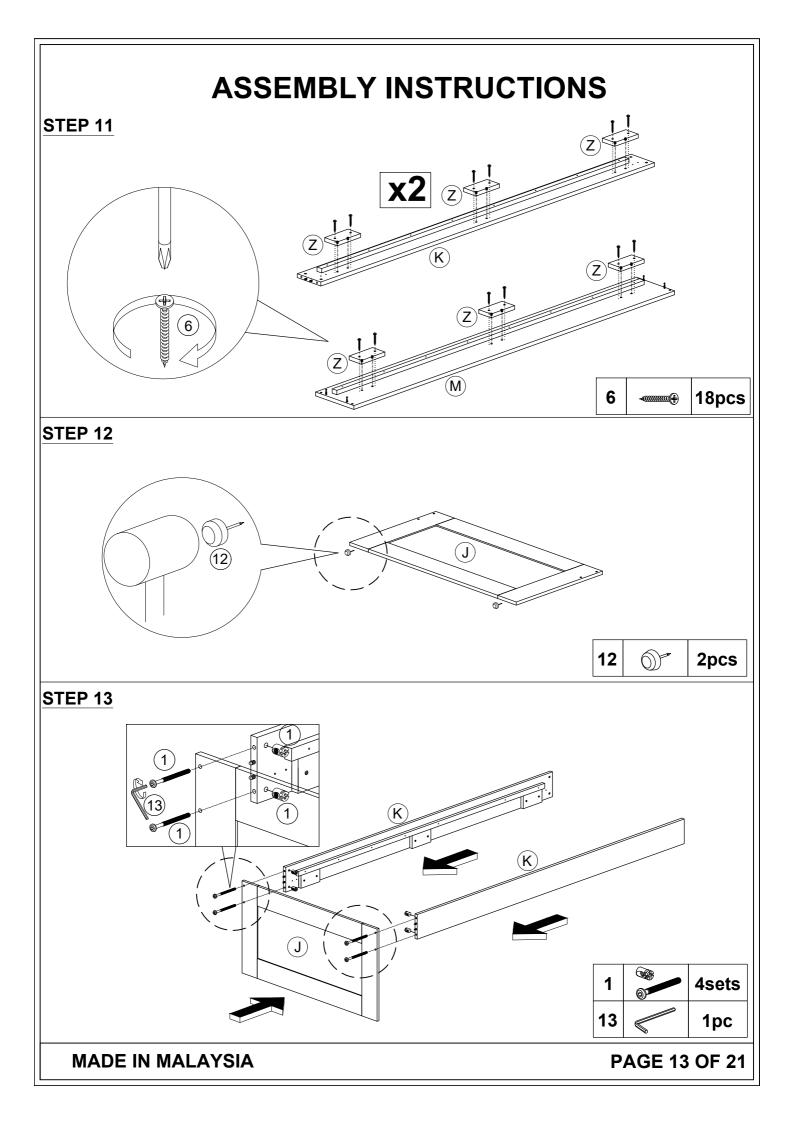



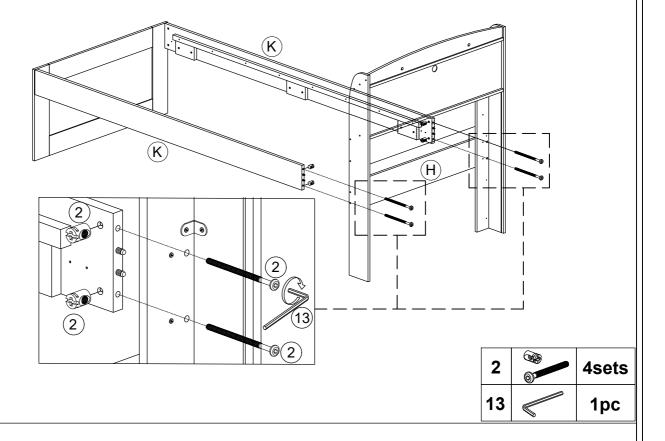

STEP 15

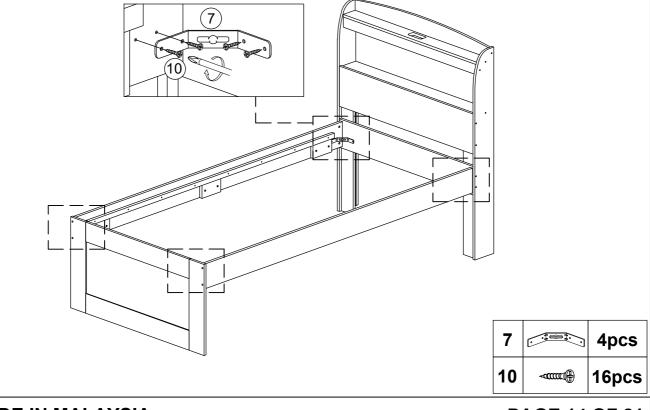



MADE IN MALAYSIA

PAGE 14 OF 21





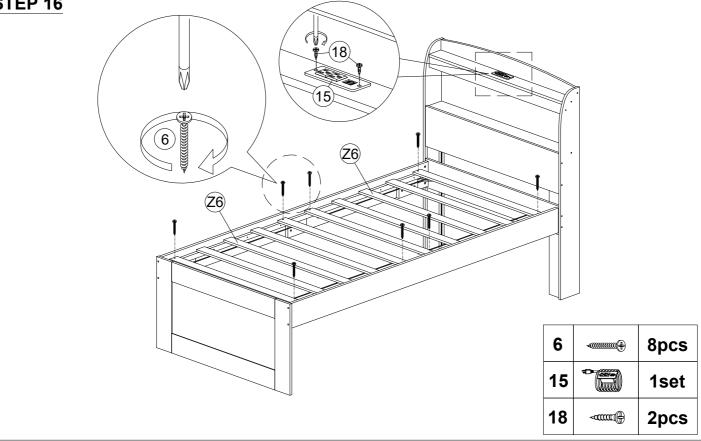

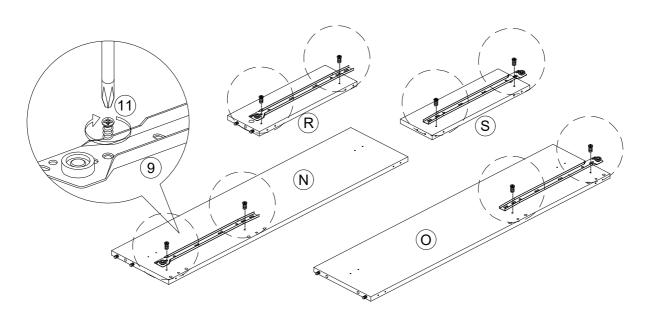


9	10 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	2sets
11	@	8pcs


MADE IN MALAYSIA

PAGE 15 OF 21

STEP 18

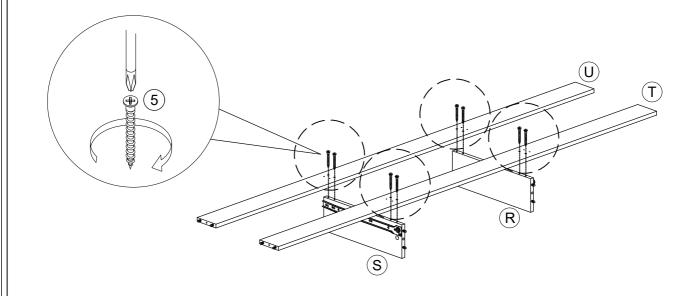

STEP 19

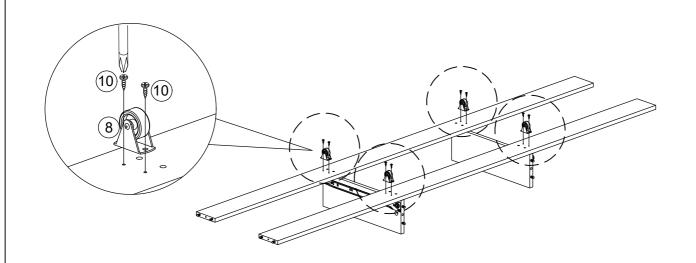


8		4pcs
10	~~~~	8pcs

MADE IN MALAYSIA


PAGE 16 OF 21

STEP 20

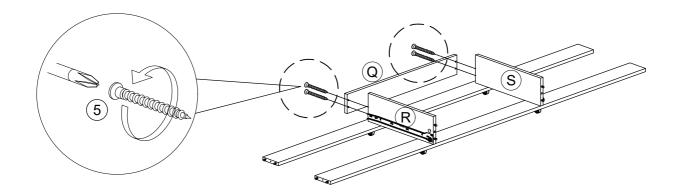


5 4pcs

STEP 21

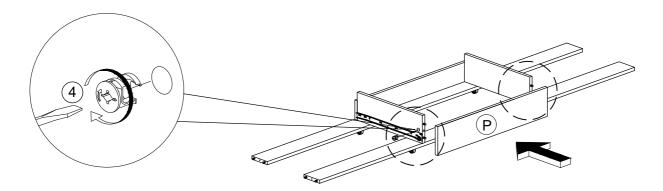

4 2pcs

STEP 22

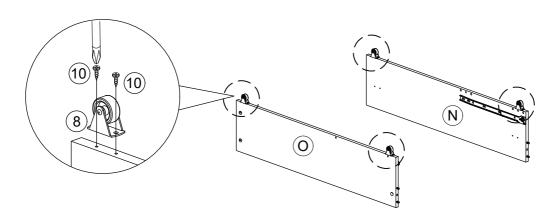


8		4pcs
10	√	8pcs

MADE IN MALAYSIA


PAGE 17 OF 21



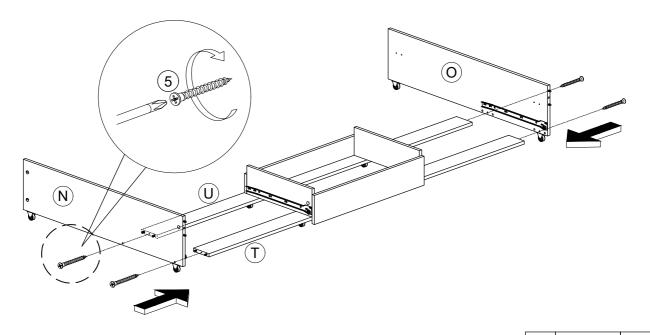

5 4000000 4pcs

STEP 24

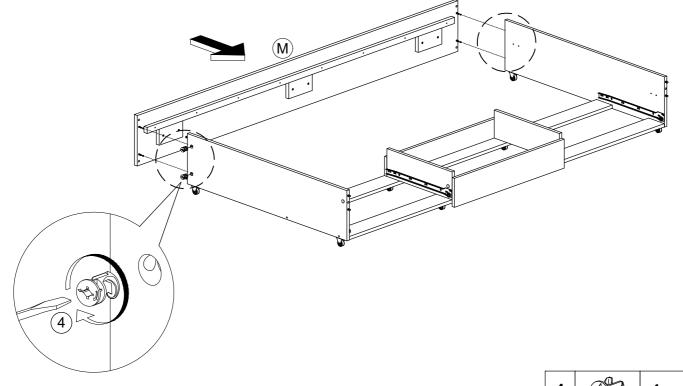


4

4pcs

MADE IN MALAYSIA

PAGE 18 OF 21

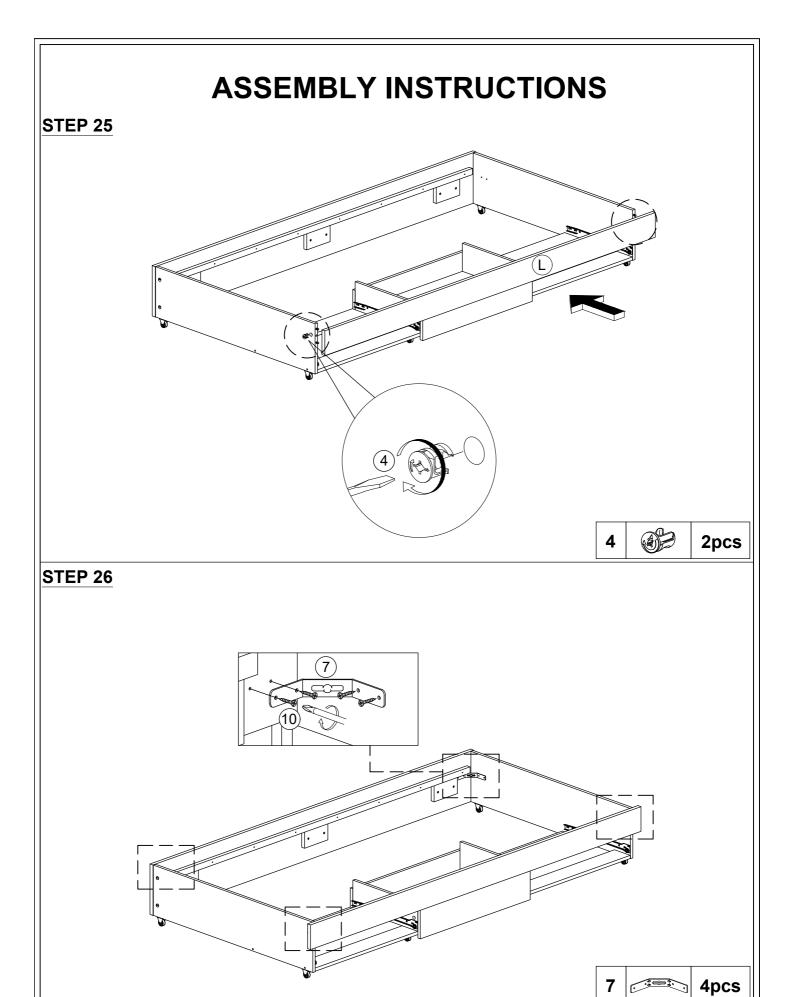



MADE IN MALAYSIA


PAGE 19 OF 21

16pcs


10

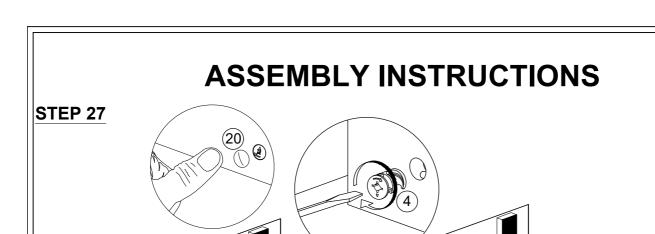

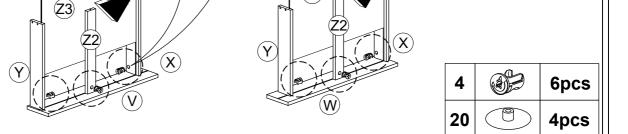

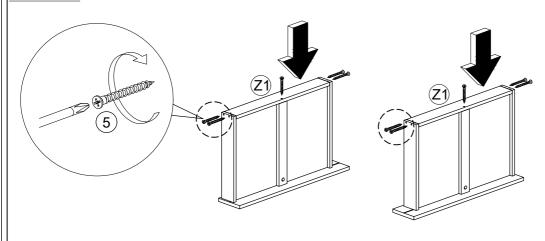

5 4000000 10pcs

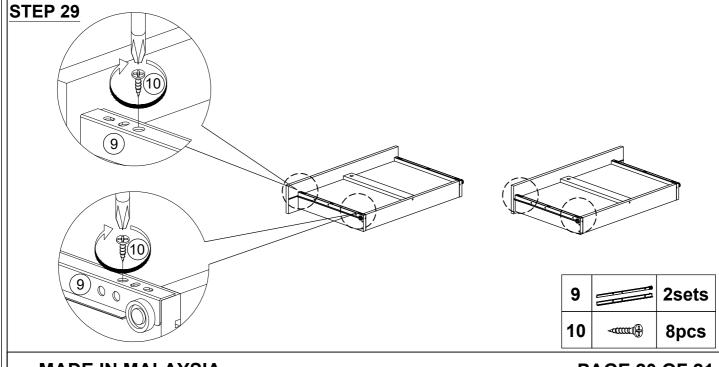

MADE IN MALAYSIA

PAGE 20 OF 21

