
A SAFAVIEH

LIGHTING

Assembly Instruction

CAUTION: Read instruction carefully and turn electicity off at main circuit breaker panel before beginning installation.

ITEM #:LIT4433A

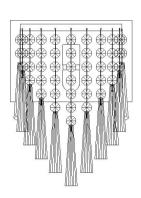

Care and Cleaning

To clean the outside fo the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.

To clear the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly damperned clean cloth (use clean water, never a solvent) to wipe the interior surface of the fixture

Do not use any cleaners with chemical, solvents or harsh abrasives. Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time: 30 minutes

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
Α	Mounting bar		1X			(4) (3) (3) (3) (3) (3) (3) (3) (3) (3) (3	2X
A1	Mounting screw	THE STATE OF THE S	2X	F	Dropper		
A2	Bracket screw	THE THE PERSON NAMED IN COLUMN TO SERVICE AND SERVICE	2X			_	
В	Bulb	Ĥ	1X	G	Dropper	ф ФФ	2X
С	Bulb cover		1X	Н	Dropper	& + + + + + + + + + + + + + + + + + + +	2X
D	Dropper	*	2X	I	Dropper	***	1X
Е	Dropper	•	2X	J	Body Frame		1X
				K	Wire nut		3X

Installation

Step 1

Unpack all parts from cartons carefully

Place the bulb(B) to the socket then bulb cover(C)

Hang list:

Hang dropper(D) on the hole(a) of the body frame(J)


Hang dropper(E) on the hole(b) of the body frame(J)

Hang dropper(F) on the hole(c) of the body frame(J)

Hang dropper(G) on the hole(d) of the body frame(J)


Hang dropper(H) on the hole(e) of the body frame(J)

Hang dropper(I) on the hole(f) of the body frame(J)

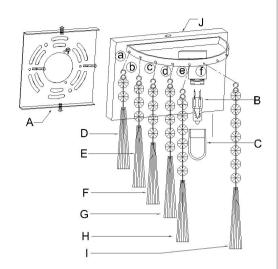

Step 2 Wire Connetion

Connect,Hot,Black or Red outlet Supply Wire to:	Connect,Neutral,White Outlet Supply Wire to:	
Black	White	
* Parallel Cord(round & smooth)	* Parallel Cord(square& ridged)	
Clear,Brown,Gold or Black without Tracer(colored stripes)	Clear,Brown,Gold or Black without Tracer(colored stripes)	
Insulated Wire(not green) with copper metal conductor	Insulated Wire(not green) with Silver metal conductor	




*Note: When parallel wire(SPTI & SPT II) is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth. (See illustration on left.)



Step 3

Installing the mounting bar(A) with mounting screw(A1), and secure body frame(J) with the bracket screw (A2) by screwdriver

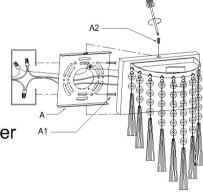

Step 4

Consult a qualified electrician to ensure correct branch circuit conductor

