




MANHATTAN
COMFORT

ASSEMBLY HANDBOOK - FORTRESS 31.5" MOBILE GARAGE CABINET WITH SHELVESS

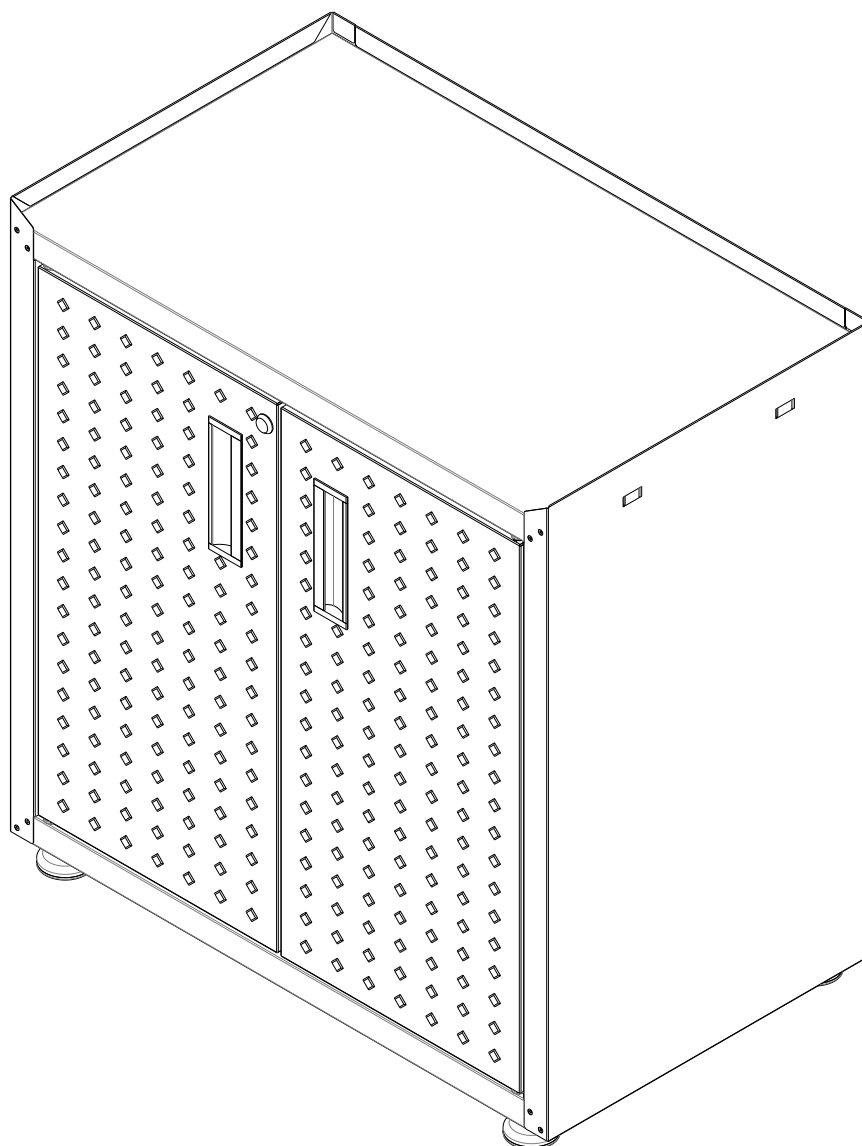



3GMCF



Stuck? Questions? We are here to help.
1-888-230-2225
help@manhattancomfort.com





View our assembly video online
www.manhattancomfort.com

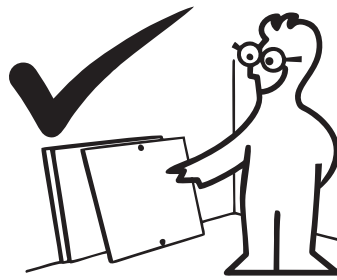
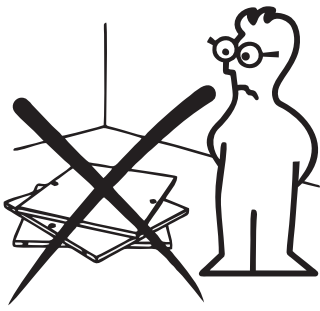


In order to ease the assembly,
you should separate and identify the parts first


Necessary hardware for the assembly

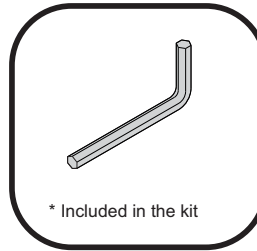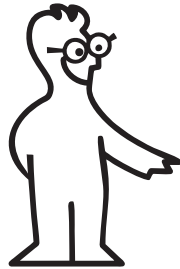

* Included in the kit

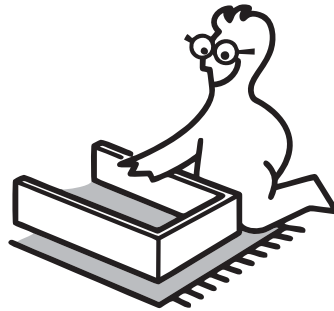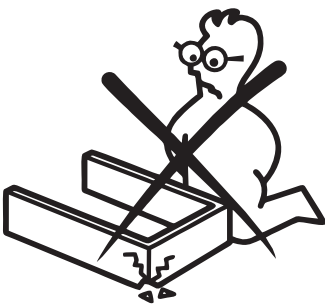

Do not place the parts directly onto the floor.
Use a cardboard sheet or a mat to place the
parts, during the separation and assembly.

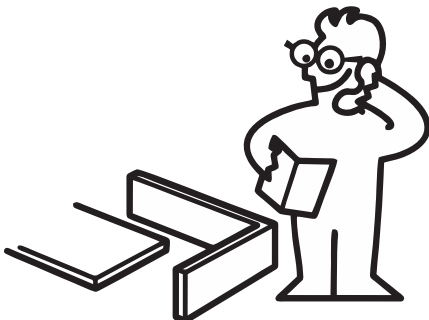

Stuck? Questions? We are here to help.
1-888-230-2225
help@manhattancomfort.com



View our assembly video online
www.manhattancomfort.com

IMPORTANT


In order to avoid severe or even fatal injuries, follow the instructions carefully.

ASSEMBLY HANDBOOK - FORTRESS 31.5" MOBILE GARAGE
CABINET WITH SHELVES

P10
Upper Back
3000007312



WARNING

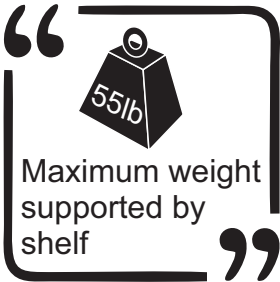

P3
Left Side
3000007316

P5
Top
3000007270

P19
Shelf
3000007311

P9
Lower Back
3000007366

P7
Bottom
3000007271

P2
Right Side
3000007308

P22
Left Door
3000007302

P23
Right Door
3000007304

Hardware list

F1


1000009500



Qty. 16

F7


1000008301

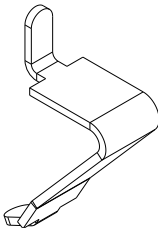

Qty. 4

F15


1000008280

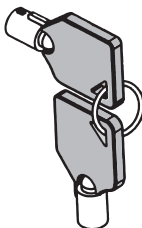

Qty. 1

F13

1000009033

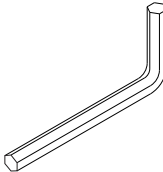

Qty. 1


F17

1000008285



F9

1000008368

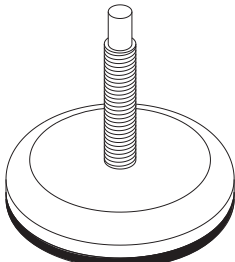


Qty. 4

* Only in cabinets without caster

F3

1000008391




Qty. 16

* Only in cabinets with caster

F10


1000008352

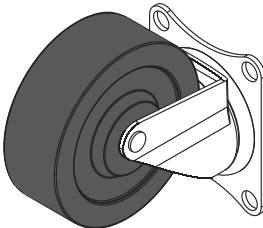

Qty. 2

F11




1000008354

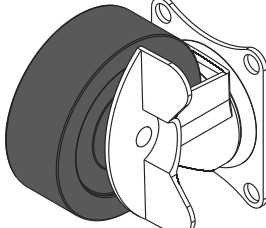

Qty. 2




STEP 1

- 1 - Fit part **P7** inside part **P3**
- 2 - Fit both parts in the frontal side, with **F1**

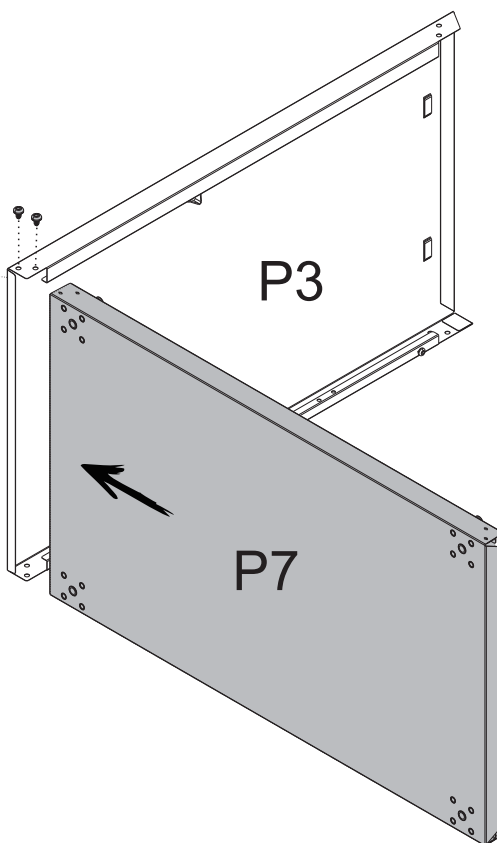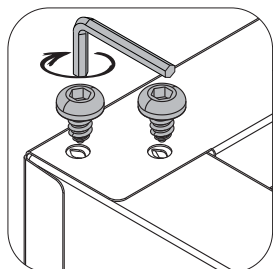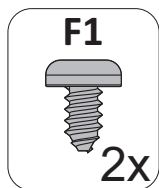






STEP 2

- 1 - Fit part **P2** inside part **P7**
- 2 - Fit both parts in the frontal side, with **F1**

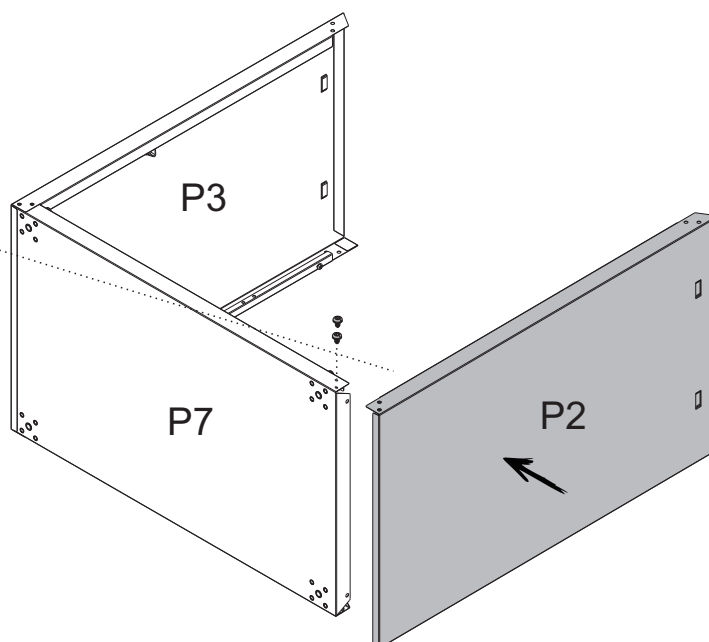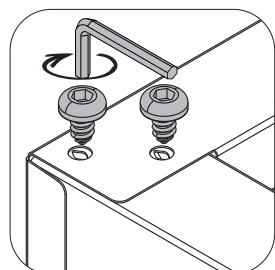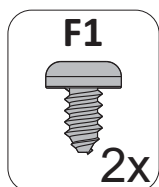



STEP 3

- 1 - Fit part **P5** between part **P2** and **P3**
- 2 - Check that all 4 tabs have been fitted
- 3 - Fit part **P5** to parts **P2** and **P3**, at the frontal side, with **F1**

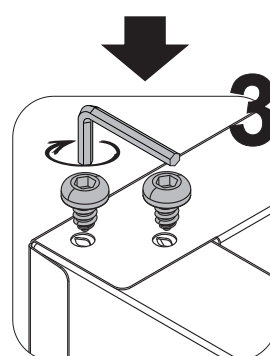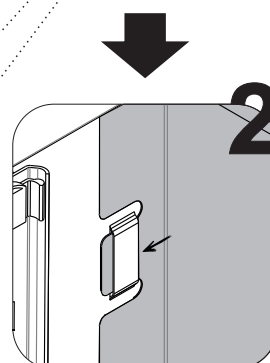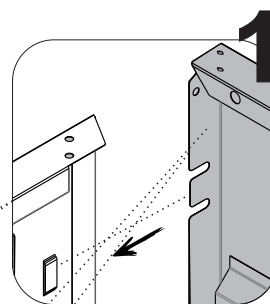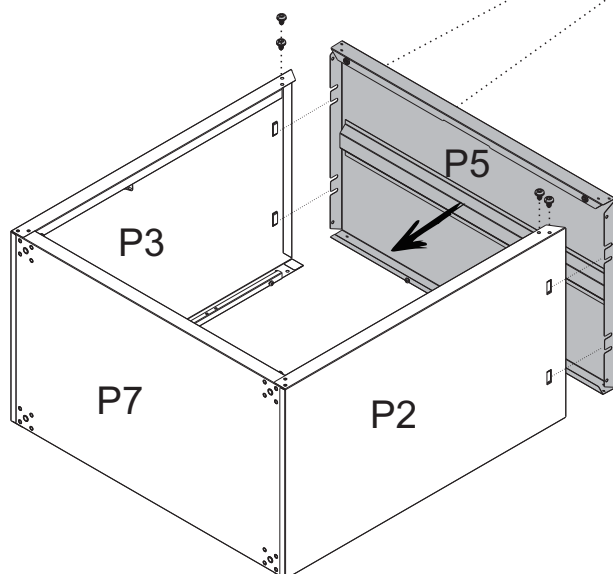
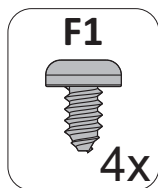


STEP 4

- 1 - Turn the cabinet with the back side upwards

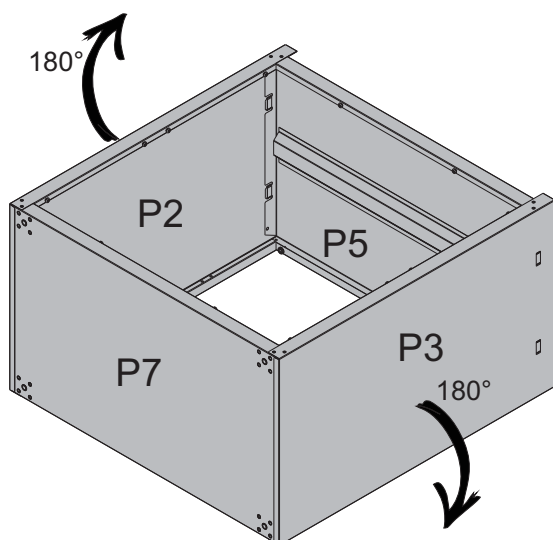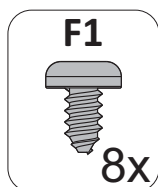

- 2 - Fit parts **P2** and **P3** to parts **P5** and **P7** with **F1**

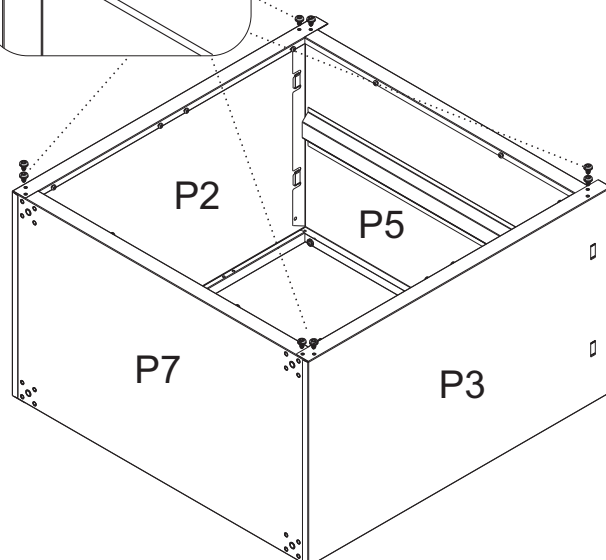
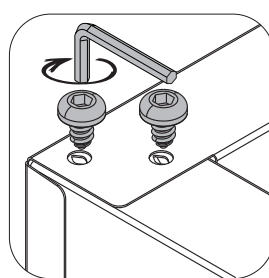


STEP 5



- 1 - Fit part **P10** into parts **P2**, **P3** and **P5**
Check that all fits are supported over the bolts
- 2 - After fitting the parts, screw the bolts until locked



“Position part P10 on the P5 side for mounting the”

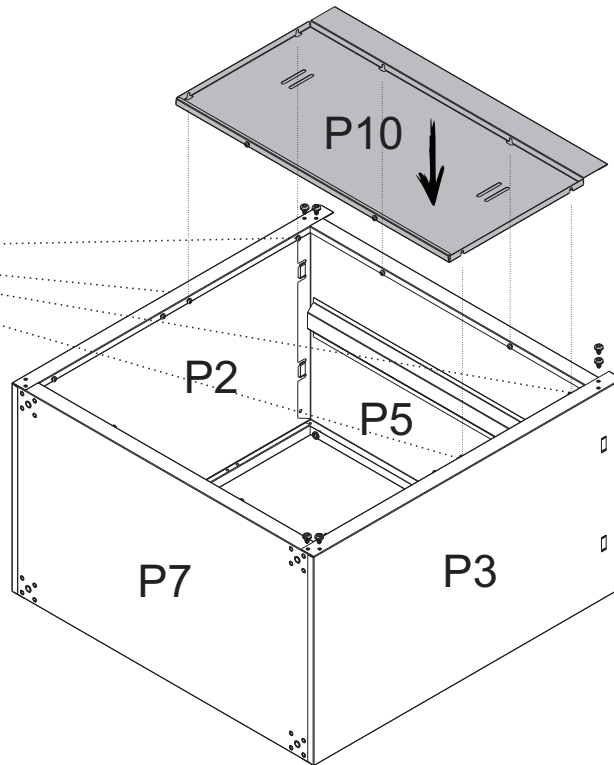
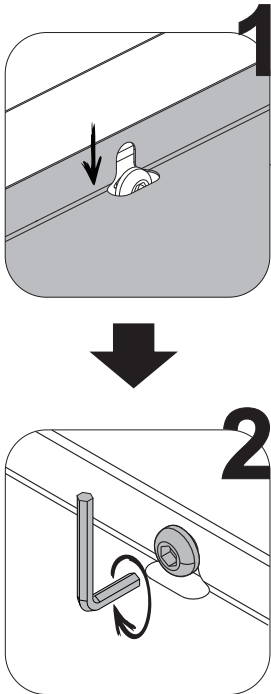


- ## STEP 6
- 1 - Fit part **P9** into parts **P2**, **P3** and **P7**
Check that all fits are supported over the bolts
 - 2 - After fitting the parts, screw the bolts until locked

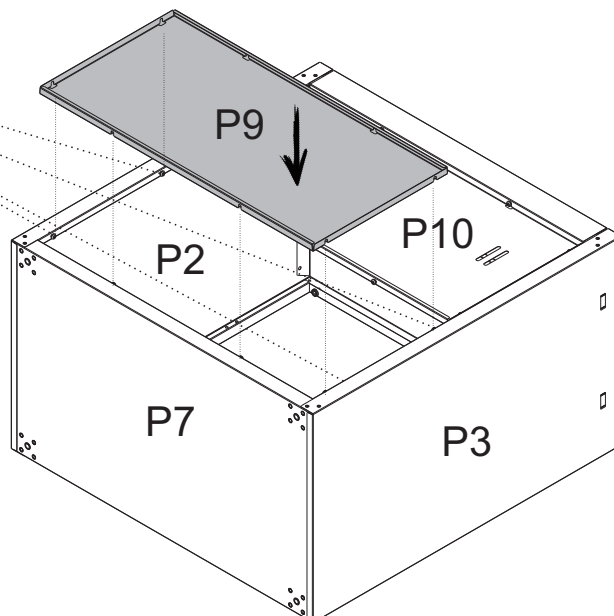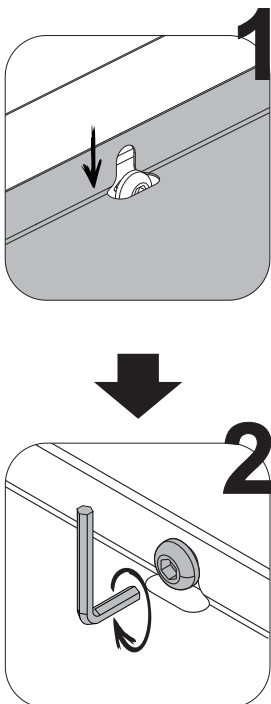

STEP 7





1 - To assembly the cabinet with shoe fit the accessory **F9** in part **P7** as illustrated here below and turn to screw. To level the height or the cabinet, turn the shoe either clockwise or counterclockwise to align it.

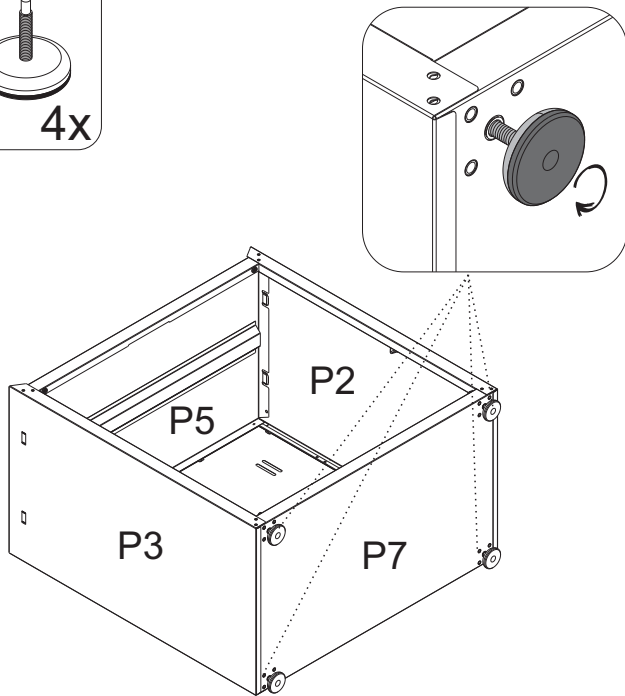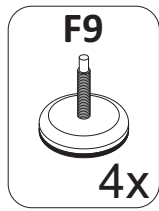

* Only in cabinets without caster

2 - To assembly the cabinet with caster, align the **F10** and **F11** to the holes in part **P7** and fix them with **F3**





3 - WARNING: Casters with lock (**F11**) must be fitted in the frontal side of the cabinet

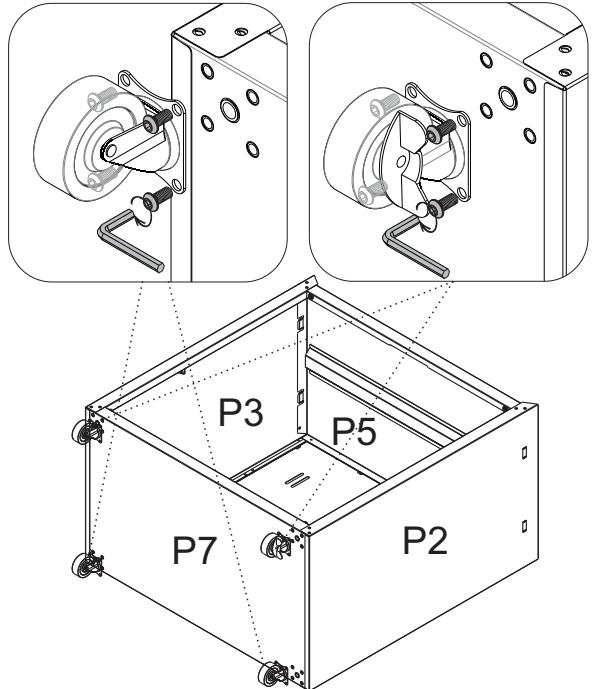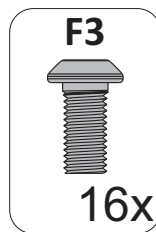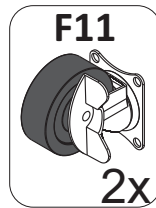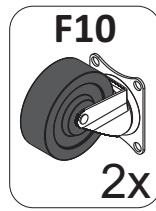

* Only in cabinets with caster




STEP 8

- 1- Turn the cupboard so that it will stand in the position of use
- 2- Fix **F7** to parts **P2** and **P3**, as shown here below

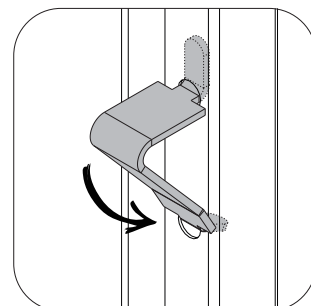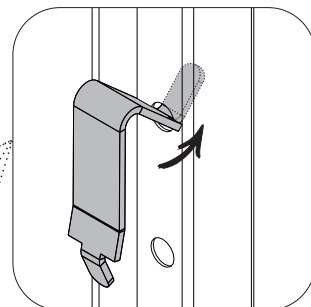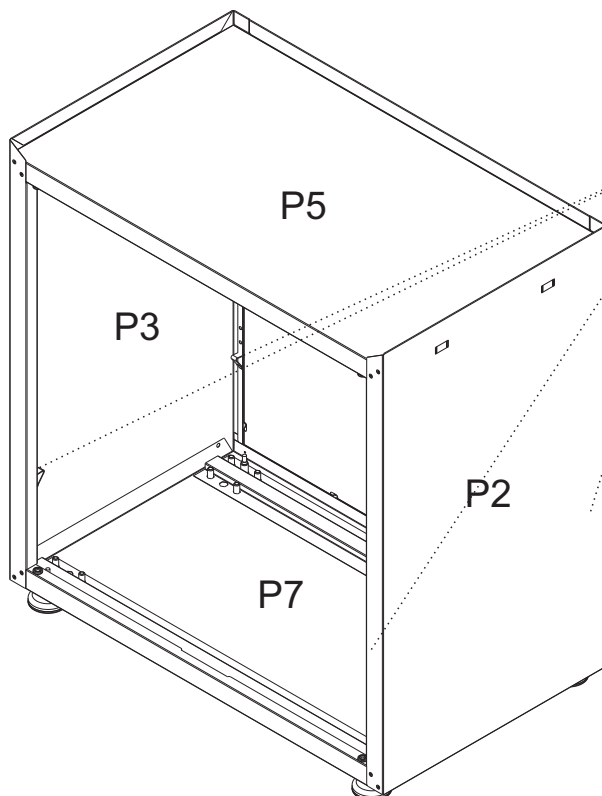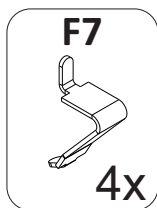

STEP 9

- 1 - Fit the lower part **P19** in diagonal position to insert it inside the cupboard
- 2 - Lean part **P19** in part **P2**, **P3** and place it over the **F7** detailed in the figure here below
- 3 - Lower the other side of part **P19**, leaning it over the left **F7**

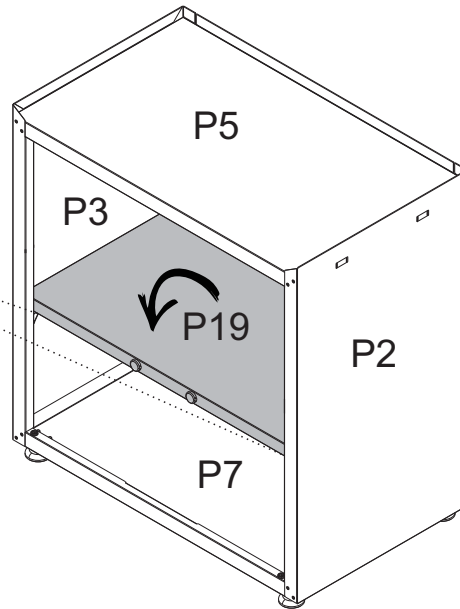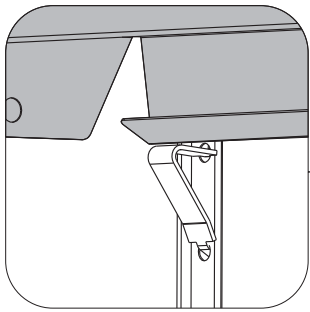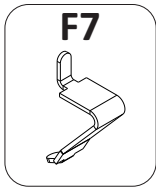

STEP 10

- 1 - To assembly the doors, fit door **P23** lower hinge bolt inside the bushing fixed in part **P7**. Then, pull down the pin of door **P23** upper hinge; align the door and release the pin to fit the bushing fixed in part **P5**
- 2 - Repeat the step for part **P22**
- 3 - Insert product log

