

Be sure the screws are level, then hang the art so that the scres are under the frame.





front view

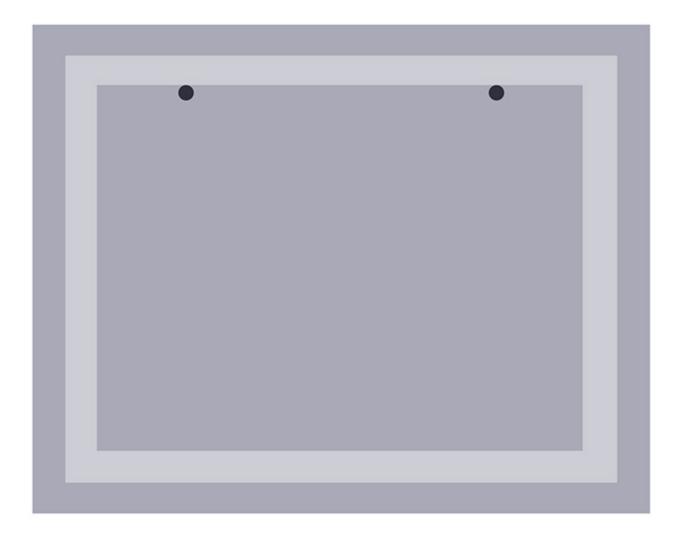

hardware free hanging