
# ALTAIR

# **INSTALLATION INSTRUCTIONS**

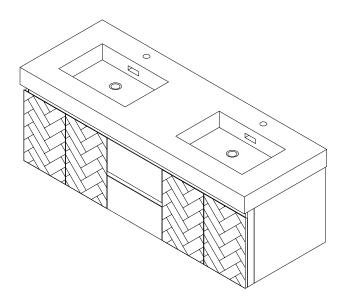

**Model:** 564060

# STOP

#### ARE YOU INSTALLING THIS PRODUCT?

Please read the installation instructions BEFORE INSTALLATION

If the product is not installed in accordance with these instructions, you Altair warranty may be void and the homeowner may have a claim against you(the installer).

We recommend consulting professional help if you are unfamiliar with installing bathroom vanities and/or plumbing.



IMPORTANT-It is the responsibility of the installer to make any adjustments to doors/drawers after installation if required.


There may have been some movement in transportation and installation which causes doors/drawers to become unaligned.

PLEASE RETURN TO HOME OWNER- IMPORTANT CARE & WARRANTY INFORMATION INSIDE.


For more information visit www.altairdesignusa.com

#### Crate Storage and Care


 Keep the countertop and sink in its box until installation

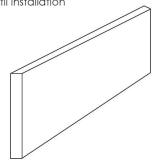

Do not stack anything on top of box

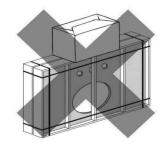

Store Crate vertically in safe location

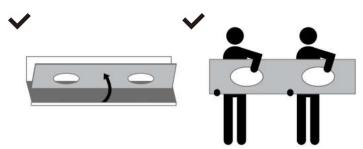



NEVER LIFT THE VANITY TOP FLAT



NEVER CARRY THE VANITY TOP FLAT

#### **Tools and Materials**















Marker

Tape Measure

Screwdriver

Finder


Level


Neutral Cure Silicone Sealant

Damp Cloth

Wood Shims

## **Main Body Parts**

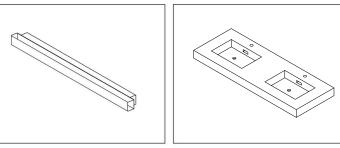

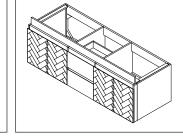



Screw Pack/1


Hardware Inside

Hardware(0)


Top&Basin(1)

Main cabinet(1)


#### **Cabinet Installation**

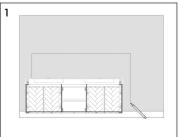



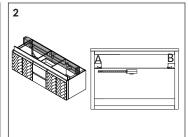


Measure A-B distance between 2 hangers.

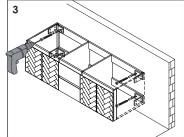


Adjust the mounting mechanism to secure the cabinet to the desired position.


SCREWS PROVIDED DO NOT ATTACH TO ALL WALLS, PLEASE CONSULT A PROFESSIONAL FOR THE PROPER SCREWS TO USE FOR YOUR WALL CONSTRUCTION.

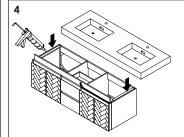

Apply a bead of adhesive silicone onto each edge of cabinet top. You can leave the EVA buffer strip or tear it off, before gluing the top. Place ALTAIR vanity top onto the cabinet, making sure vanity is seated properly.

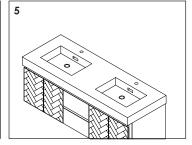



Do not use the vanity for at least 24 hours, in order to allow the glue to cure fully.

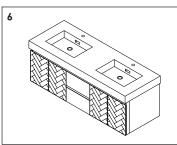



Disassemble drawer handles inside and install on drawer panel (Please disregard if the handles are installed properly).


# Slider/Drawer Adjustment

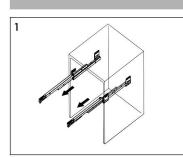

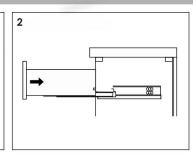


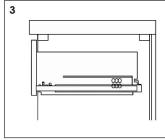


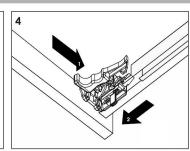


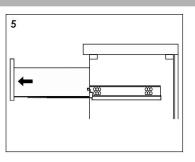

### **Hinge/Door Adjustment**

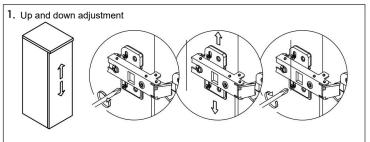

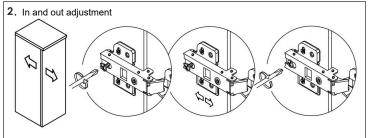

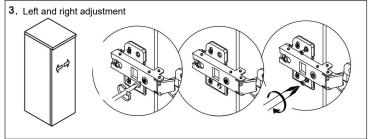

#### **Dimensions**

