




HIDE IT WITH STYLE

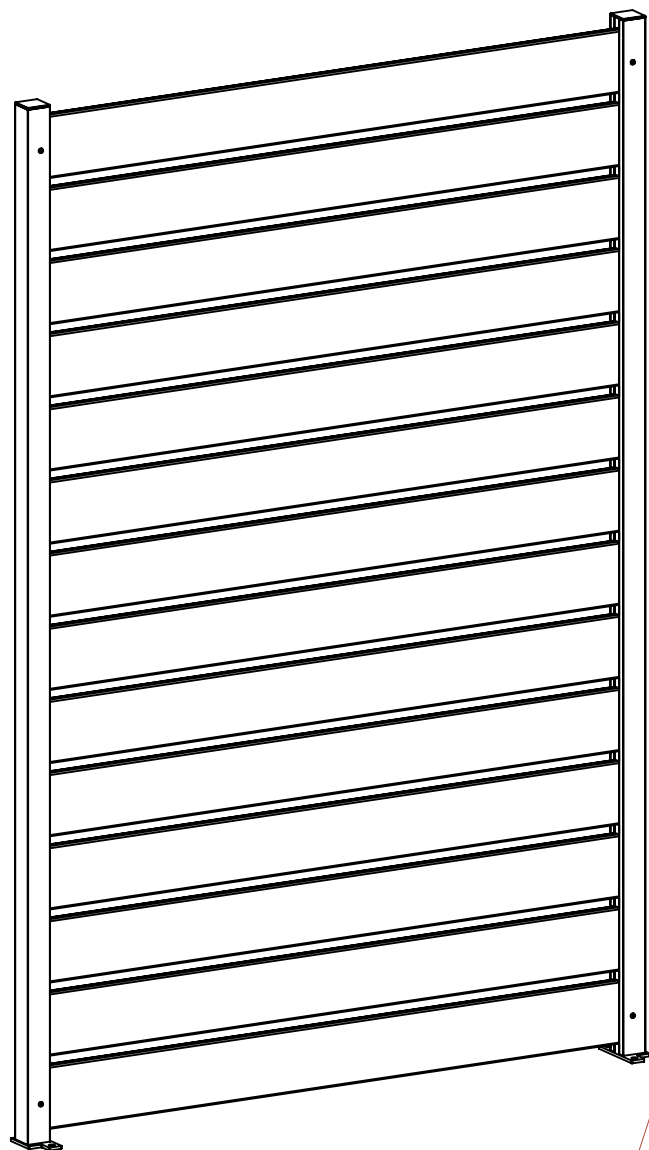

6ft Surface Mounted Slatted Wood Screen

48 1/2"W x 73" H

90 min
Assembly
Approximate time



Assembly Video
Scan the QR Code below



ASSEMBLY
INSTRUCTIONS
EC18046

www.encloscreens.com

VER. 080825

GENERAL INFORMATION

MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**
so we can help you right away!
parts.nychbrands.com

* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following**

- Your product number (**EC18046**)
- Your affected part letters (**pages 4**)
- Your original product box

NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product,
please contact at:

📞 **704-892-5222 / 877-234-6196** ✉ **support@encloscreens.com**

NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

DETAILED **PRODUCT DIMENSIONS & SPECIFICATIONS**

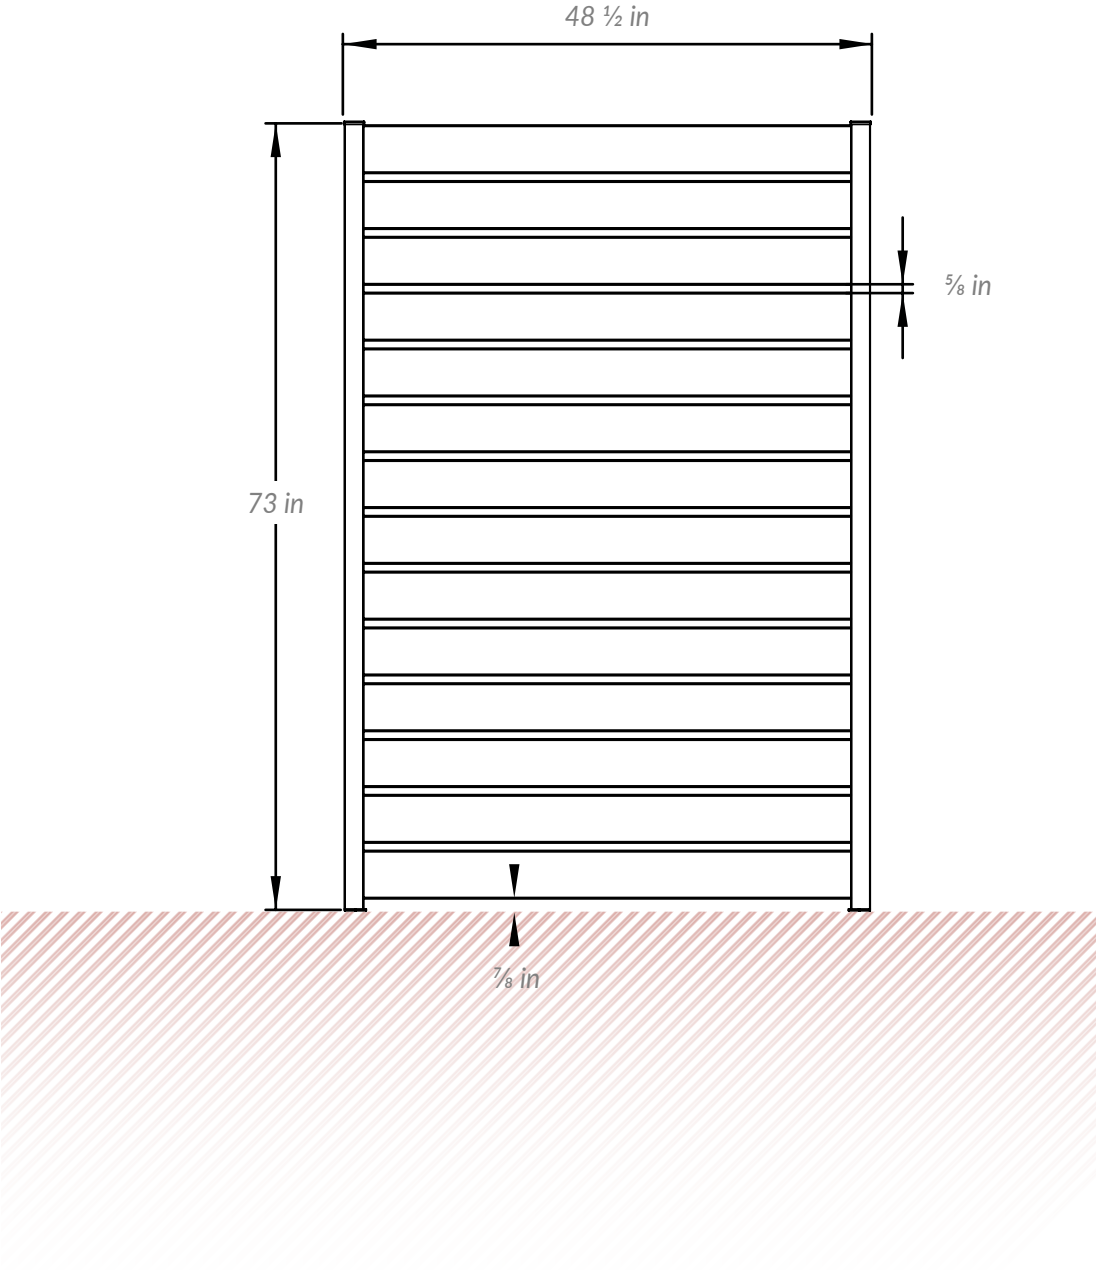


LAY OUT MATERIALS

LARGE PARTS


A

Left Post (1)
 $1\frac{3}{4}" \times 1\frac{3}{4}" \times 72\frac{7}{8}"$

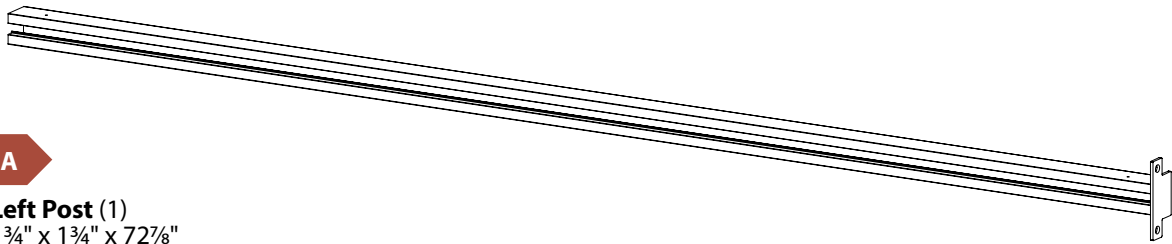


B

Right Post (1)
 $1\frac{3}{4}" \times 1\frac{3}{4}" \times 72\frac{7}{8}"$

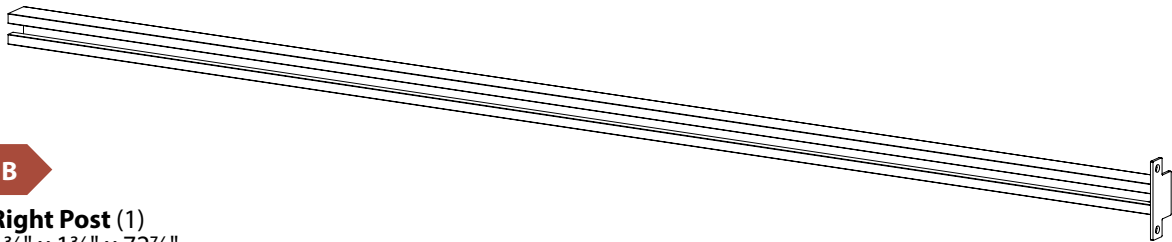

C


Wooden Slats (14)
 $\frac{5}{8}" \times 4\frac{1}{2}" \times 47\frac{1}{4}"$

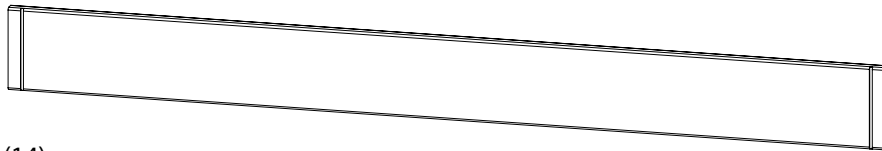

SMALL PARTS


D

Spacer (28)

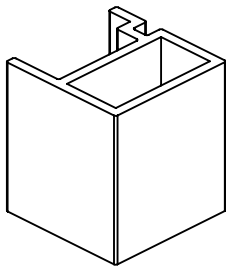


E

Post Cap (2)

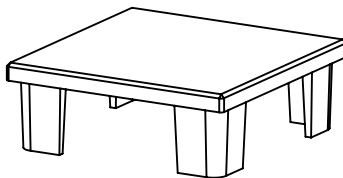

F


1" Self-Drilling Stainless Steel Screw (8)




TOOLS AND OPTIONAL HARDWARE

NOT INCLUDED


► We recommend 2 people for a smoother assembly.

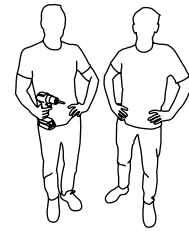

DECK MOUNT

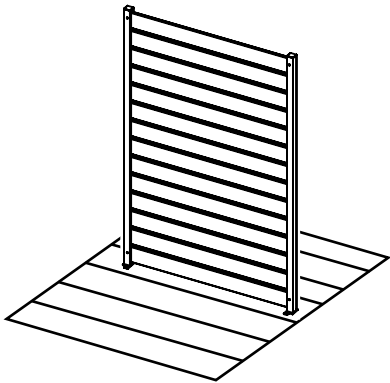

Power Drill

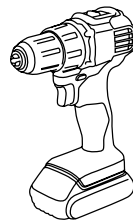


1/4" Wood Drill Bit




1/4" Lag Screws 3" Length (4)




Matching Driver Bit



PATIO MOUNT

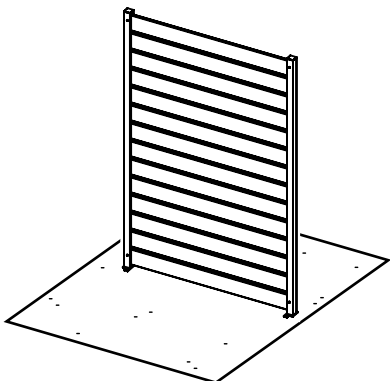


Hammer Drill

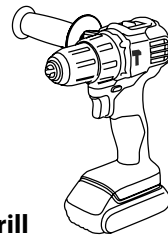


1/4" Concrete Drill Bit




Hammer




1/4" Concrete Wedge Anchor 2 1/4" Length (4)




Matching Wrench

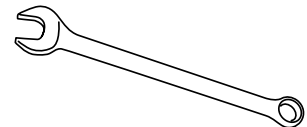

ASSEMBLING

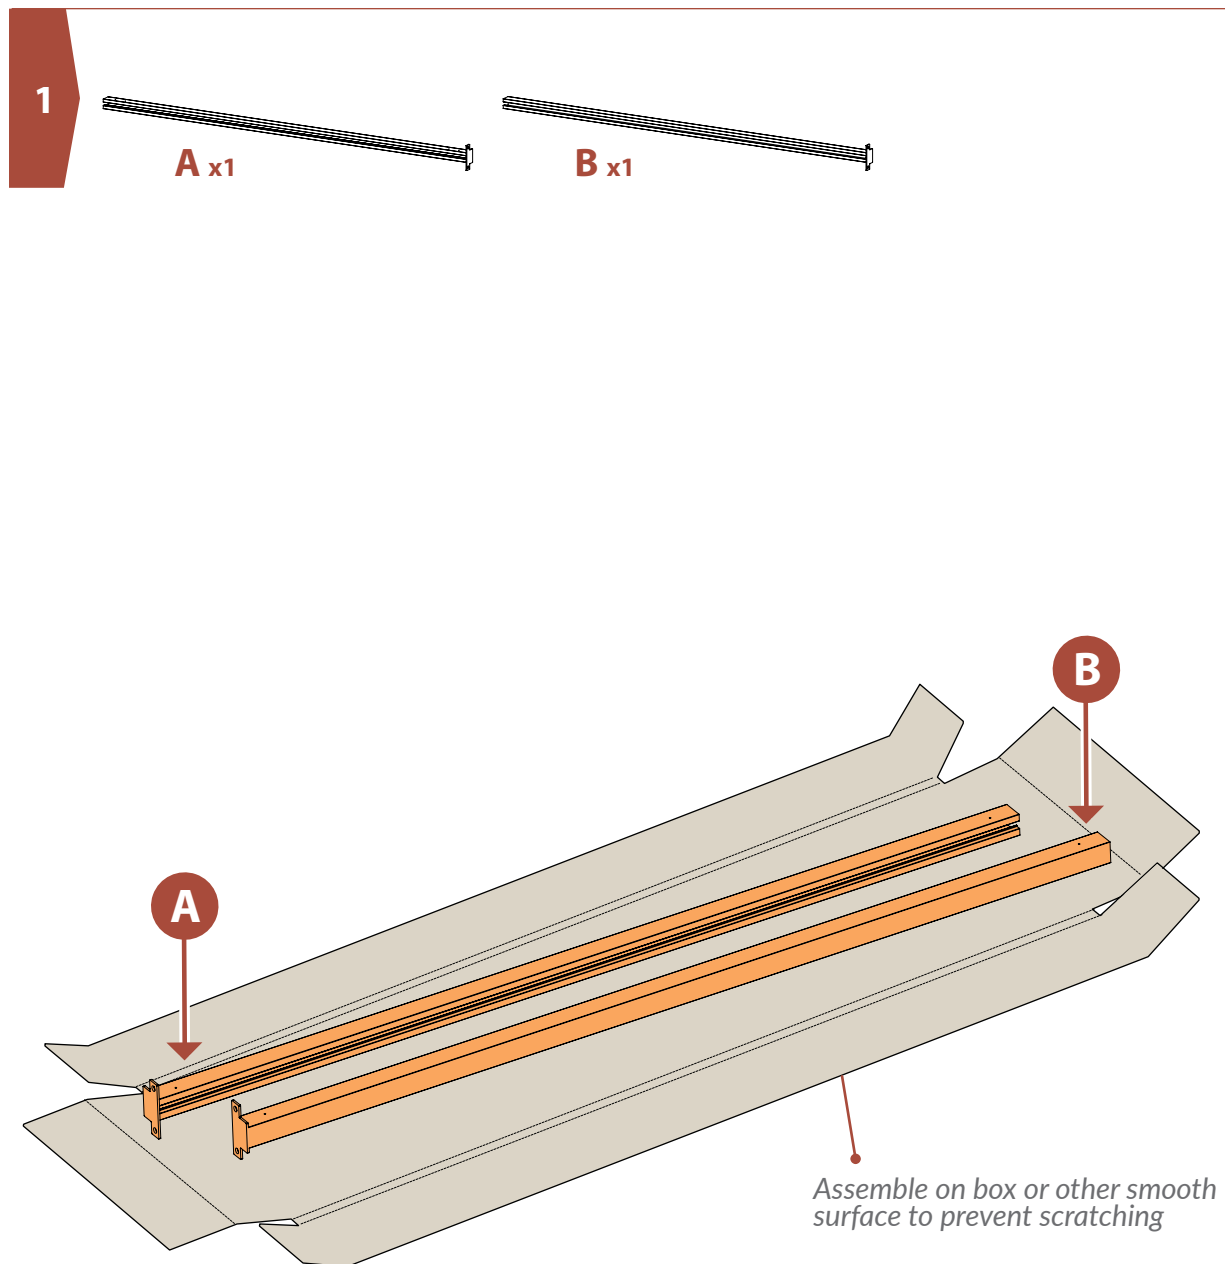


2



C x1




D x2

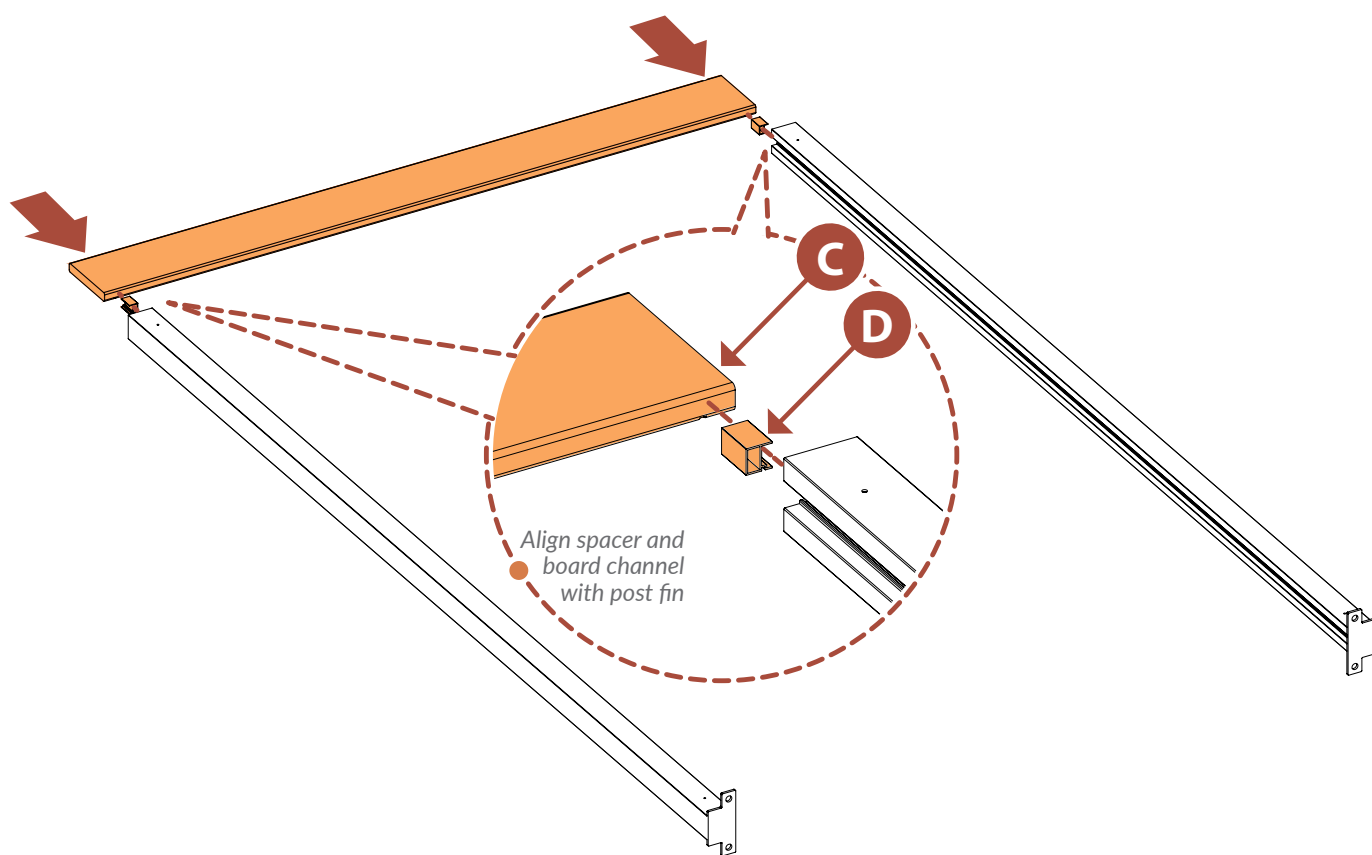

3


C x1 **D** x2

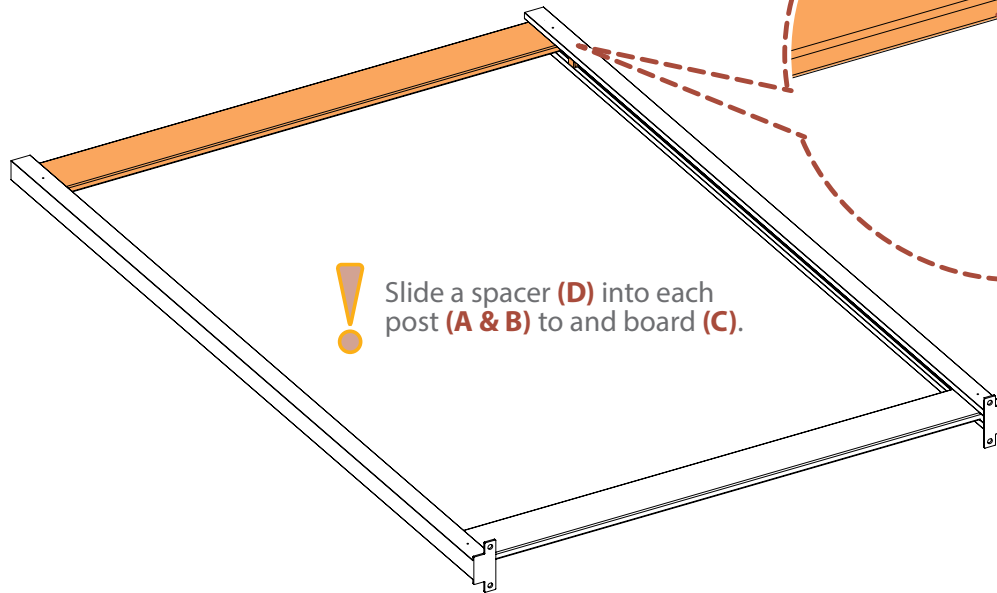

! Slide a spacer (**D**) into each post (**A & B**) to and board (**C**).

4

F x2


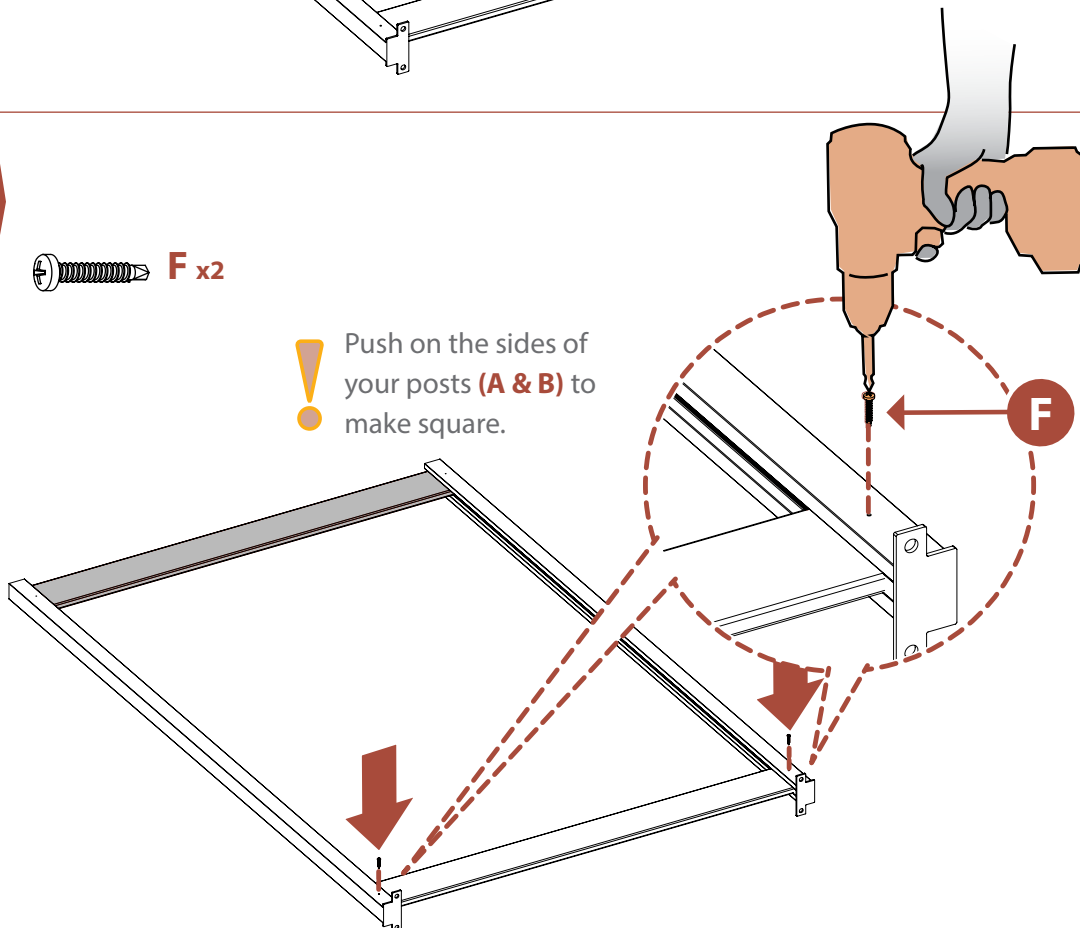


! Push on the sides of your posts (**A & B**) to make square.


5




Slide to the bottom of your channel

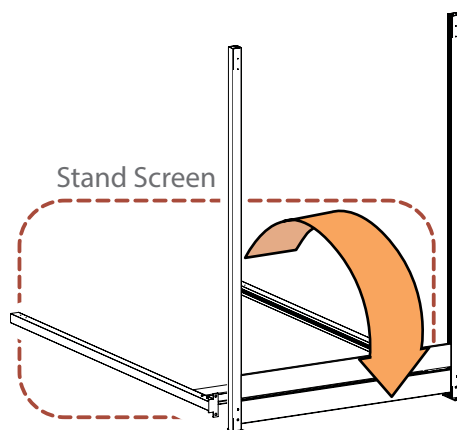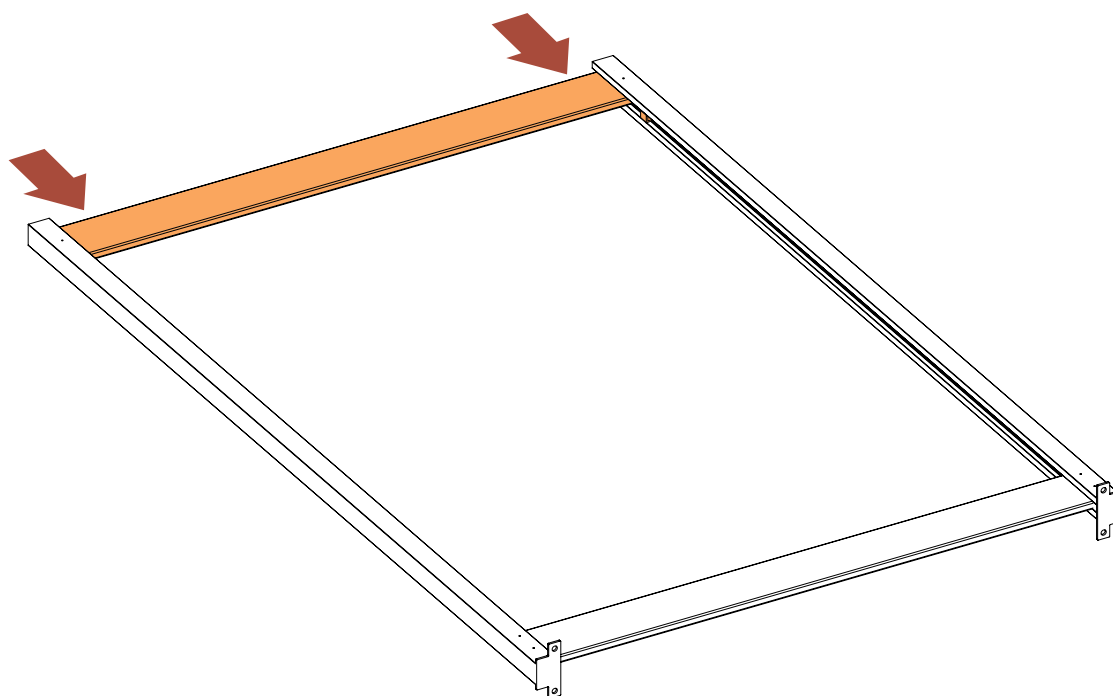


6


 **C x12**  **D x24**

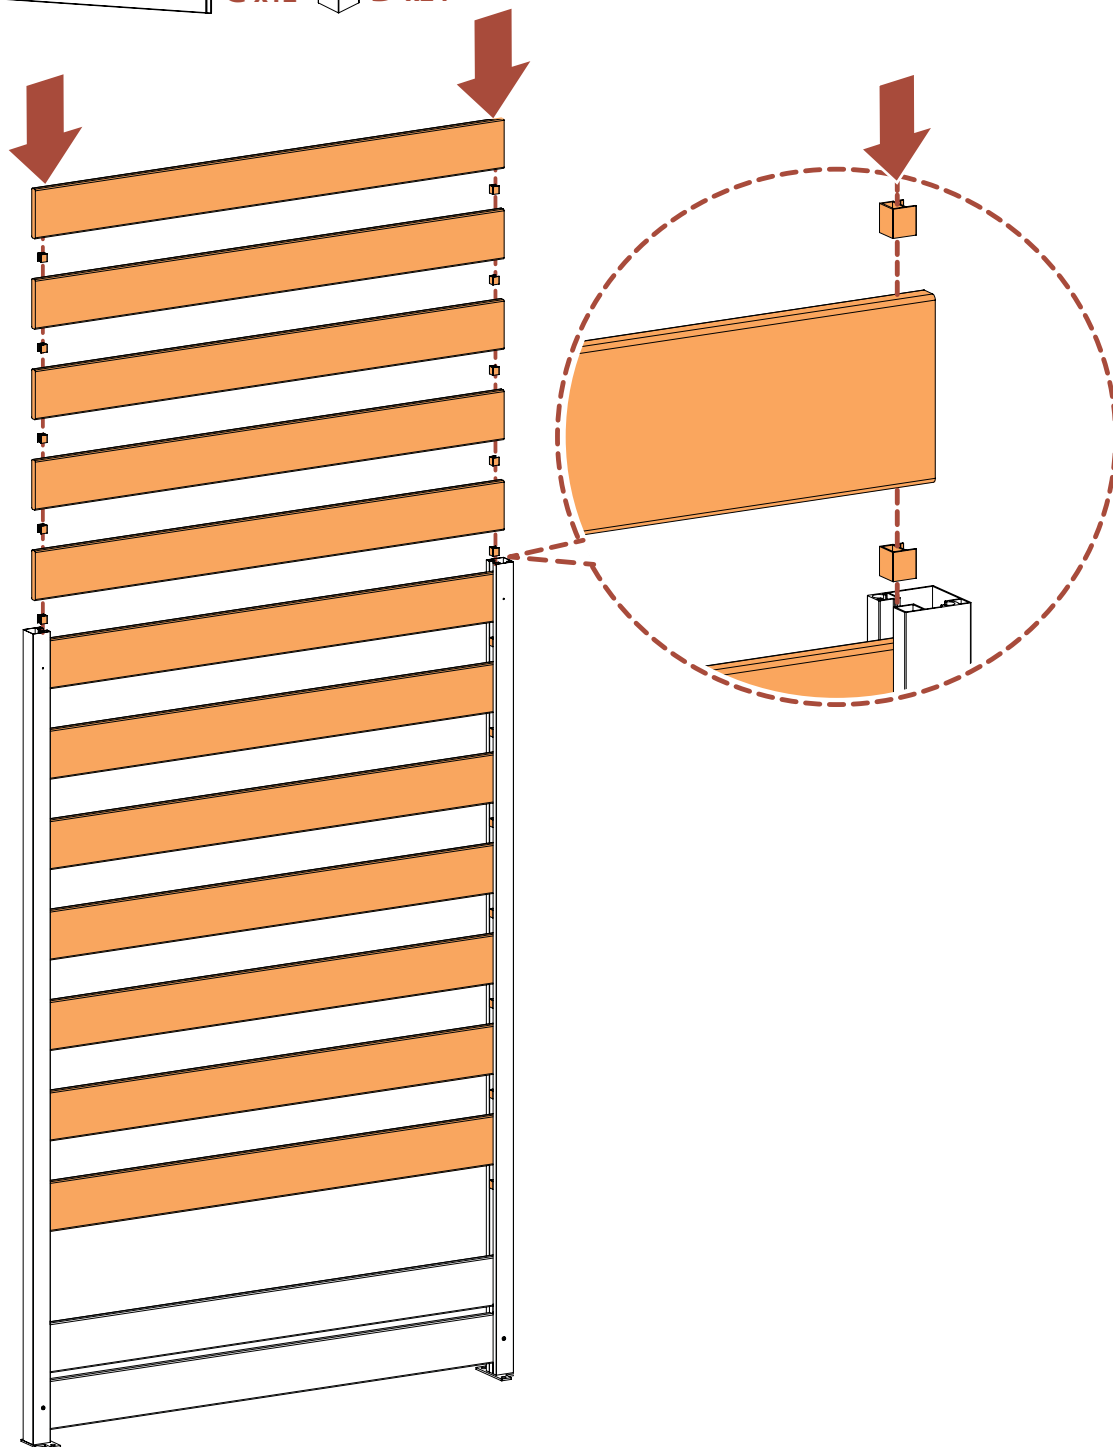

7

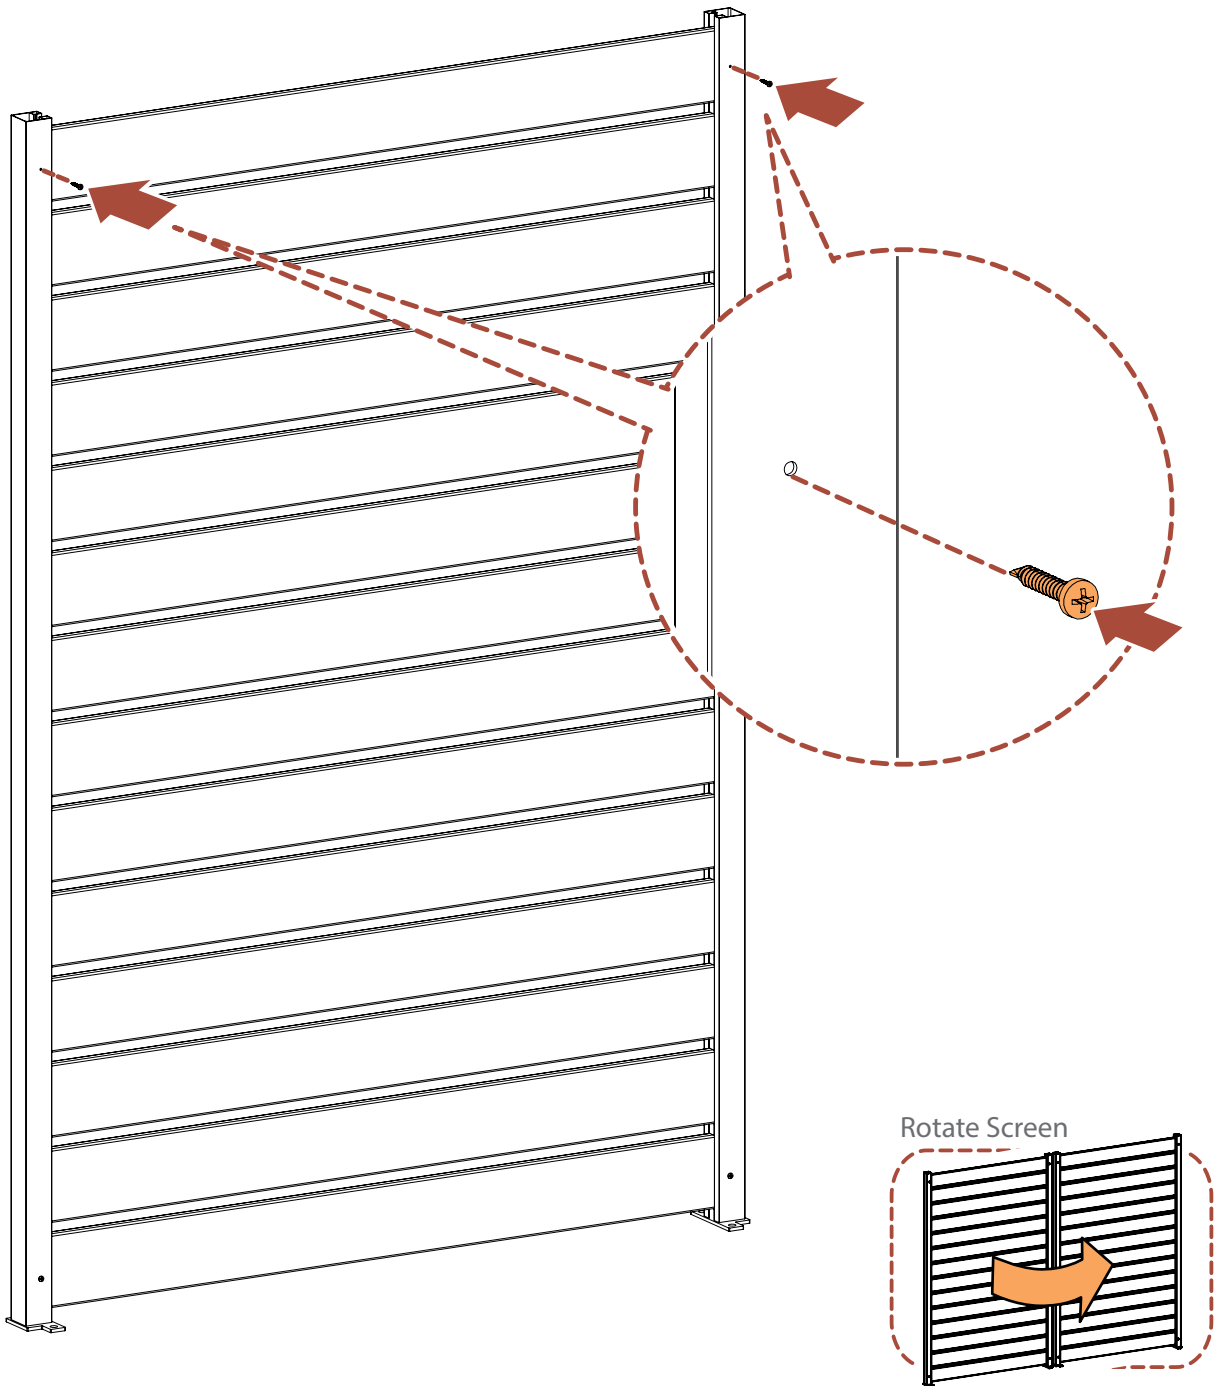

8

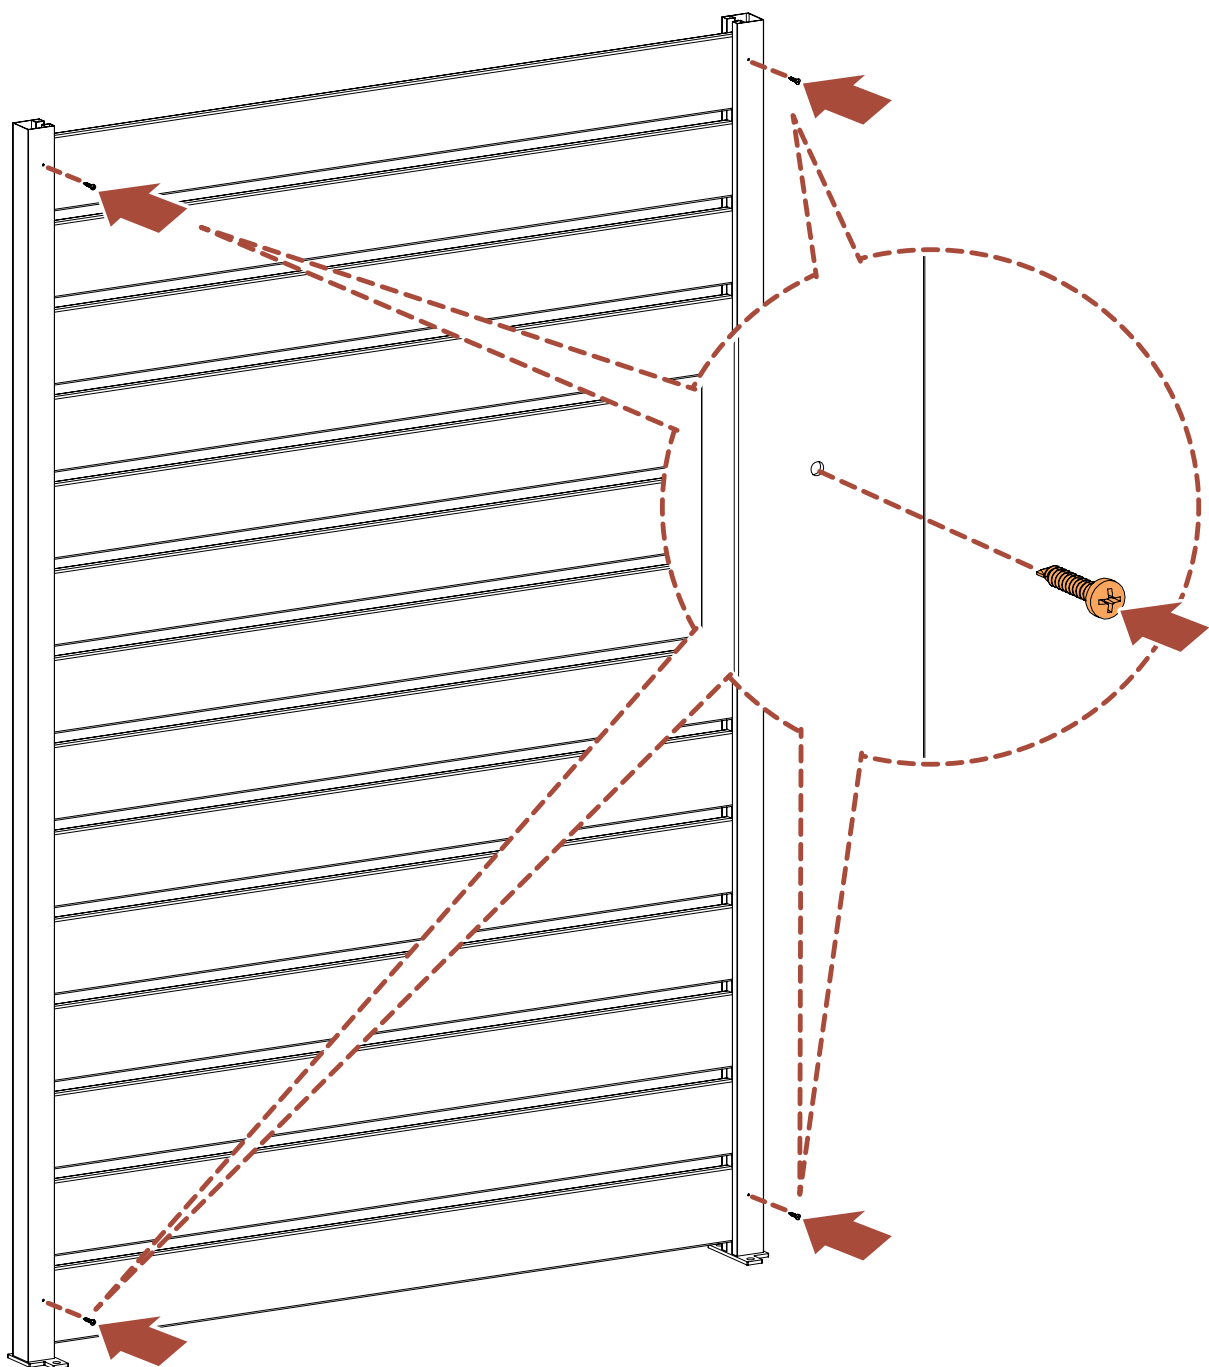


9



SURFACE MOUNTED (DECK)

MOUNTED


1

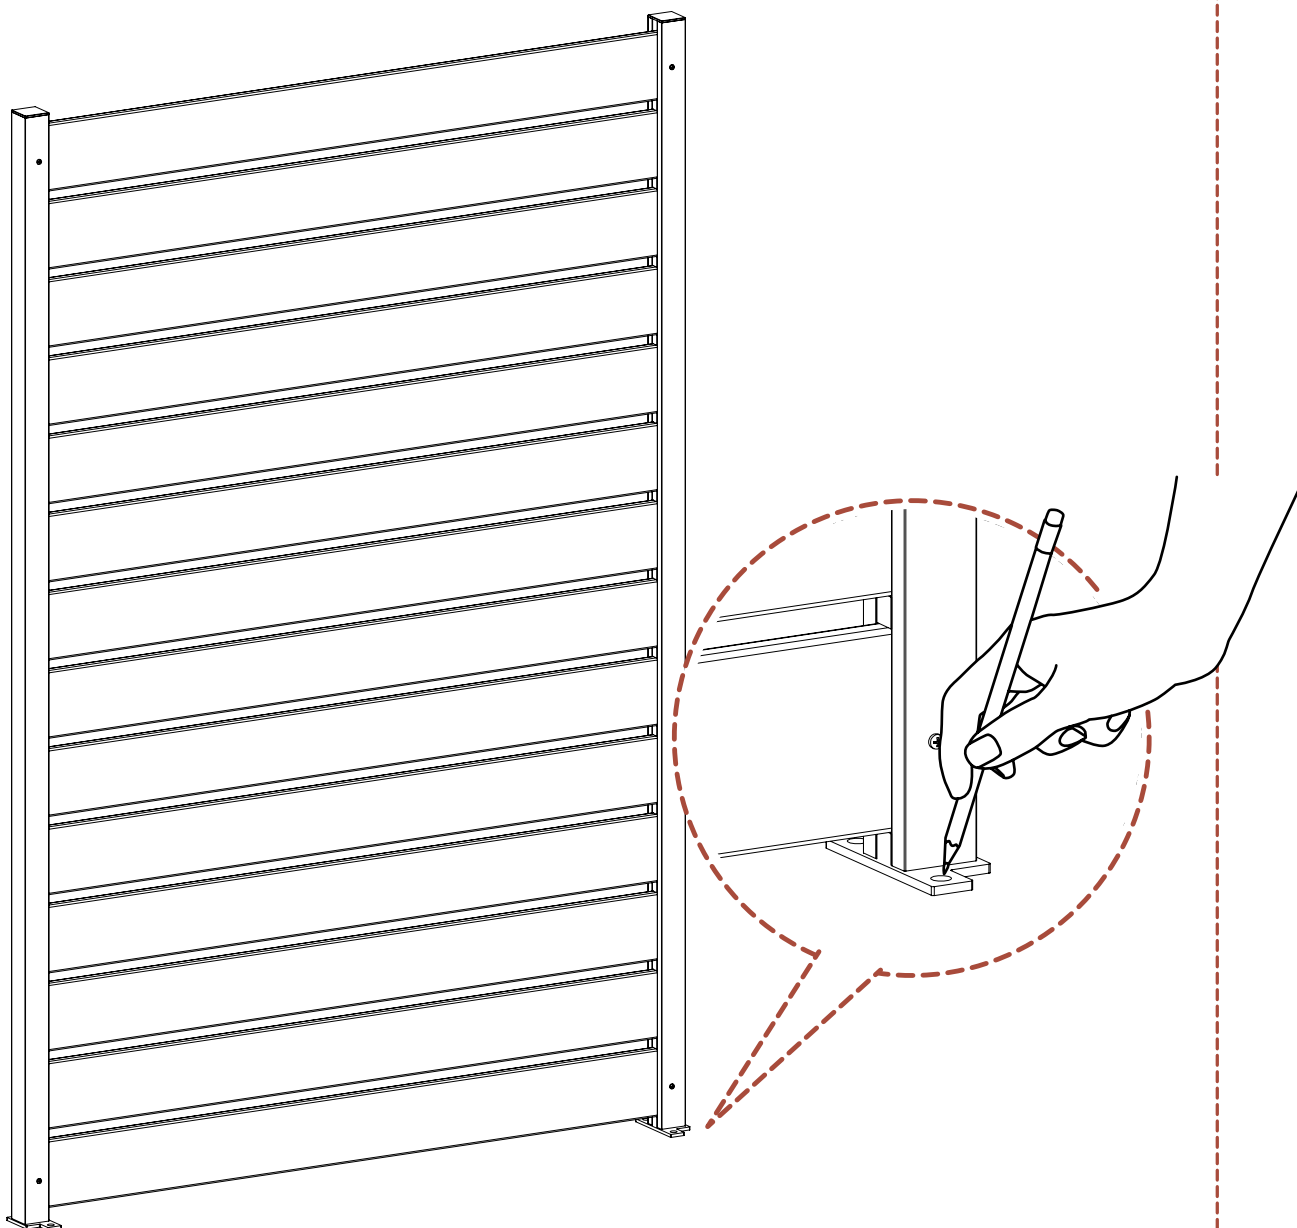




Refer to mounting hardware instructions
to ensure proper installation.

(Surface mounting hardware not included)

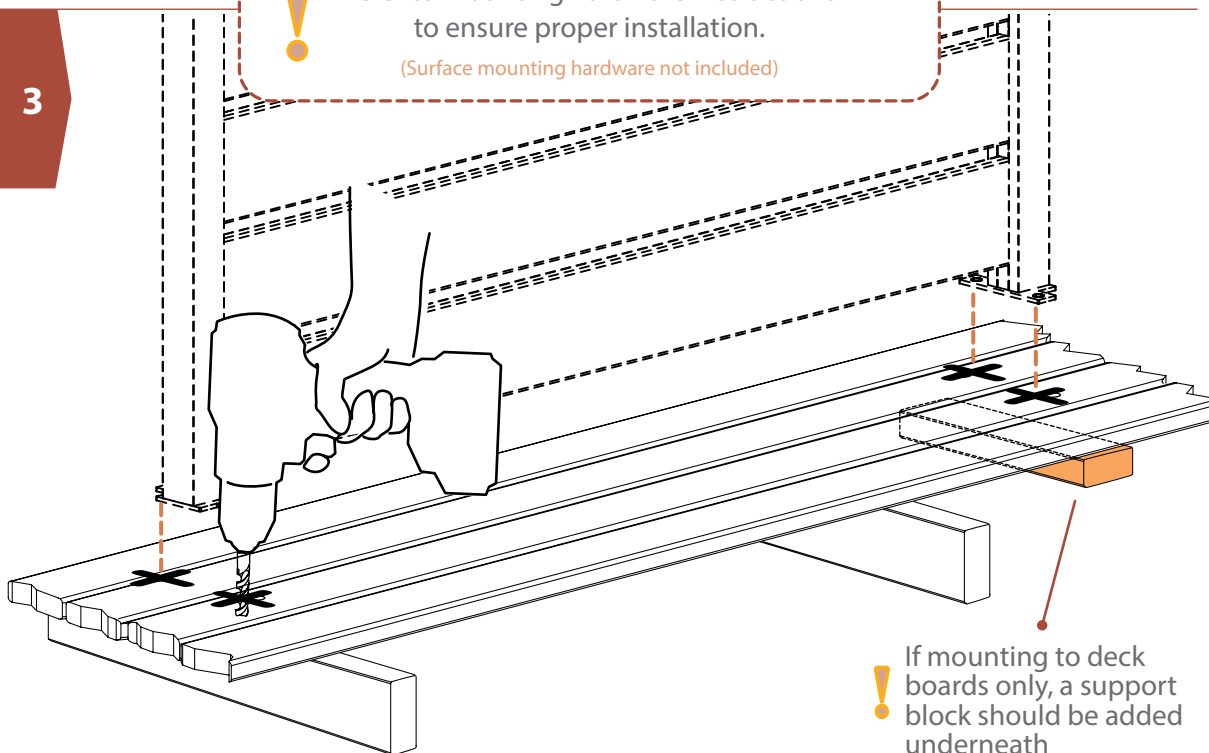



If mounting to deck
boards only, a support
block should be added
underneath

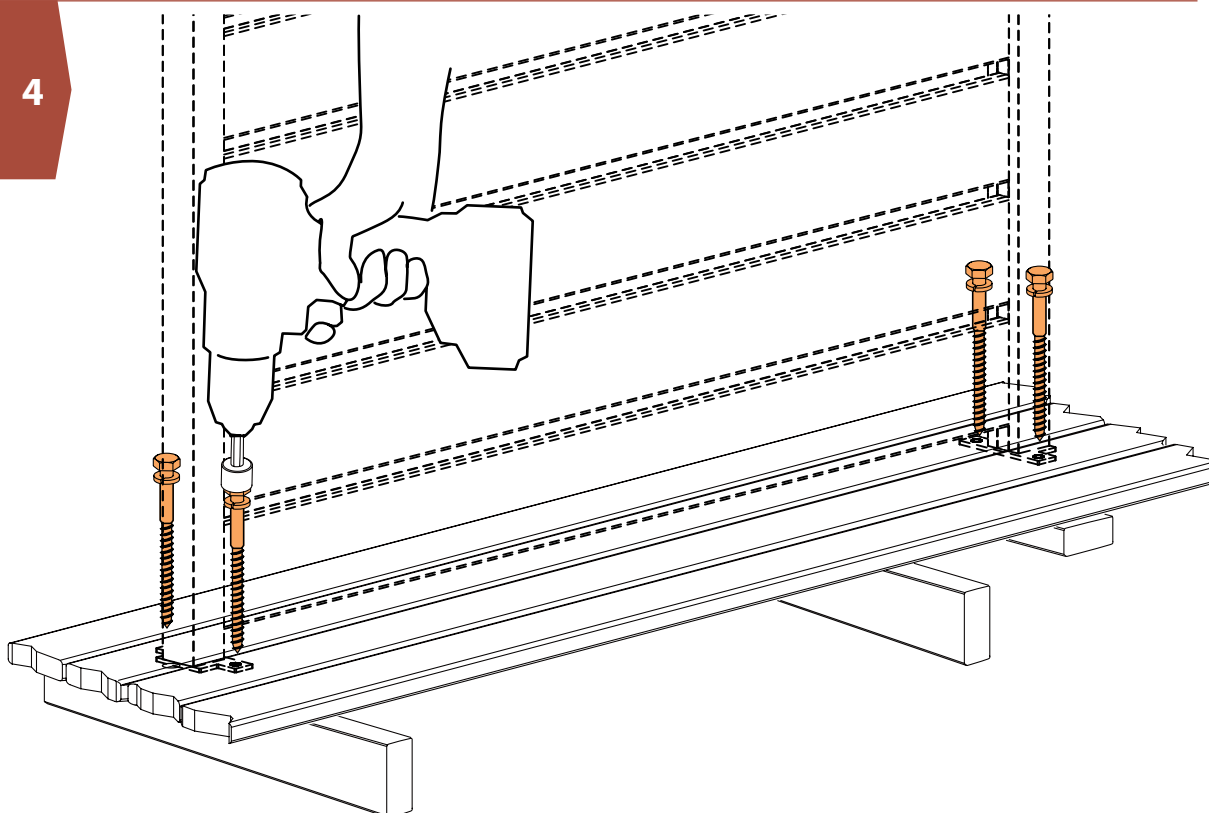


SURFACE MOUNTED (PATIO)

MOUNTED

1

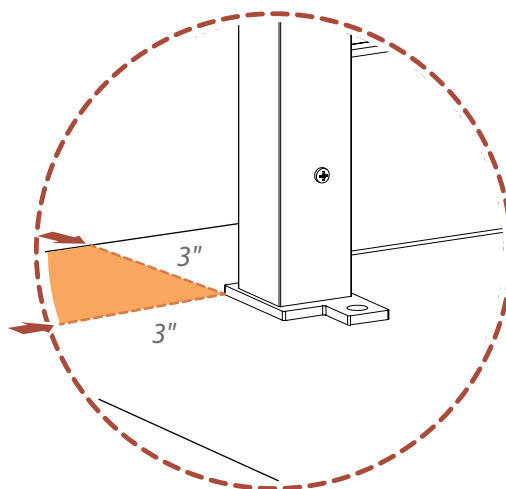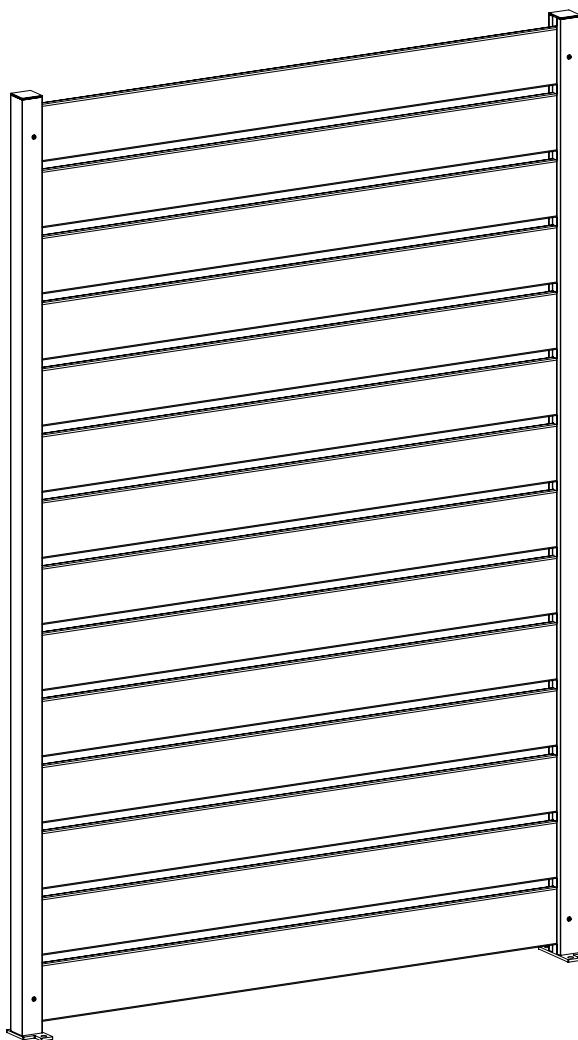

Ensure there is at least **3"** between the edge of the concrete and the surface mount.

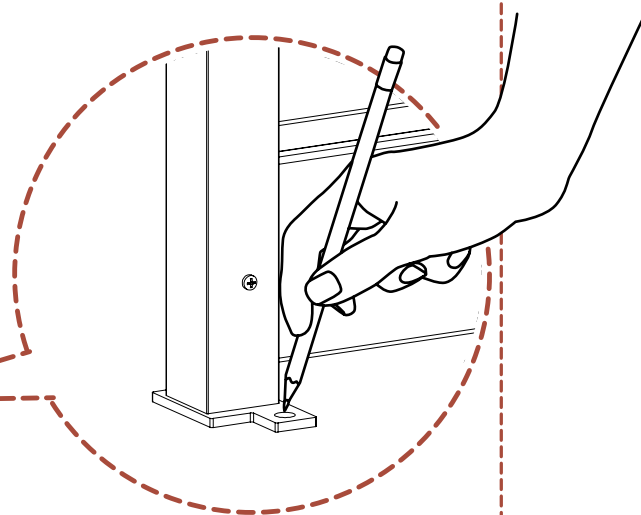


MOUNTED

3




Refer to mounting hardware instructions
to ensure proper installation.
(Surface mounting hardware not included)

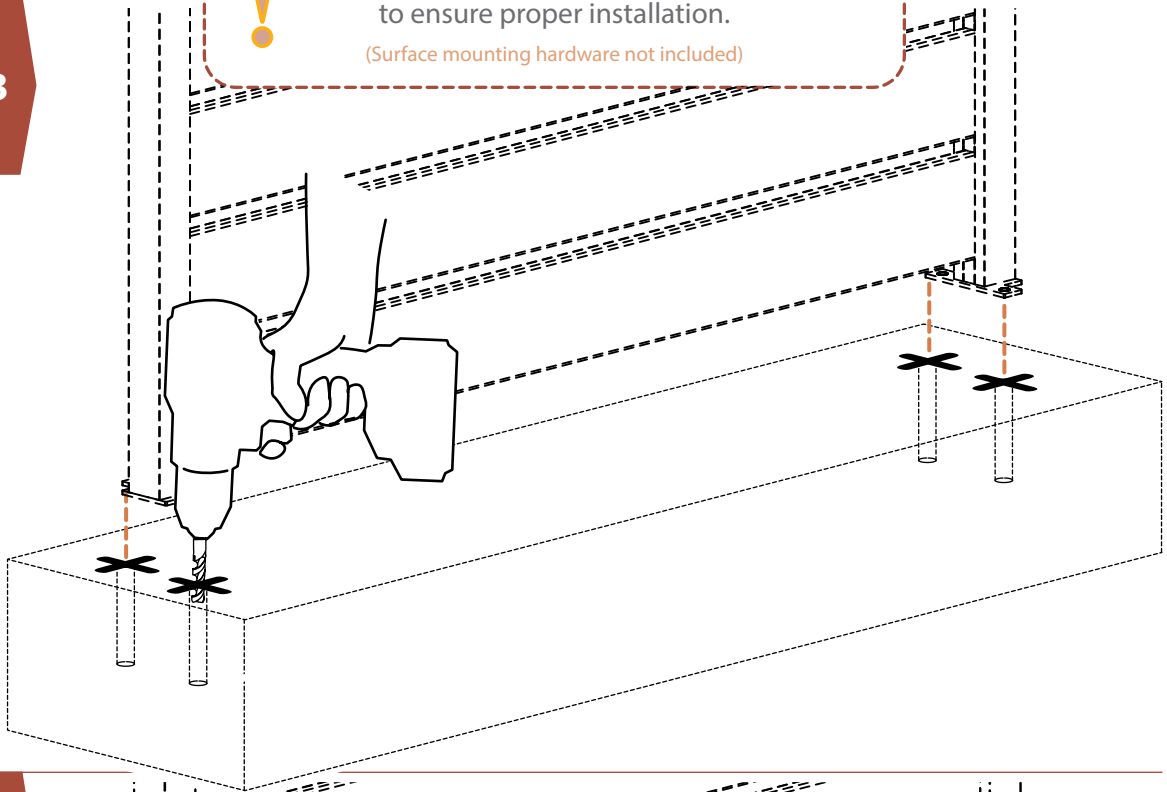

MOUNTED

4

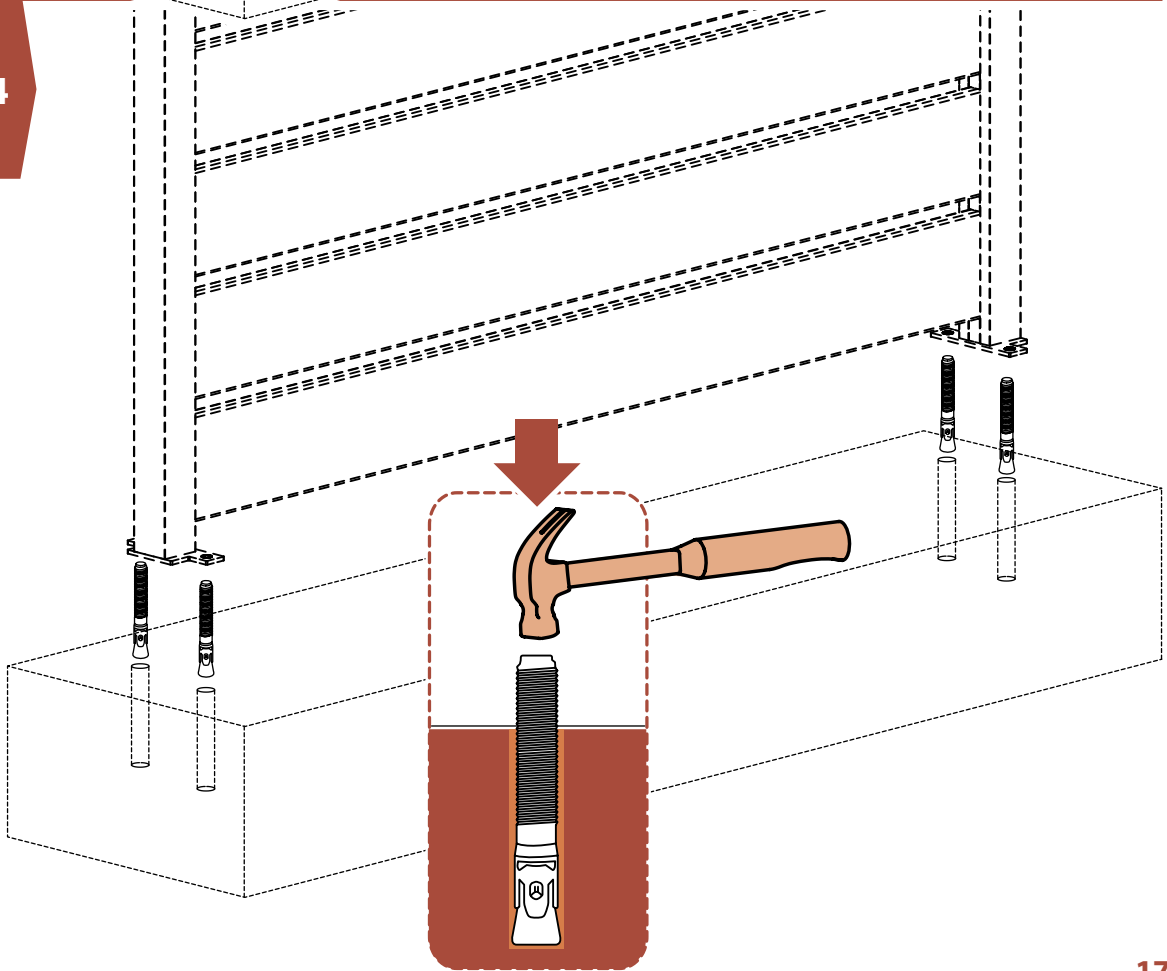


MOUNTED

5




Refer to mounting hardware instructions
to ensure proper installation.
(Surface mounting hardware not included)

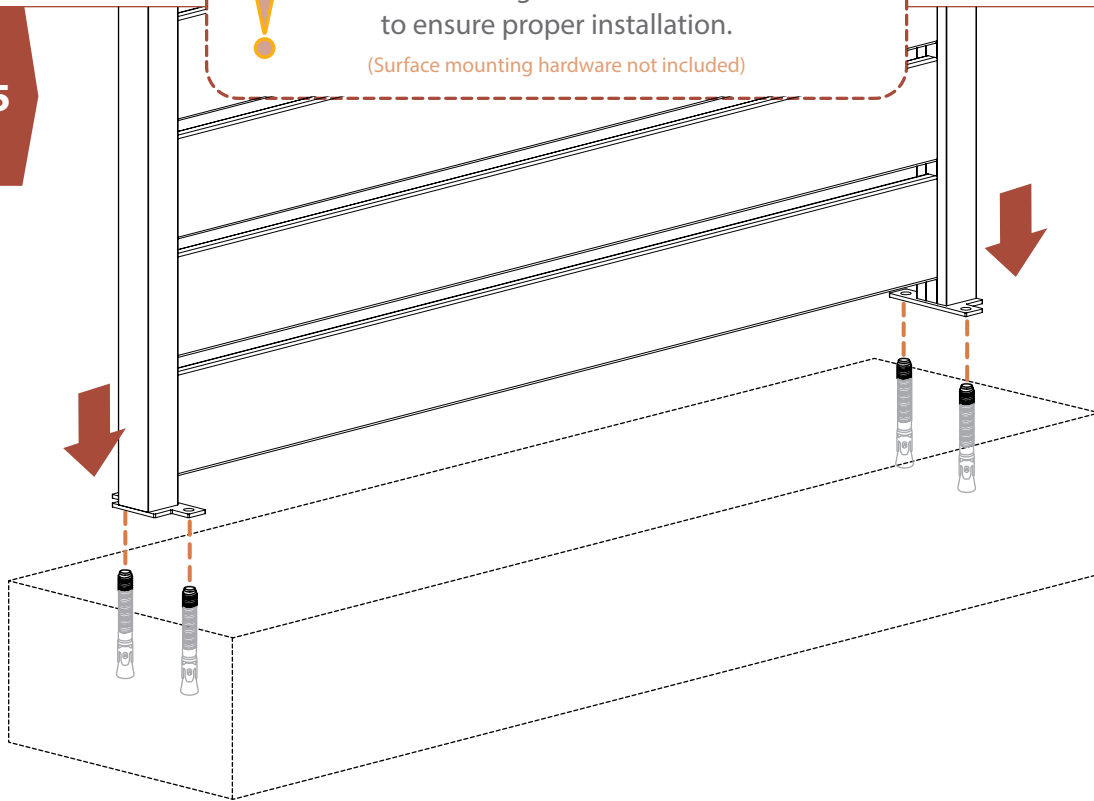

MOUNTED

6

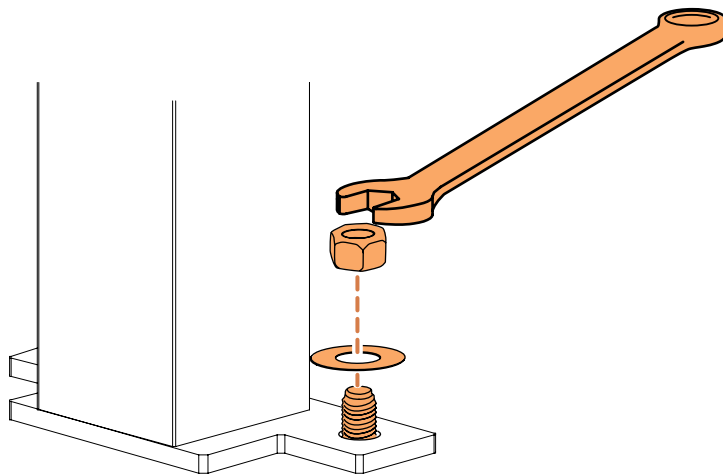



HIDE IT WITH STYLE

www.encloscreens.com

support@encloscreens.com



704-892-5222
877-234-6196



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



ASSEMBLY
INSTRUCTIONS
EC18046