


CONNECT RECTANGLE WITH DOOR

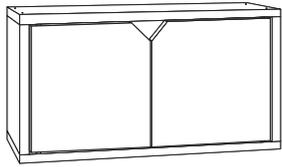

Included




16 pins
4 pins for connection




2 Backer Boards
thin and no adhesive




2 Vertical zBoards
with grooves on 1 side
adhesive strips on 2 edges




1 Center zBoard
with grooves on 2 sides
adhesive strips on 2 edges

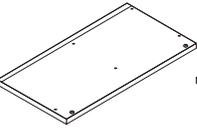


1 Bottom zBoard
with door pin slots

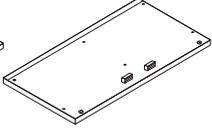

1 Top zBoard
with magnetic door stoppers



1 zBoard Door -
right side




1 zBoard Door -
left side



WARNING: CHOKING HAZARD
Small parts NOT for children under 3 years

Important

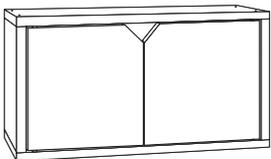


THIS SIDE UP

CAUTION placing unit on its side or back
will compromise structural integrity. Use
right side up.




- Assemble your unit on a flat even surface
- Make sure zBoard surfaces are clean and dry


- When moving your Way Basics unit, lift from the bottom
- Indoor use only. Not in bathroom.

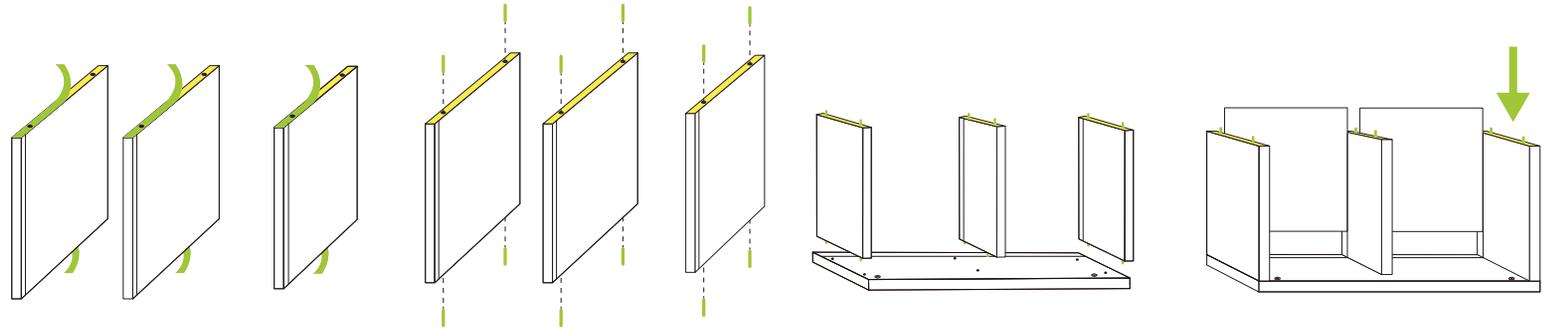


- 1 Carefully remove the protective layer on the Vertical and Center zBoards, making sure not to remove the 3M adhesive.
- 2 Insert pins as shown.
- 3 Align Vertical and Center zBoards to holes in Bottom zBoard.
- 4 Fit Backer Boards in grooves of Bottom and Vertical zBoards.

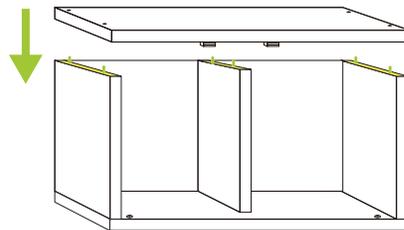

- 5 Align Top zBoard to unit as shown. Press down firmly to secure.

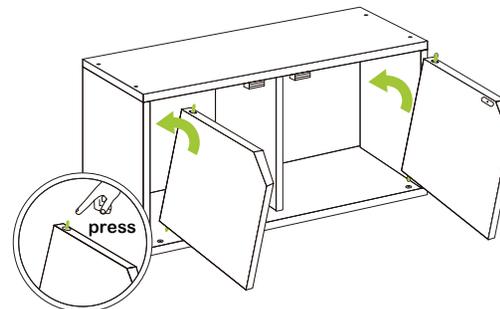

- 6 Orient doors properly as shown and align Bottom pins. Press on spring loaded Top pins and insert.

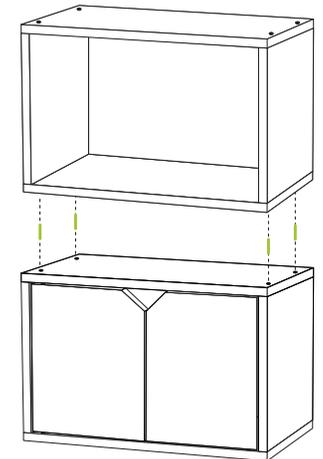

- 7 Stack other Connect Rectangles with connecting pins for your perfect configuration.

Enjoy building possibilities!

