




**MANHATTAN
COMFORT**

DR010

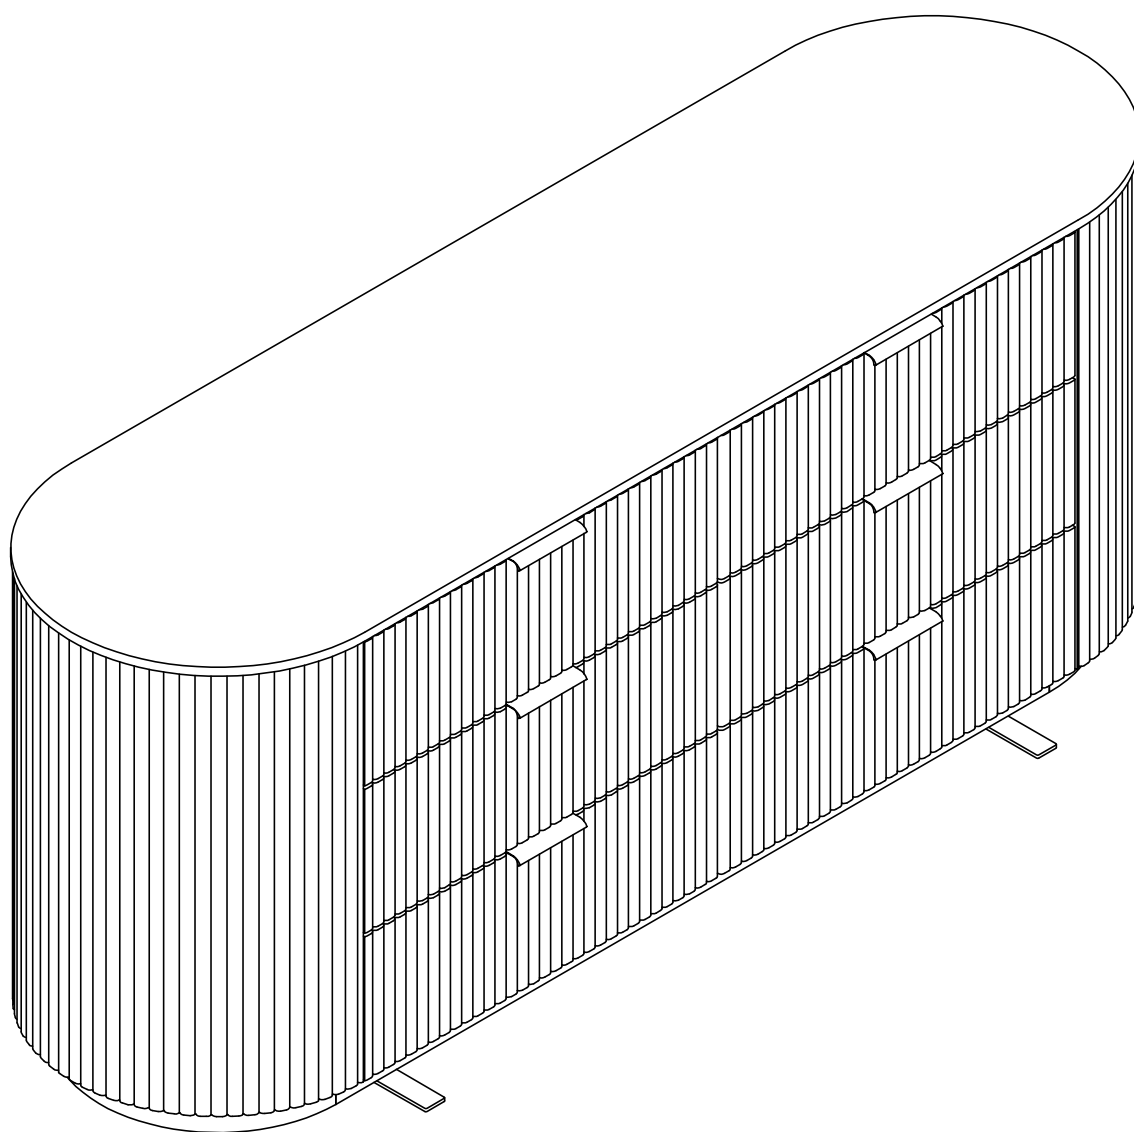




STOP!


Before beginning the assembly process, ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

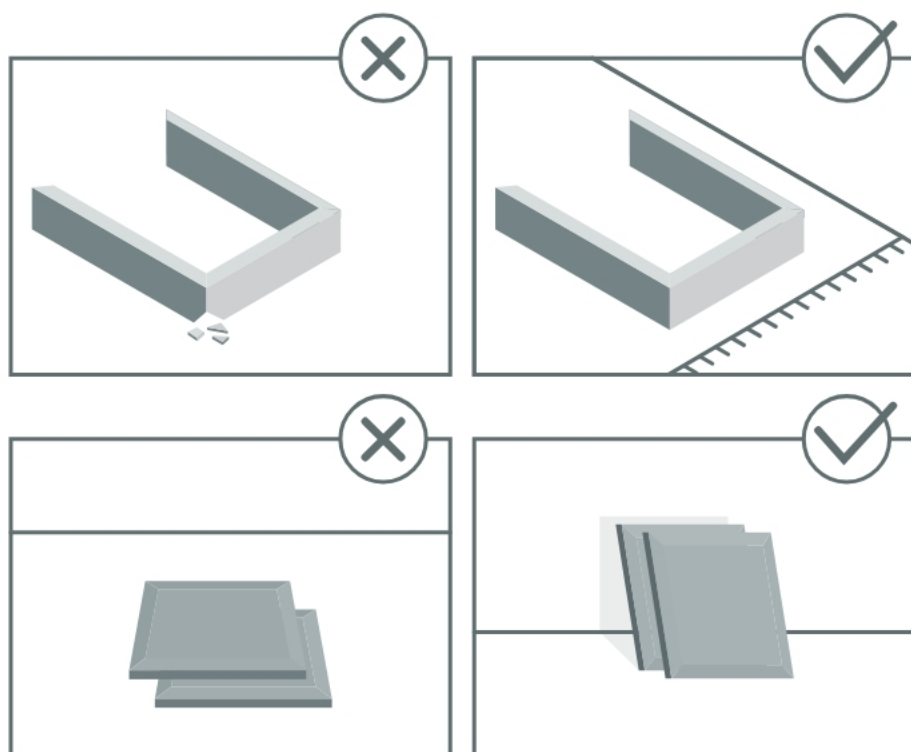

TOOLS REQUIRED

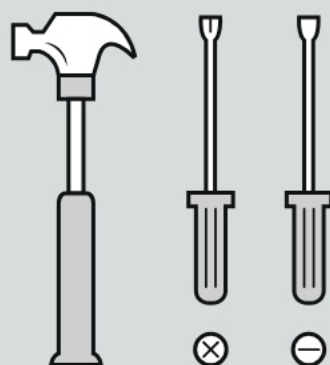

View our assembly video online:
WWW.MANHATTANCOMFORT.COM



Stuck? Question? We are here to help.
tel: **908-888-0818**
e-mail:

Support Site



Included in this package:

BOX 01/03


M. DRAWER RIGHT PANEL (6)
N. DRAWER LEFT PANEL (6)
O. DRAWER BACK PANEL (6)
P. DRAWER BOTTOM PANEL (6)
Q. DRAWER SUPPORT PANEL (6)
R. DRAWER LEFT FRONT PANEL(3)
S. DRAWER RIGHT FRONT PANEL(3)
ALL HARDWARE ARE IN BOX 01/03

BOX 02/03

C. LEFT FRAME (1)
D. RIGHT FRAME (1)

BOX 03/03

A.TOP PANEL(1)
B. BOTTOM PANEL(1)
E. MEDIAN PANEL(1)
F. UPPER BACK PANEL (1)
G. BOTTOM BACK PANEL (1)
H. FRONT HORIZONTAL PANEL (4)
I. FRONT LOWER PANEL (1)
J. BACK LOWER PANEL (1)
K. MIDDLE LOWER PANEL (1)
L. LEFT & RIGHT LOWER PANEL (2)

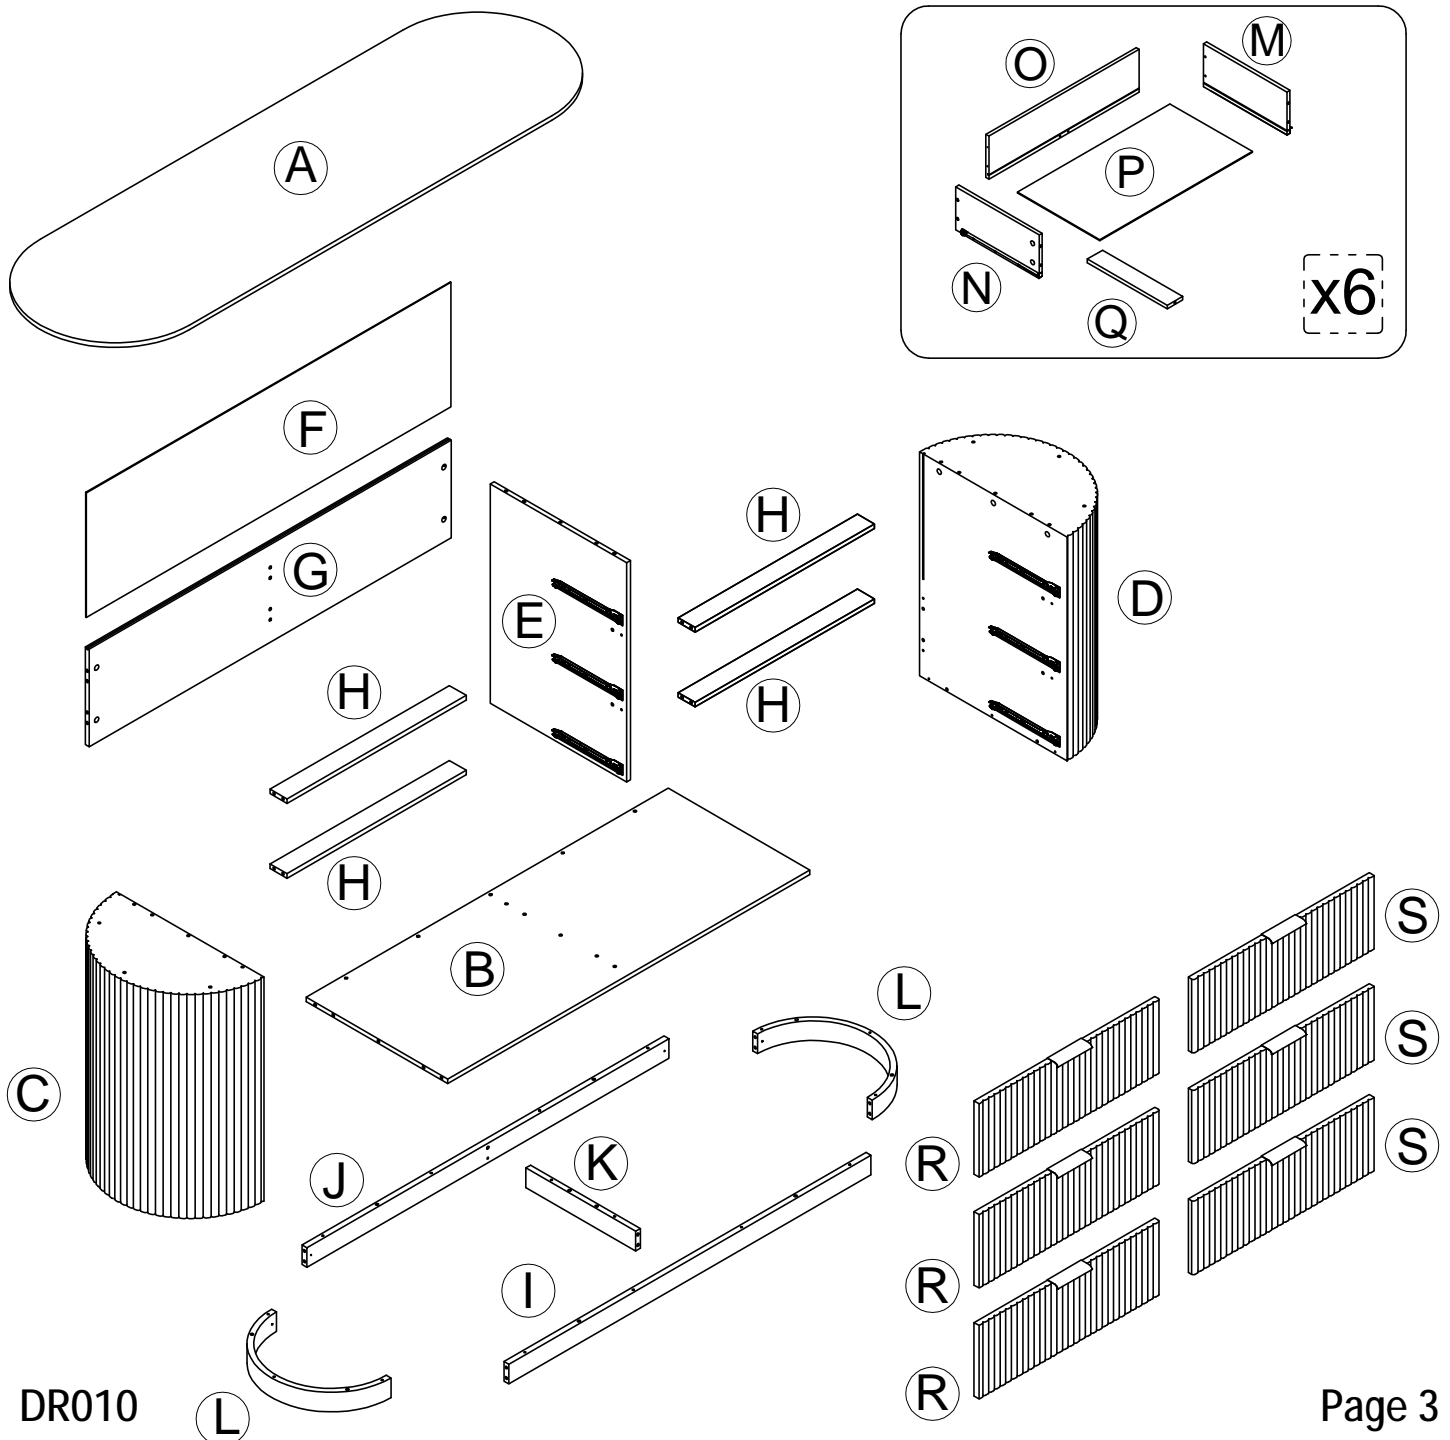


Hardware Identification


- ① KD BOLT - 59pcs
Ø6*35mm




- ② KD LARGE CAM - 29pcs
Ø15*12mm




- ③ COVER CAP - 59pcs




- ④ WOOD DOWEL - 48pcs
Ø8*30mm



- ⑤ WOOD DOWEL - 6pcs
Ø8*20mm



- ⑥ KD SMALL CAM - 30pcs
Ø15*10mm



- ⑦ SCREW - 16pcs
Ø4*50mm




- ⑧ SCREW - 36pcs
Ø4*38mm




- ⑨ SCREW - 8pcs
Ø3*17mm




- ⑩ SCREW - 20pcs
Ø3.5*12mm




- ⑪ BLACK HANDLE - 6pcs

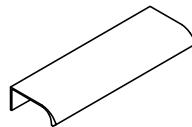


- ⑫ GOLD HANDLE - 6pcs

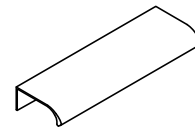


- ⑬ PLASTIC WEDGE - 8pcs
16*16.5*10.5mm




- ⑭ I BRACKET - 4pcs




- ⑮ STRAPS - 2pcs
25*150mm

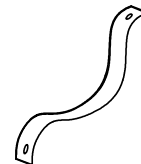


- ⑯ PLASTIC WEDGE - 2pcs
8*30mm



- ⑰ SCREW - 2pcs
Ø4*25mm



- ⑱ SCREW - 2pcs
Ø4*18mm



Hardware Identification


19 SCREW - 8pcs
Ø6*50mm




20 LOCK - 1pc




21 L BRACKET - 2pcs

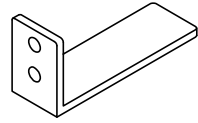


22 SCREW - 4pcs
Ø4*15mm



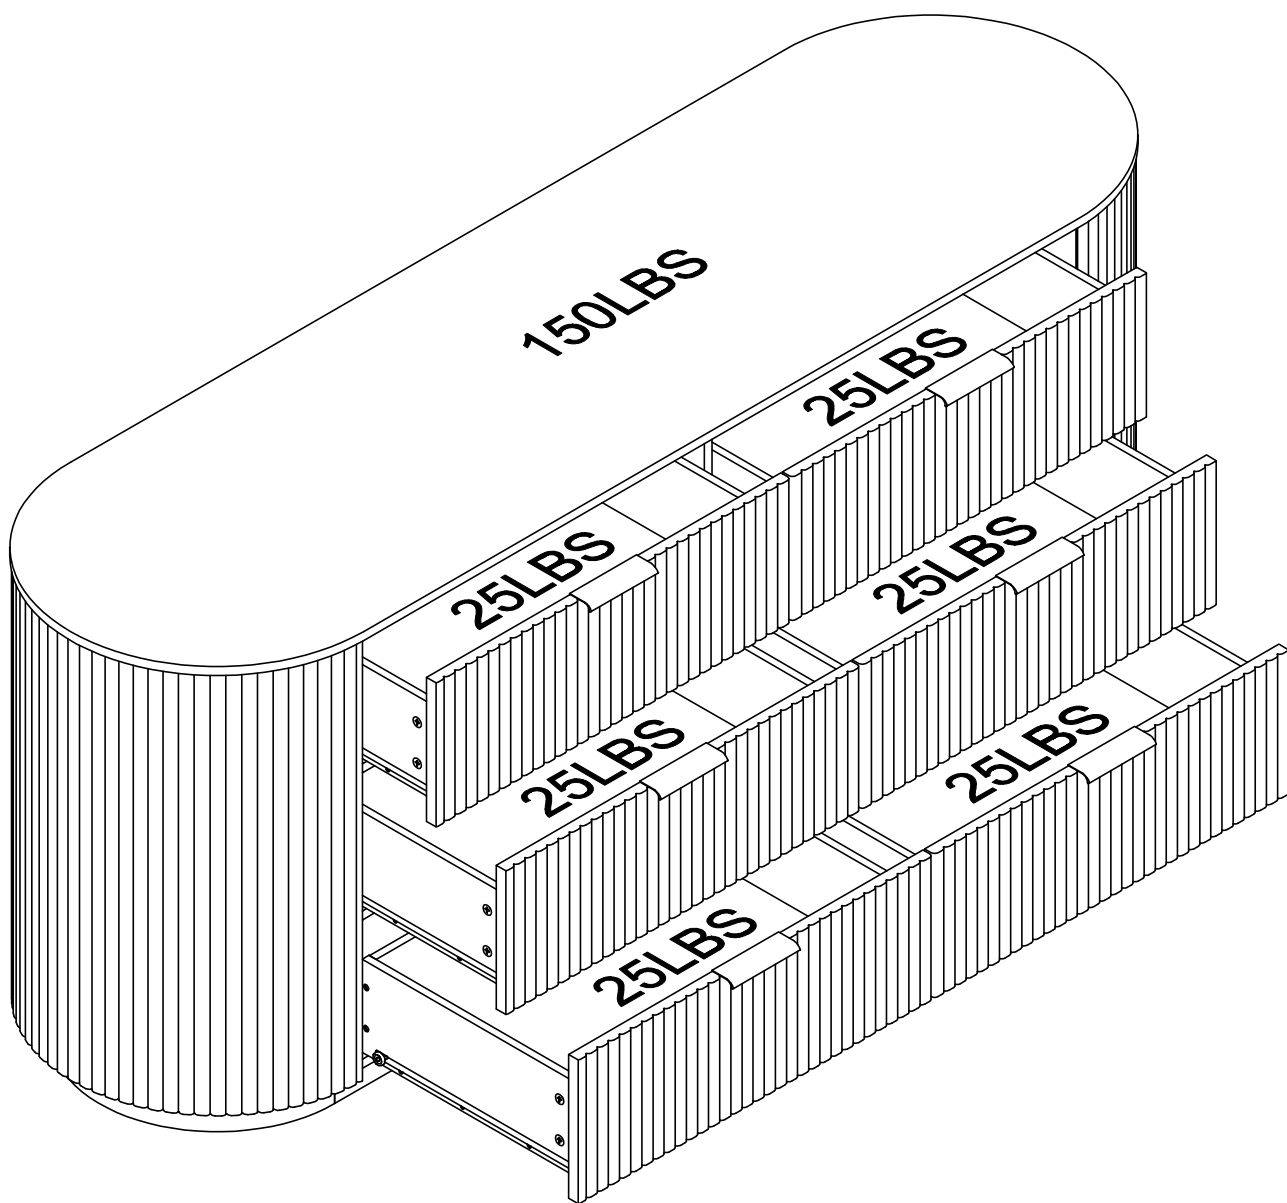


Step 1:

* Insert Nine KD BOLT (1) to the TOP PANEL (A)

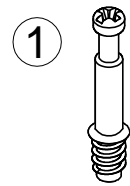


(9 PCS)

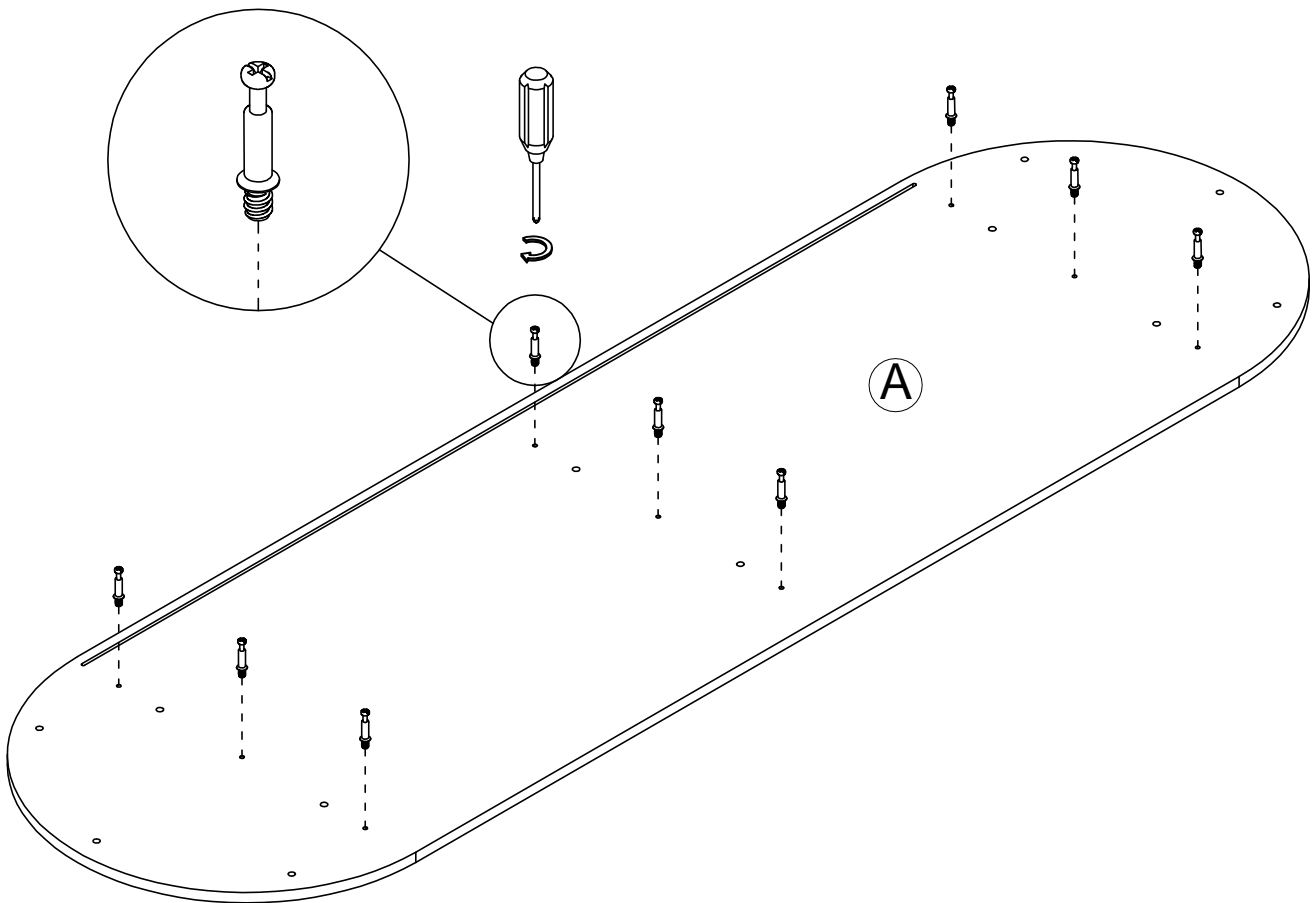


Step 2:

* Insert fourteen KD BOLT (1) to the LEFT FRAME (C) and RIGHT FRAME (D)

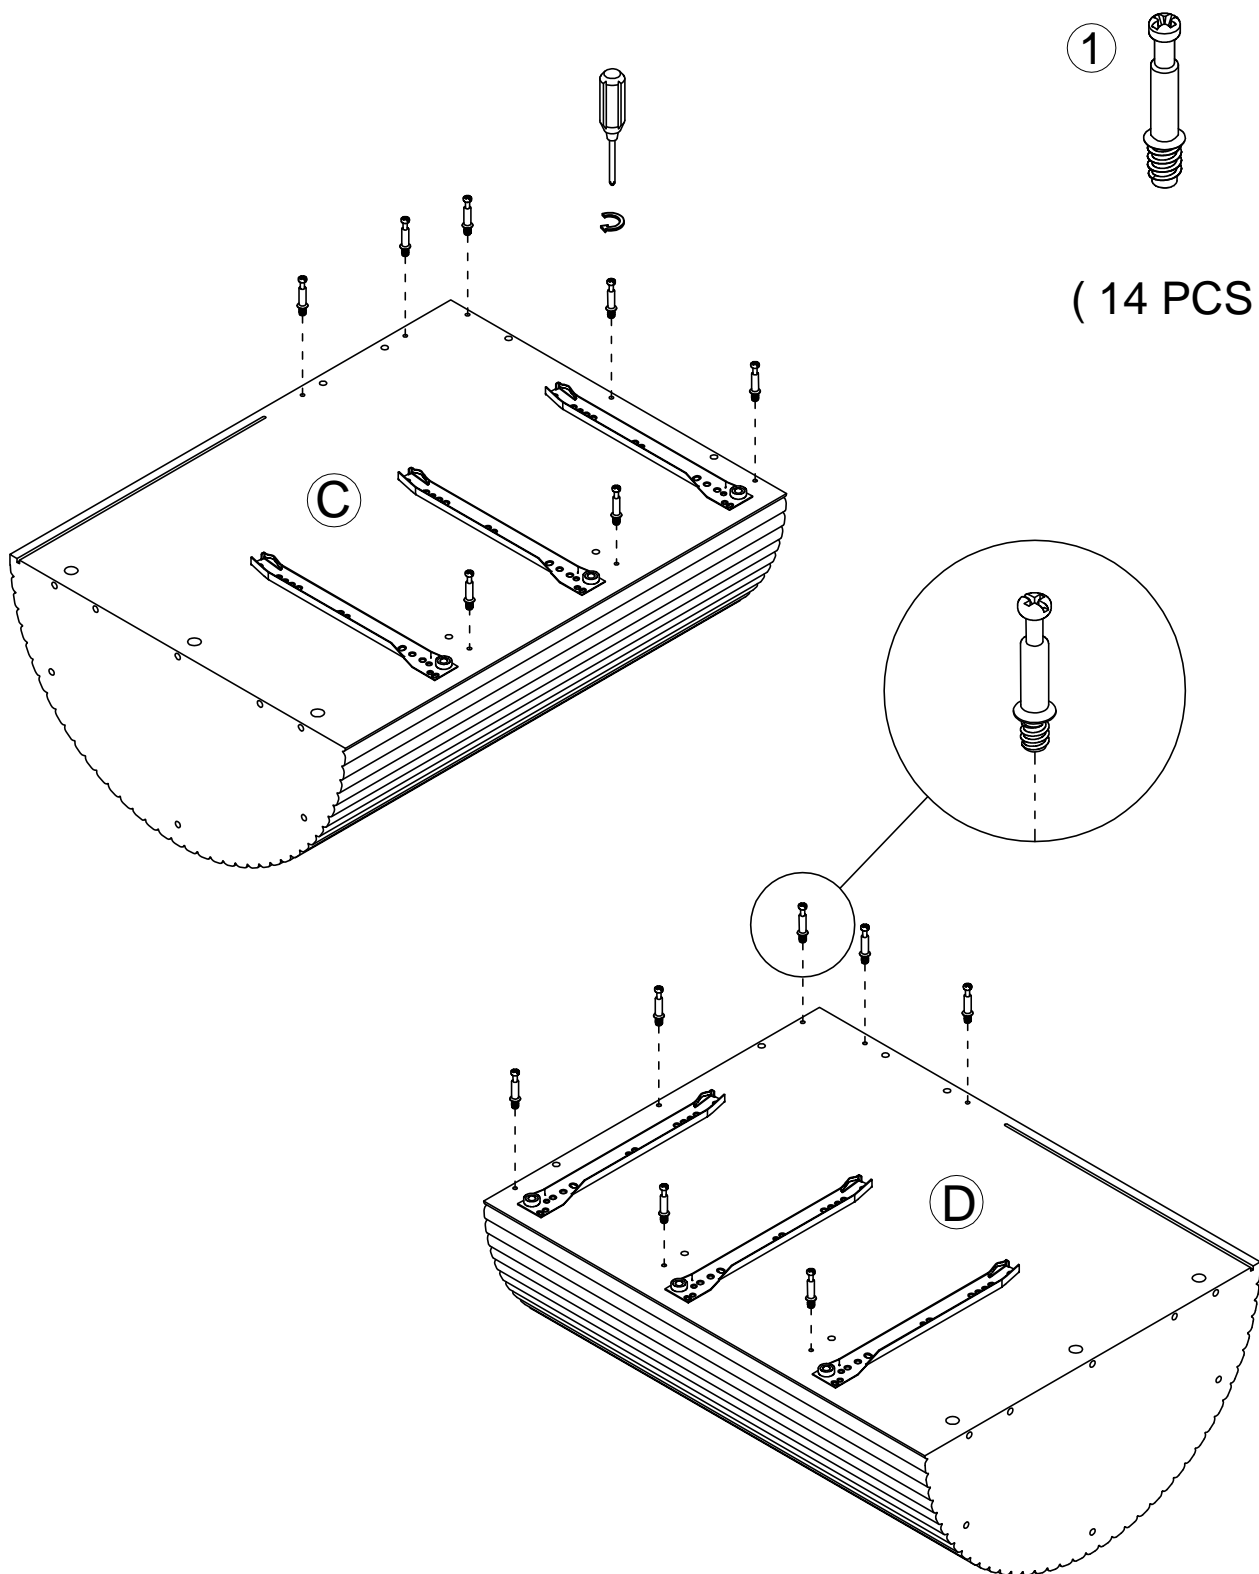

Step 3:


* Insert Four KD BOLT (1) to the MEDIAN PANEL (E)

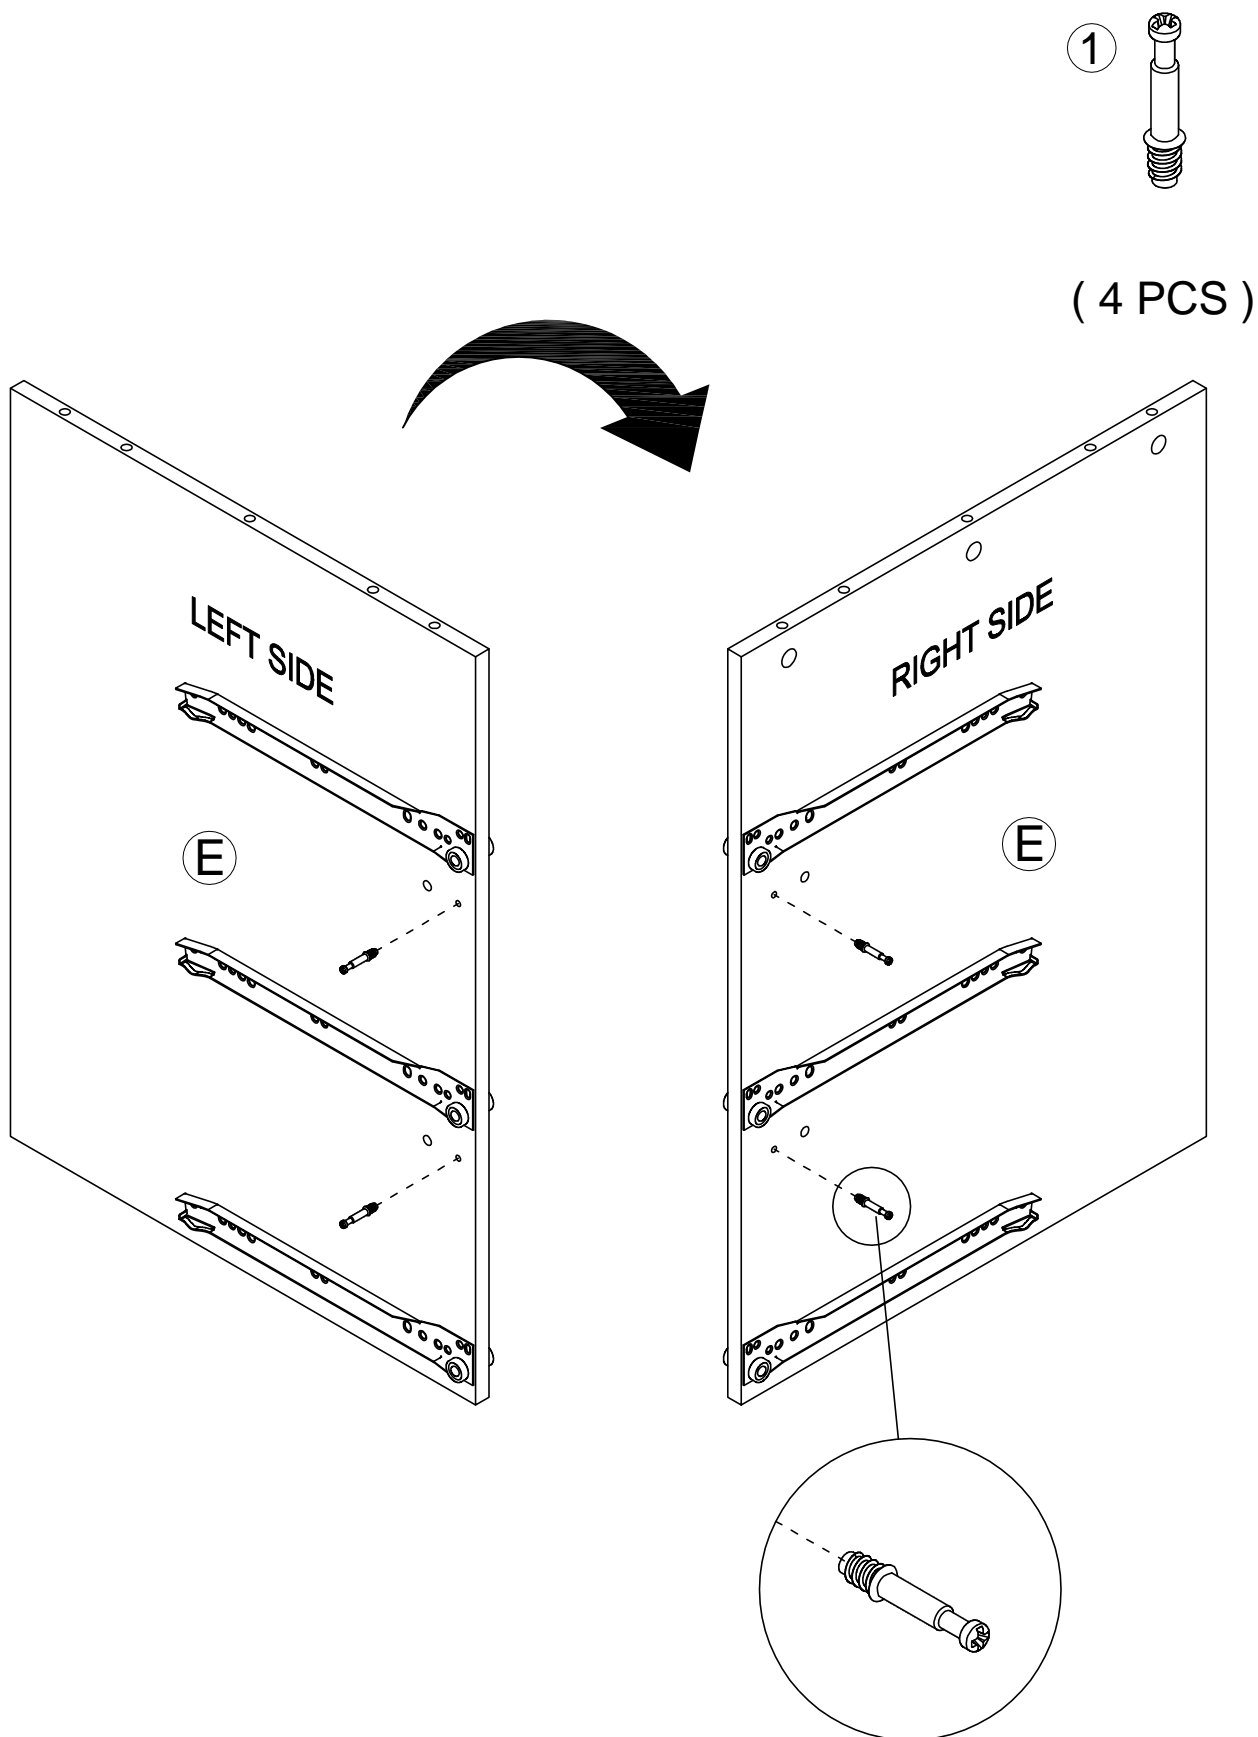

Step 4:


* Attach the FRONT HORIZONTAL PANEL (H) to the LEFT FRAME (C) by the Two KD LARGE CAM (2) , Two COVER CAP (3) and Two WOOD DOWEL (4)

②




(2 PCS)

③




(2 PCS)

④




(2 PCS)

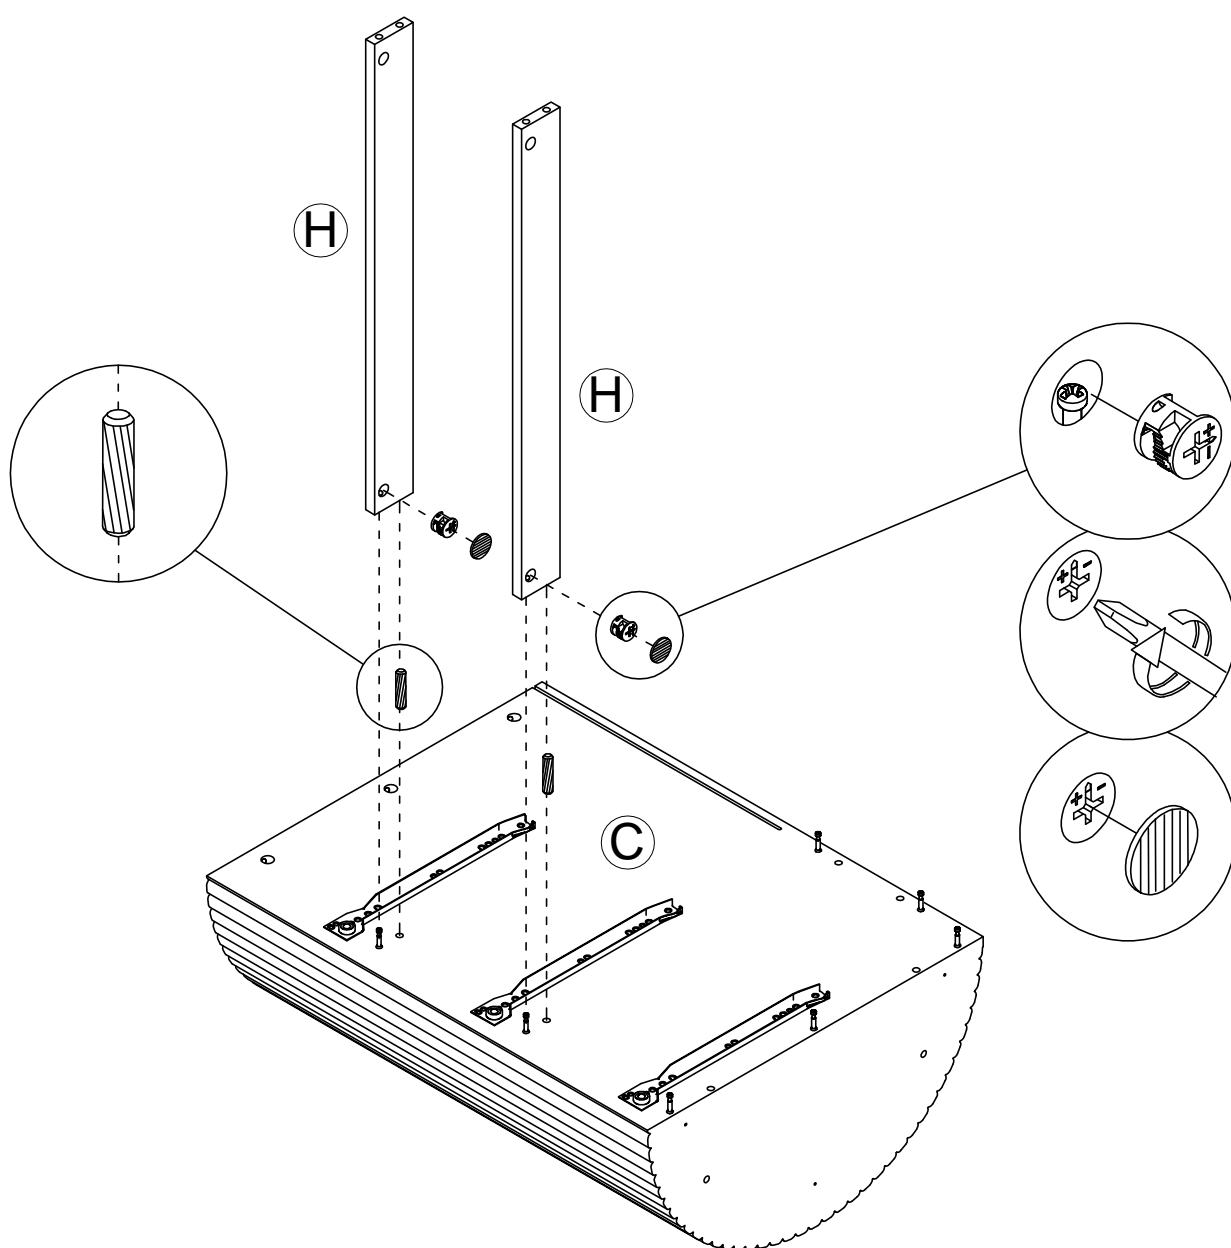



Step 5:

* Attach the FRONT HORIZONTAL PANEL (H) to the RIGHT FRAME (D) by the Two KD LARGE CAM (2) , Two COVER CAP (3) and Two WOOD DOWEL (4)

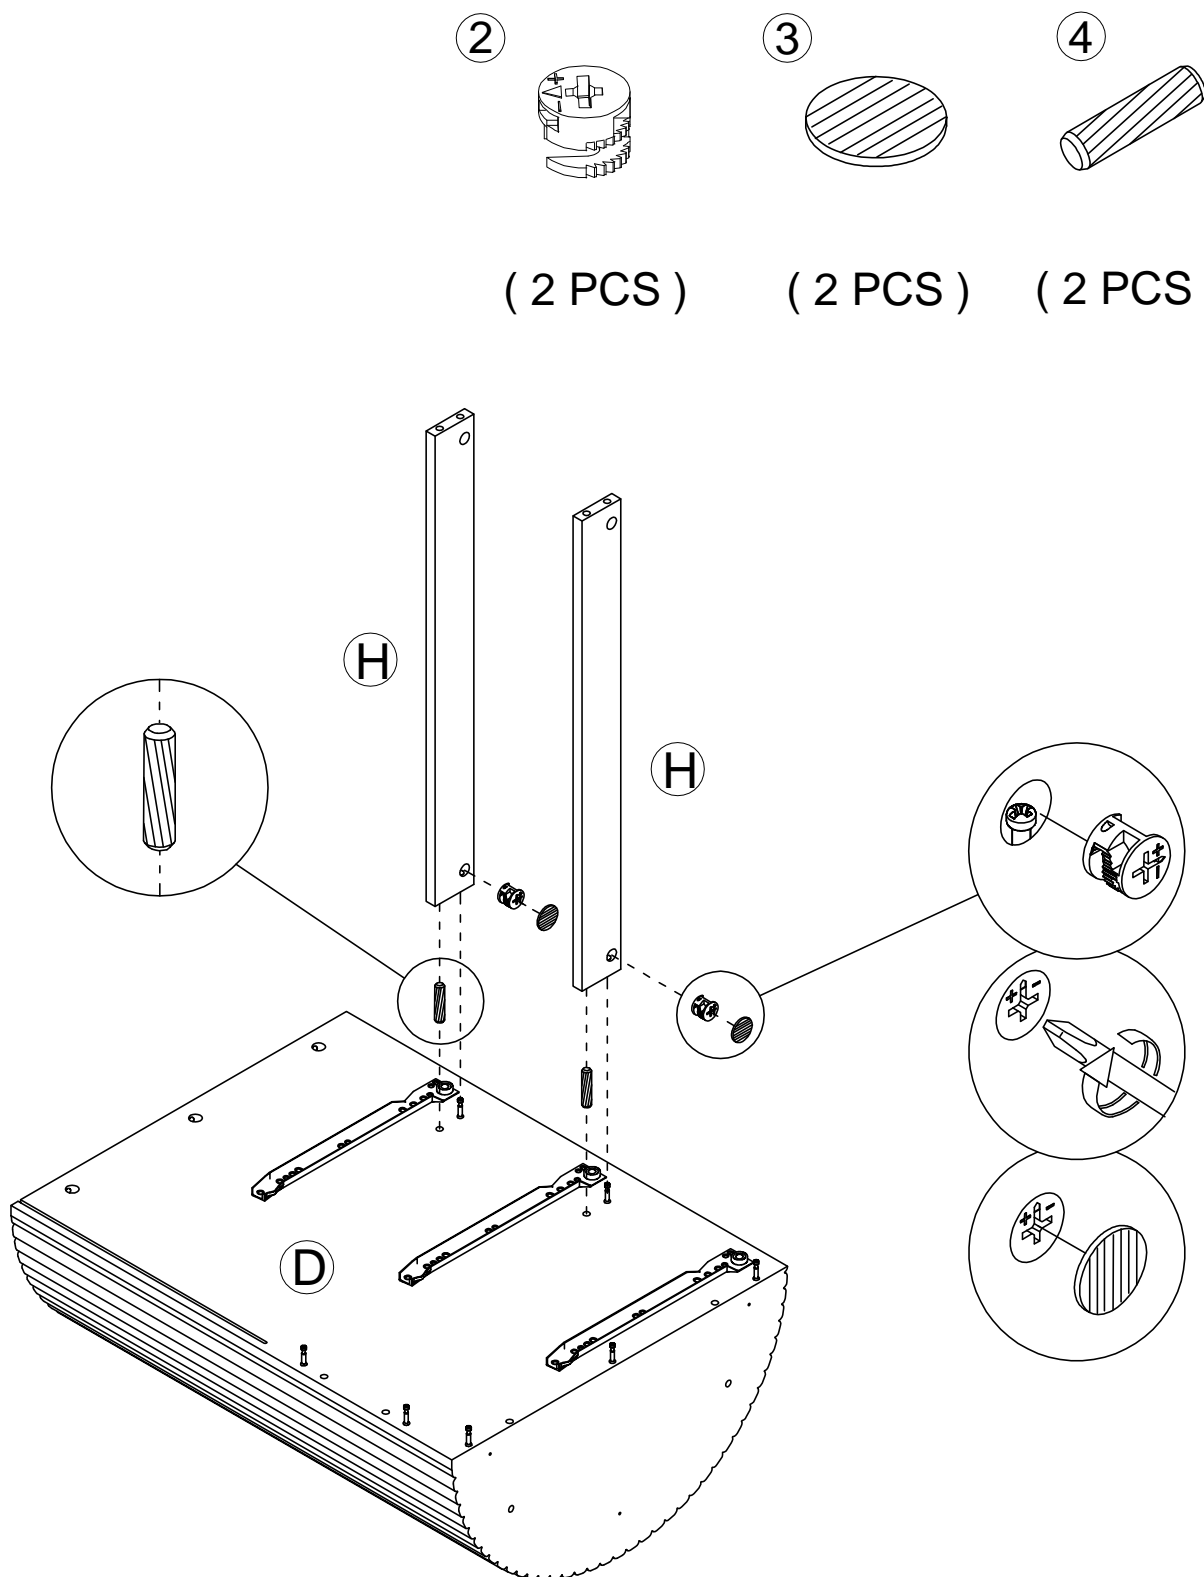


Step 6:

* Use LOCK (20) attach the BOTTOM BACK PANEL (G) to the MEDIAN PANEL (E) by the Two WOOD DOWEL (4) and Two SCREW (19)

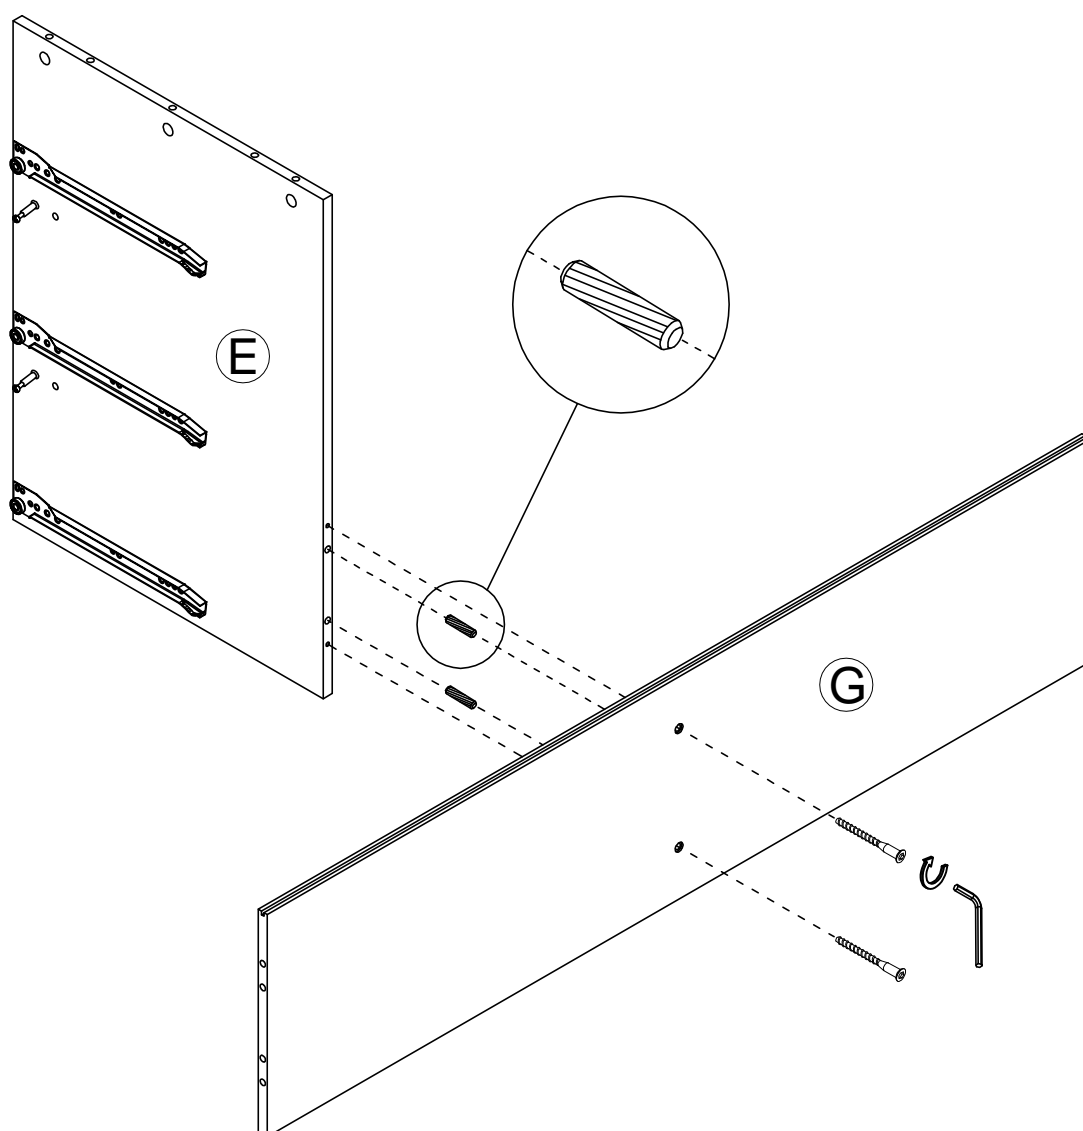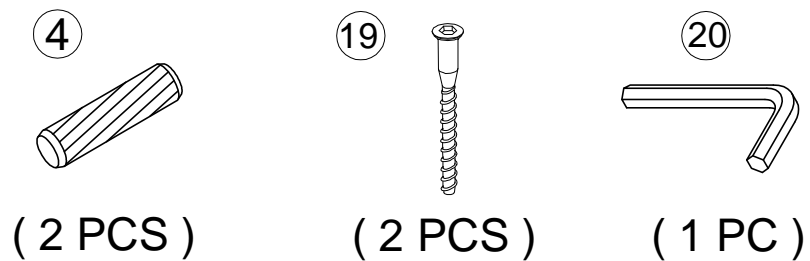


Step 7:


* Use LOCK (20) attach the BOTTOM PANEL (B) to the MEDIAN PANEL (E) & BOTTOM BACK PANEL (G) by the four WOOD DOWEL (4) and six SCREW (19)

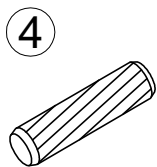


(4 PCS)

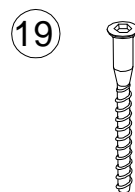

(6 PCS)

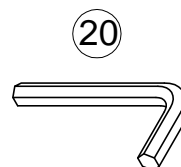

(1 PC)

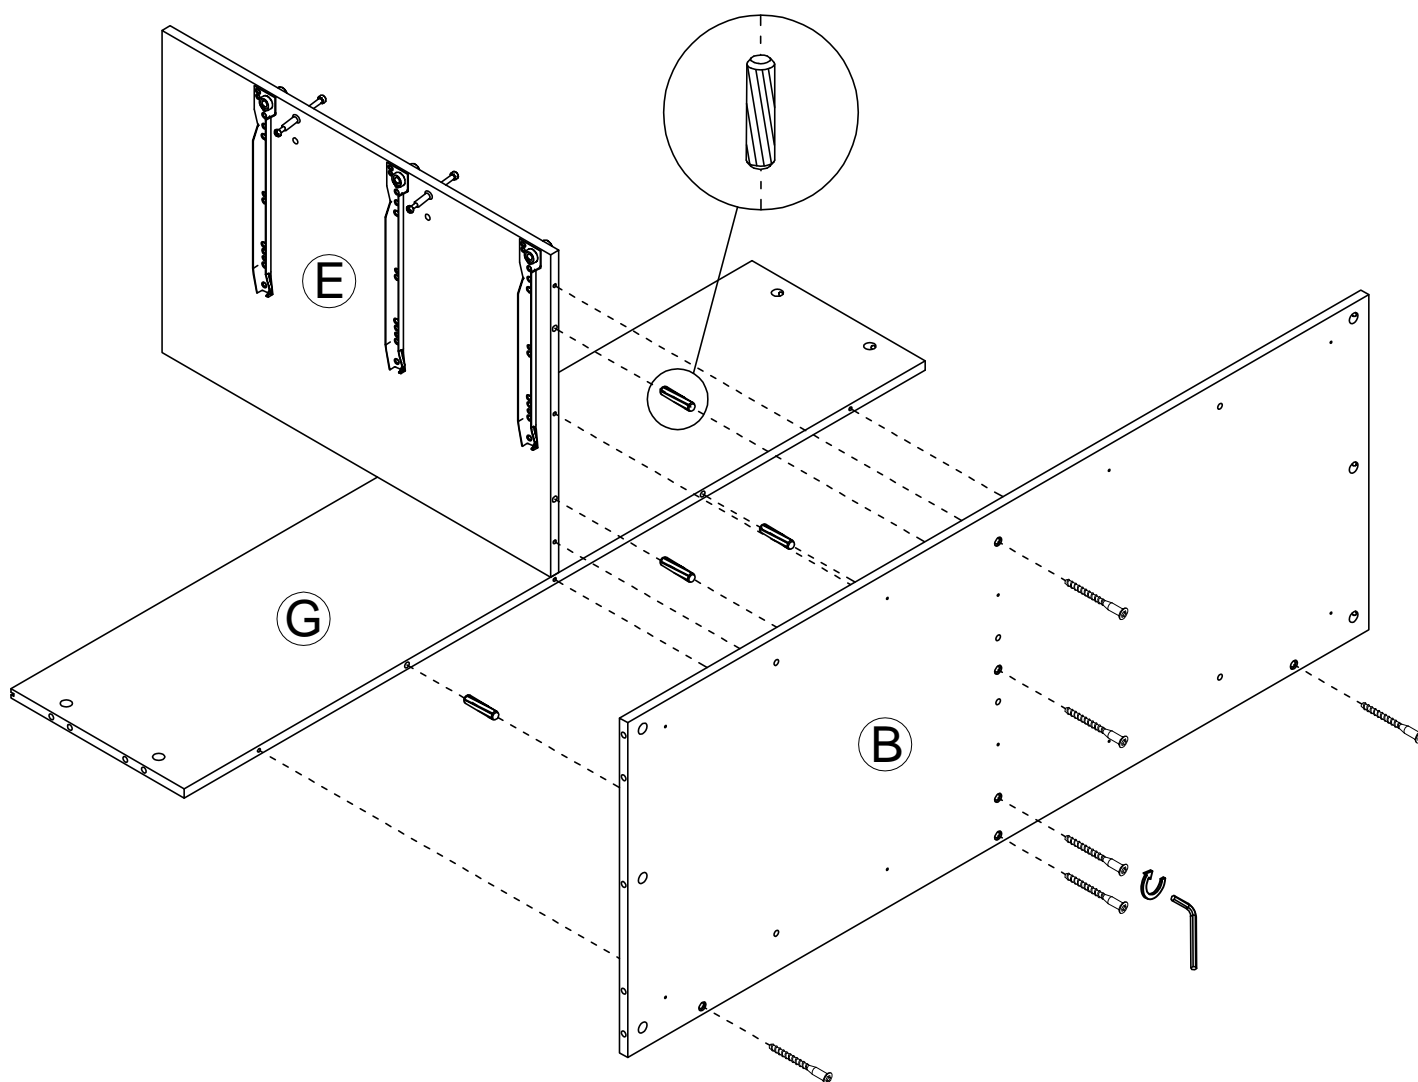


Step 8:

* Install module at step 4 and module at step 7 by the seven KD LARGE CAM (2), seven COVER CAP (3) and six WOOD DOWEL (4)




②




(7 PCS)

③




(7 PCS)

④



(6 PCS)

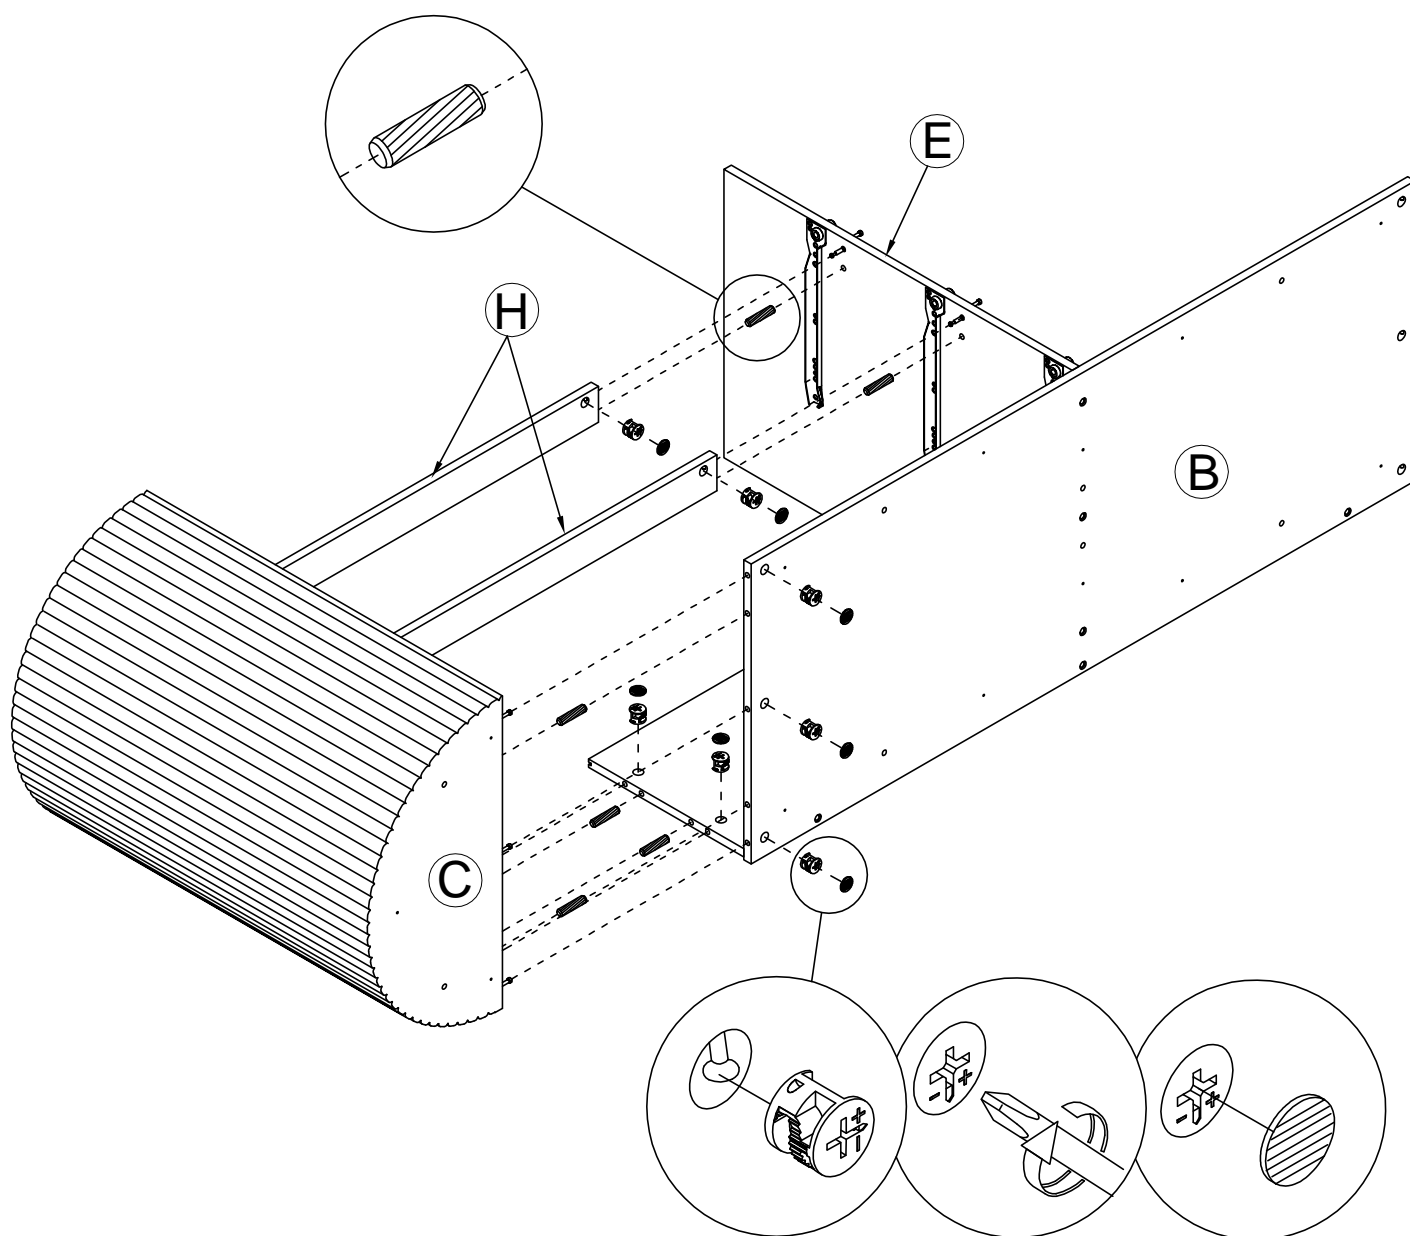


Step 9:

* Install module at step 5 and module at step 8 by the seven KD LARGE CAM (2) , seven COVER CAP (3) and six WOOD DOWEL (4)




②




(7 PCS)

③




(7 PCS)

④




(6 PCS)

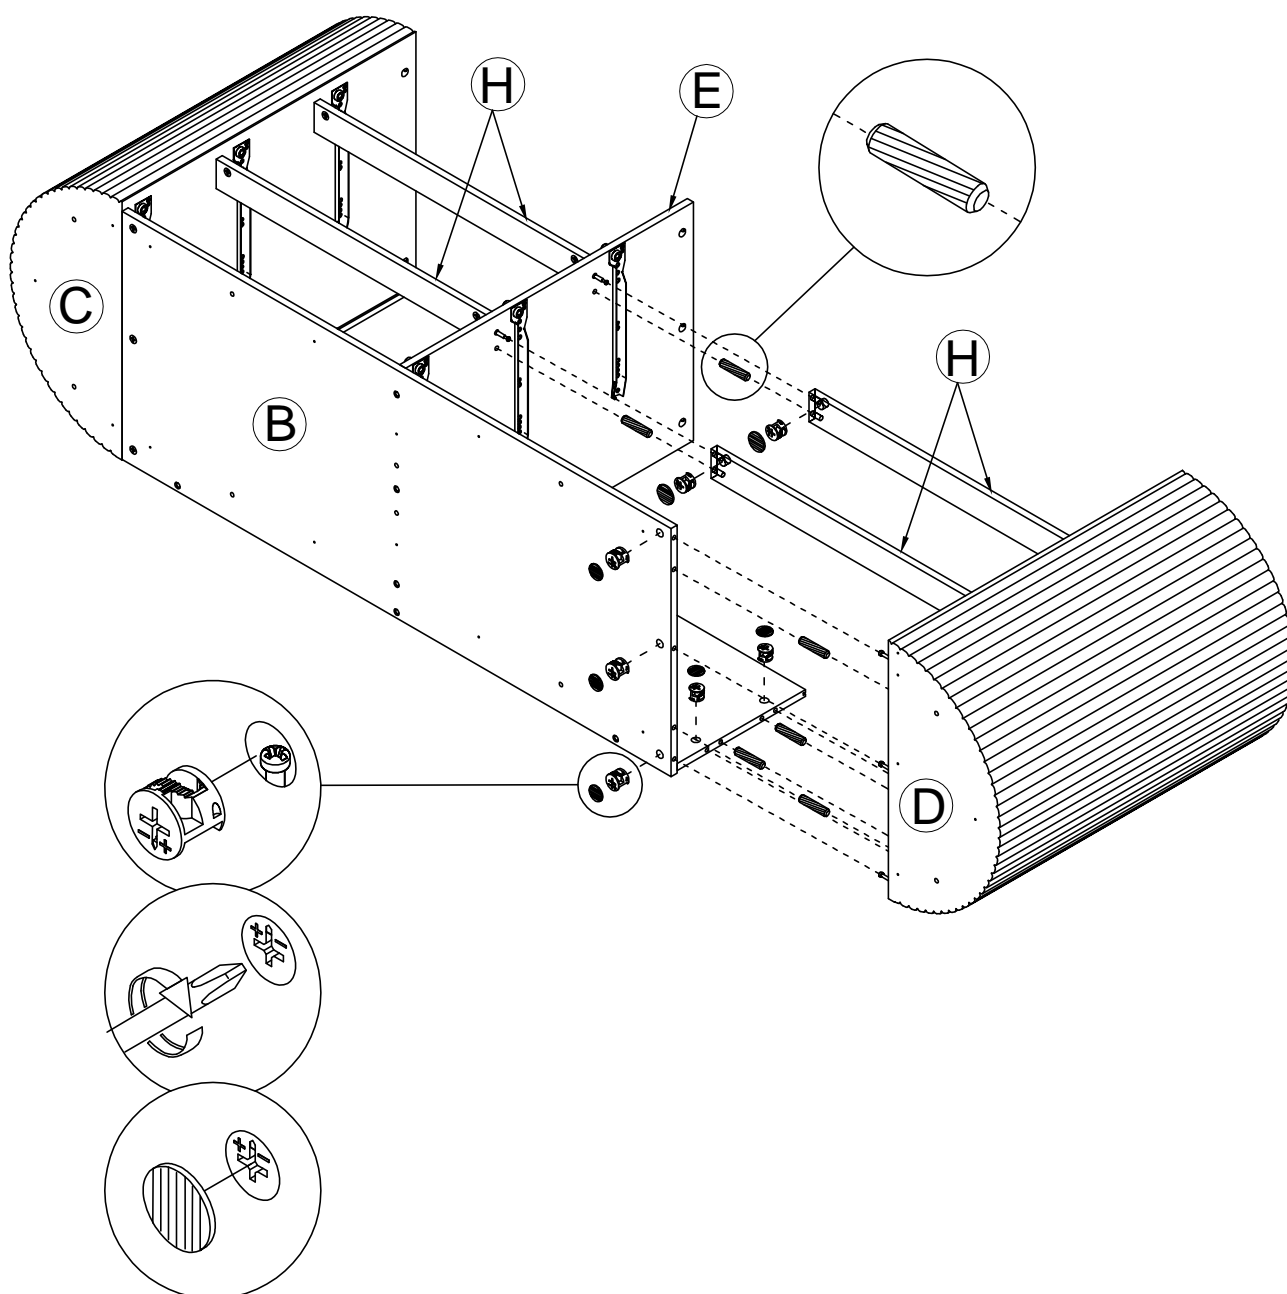

Step 10:

* Insert the UPPER BACK PANEL (F) to the stand.

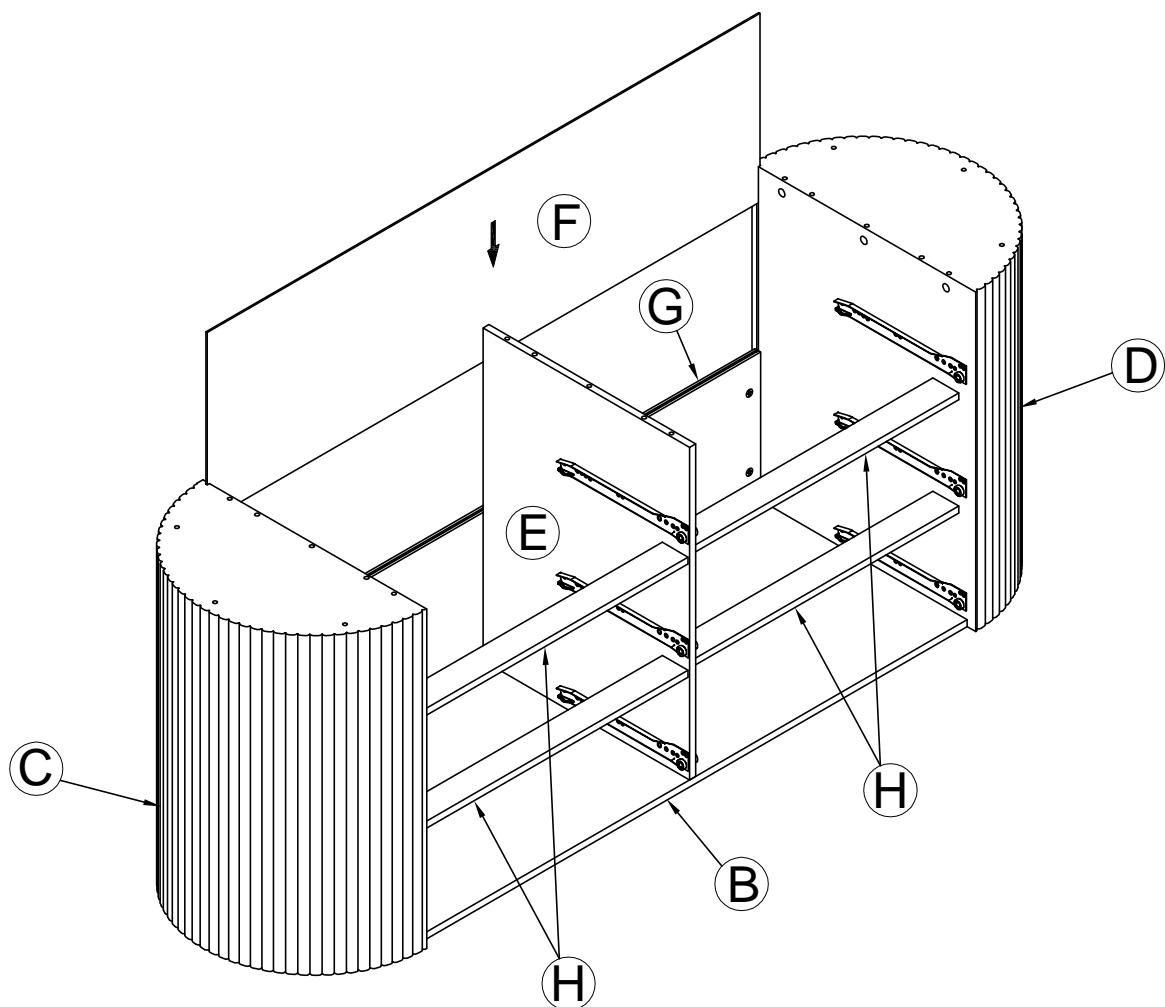


Step 11:

* Attach the TOP PANEL (A) to the MEDIAN PANEL (E), LEFT FRAME (C), RIGHT FRAME (D) by the nine KD LARGE CAM (2), nine COVER CAP (3), Six WOOD DOWEL (4) and Six WOOD DOWEL (5)




②




(9 PCS)

③




(9 PCS)

④




(6 PCS)

⑤





(6 PCS)

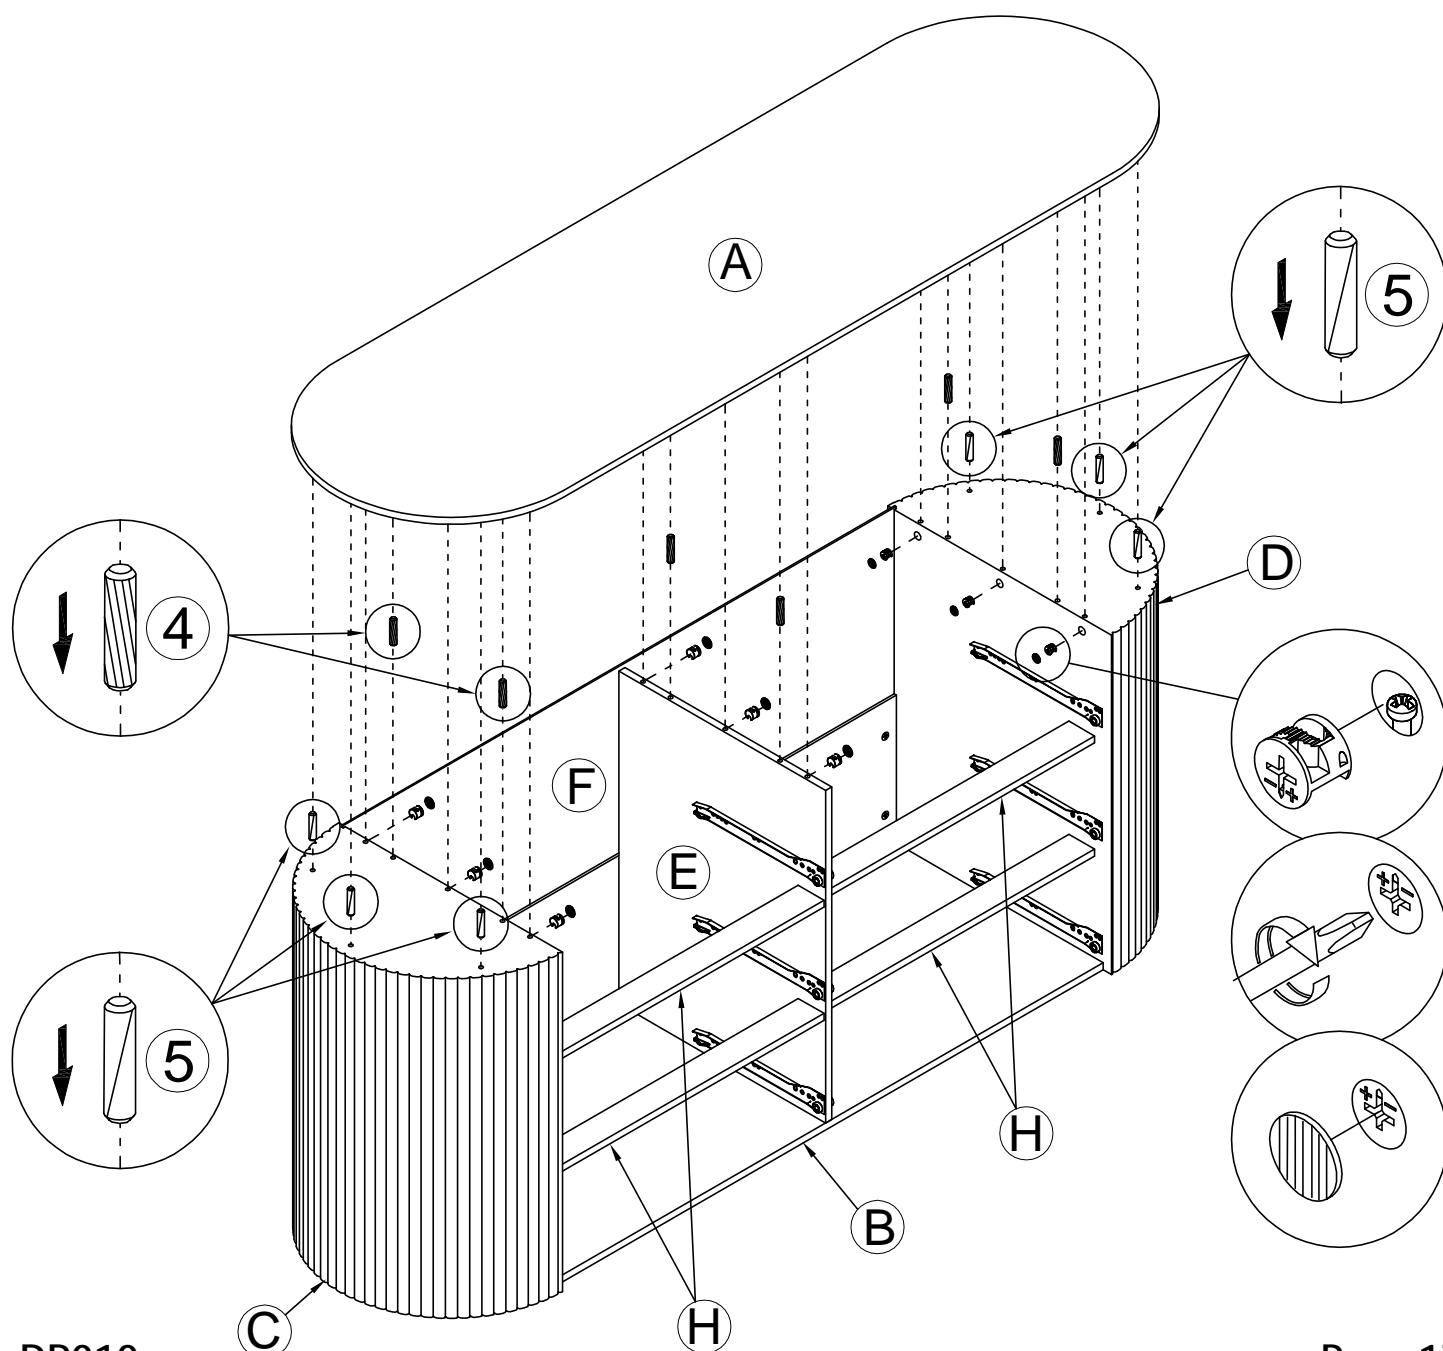

Step 12:


* Insert Two KD BOLT (1) to the FRONT LOWER PANEL (I)
& BACK LOWER PANEL (J)

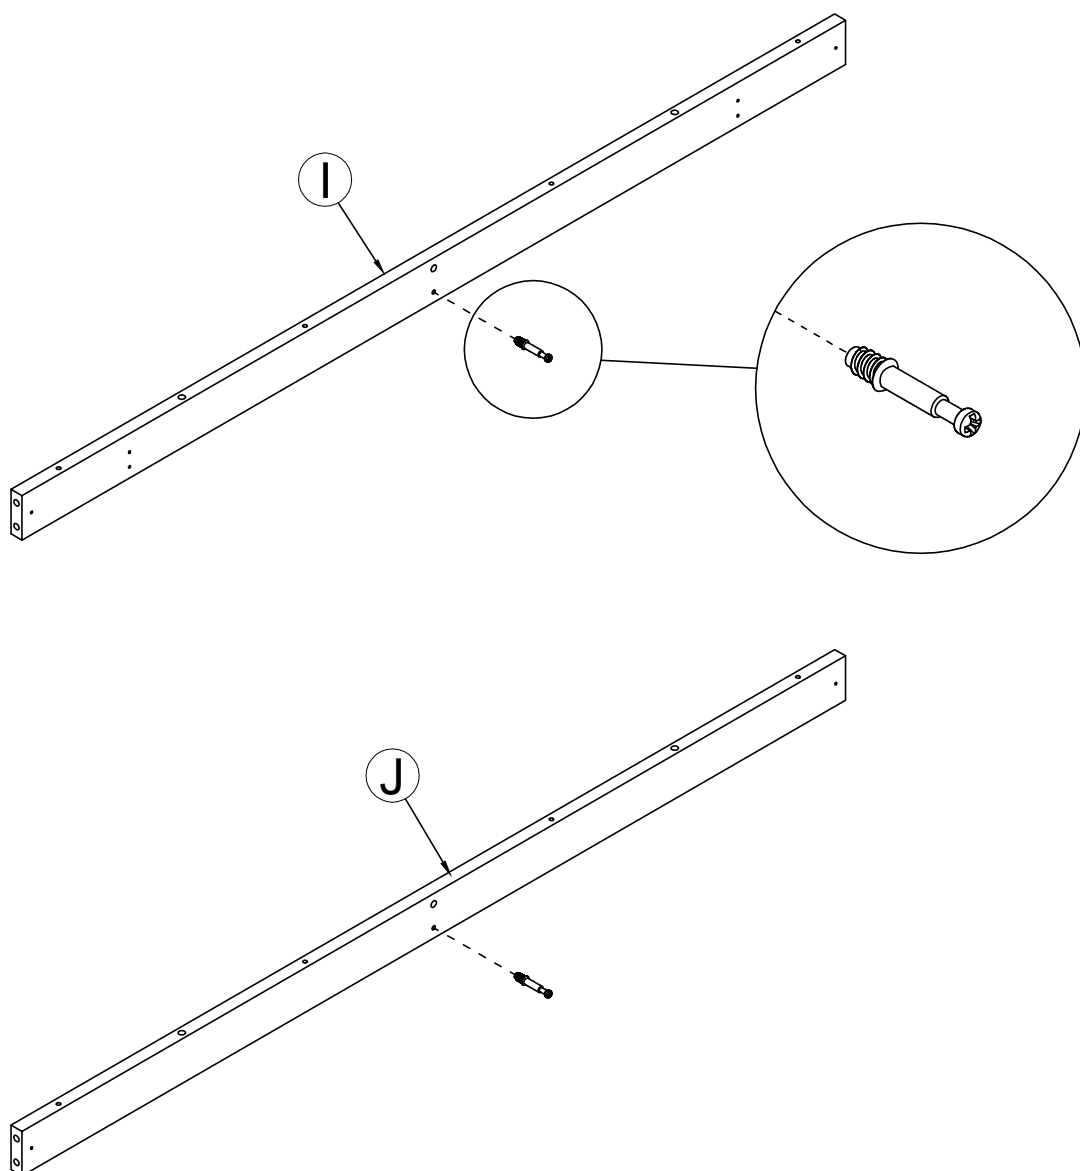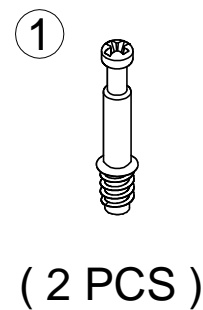

Step 13:


* Attach the MIDDLE LOWER PANEL (K) to the FRONT LOWER PANEL (I) & BACK LOWER PANEL (J) by the Two KD LARGE CAM (2), Two COVER CAP (3), Two WOOD DOWEL (4)

②




(2 PCS)

③




(2 PCS)

④




(2 PCS)

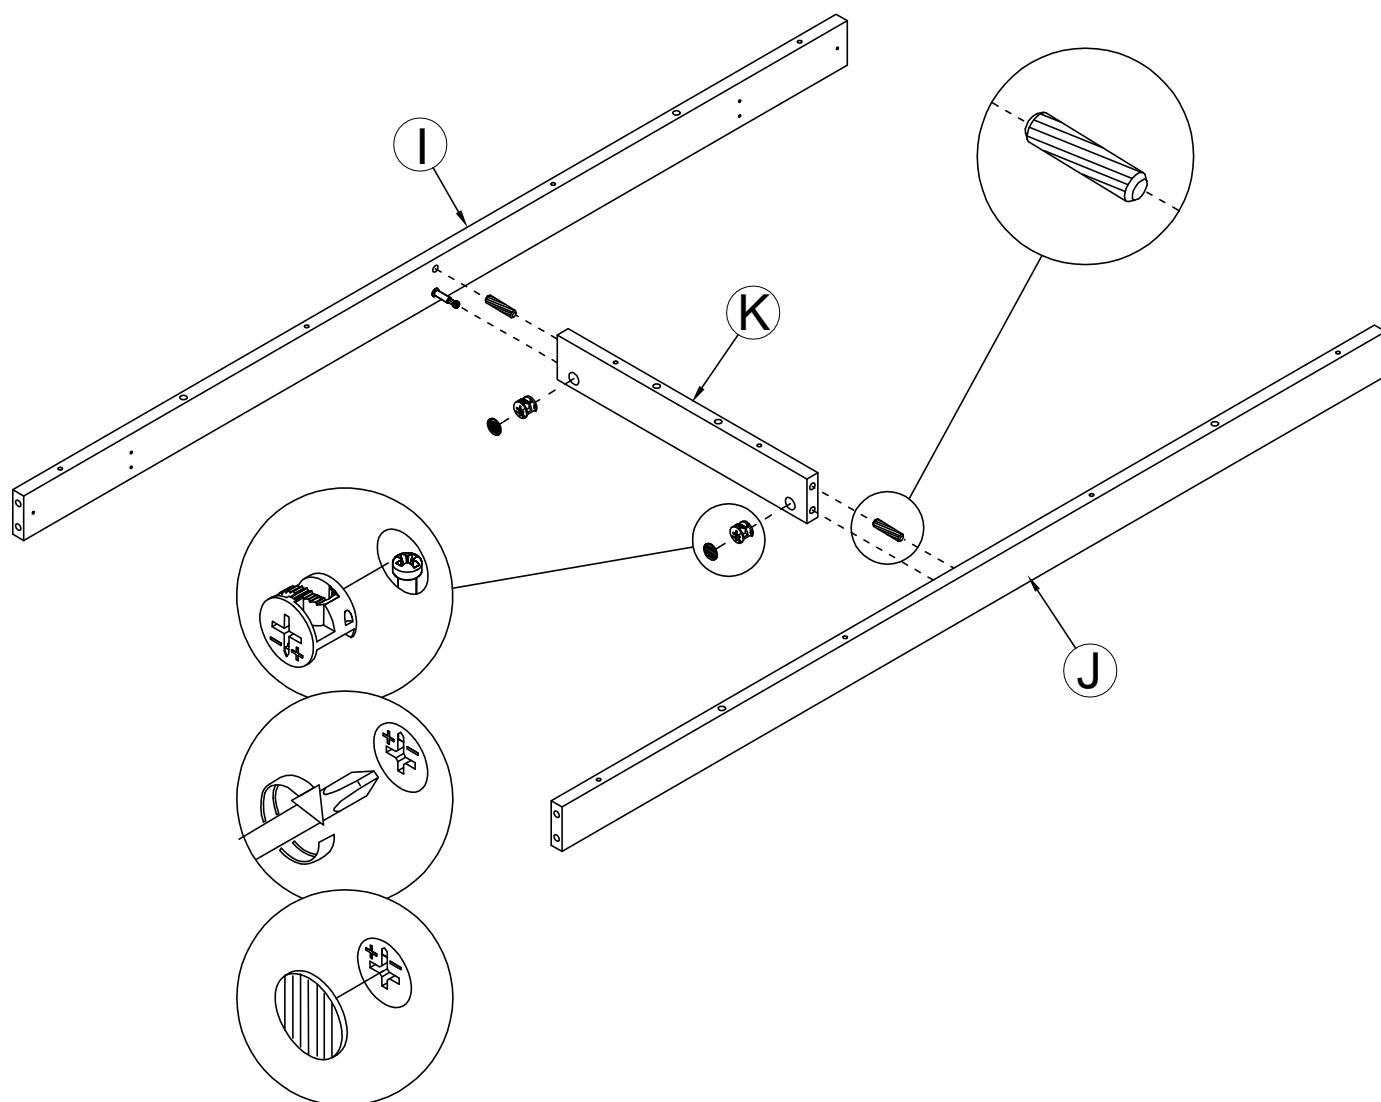

Step 14:

* Attach the LEFT & RIGHT LOWER PANEL (L) to the MODULE step 13 by the Eight WOOD DOWEL (4) and Four I BRACKET (14), Eight SCREW (10)

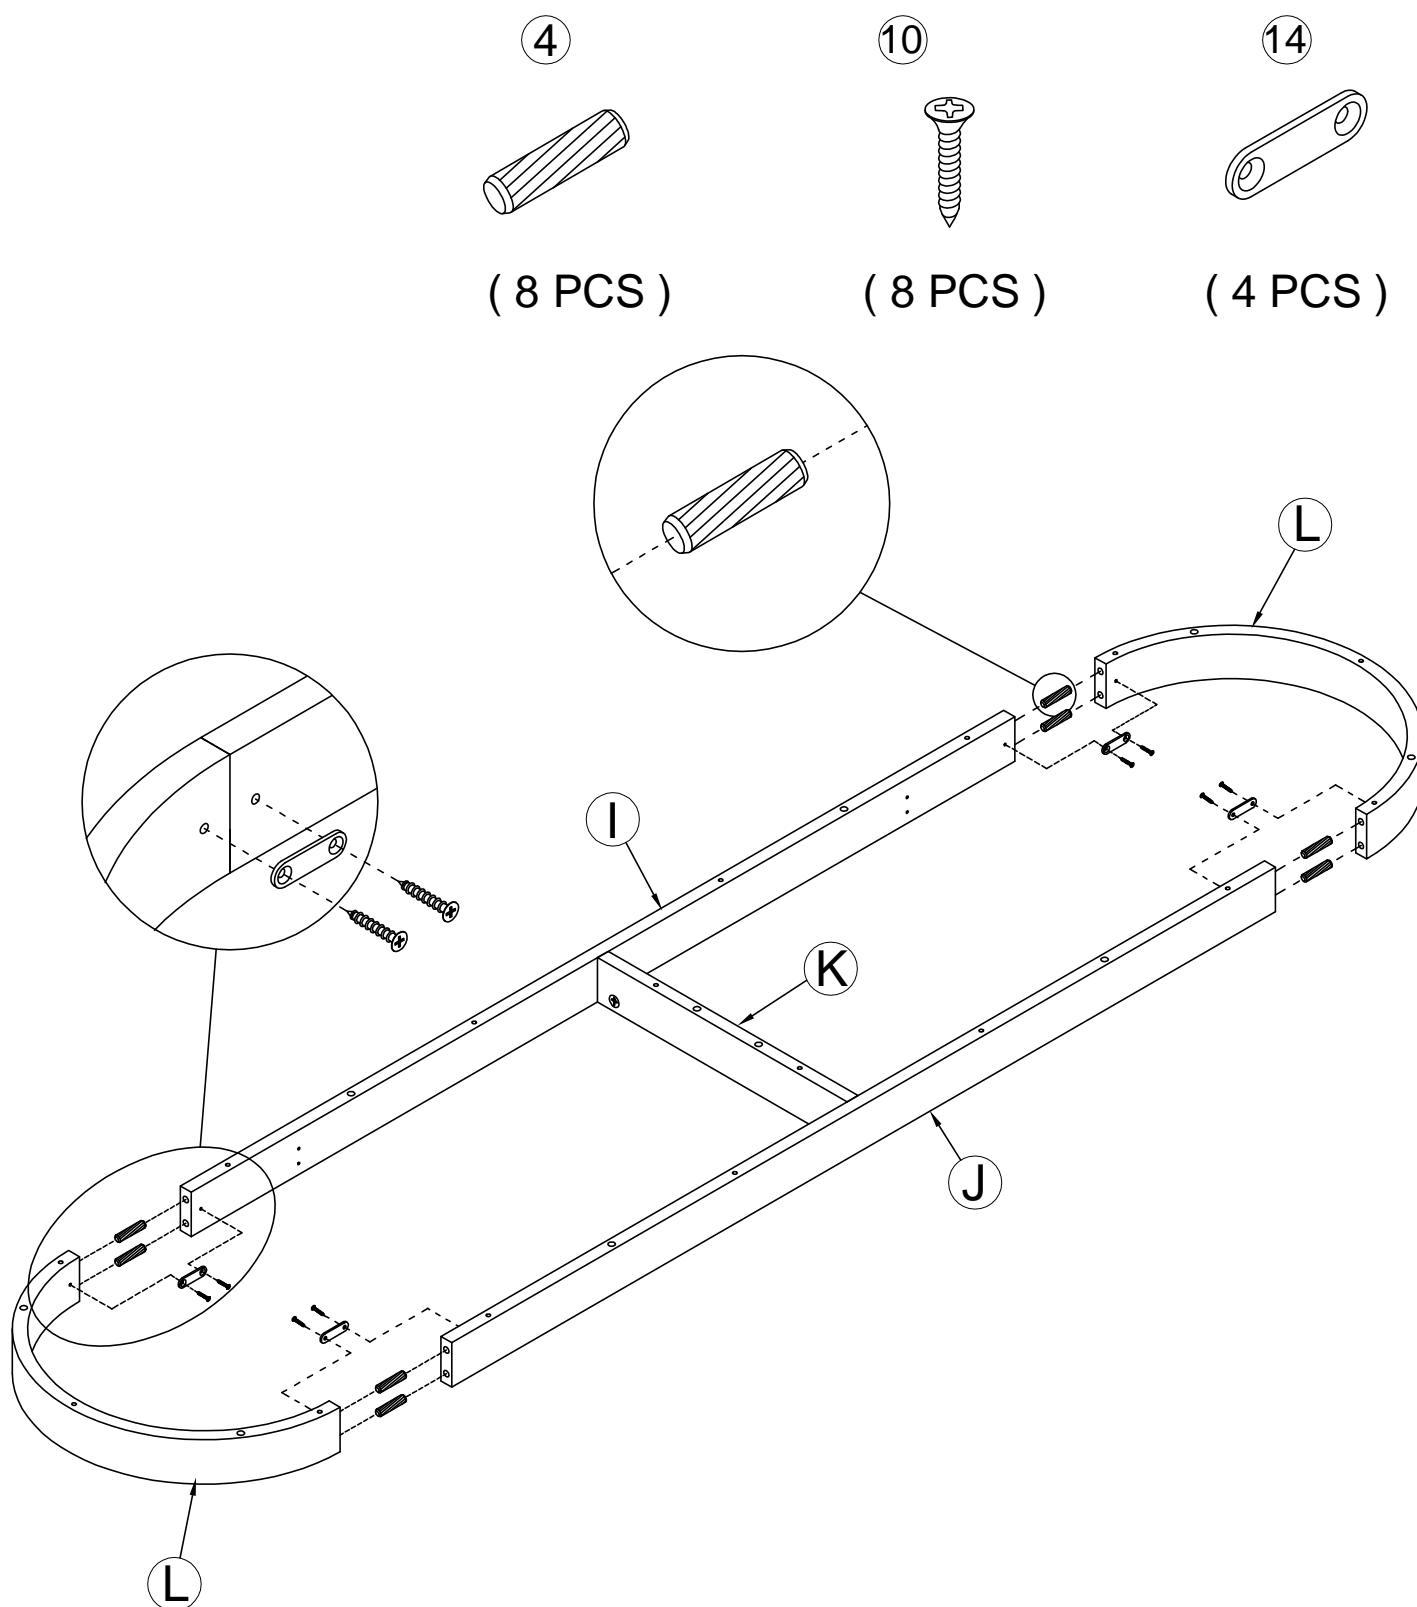


Step 15:

* Install module at step 14 to the LEFT FRAME (C), RIGHT FRAME (D) and BOTTOM PANEL (B) by the sixteen SCREW (7) and Ten WOOD DOWEL (4)



④




(10 PCS)

⑦




(16 PCS)

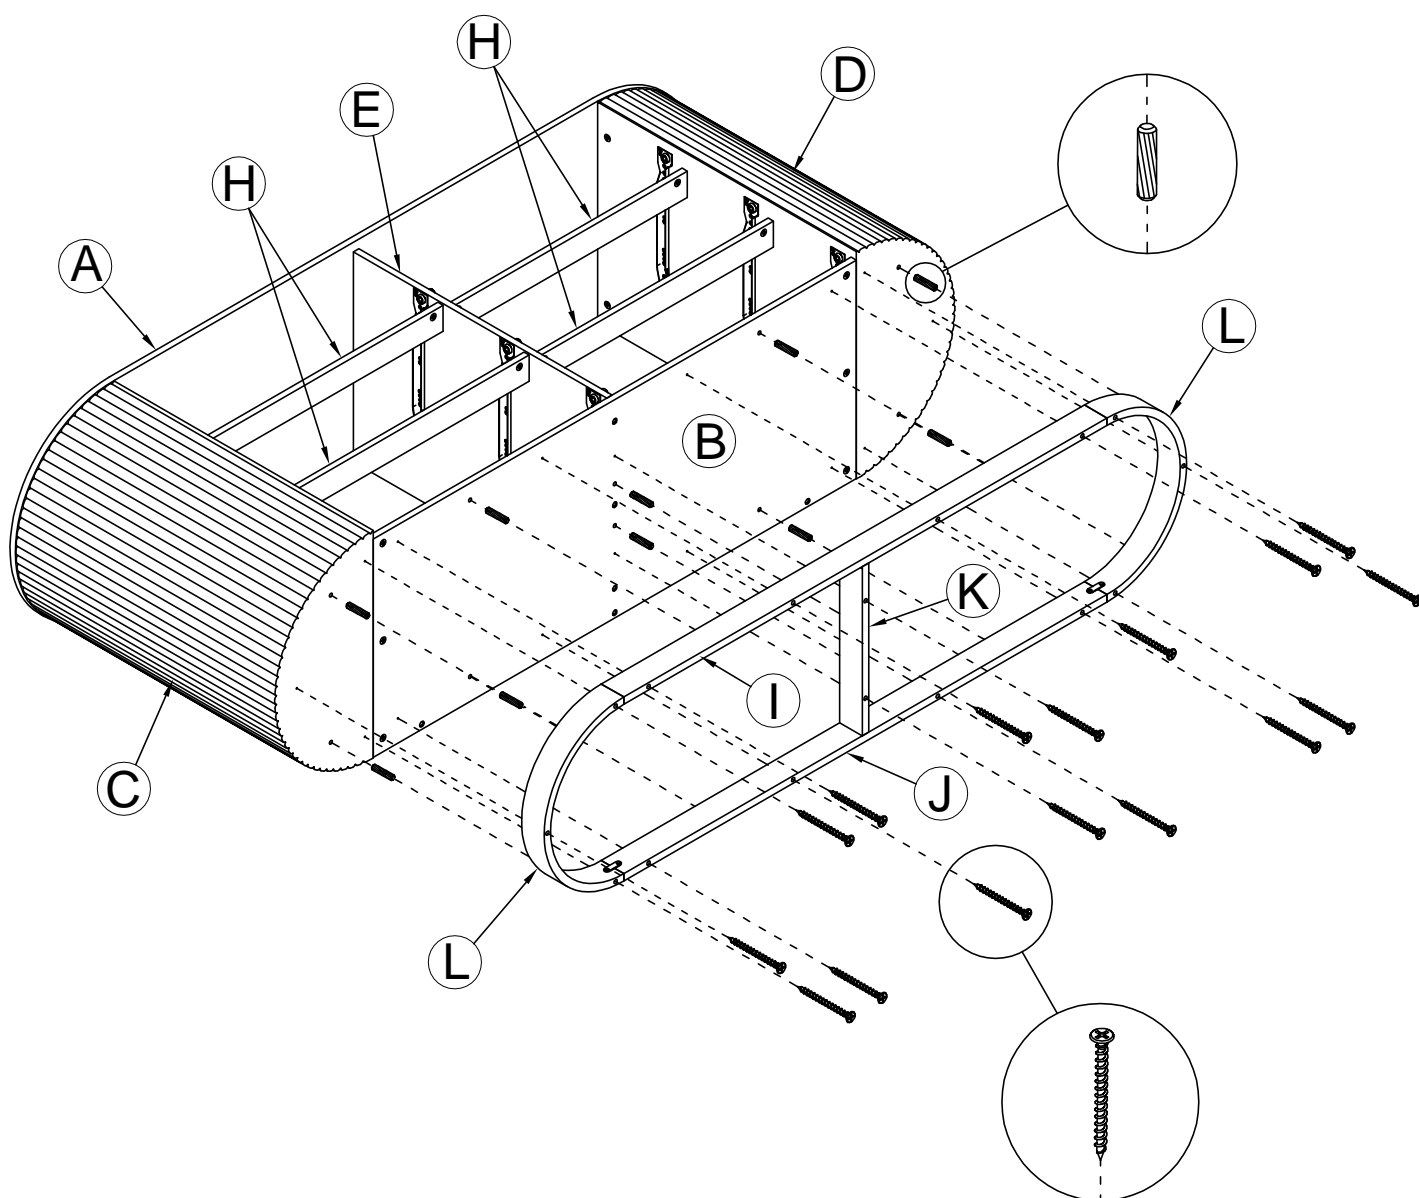

Step 16:


- * Insert two L BRACKET (21) to the FRONT LOWER PANEL (I)
by the four SCREW (22)

21

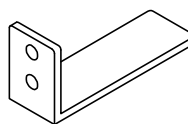


(2 PCS)

22




(4 PCS)

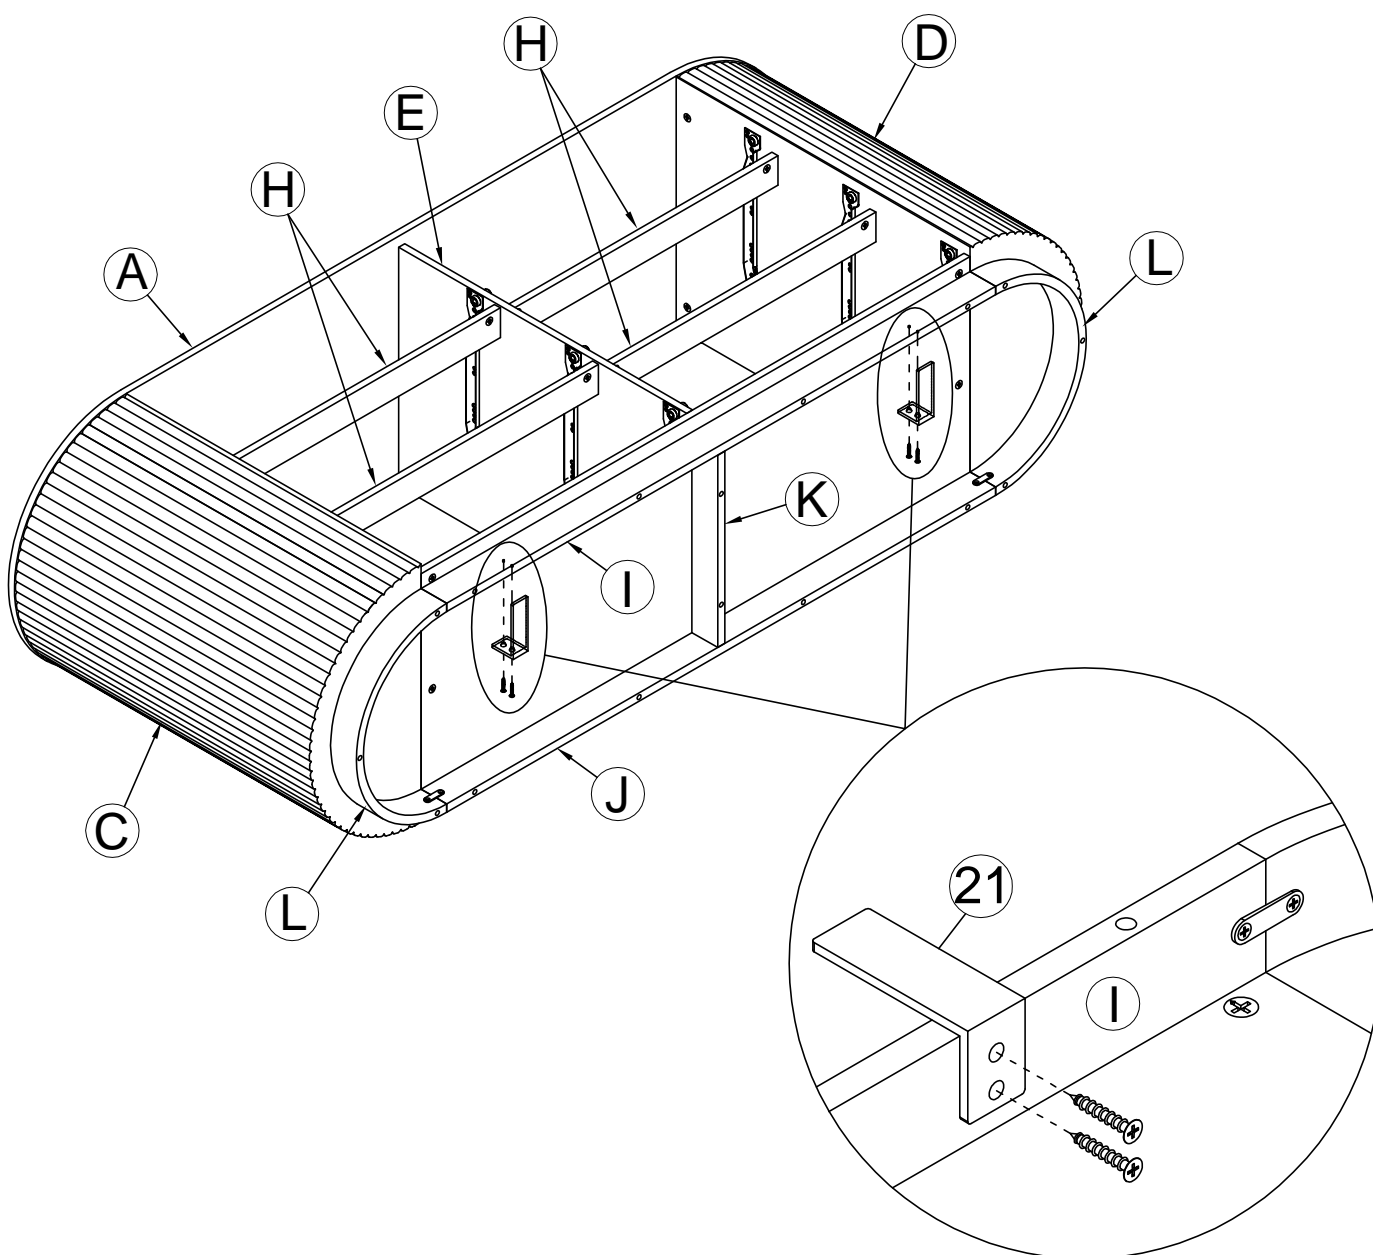


Step 17:

* Assemble the DRAWER BACK PANEL (O) to the DRAWER LEFT PANEL (N) and DRAWER RIGHT PANEL (M) by the SCREW (8)

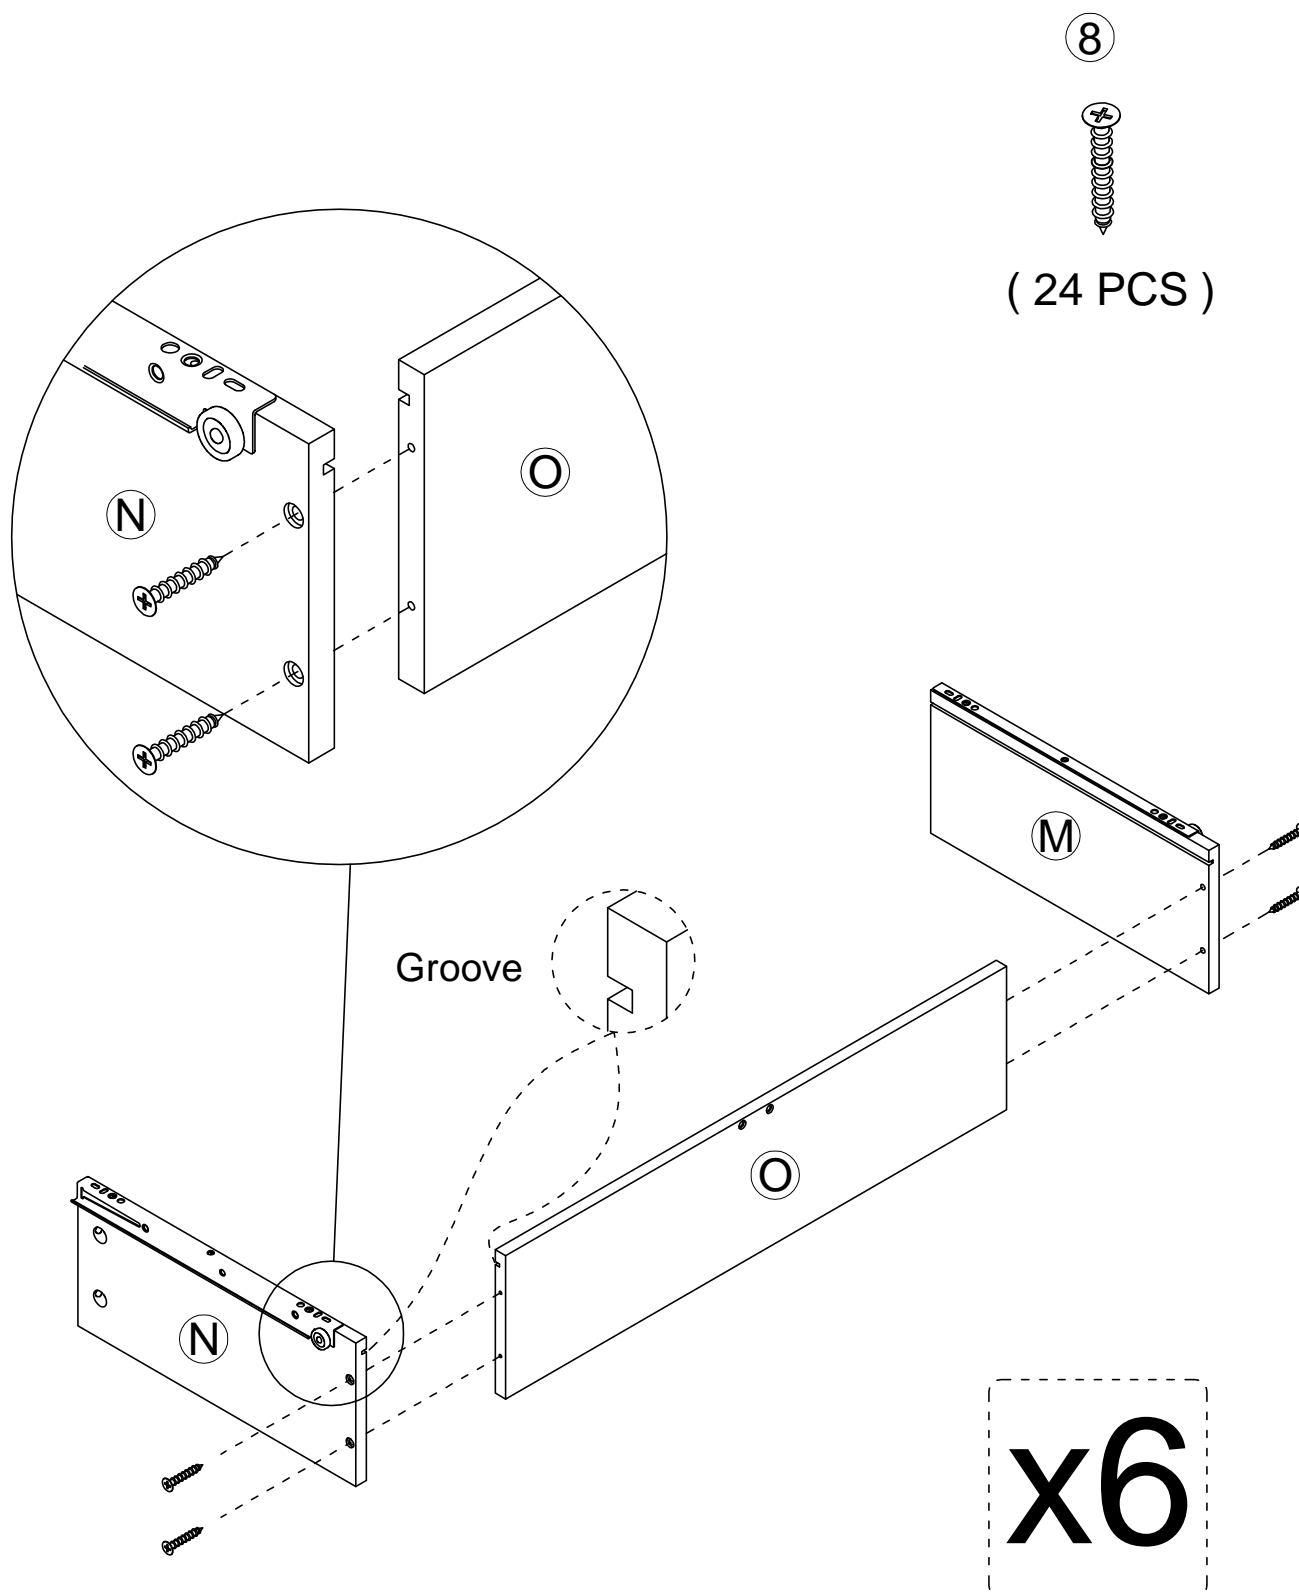

Step 18:

- * Slide in the DRAWER BOTTOM PANEL (P)

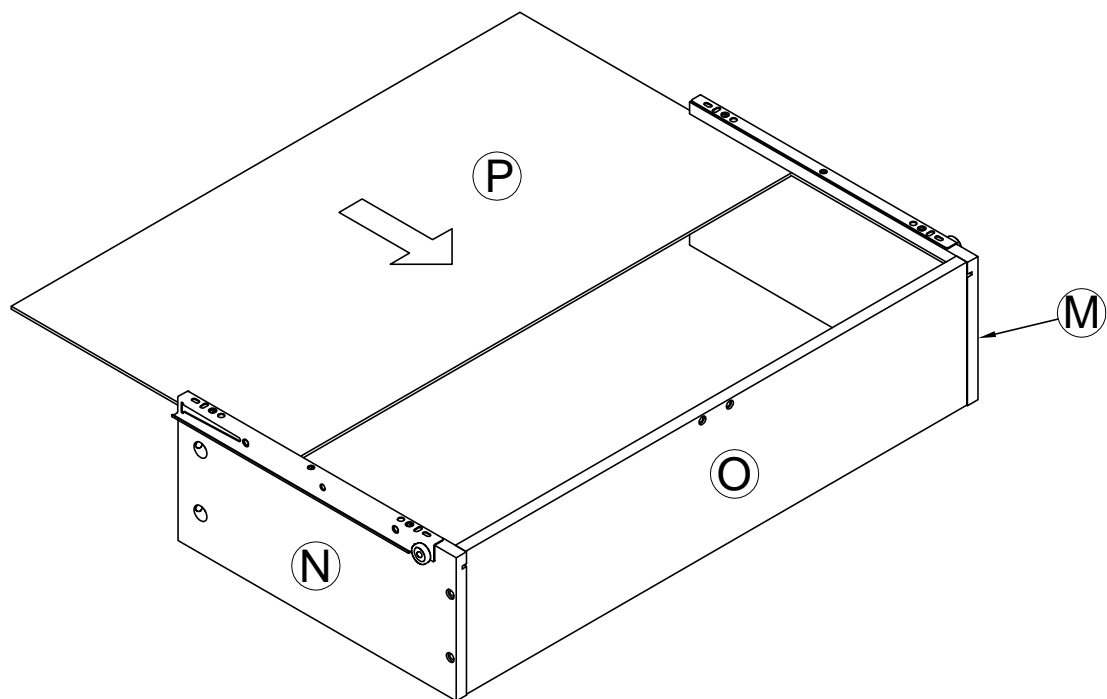

x6


Step 19:

* Assemble the DRAWER SUPPORT PANEL (Q) to the DRAWER TRAY by the SCREW (8)

8



(12 PCS)

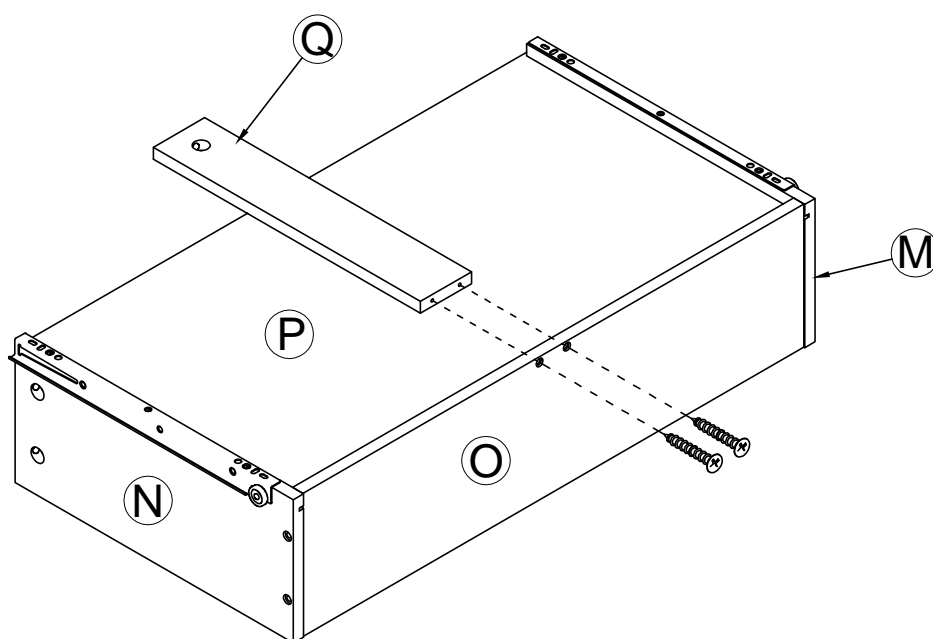

x6

Step 20:

- * Insert thirty KD BOLT (1) to three DRAWER LEFT FRONT PANEL (R) and three DRAWER RIGHT FRONT PANEL (S).
- * Attach six BLACK HANDLE (11) or six GOLD HANDLE (12) to three DRAWER LEFT FRONT PANEL (R) and three DRAWER RIGHT FRONT PANEL (S) by twelve SCREW (10)

①




(30 PCS)

⑩




(12 PCS)

⑪

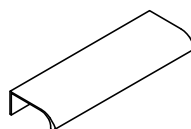


(6 PCS)

⑫

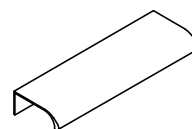


(6 PCS)


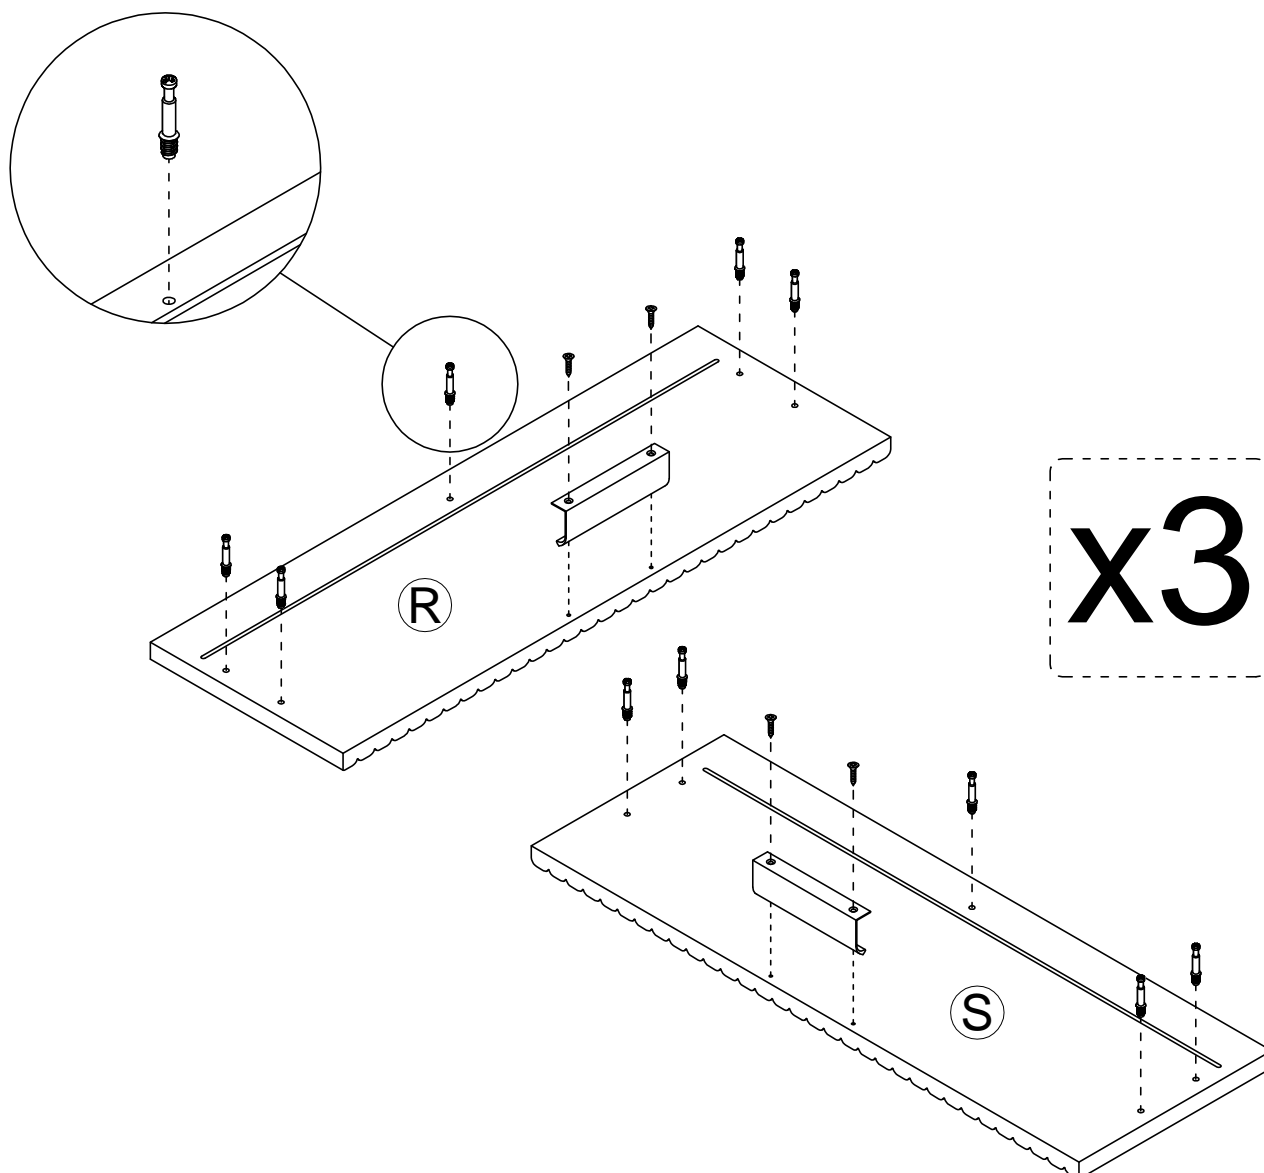


Step 21:

* Assemble the three DRAWER LEFT FRONT PANEL (R) and three DRAWER RIGHT FRONT PANEL (S) to the DRAWER TRAY by the thirty KD SMALL CAM (6) and thirty COVER CAP (3)

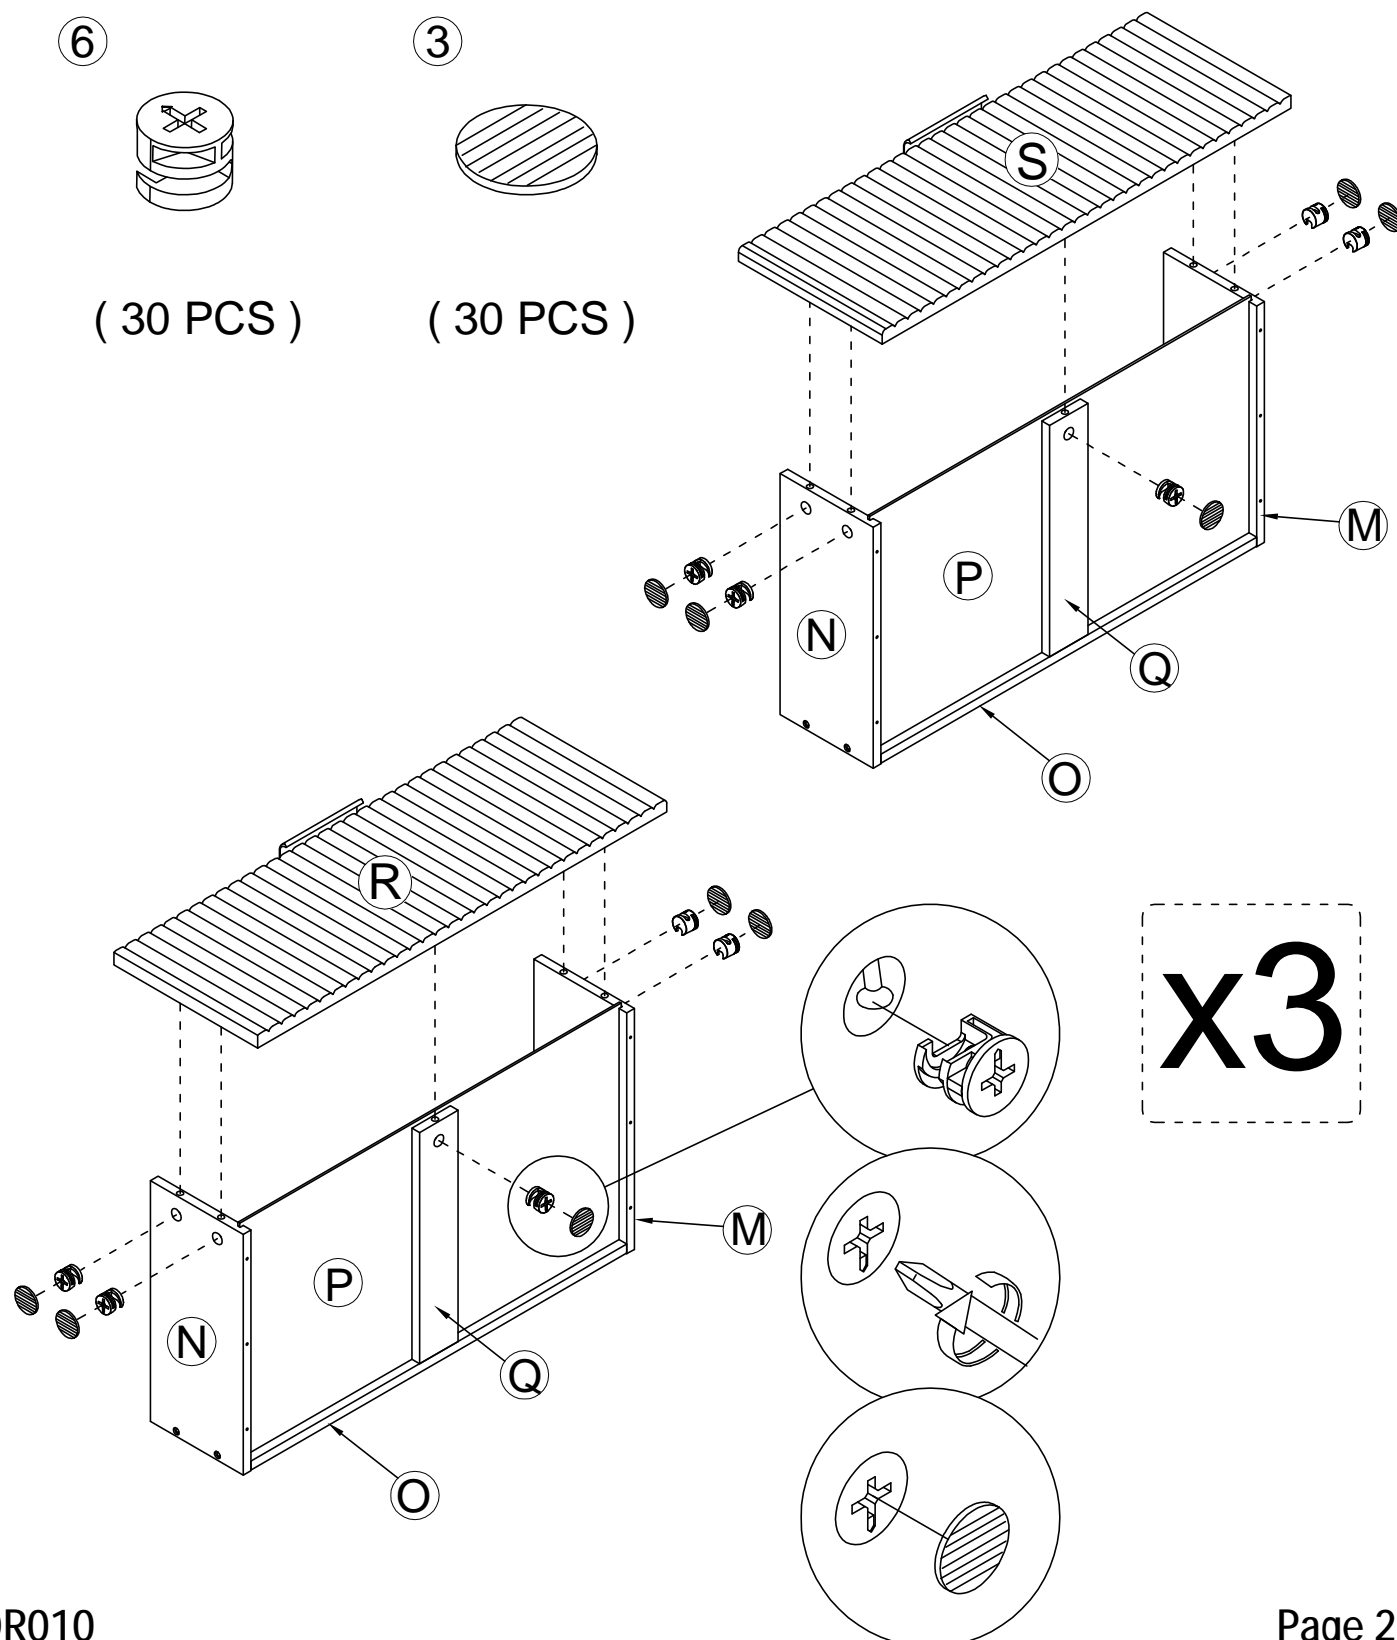

Step 22:

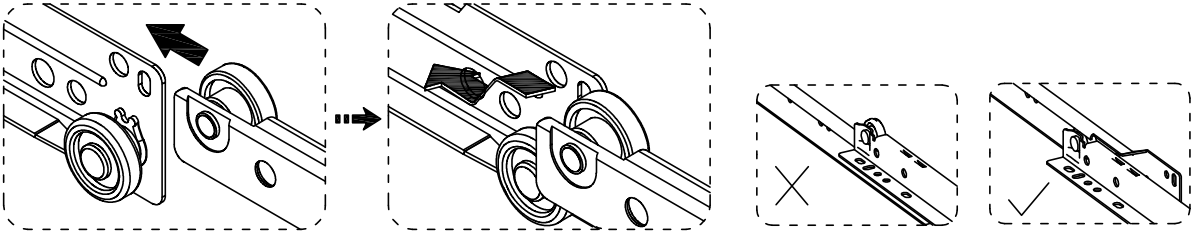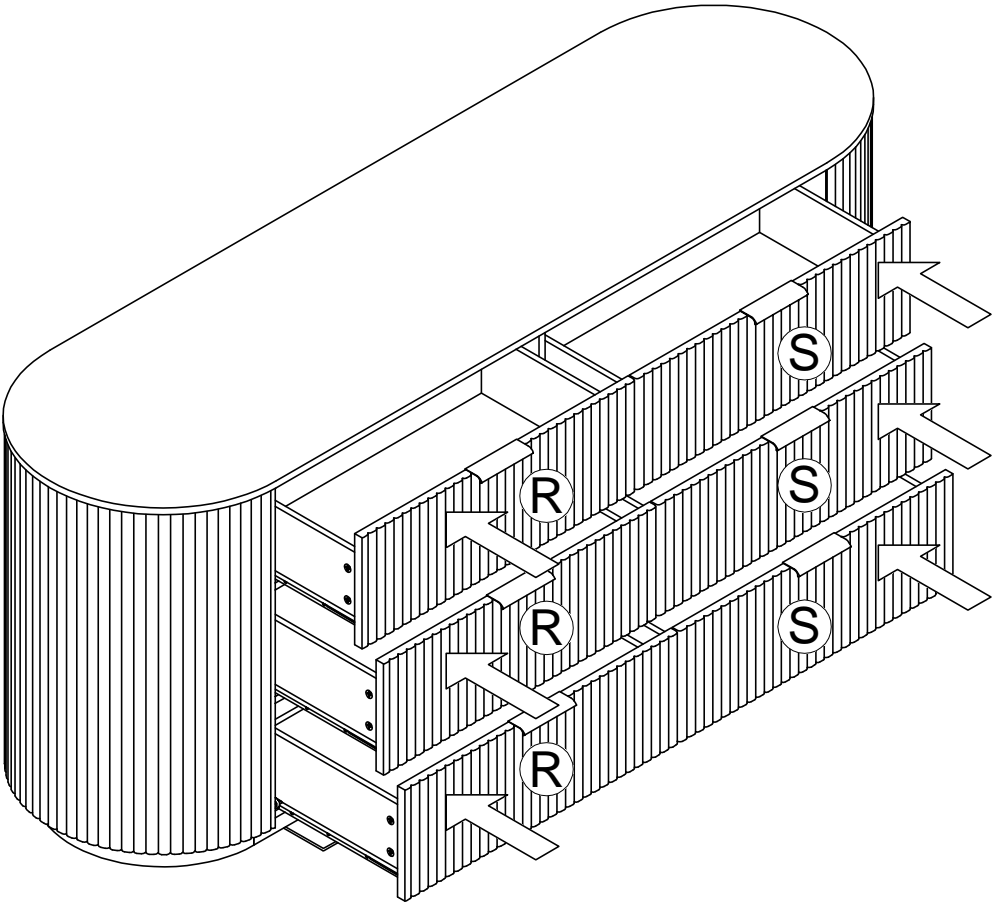

Step 23:


- * Insert eight PLASTIC WEDGE (13) to the UPPER BACK PANEL (F) by the eight SCREW (9)

9




(8 PC)

13




(8 PC)

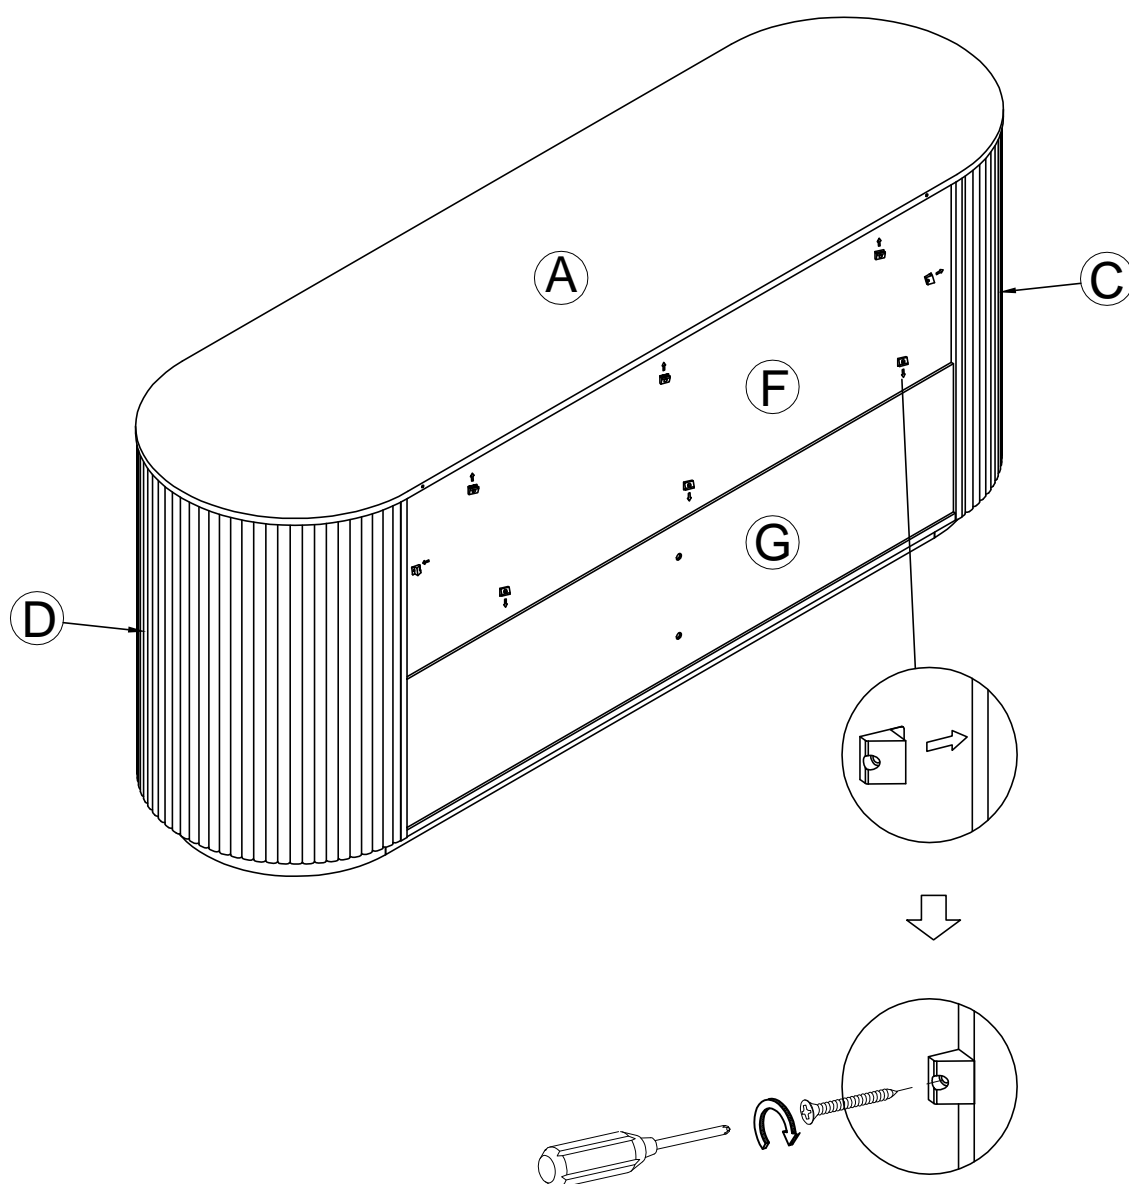

Step 24:

* Attach anti-tipping straps (15) to the back of the stand.

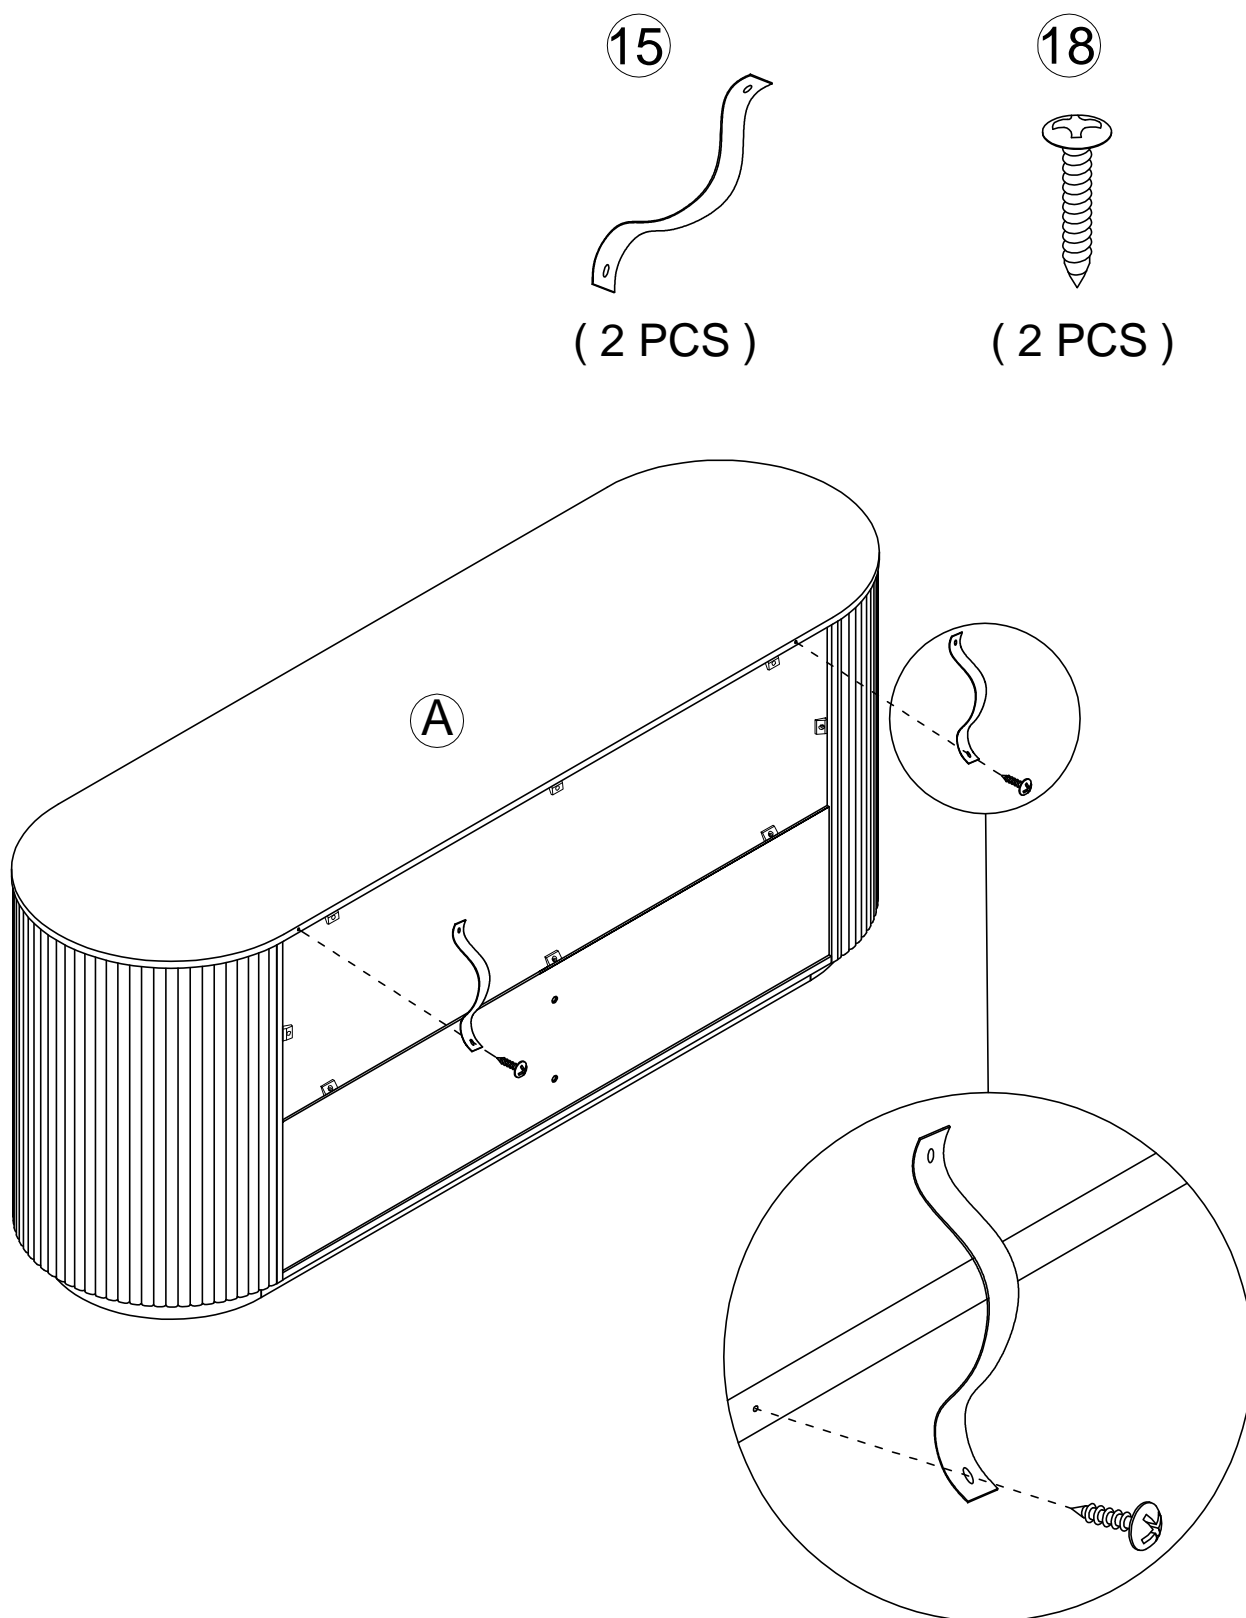

Step 25:


1st- With your pencil, strike a mark through the center of the hole in the SAFETY STRAP.

2nd- Drill a 3/8" hole on the mark.

3rd- FURNITURE TIPPING RESTRAINT KIT (16) into the hole until it is even with the surface of the wall.

4th- Turn the LONG SCREW through the hole in the SAFETY STRAP and into the WALL ANCHOR.

NOTE: You will need to turn the LONG SCREW multiple turns to completely tighten and secure your unit.

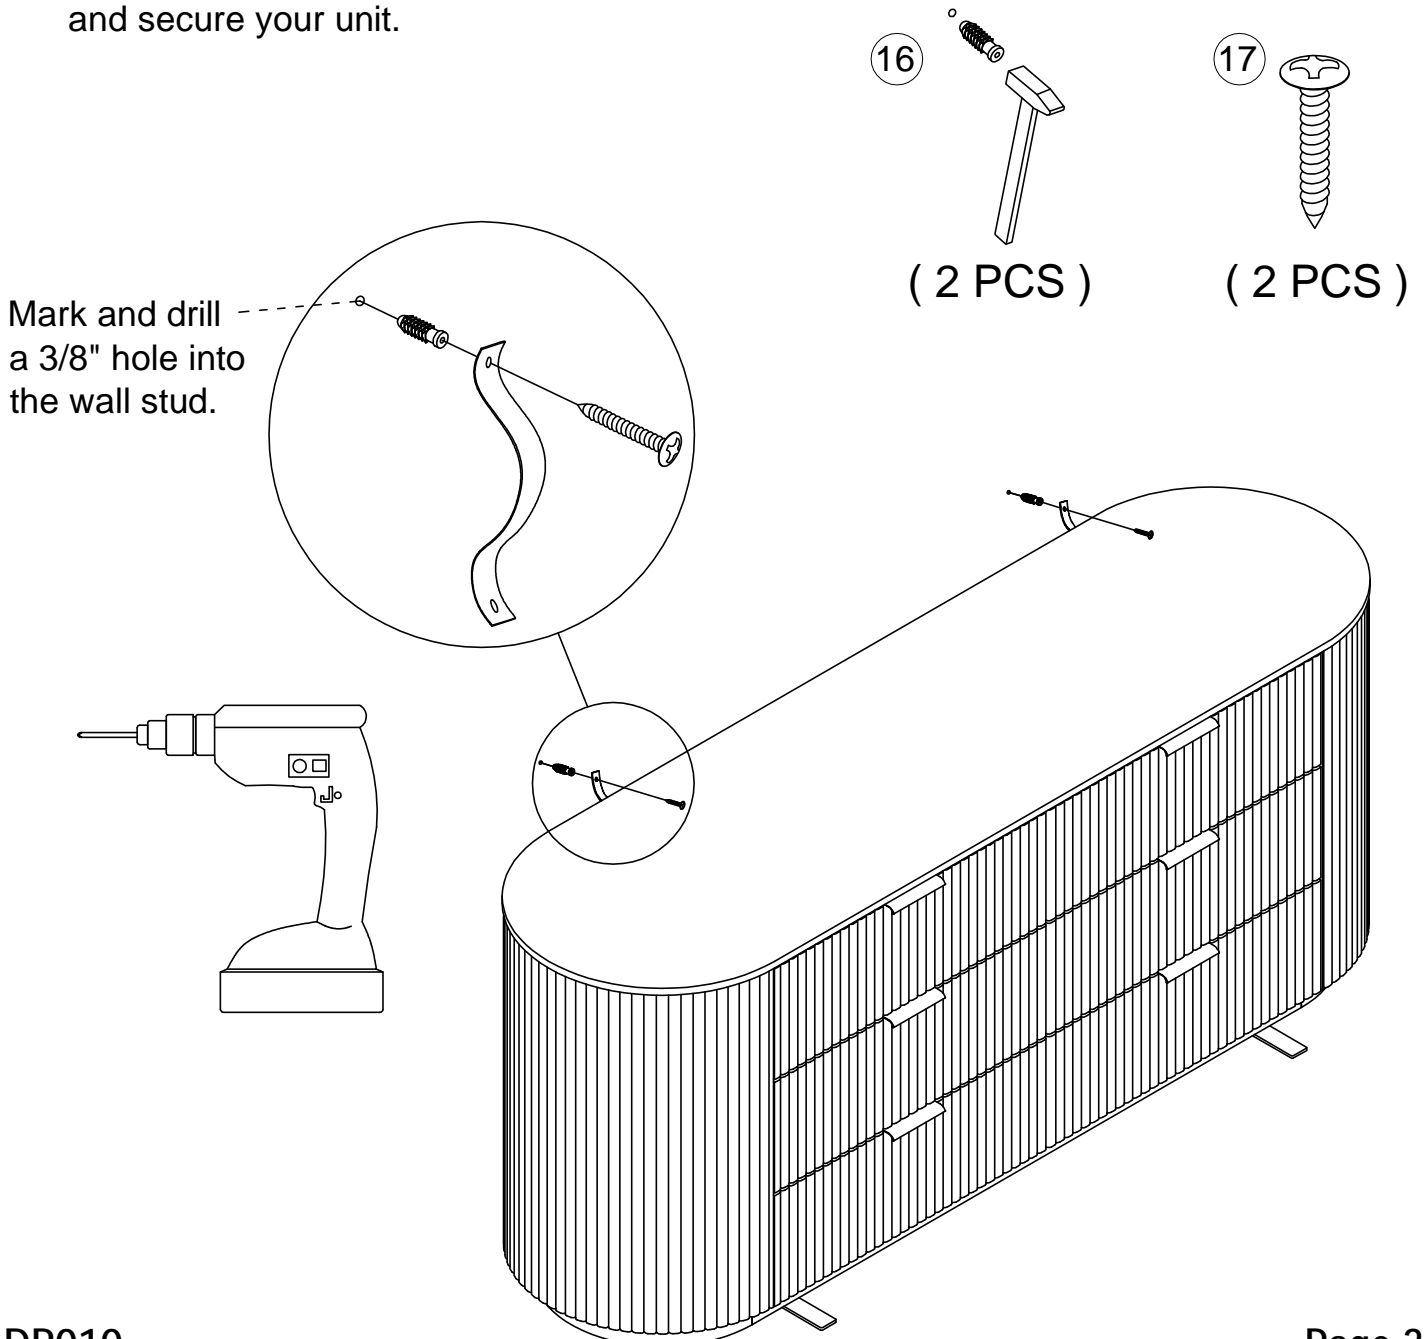



WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810
908-888-0818