


INSTALLATION INSTRUCTIONS

Confidentialal : A

SKU: VA4820V14WH

PROHIBIT COPY

- Prior to installation please check received items against the Packing List .If any part is missing or damaged, please do not return the product to the store and contact us;
Call: (302)336-8180
Email: vanityinservice@gmail.com
- Protect all surfaces from sharp objects , high heat sources,direct prolonged sunlight and chemical hazards .
- Professional installation is recommended !

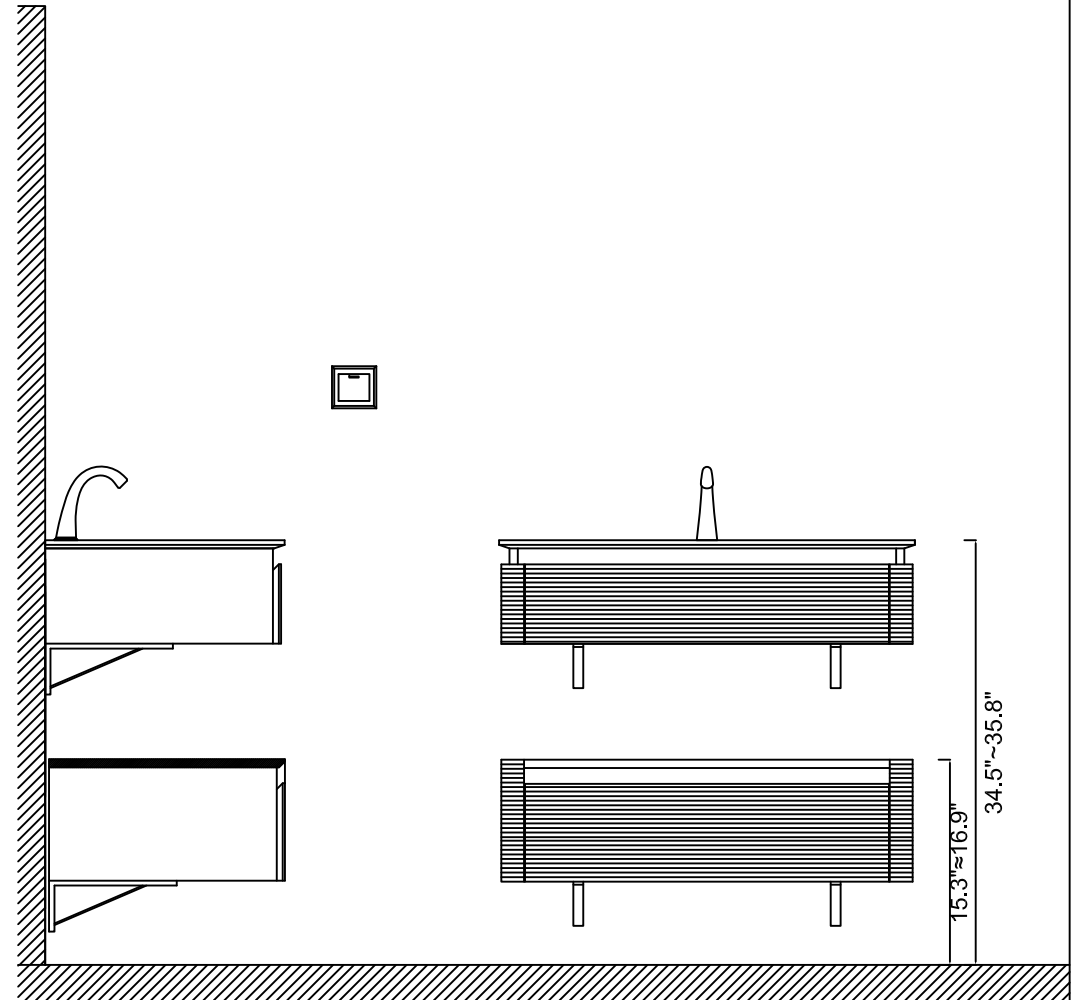

INSTALLATION INSTRUCTIONS

Confidentialal : A

SKU: VA4820V14WH

PROHIBIT COPY

NOTE

1. Ceramic sink: cUPC certified.



2. LED light :

a. The LED light is replaceable, if it is damaged, please contact us ;

Call: (302)336-8180


Email: vanityinservice@gmail.com

b. LED light should be connected to the wall switch for turning on/off.


c. UL certified & IP67 for water proof.




Marble top with ceramic sink

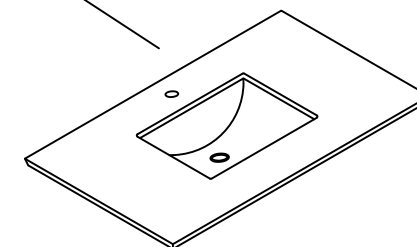


Up Vanity

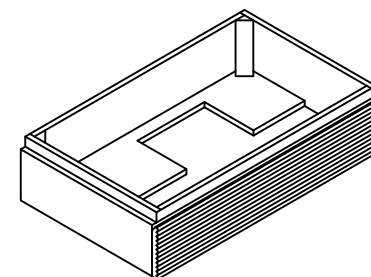


Down Vanity

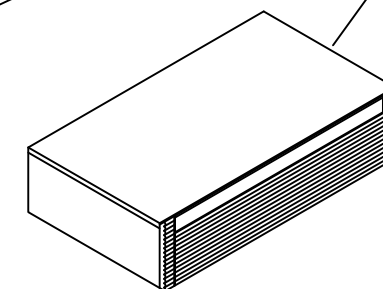

LED light
(pre-assembled on the
bottom of the vanity)

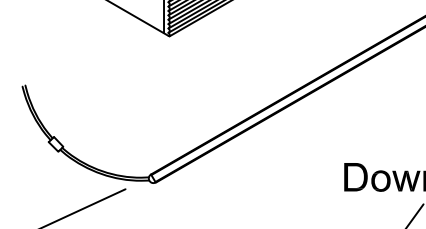

wall switch

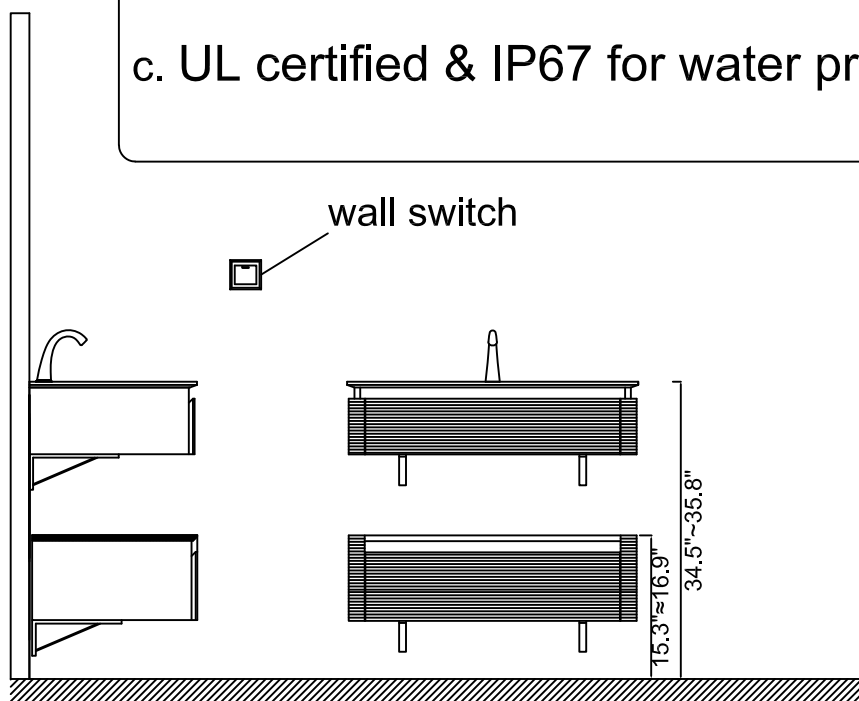

INSTALLATION INSTRUCTIONS


Confidentialal : A

SKU: VA4820V14WH


PROHIBIT COPY

PACKING LIST


A1 Up Vanity
1 PC

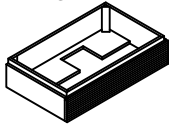


A2 Down Vanity
1 PC

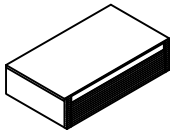


B Wood Cleat
2 PCS




C Metal Bracket
4 PCS



D TOP
1 PC

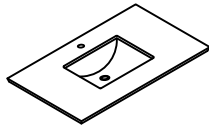

E Wood Screw
8 PCS



M6 x 70

F Wood Screw
14 PCS



M5 x 50

G Wood Screw
8 PCS




M4 x 15


H Wall Anchor
22 PCS



I Metal Washers
8 PCS



J Backsplash
1 PC



TOOLS REQUIRED

Drill Bits



Ø3/8" (8mm)dia.

HSS

Screw Driver




Drill



Level



Knife

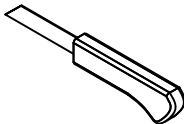

Glove




MASONRY DRILL BIT FOR
TILE Ø3/8" (8mm)



Safety Glasses



Silicone



Measuring Tape



Soft Head
Hammer




Pencil



Wood stud finder



Shovel



INSTALLATION INSTRUCTIONS

SKU: VA4820V14WH

Confidentialal : A


PROHIBIT COPY

- STEP 1:
- Use a wood stud finder to locate the wood studs behind the walls.
 - Use a pencil to mark the installation location for the **Wood Cleats (B)**.
 - Use a level to ensure the **Wood Cleats (B)** will be level before installing to the wall.


NOTE

Make sure the screw holes must be on the wood studs otherwise the vanity will fall out because the dry wall cannot hold the cabinet.

vanity	hole	a	b	c
36"	3	12"	12"	-
48"	4	12"	12"	12"
60"	4	12"	24"	12"

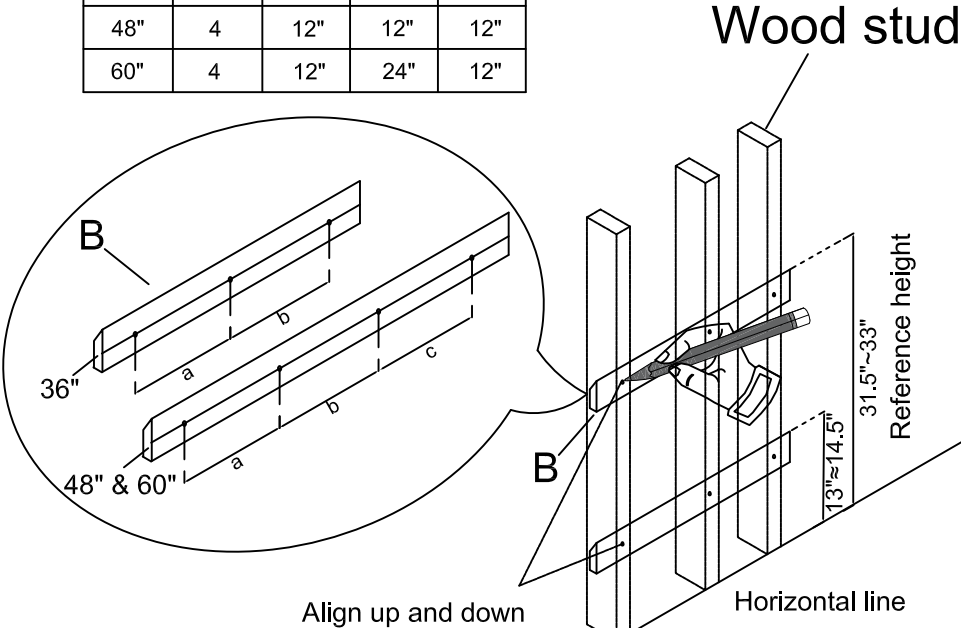


- STEP 2: Drill the anchor holes according to the marks using a drill.

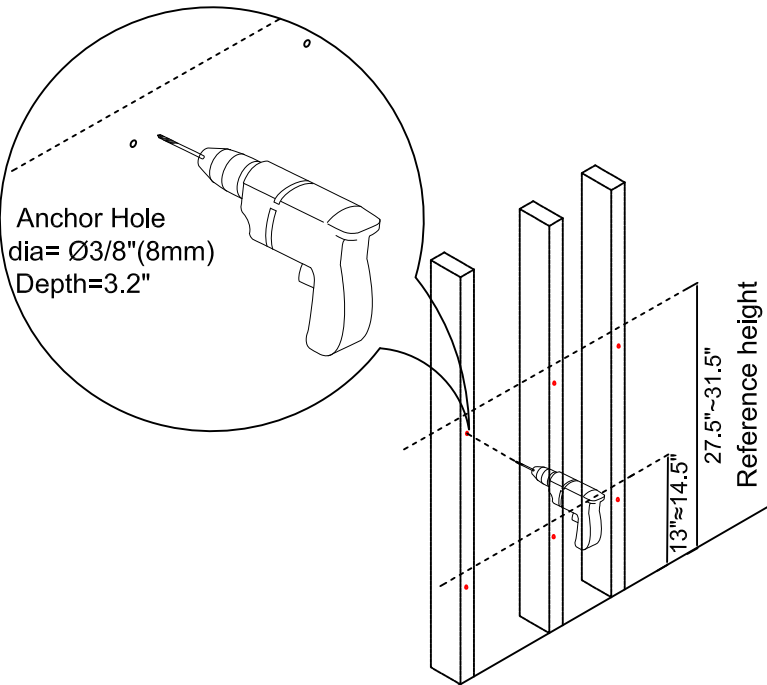

INSTALLATION INSTRUCTIONS

SKU: VA4820V14WH


STEP 3: Install the **Wall Anchors (H)** provided into the wall with hammer.

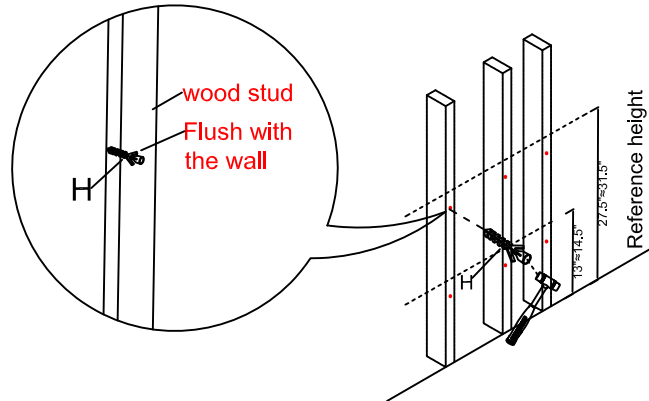


Confidential : A

PROHIBIT COPY


STEP 4: Install the **Wood cleats (B)** to the wood studs by screw driver.

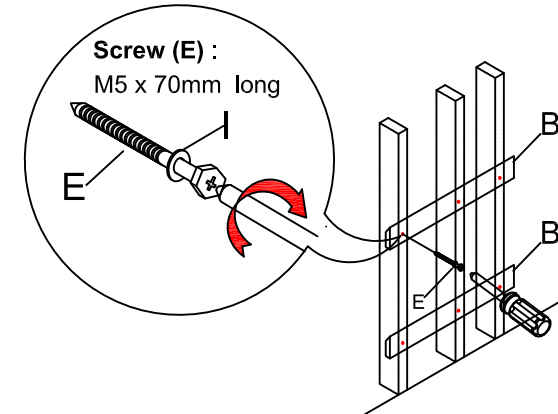

STEP 5: With help from another person, carefully hang the **Up Vanity (A1)** and **Down Vanity (A2)** onto the **Wood Cleats (B)**.

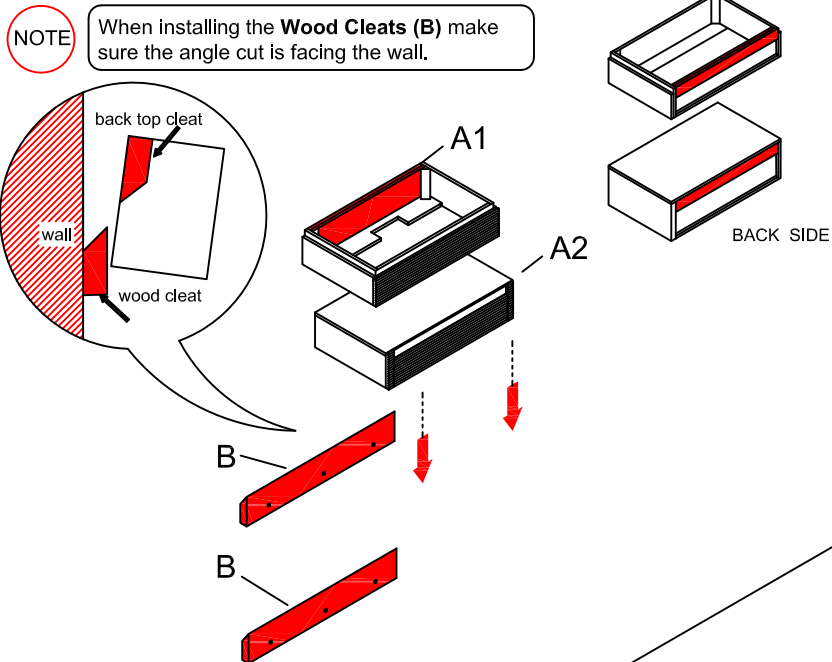

STEP 6: Using a pencil to mark the installation location for the **Metal Brackets (C)**.

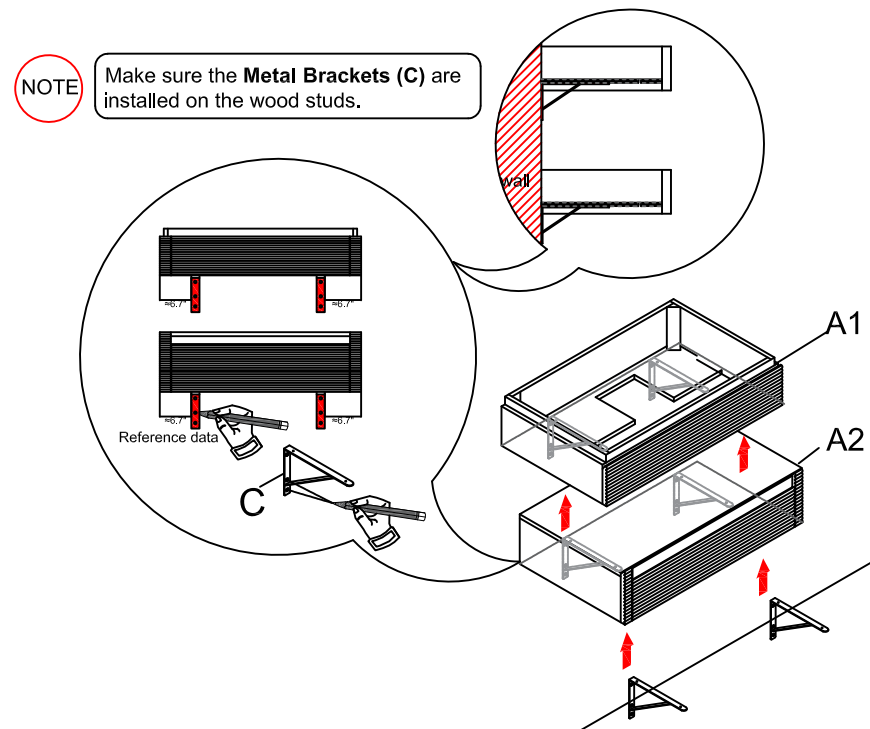


INSTALLATION INSTRUCTIONS

SKU: VA4820V14WH

STEP 7: Carefully remove the **Up Vanity (A1)** and **Down Vanity (A2)** with the help from another person, and then drill the anchor holes according to the marks using a drill.


Anchor Hole
dia= Ø3/8"(8mm)
Depth=3.2"

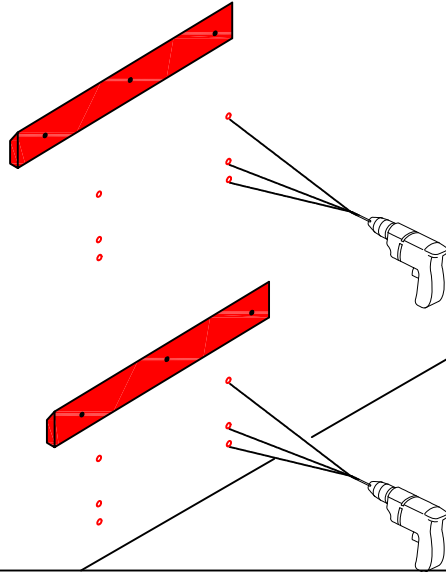

Confidentialal : A


PROHIBIT COPY

STEP 8: Install the **Wall Anchors (H)** provided into the wall with hammer.

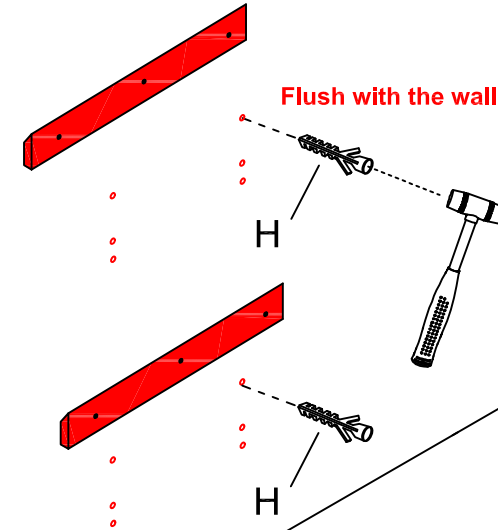


STEP 9: Install the **Metal Brackets (C)** to the wood studs by screw driver.

Screw (F):
M5 x 50mm long
6pcs

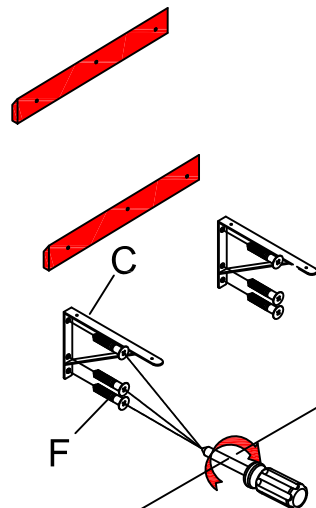


STEP 10: Hang the **Up Vanity (A1)** and **Down Vanity (A2)** to the wall and then connect the **Up Vanity (A1)** to the **Wood Cleat (B)** with the 2 **Screws (F)** provided.

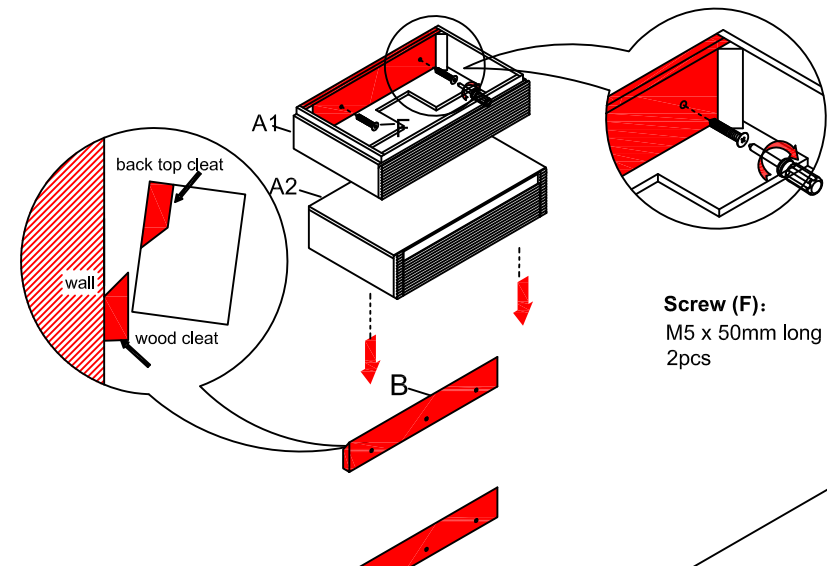

INSTALLATION INSTRUCTIONS

SKU: VA4820V14WH


STEP 11: Connect the **Metal Brackets (C)** to the **Up Vanity (A1)** and **Down Vanity (A2)** with **Screws (G)**.

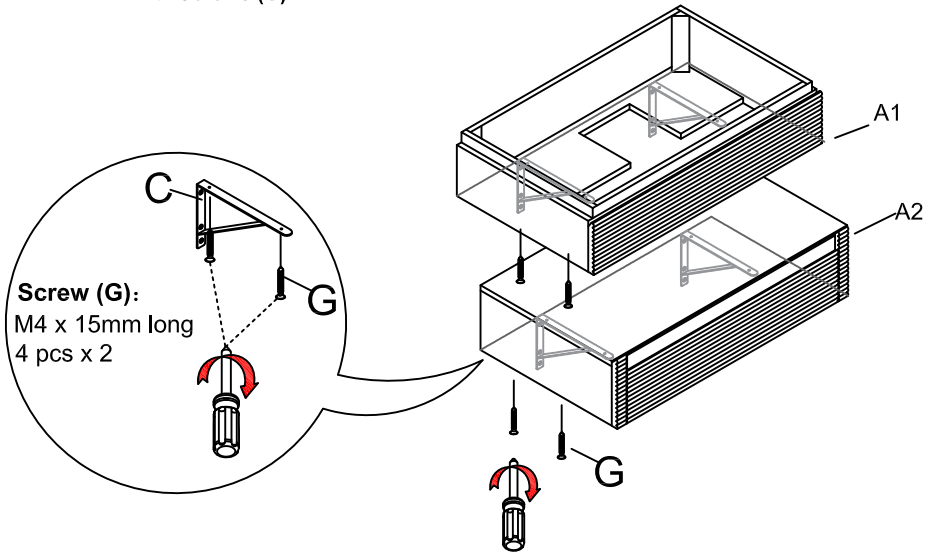


Confidentialal : A

PROHIBIT COPY

STEP 12: Connect the electrical wire to the wall switch for turning on/off.

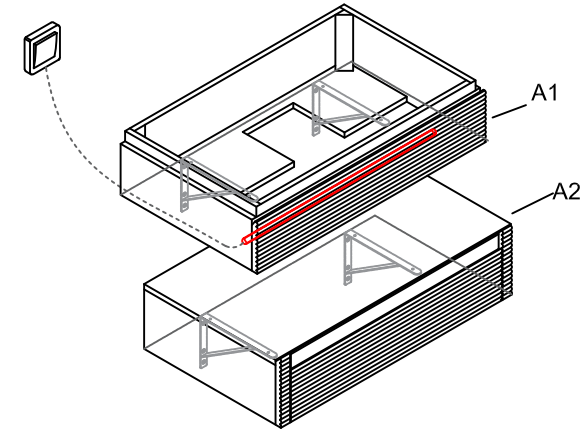

STEP 13: Apply the silicone to the top of the **Up Vanity (A1)** and then install the **Top (D)** onto the **Up Vanity (A1)** with the help from another person.

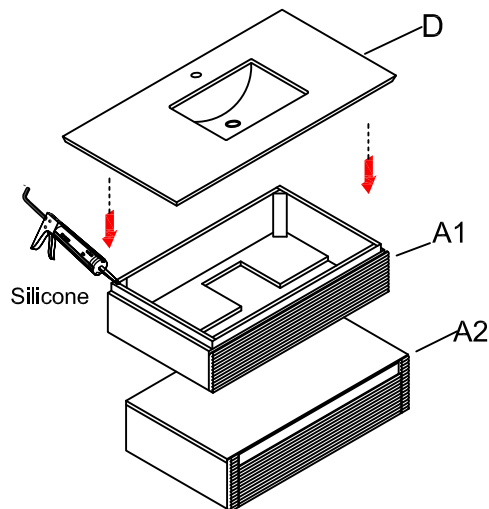

STEP 14: Installing the **Backsplash (J)**

- Apply silicone to the back of the **Backsplash (J)**.
- Place the **Backsplash (J)** on the **Up Vanity (A1)**. Be sure to align the **Backsplash (J)** with the top of the **Up Vanity (A1)**.
- Allow the silicone to dry before using the vanity.
- Gently remove excess glue from the connecting area by shovel.
- Let the Vanity and Backsplash sit for 24 hour before use.

