


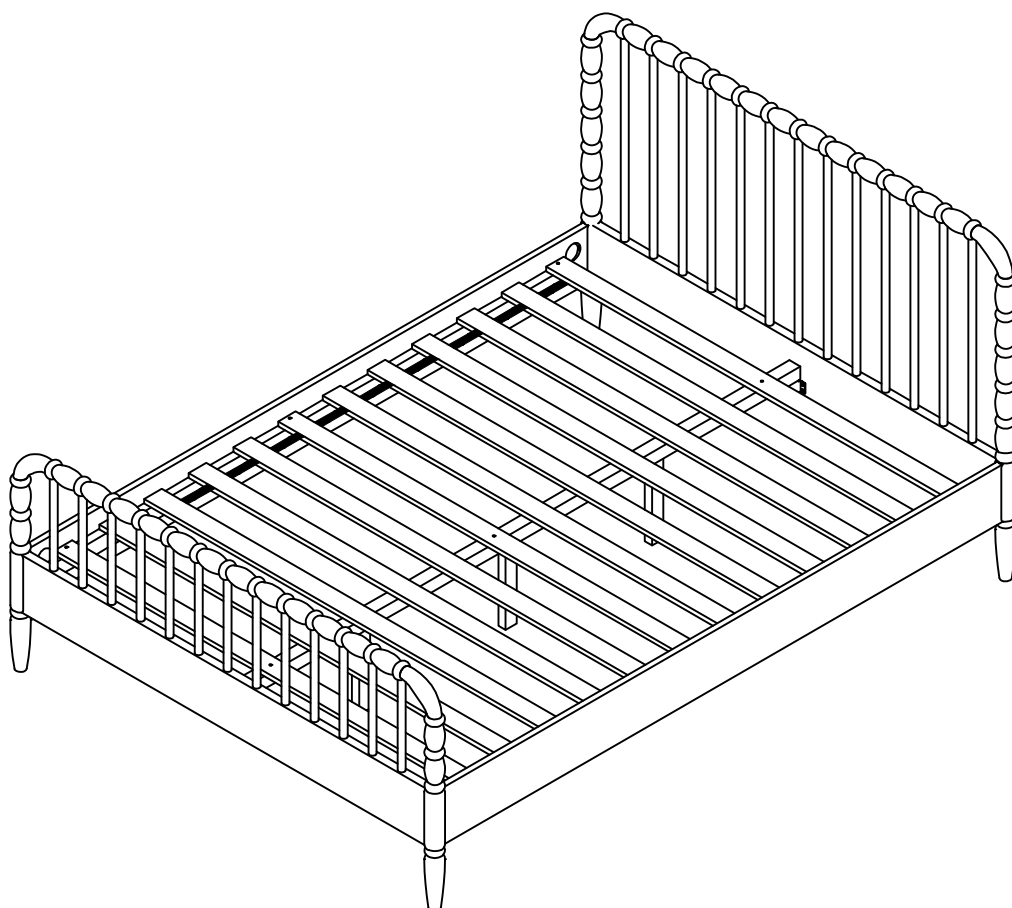

ASSEMBLY INSTRUCTIONS

Bed

MOD-7360 / V0.03.05.26

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 30 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Cleaning this slipcover in your washing machine may cause damage or shrinkage. Spot clean only with a damp cloth.


Care instructions are listed in the last step of this manual.

WAIT!


Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

1		Stud Screw M6 x80mm	x8
2		Wood Screw M4 x 32mm	x9
3		Wood Screw M3.5 x 16mm	x2
4		M6 Bend Washer 3013	x8
5		M6 Hex Nut	x8
6		BLUE ZINC CARBON STEEL SPANNER M6 x 80mm	x1

FURNITURE COMPONENTS:

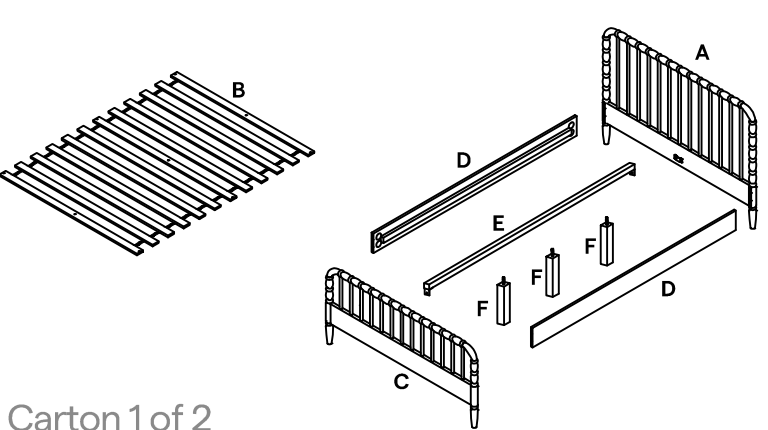

Carton 1 of 2

A	Headboard	x1
B	Bed Slat	x1
C	Footboard	x1

Carton 2 of 2

D	Side Rail	x2
E	Center Rail	x1
F	Center Support Leg	x3
	Hardware Pack	x1

What you need:



Phillips Head Screwdriver


STEP 01

HARDWARE

- 1** Stud Screw M6 x80mm x8

COMPONENTS

- A** Headboard x1
C Footboard x1

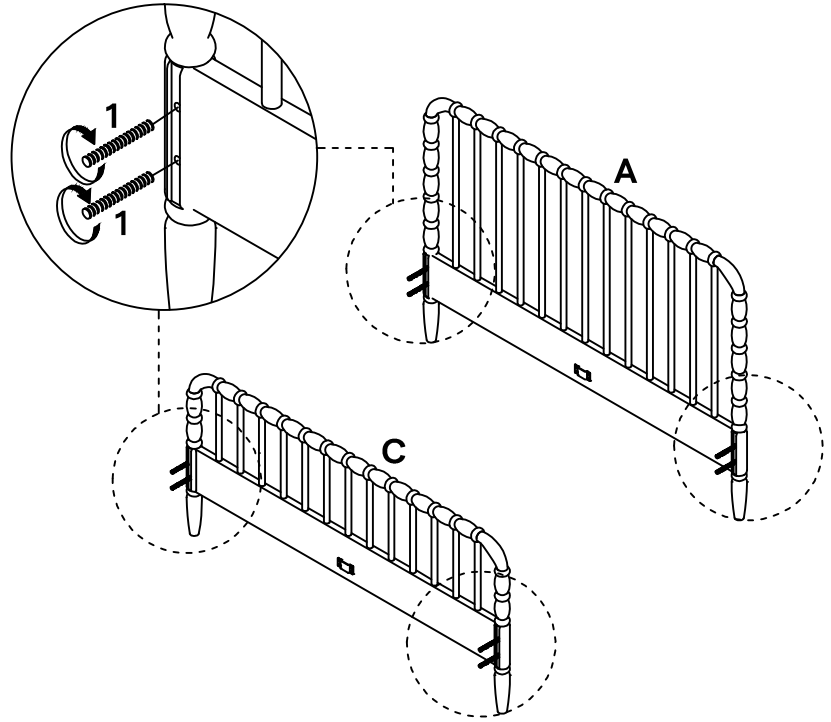


STEP 02

HARDWARE

- 4** M6 Bend Washer 3013 x8
5 M6 Hex Nut x8
6 BLUE ZINC CARBON STEEL SPANNER M8 x 85mm x1

COMPONENTS


- A** Headboard x1
C Footboard x1
D Side Rail x2

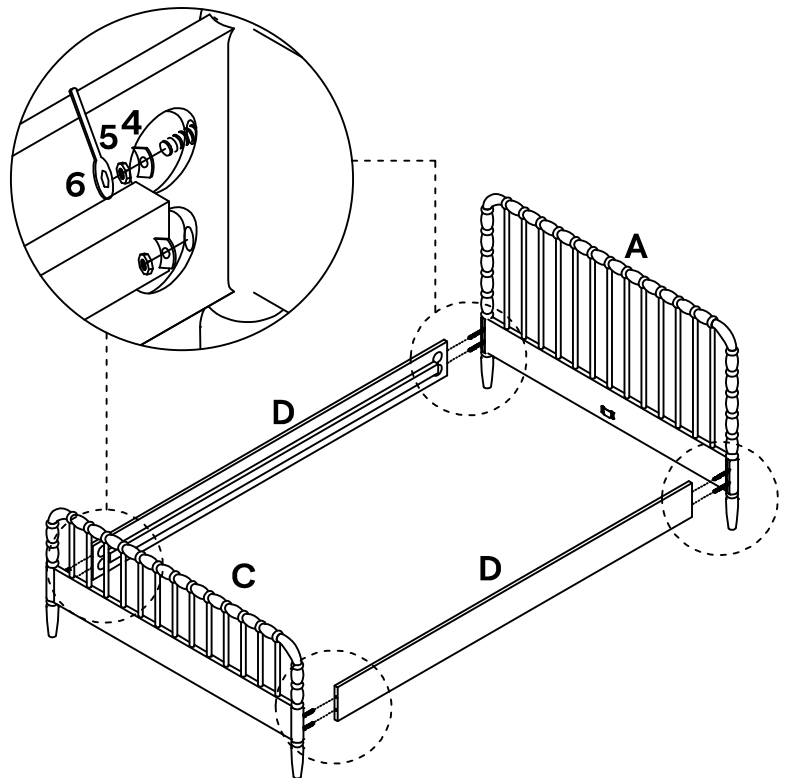

STEP 03

COMPONENTS

- | | | |
|----------|--------------------|----|
| E | Center Rail | x1 |
| F | Center Support Leg | x3 |

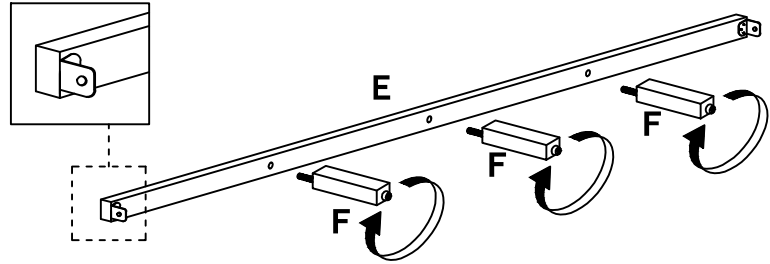


STEP 04

HARDWARE

- | | | |
|----------|------------------------|----|
| 3 | Wood Screw M3.5 x 16mm | x2 |
|----------|------------------------|----|

COMPONENTS

- | | | |
|----------|-------------|----|
| A | Headboard | x1 |
| C | Footboard | x1 |
| E | Center Rail | x1 |

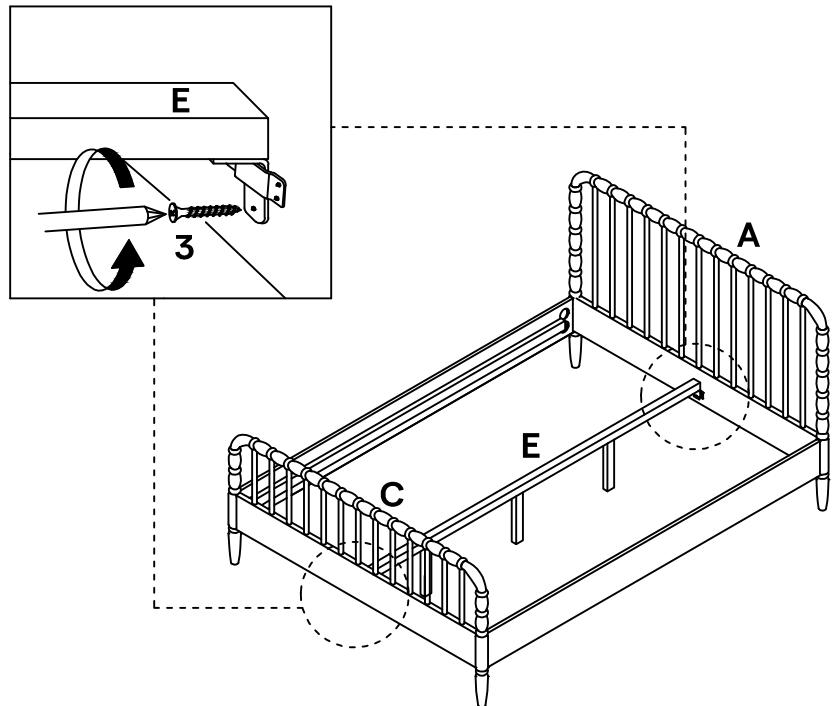



STEP 05

HARDWARE

2 Wood Screw M4 x 32mm x9

COMPONENTS

B Bed Slat x1

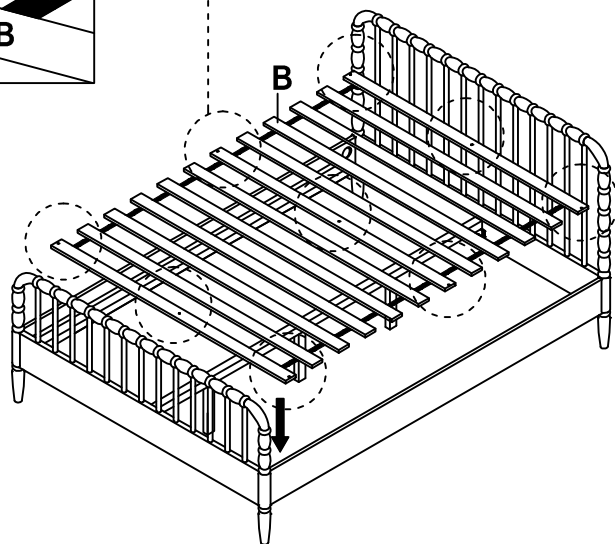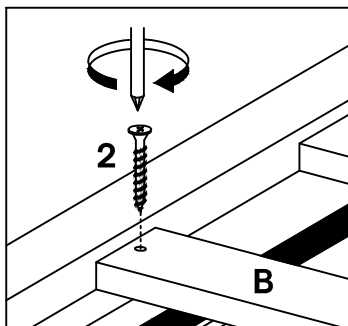


Great job!

Bed assembly is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

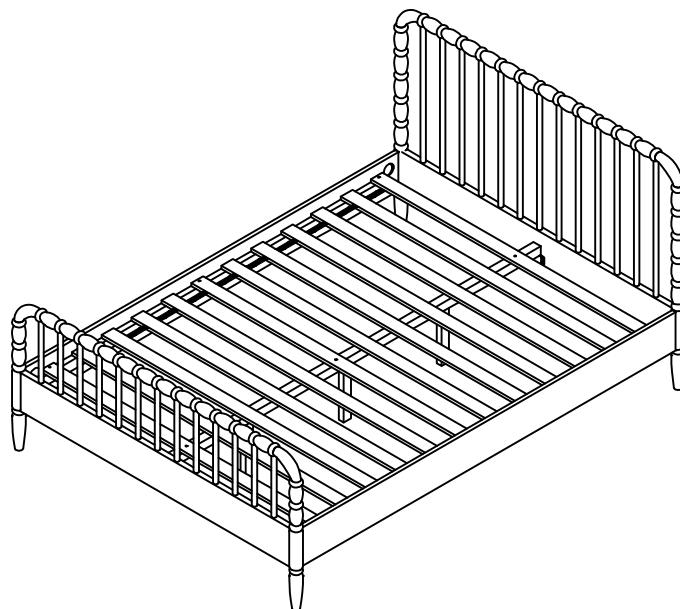

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

modway



Questions? Contact us!

609.256.9000
cs@modway.com