
Square Linear Drain Installation

For Wood Slab

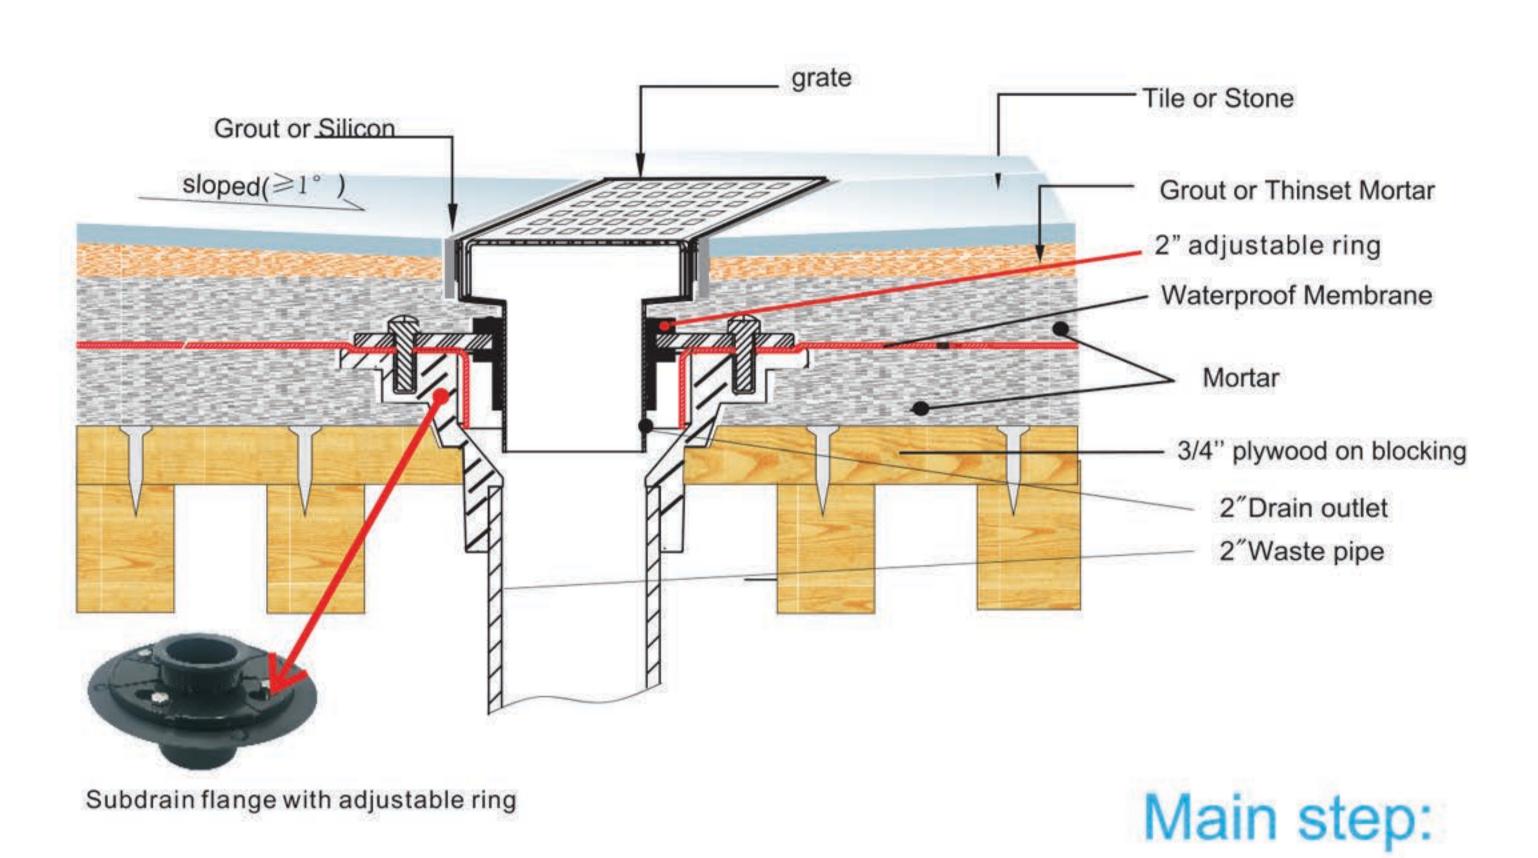

step.1 Join the two sections of pipe together by Connecting pipe or coupler, and seal

step.2 Installation height can be adjusted by foot making sure it is completely level

step.7 Apply grout or selicon as required in between the tile and the base edge, then clean channel.

Step.6 Apply thinset and tile to the floor as required

step.5 Spread thinset for setting membrane with a 3/16" V notch trowel.

Step.4 Fold membrane up over drain

Step.3 Spread concrete and thinset for setting membrane with a 3/16" V notch trowel.

NOTE: Follow local plumbing code, use lised subdrain flange meeting ASME A 112.18.2