


ASSEMBLY INSTRUCTIONS
6-Piece Dining Table Set
W697S00031

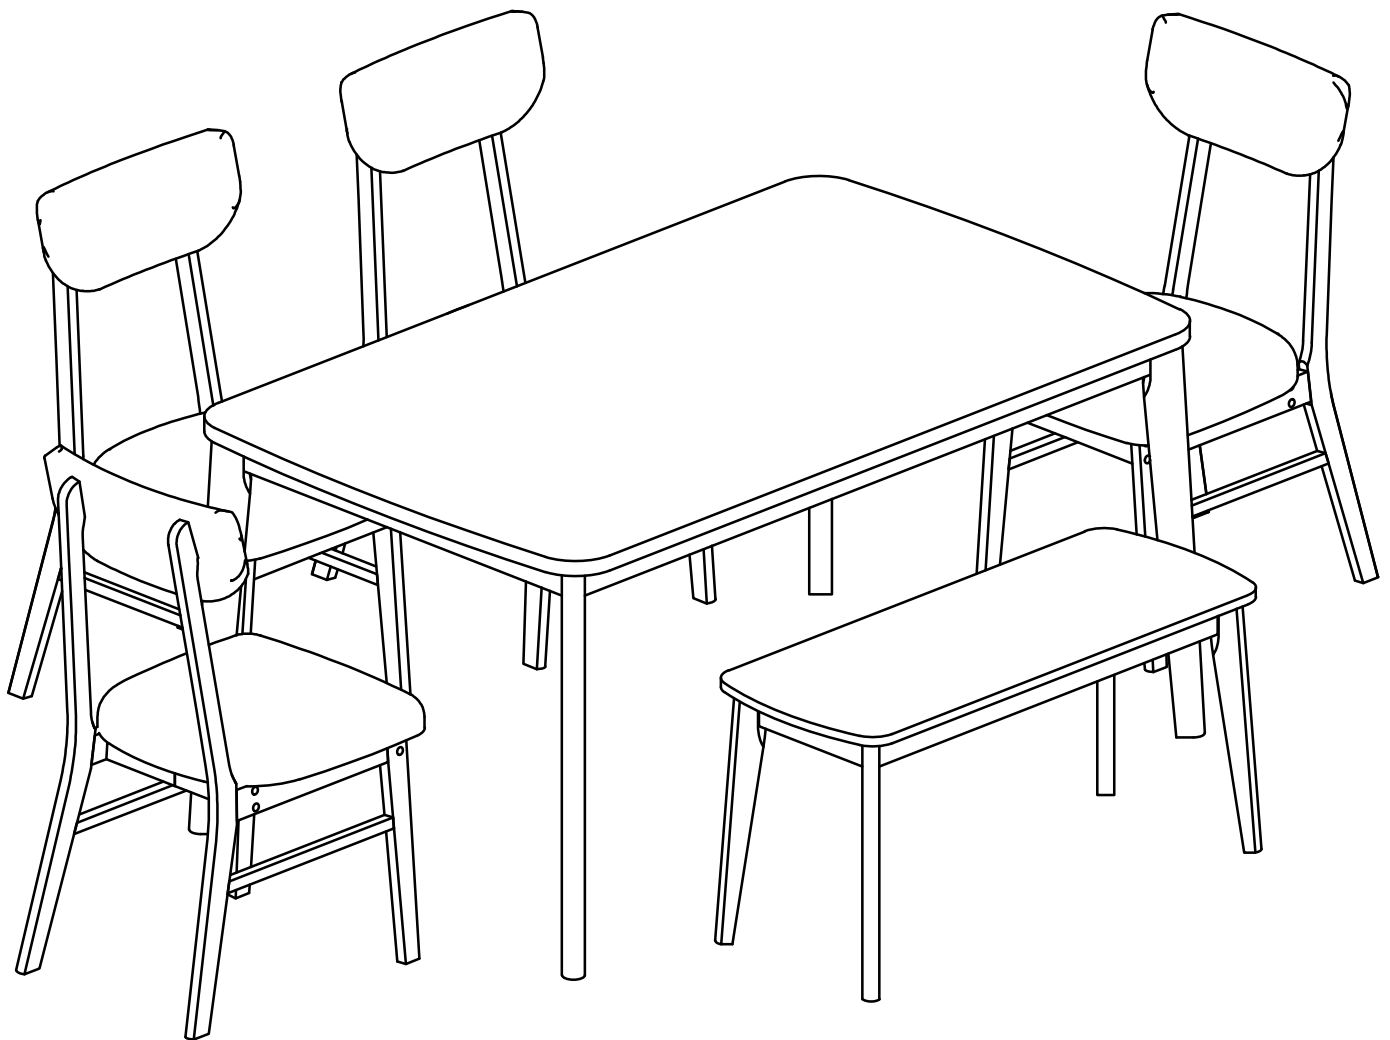

ASSEMBLY INSTRUCTIONS


Sub-item 1: W697P154073

IMPORTANT NOTE:

****PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.**


****BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.**

****DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE TABLE IS FULLY SET-UP.**

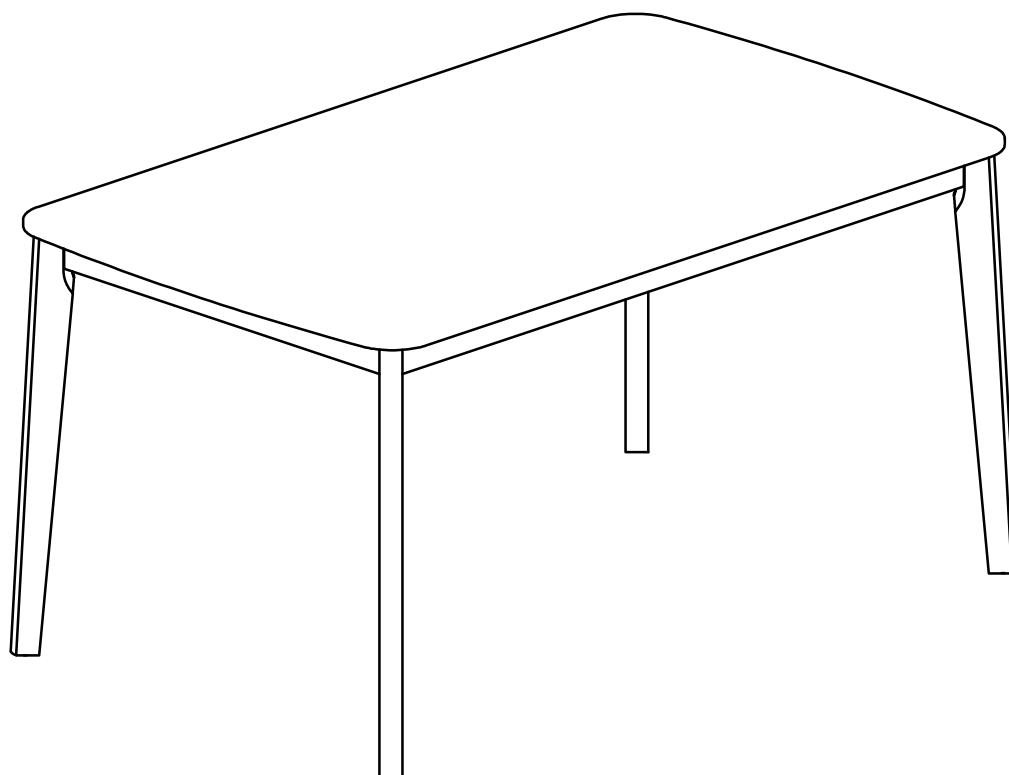

A


TABLE TOP

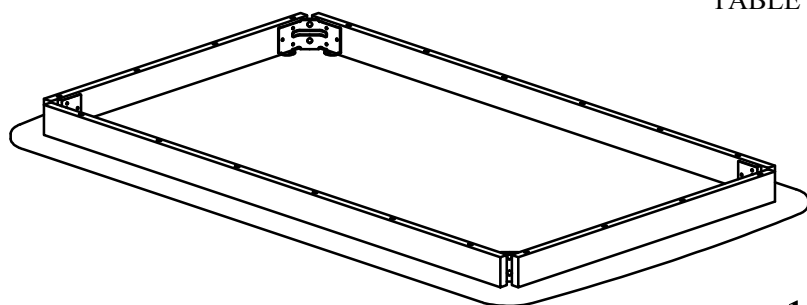

1pc

B


LEGS

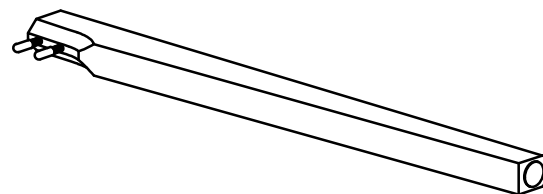

4pcs

1

HEXAGON NUT
Ø5/16"x11.8mmLx6mmL

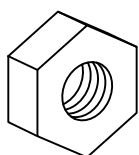


(Spare Hardware) 1pc

9pcs

2

FLAT WASHER
Ø5/16"x19mmL



(Spare Hardware) 1pc

9pcs

3

SPRING WASHER
Ø5/16"x12mmL




(Spare Hardware) 1pc

9pcs

4


WRENCH
88x22x2mmL

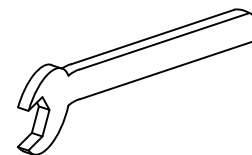


1pc

ASSEMBLY INSTRUCTIONS

STEP 1

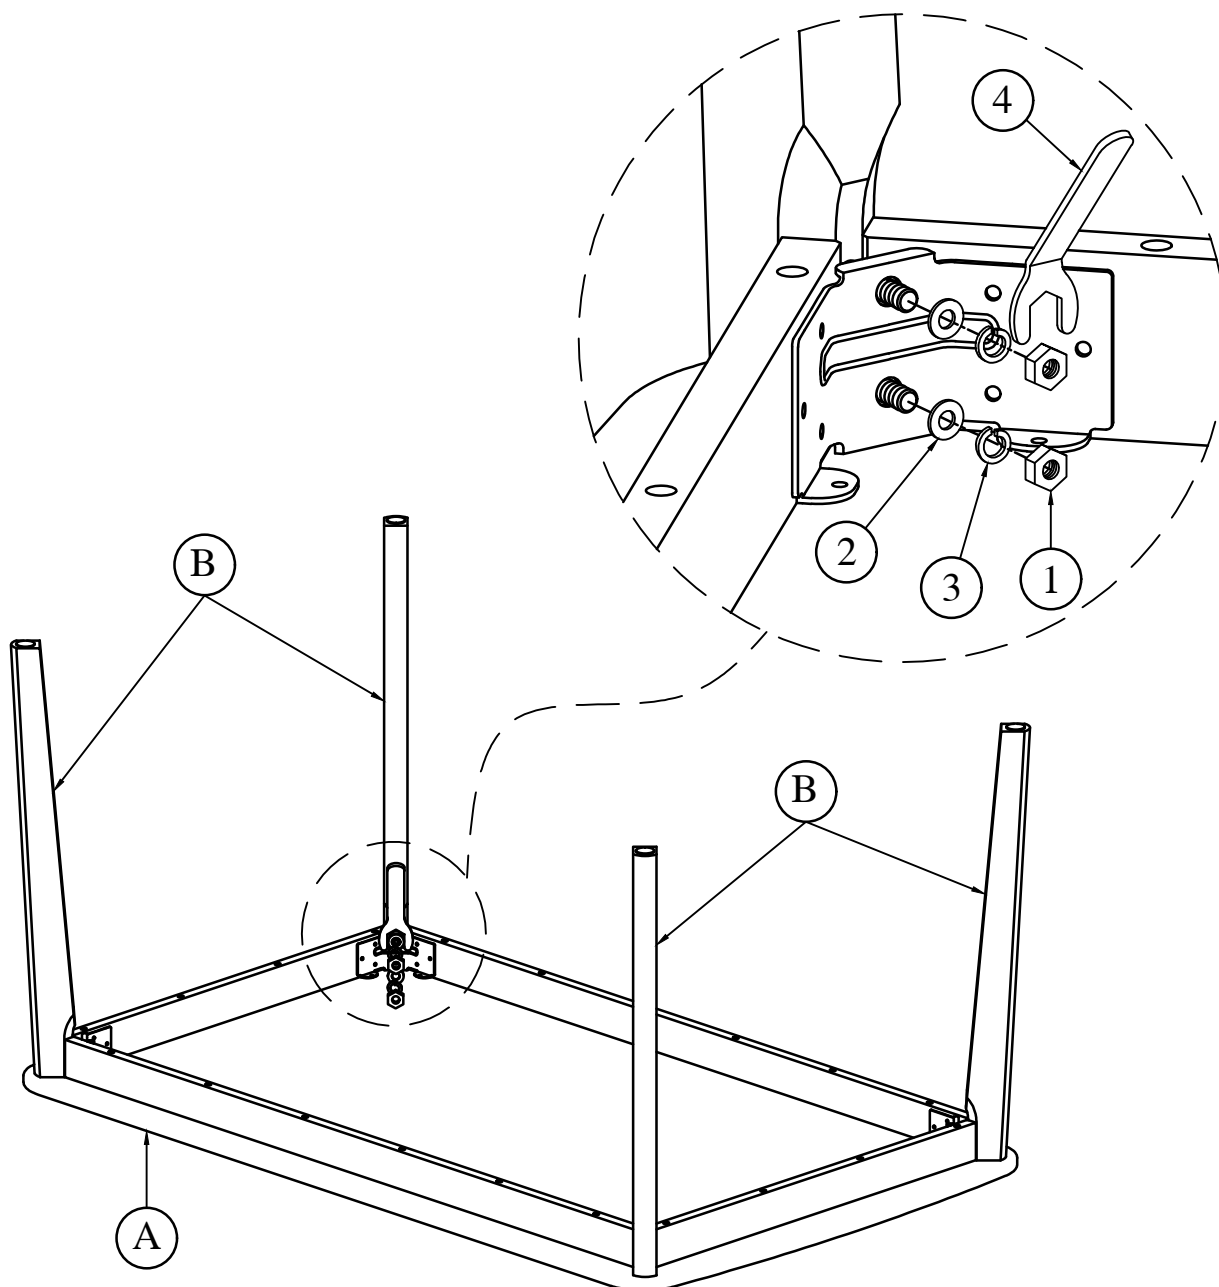

STEP 2

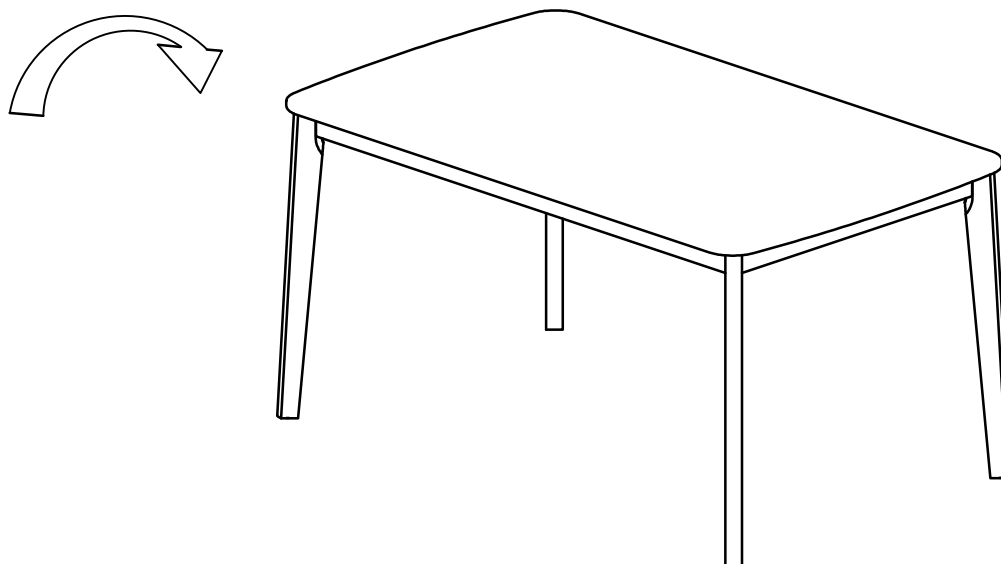


ASSEMBLY INSTRUCTIONS

IMPORTANT NOTE:

**PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.


**BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

**DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BENCH IS FULLY SET-UP.

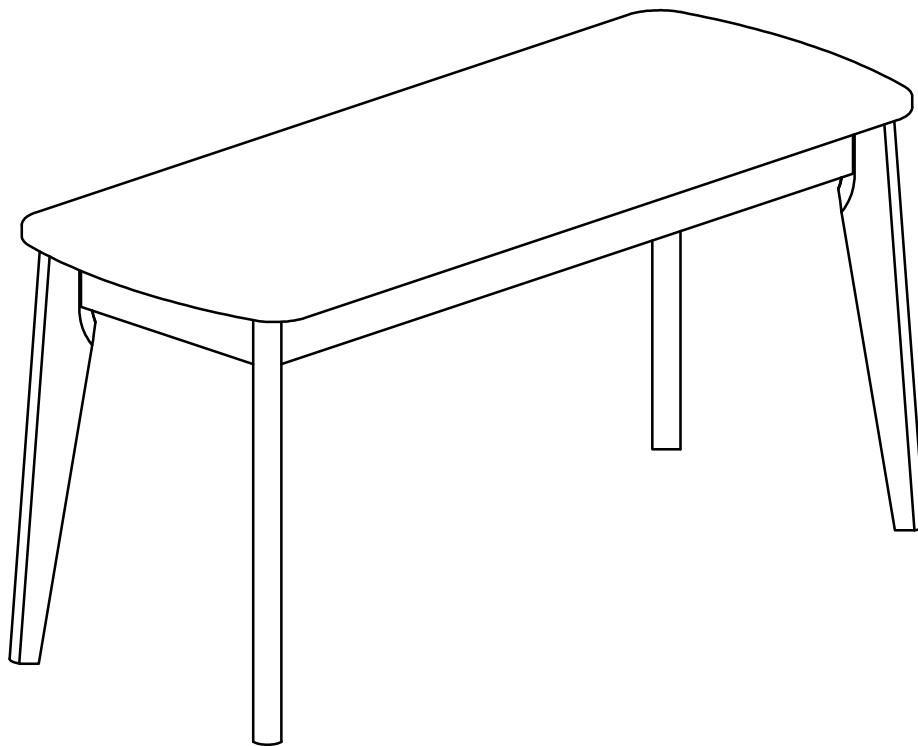

A


BENCH TOP

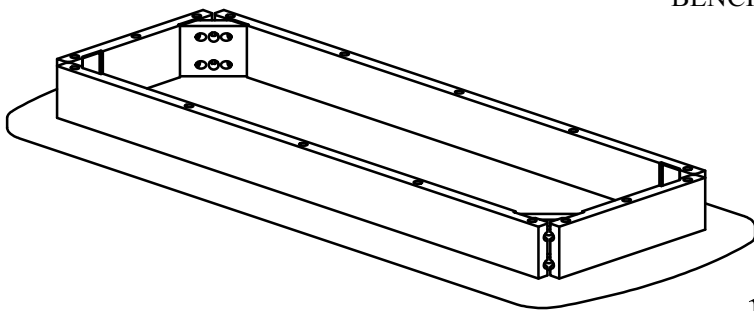

1pc

B


LEGS

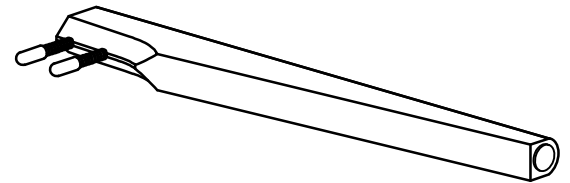

4pcs

1

HEXAGON NUT
Ø5/16"x11.8mmLx6mmL

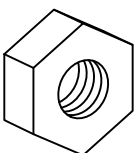


(Spare Hardware) 1pc

9pcs

2

FLAT WASHER
Ø5/16"x19mmL



(Spare Hardware) 1pc

9pcs

3

SPRING WASHER
Ø5/16"x12mmL




(Spare Hardware) 1pc

9pcs

4


WRENCH
88x22x2mmL

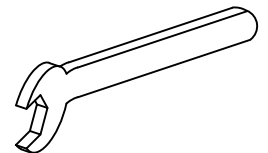


1pc

ASSEMBLY INSTRUCTIONS

STEP 1

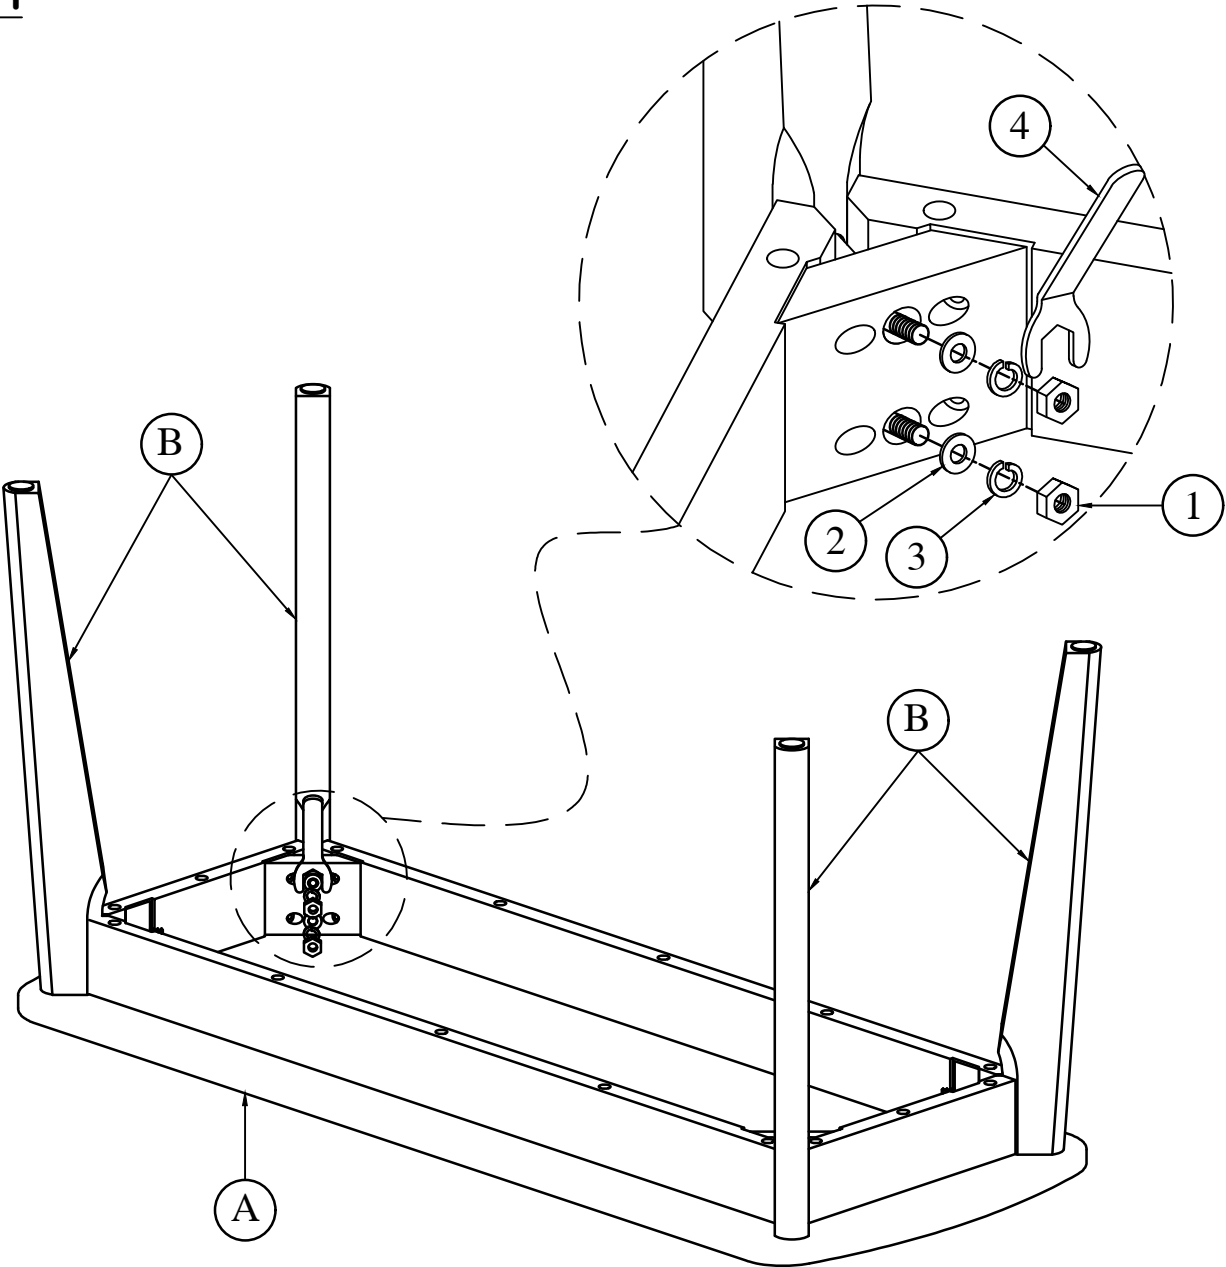

STEP 2

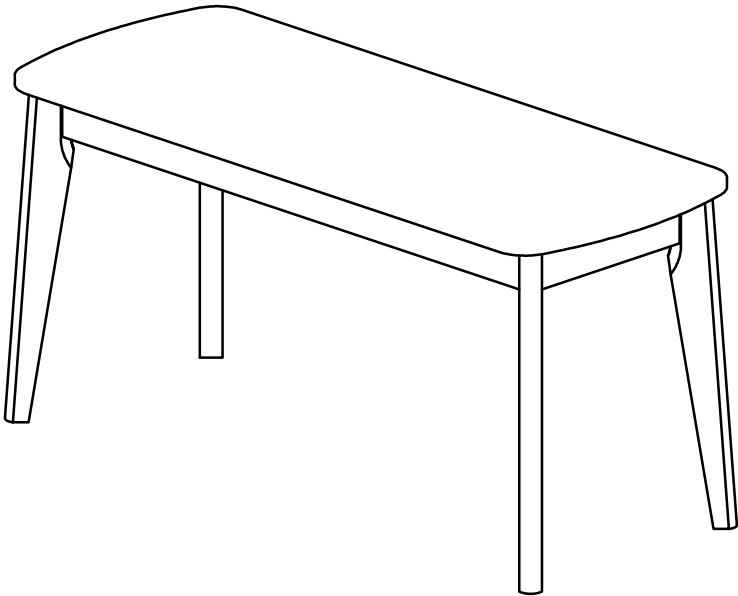

ASSEMBLY INSTRUCTIONS


Sub-item 2: W697P154074









IMPORTANT NOTE:

****PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.**

****BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.**


****DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.**

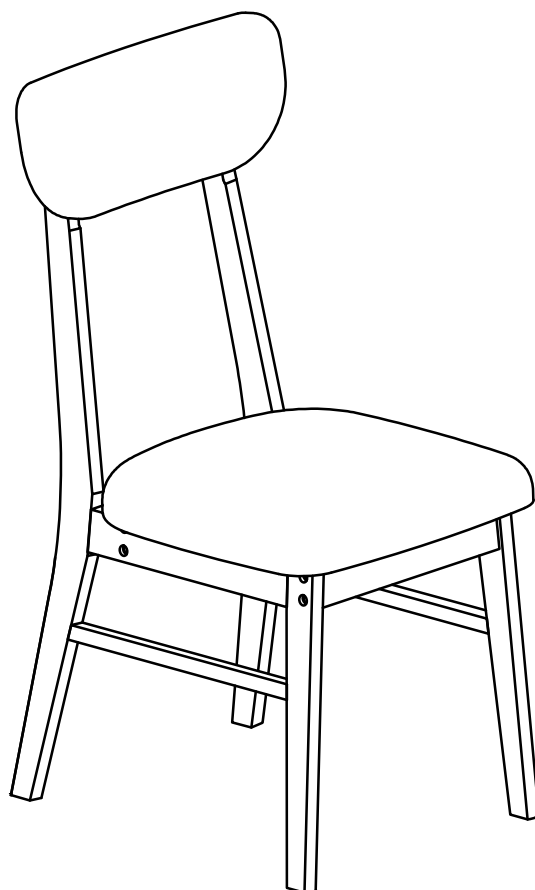

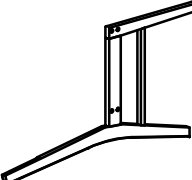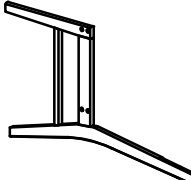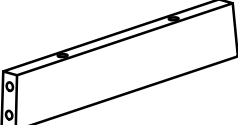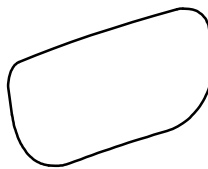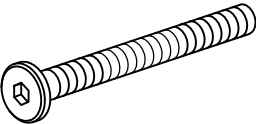
A LEG FRAME - L	B LEG FRAME - R	C HORIZONTAL STRECHER	D SEAT MATTRESS	E CHAIR BACK MATTRESS
 1pc	 1pc	 2pcs	 1pc	 1pc
1 BOLT Ø1/4"x55mmL  8pcs	2 HORIZONTAL-HOLE BOLTS Ø1/4"x40mmL  4pcs	3 BOLT Ø1/4"x45mmL  (Spare Hardware) 1pc 9pcs	4 FLAT WASHER Ø1/4"x13mmL  (Spare Hardware) 1pc 17pcs	5 ALLEN KEY 4x30x60mmL  1pc

ASSEMBLY INSTRUCTIONS

Step 1

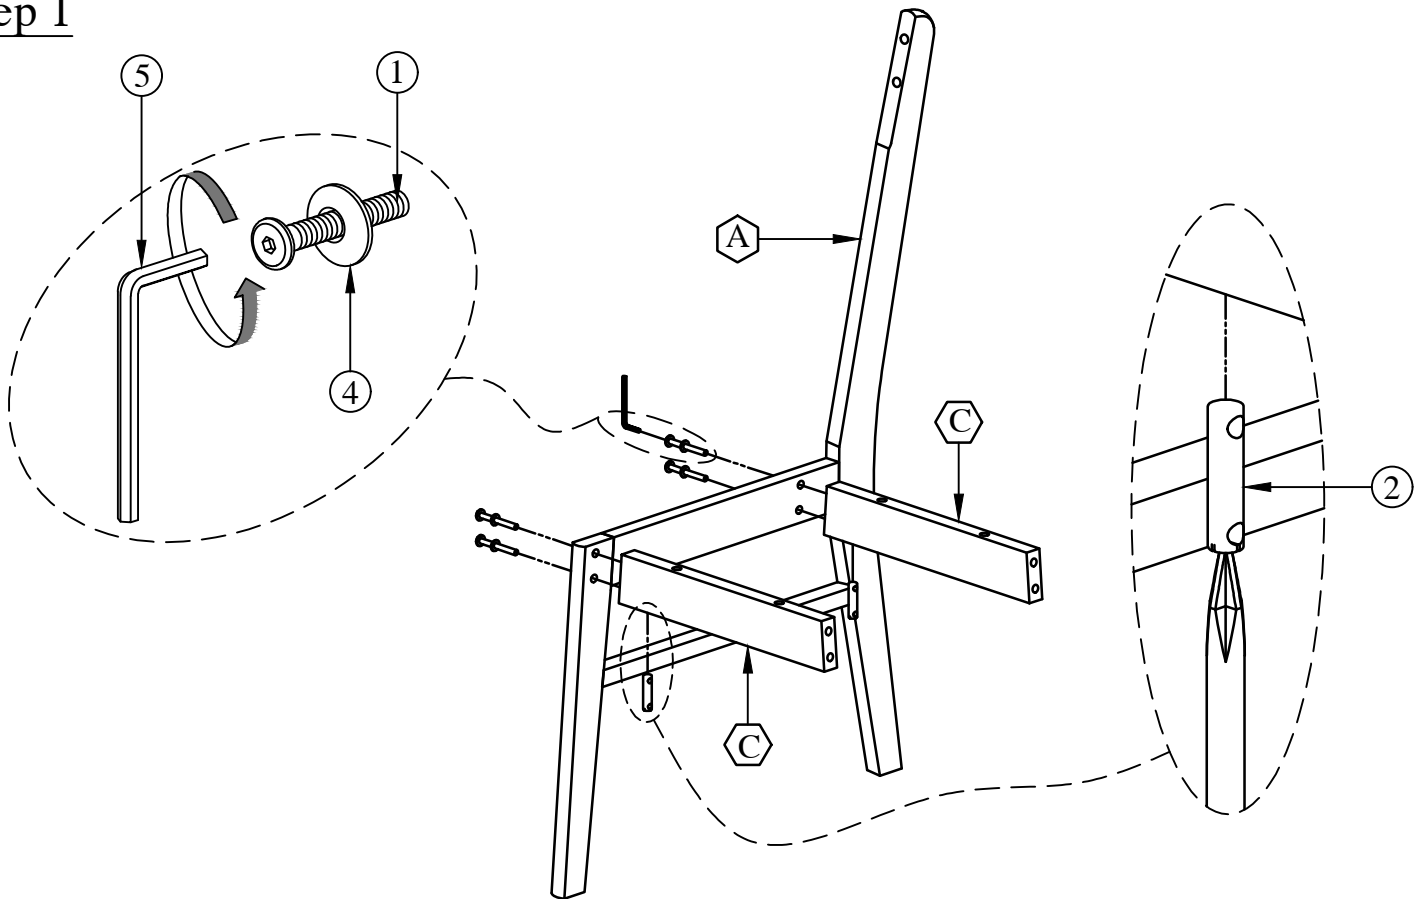


Step 2

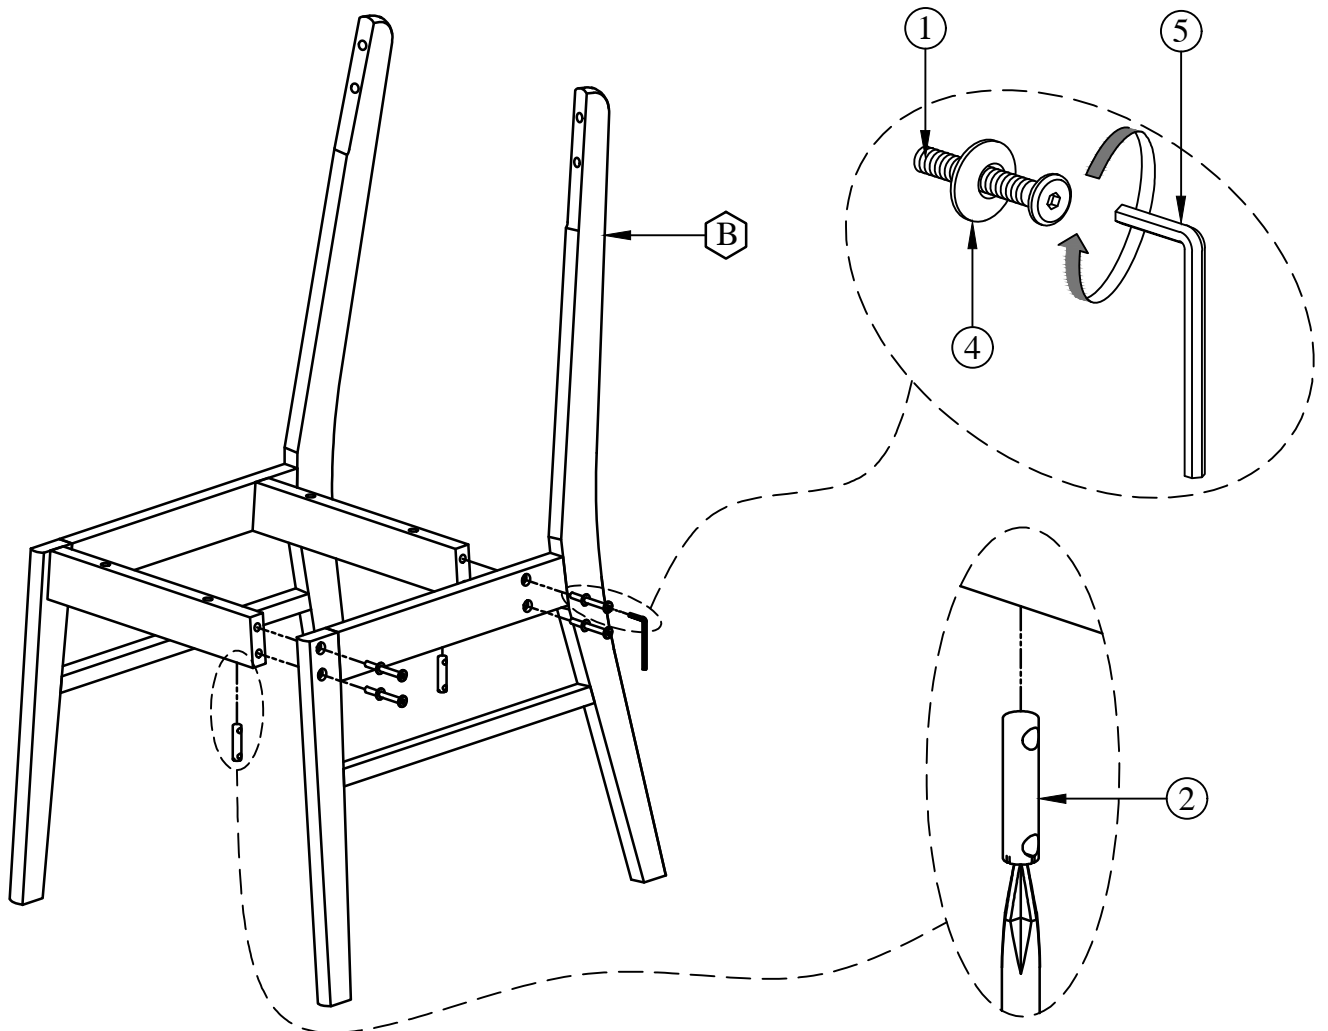


ASSEMBLY INSTRUCTIONS

Step 3

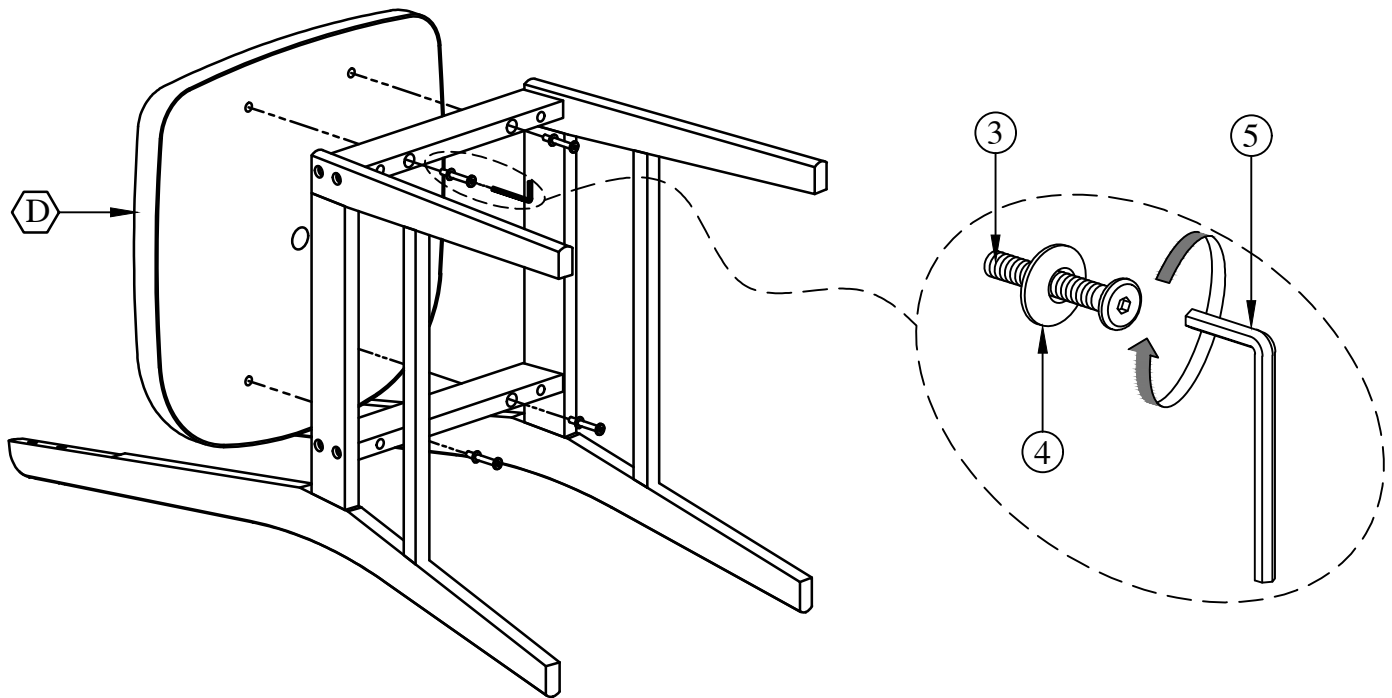


Step 4

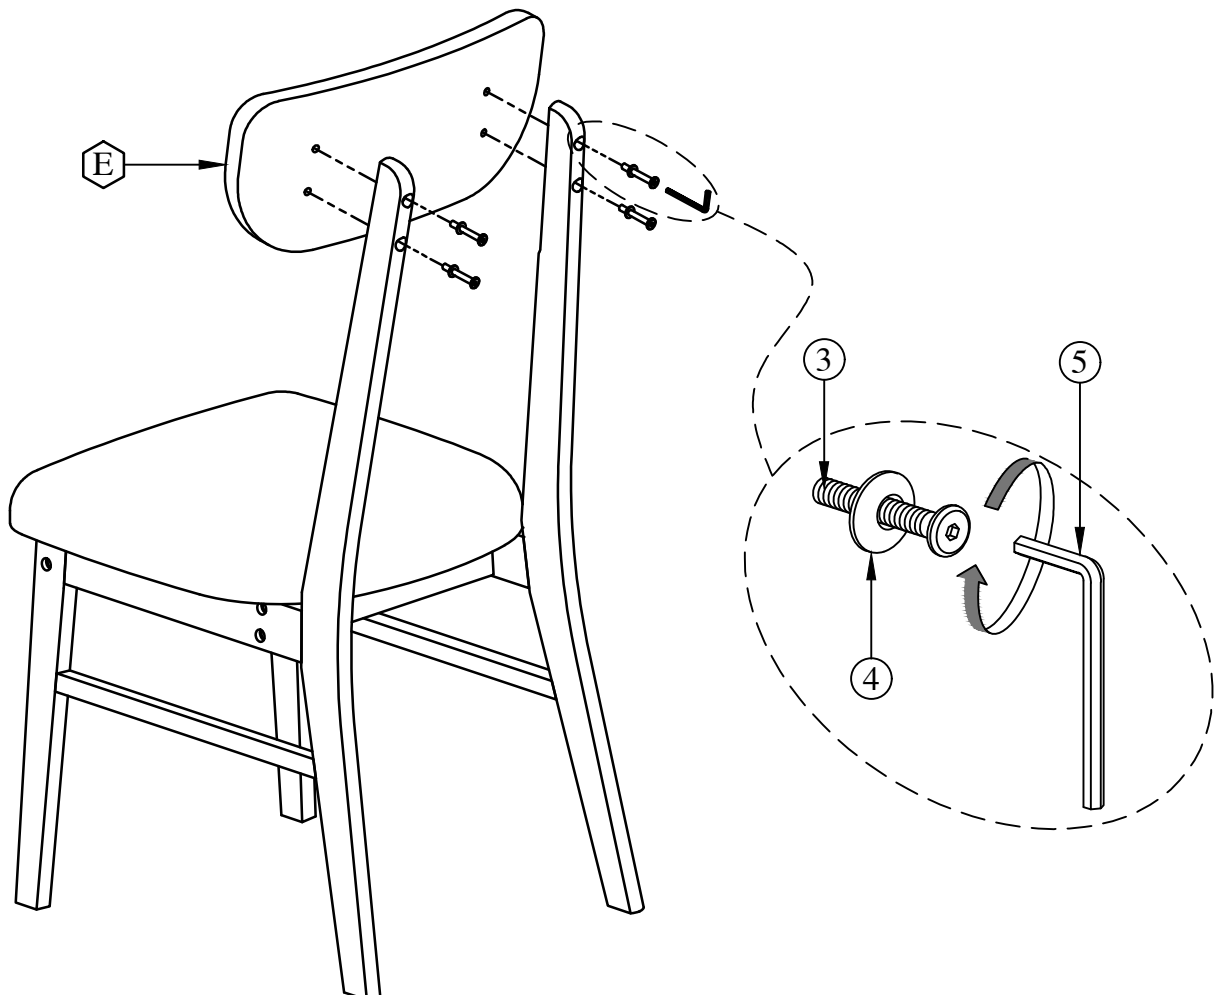

ASSEMBLY INSTRUCTIONS

Step 5

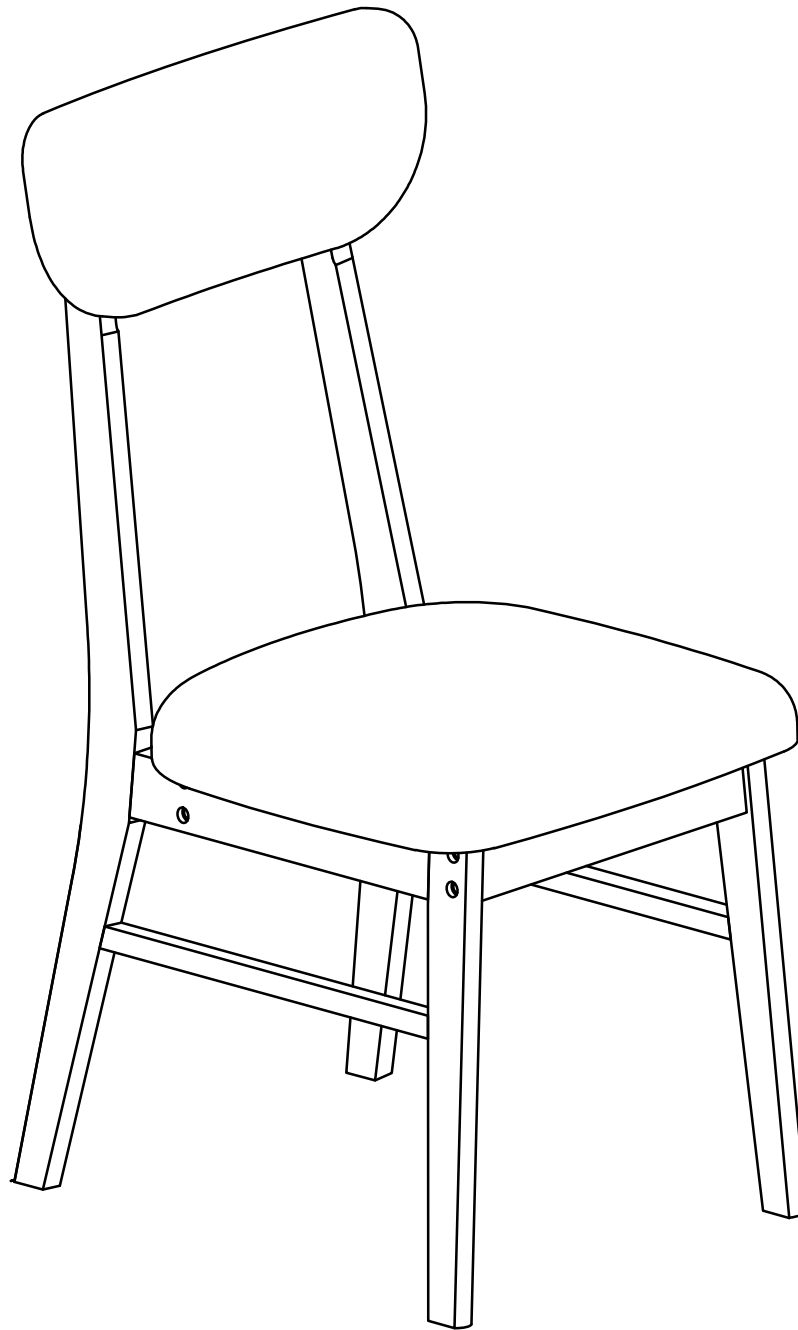

Complete