


# ASSEMBLY INSTRUCTION

## ITEM:N715P196580

### Sideboard

If you have any questions, please feel free to contact us.  
Email: [lowes.team@qualfurn.net](mailto:lowes.team@qualfurn.net)

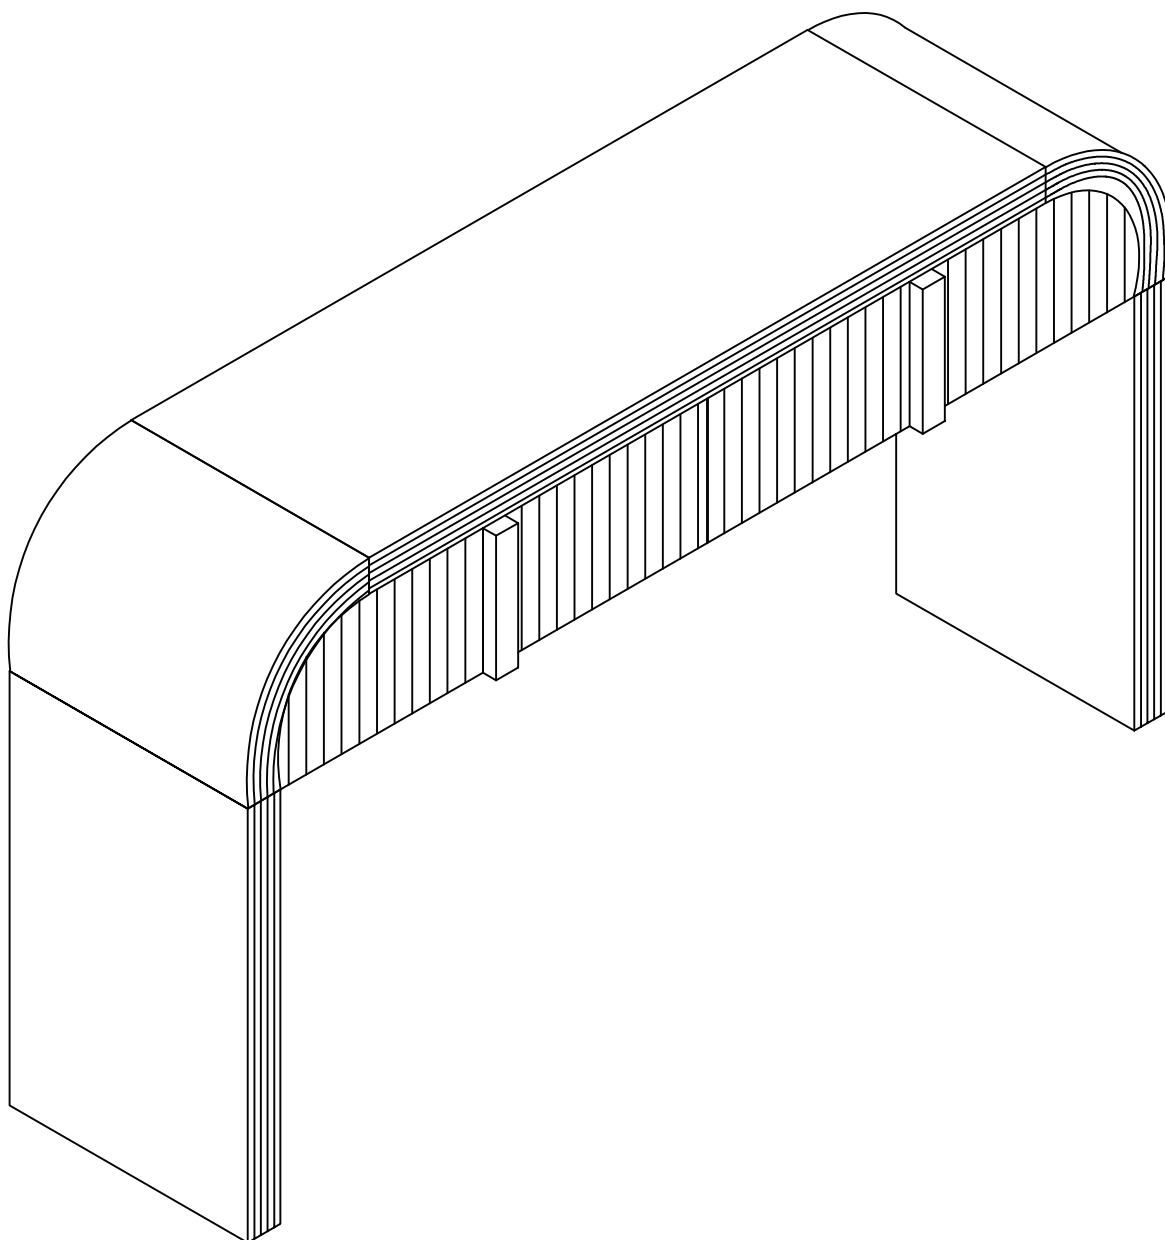

# ASSEMBLY INSTRUCTION

## ITEM:N715P196580

Please read these instructions fully before starting assembly :

Tools required: Phillips screwdriver(medium & large)


- 1.Check you have all the components and tools listed on the following pages.
- 2.Remove all fittings from the plastic bags and separate them into their groups.
- 3.Keep children and animals away from the work area, small parts could choke if swallowed.
- 4.Make sure you have enough space to layout the parts before starting.
- 5.During assembly do not stand or put weight on the product, this could cause damage.
- 6.Assemble the item as close to its final position (in the same room) as possible.
- 7.Assemble on a soft level surface to avoid damaging the unit or your floor.
- 8.Parts of the assembly will be easier with 2 people.
- 9.To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.
- 10.Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- 11.Regularly check and ensure That all bolts and fittings are tightend properly.
- 12.Please do not place items that exceed the load capacity.

### Care and maintenance

Only clean using a damp cloth and mild detergent,  
do no use bleach or abrasive cleaners.

# ASSEMBLY INSTRUCTION

## ITEM:N715P196580


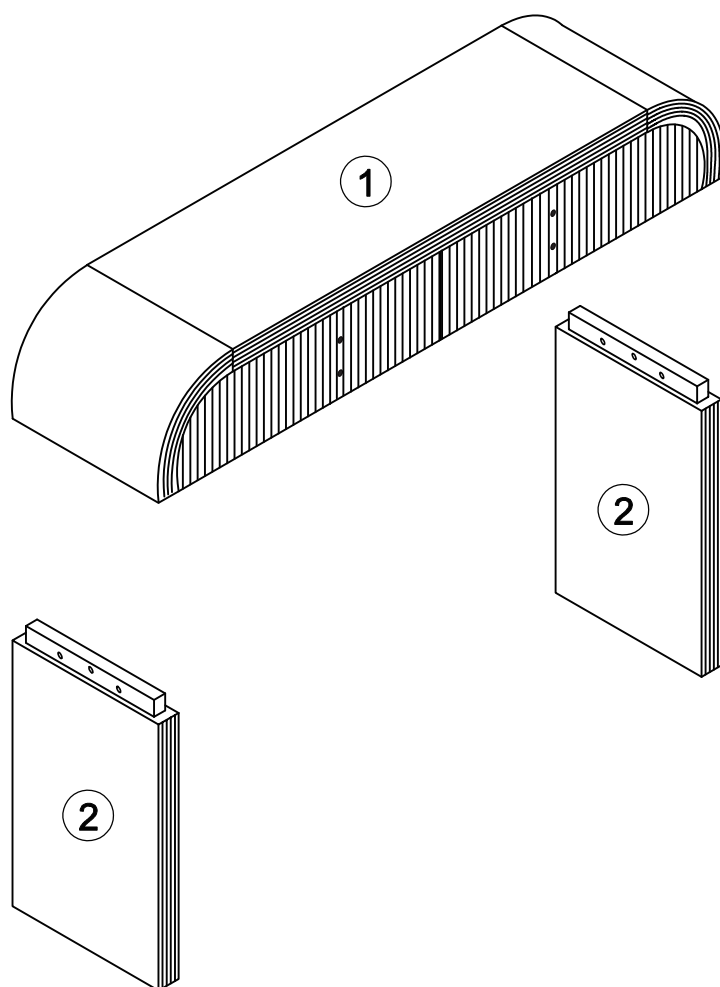


# Part List

## ITEM:N715P196580

Please check you have all the panels listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

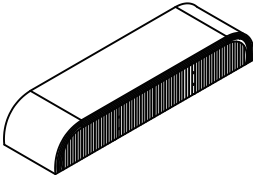










<div>1</div> <div></div> <div>Top Panel1 PC</div>	<div>2</div> <div></div> <div>Left &amp; Right Panel2 PCS</div>
--	--

# Hardware list

ITEM:N715P196580

Please check you have all the panels listed below



**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<div><div>A</div><div></div><div>8*50mm Screw x 6</div></div>	<div><div>B</div><div></div><div>B x 6</div></div>	<div><div>C</div><div></div><div>C x 1</div></div>	<div><div>D</div><div><div><div>x2</div><div>x4</div><div>x2</div><div>x2</div><div>x2</div></div><div>D1   D2   D3   D4   D5</div></div><div>Wall Fixing Pack</div></div>
<div><div>E</div><div></div><div>E x 6</div></div>	<div><div>F</div><div></div><div>6*35mm Screw x 4</div></div>	<div><div>G</div><div></div><div>G x 2      Handle</div></div>	

# ASSEMBLY INSTRUCTION

## ITEM:N715P196580

### Step 1

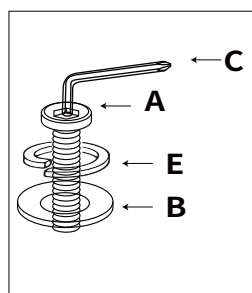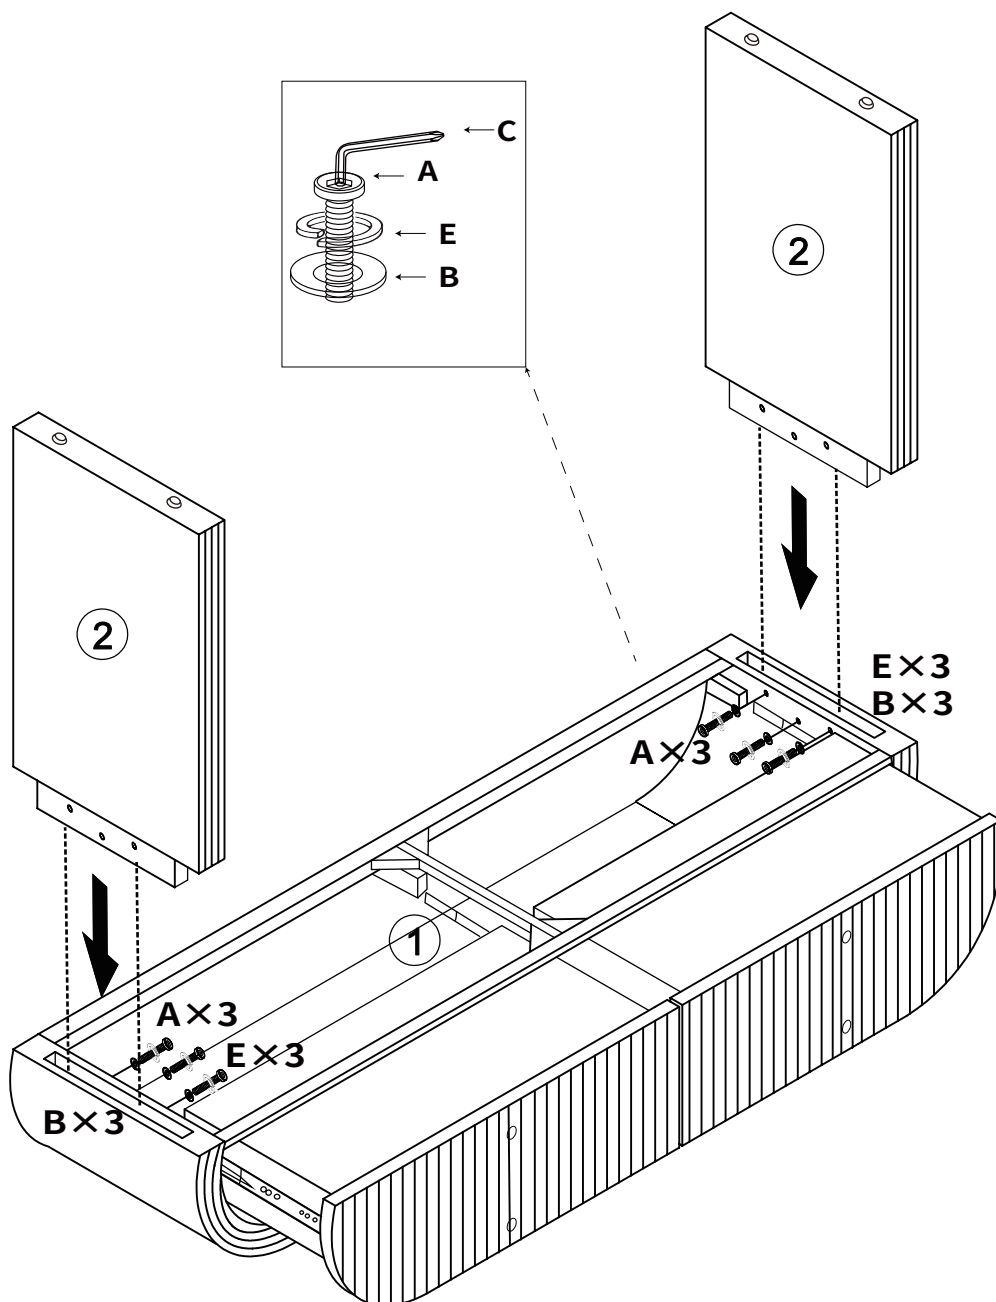

**A** 8\*50mm  
Screw x 6

**B** B x 6




**C** C x 1

**E** E x 6


# ASSEMBLY INSTRUCTION

## ITEM:N715P196580

### Step 2

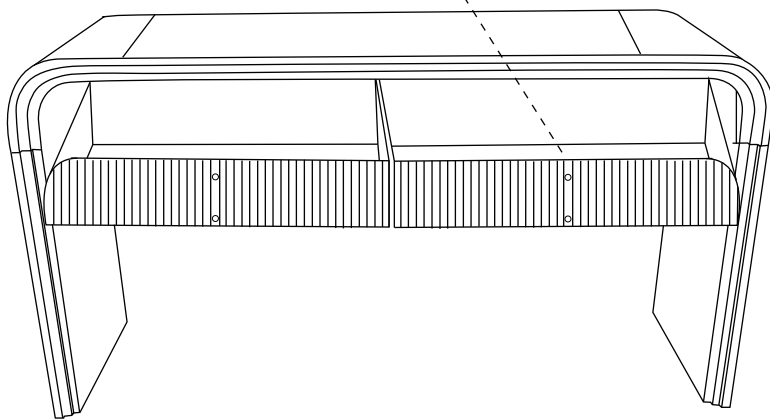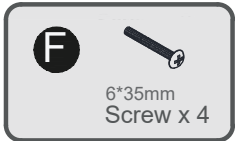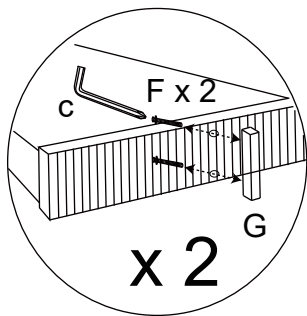

### Step 3

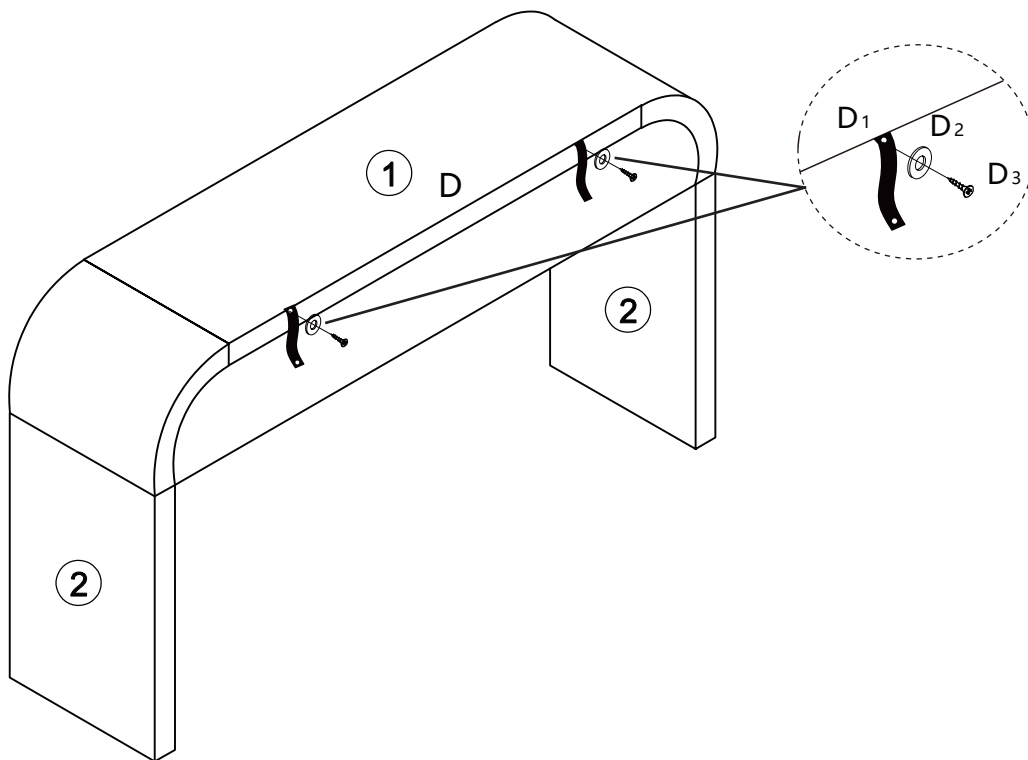

# ASSEMBLY INSTRUCTION

## ITEM:N715P196580

Step 4


**D**



D<sub>2</sub> X2

D<sub>4</sub> X2

D<sub>5</sub> X2

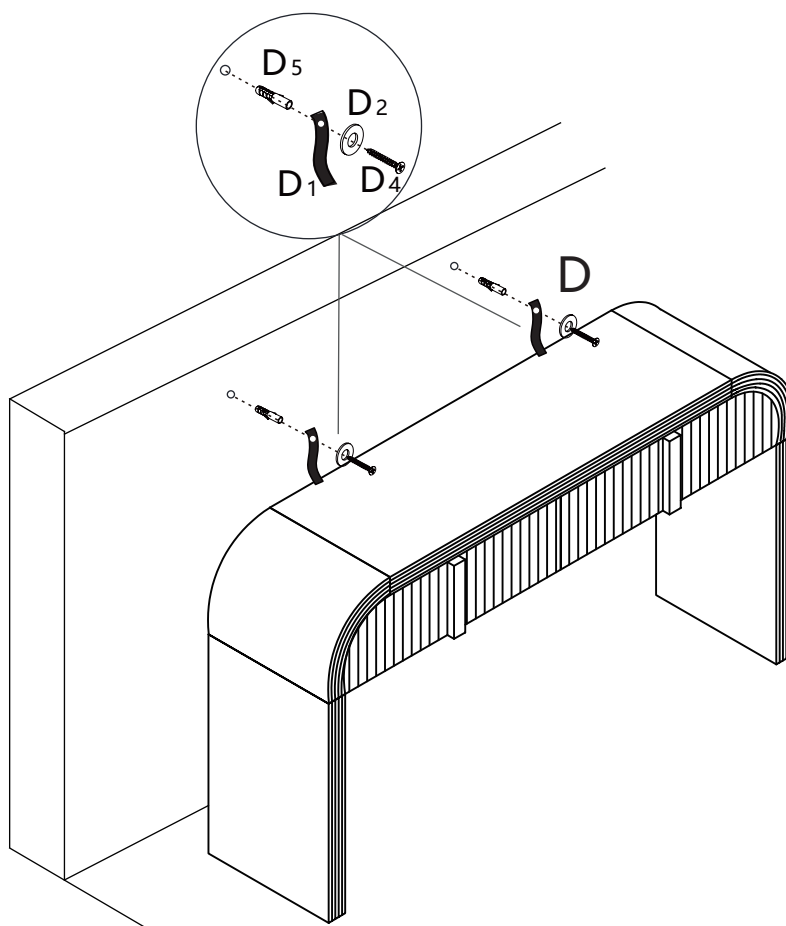

Assembly is complete.