
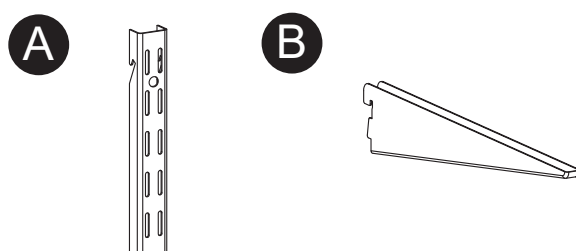
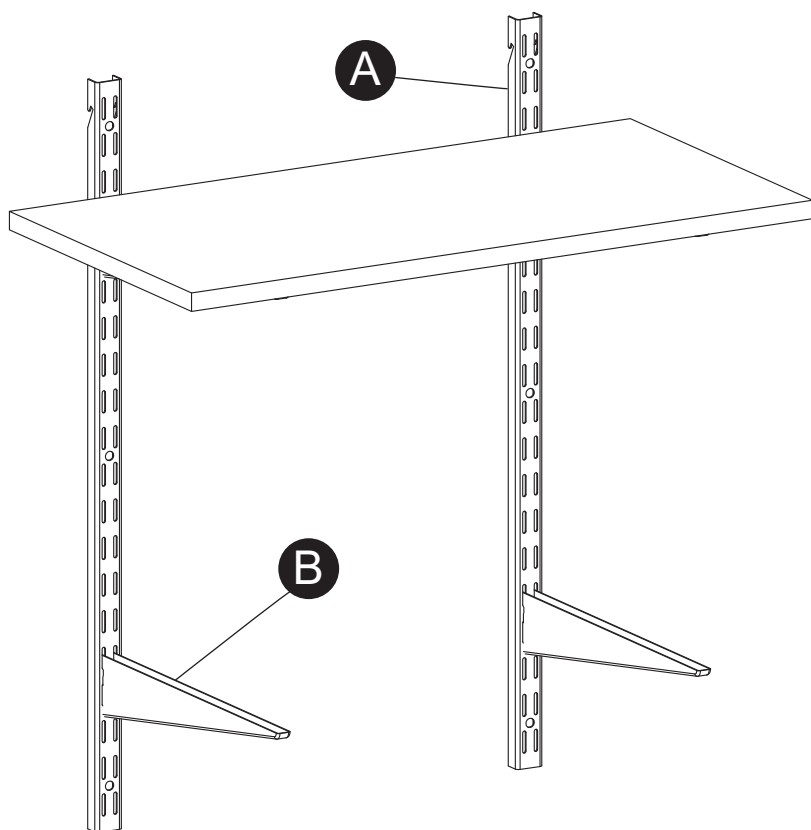


How to install double track uprights and brackets


Comment installer des montants et des supports à fixation double




Fasteners (sold separately): Fixations (vendues séparément) :

- AA**  Spring Anchor, M5x40mm
Ancrage à ressort, M5 x 40 mm
- BB**  P/H Screw, #12 x 2-1/2"
Vis P/H, no 12 x 2 1/2 po
- CC**  Anchor, 8x40mm
Cheville d'ancrage, 8 x 40 mm
- DD**  P/H Screw, #6 x 2"
Vis P/H, no 6 x 2 po
- EE**  P/H Screw, #6 x 1-1/4"
Vis P/H, no 6 x 1 1/4 po


1a For solid wood/wood stud installation
Pour une installation sur du bois massif ou des montants de bois

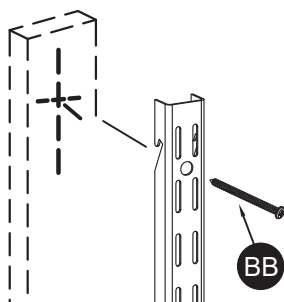


1b-1 For drywall installation
Pour une installation sur une cloison sèche

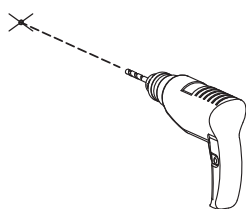


1b-2

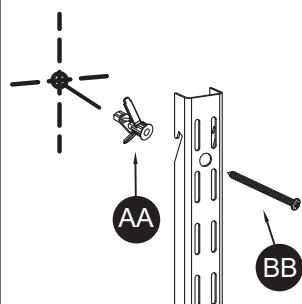


1c-1 For all other installation types
Pour tous les autres types d'installation

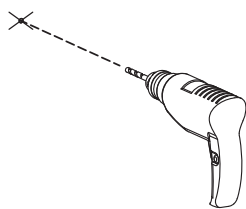

1c-2

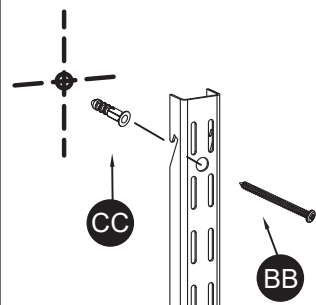

2

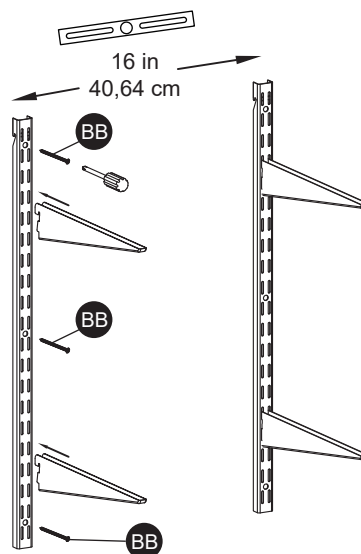

3

