



ARCHITECTURAL
MAILBOXES®


Wall Mount Mailbox | Model 2562

Mounting Instructions




IMPORTANT! This mailbox is intended to be mounted under an eave or another protected area.

Hardware (included)




x 4, screws



x 4, plastic anchors

Tools (not included)

One Drill

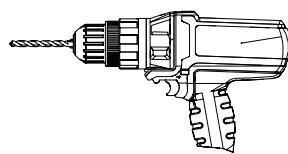

One Phillips Screwdriver




One Drill Bit




1/4" masonry bit or 1/16" wood bit

1 Using the guide on the back of these instructions, mark the wall at the center of each crosshair. Use a level to ensure a straight installation (optional).

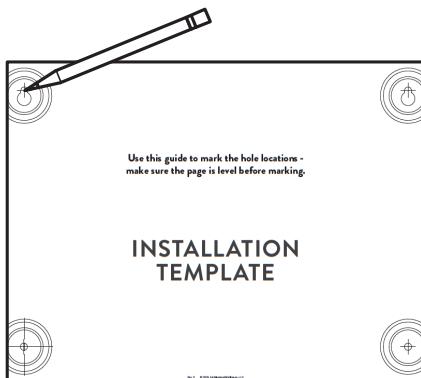

2 Drill into the wall at each marked location. Use a 1/4" drill bit for brick or other masonry wall. Use a 1/16" drill bit for wood wall.

1/4" masonry bit
- or -
1/16" wood bit

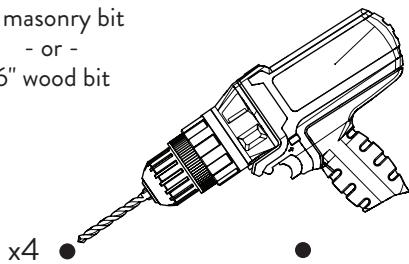

x4


3 Skip this step if installing into wood.

Insert the included plastic anchors into the drilled holes. Gently tap them in if necessary.



x4

4 Insert the screws into the top two drilled holes and secure with a screwdriver. Hang the mailbox onto the secured screws using the top eyelet holes on the back of the mailbox.

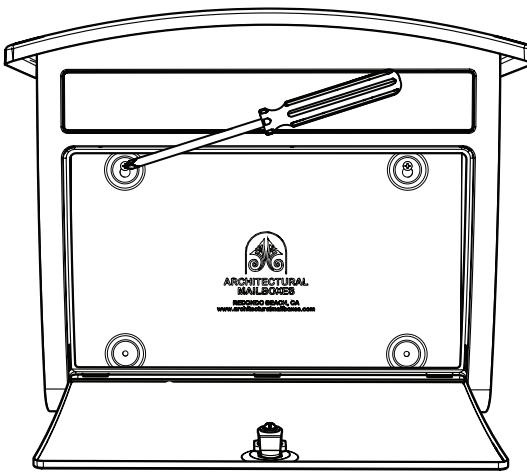

5 While the mailbox is hanging on the top screws, insert the remaining two screws into the bottom holes and secure with a screwdriver.

Questions, Comments, Concerns?

www.architecturalmailboxes.com

support@architecturalmailboxes.com

Need keys? Visit us at...

www.architecturalmailboxes.com/keys

Find us on social media!



@archmailboxes

**Use this guide to mark the hole locations -
make sure the page is level before marking.**

INSTALLATION TEMPLATE