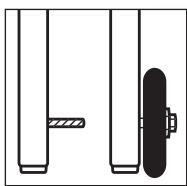
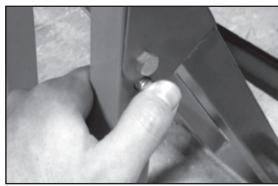
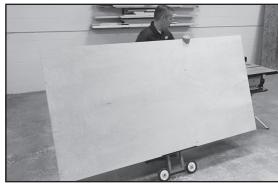
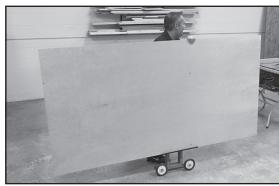


**PM-1800
PANEL CARRIER
USER MANUAL****1** Install Wheels

3 Flip up tray to horizontal, adjust horizontal height until it is level with the height of your table saw

**5** Push down on latch handle to collapse tray**7** Collapse legs by pushing in the spring pin**9** Unfold legs, ensure pin snaps into place**11** Make your cut**2** Flip out legs, ensure pin snaps into place**4** Tighten knobs**6** Place board on tray, make sure it is centered**8** Place the panel carrier next to the table saw**10** Flip up board to horizontal, ensure latch snaps into place

**MOVE YOUR
MATERIAL
WITH EASE**

**800-624-2027
PORTAMATE.COM**

an **AFFINITY** TOOL WORKS company

©2015 Affinity Tool Works, LLC