




WESTPORT
4 FT VINYL
GATE
(48"H X 48"W)

**ASSEMBLY
INSTRUCTIONS**
BL19106

60 MIN

Approximate assembly time

Want to see a video on how
to assemble this product?
Scan the QR code

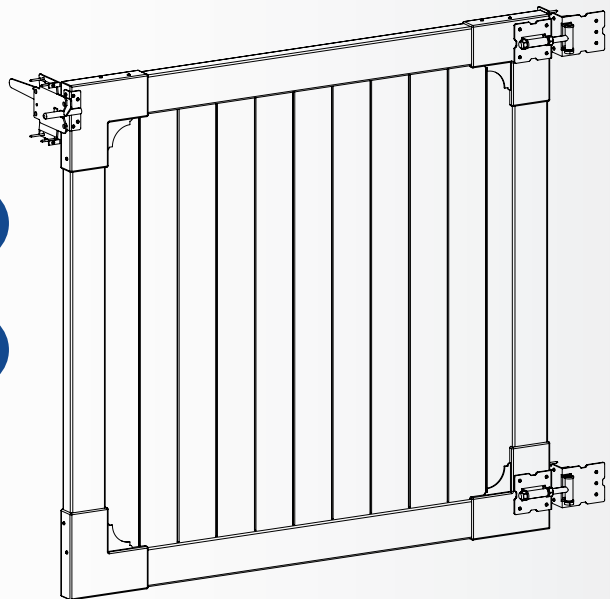

GENERAL INFORMATION

MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**
so we can help you right away!
parts.nychbrands.com

* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following**

- Your product number (**BL19106**)
- Your affected part letters
- Your original product box

NEED ASSEMBLY HELP?

If you are having problems with assembly or installation of this product,
please contact at:

📞 **704-892-5222 / 877-234-6196** ✉ **hmmm@wambamfence.com**

NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

GENERAL

1. Read over fence instructions first.

Your gate and fence will work better together if you first take the time to read and understand your fence.

2. Pre-assemble the gate frame.

Please do not screw the gate frame together until you have temporarily assembled the gate frame. In other words, do a dry run first. This will ensure:

1. That you have everything necessary to complete the gate.
2. That you will have assembled the gate frame in the correct order.
3. All of the pieces fit and function properly.
4. The gate height and width are similar to the measurements shown on page four.


It's easier to troubleshoot when things are not screwed together. After you assemble your gate correctly, please disassemble as necessary, and use the 1¼" self-drilling stainless steel screws to permanently assemble the gate.

3. Install your gate posts before your fence posts.


Your fence panels will be more forgiving for a custom fit than your gate. Position and install your gate posts before you do anything else.

4. Do not hang your gate system off a single non-supported post.

Your gate will perform better and last longer if your hinge post is connected to a panel of fence that is connected to another post. This way, the weight strain will be transferred onto two posts versus just one. Installing fence panels on both sides of your gate is ideal in all situations. If this is not possible because of space restrictions, please contact us for alternative solutions.

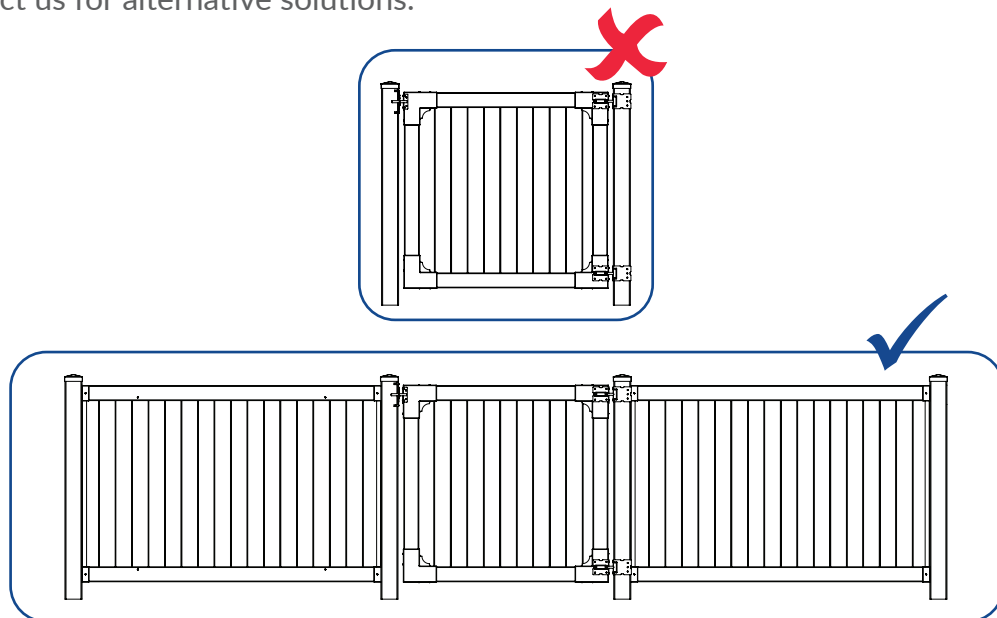

DETAILED PRODUCT DIMENSIONS AND SPECIFICATIONS

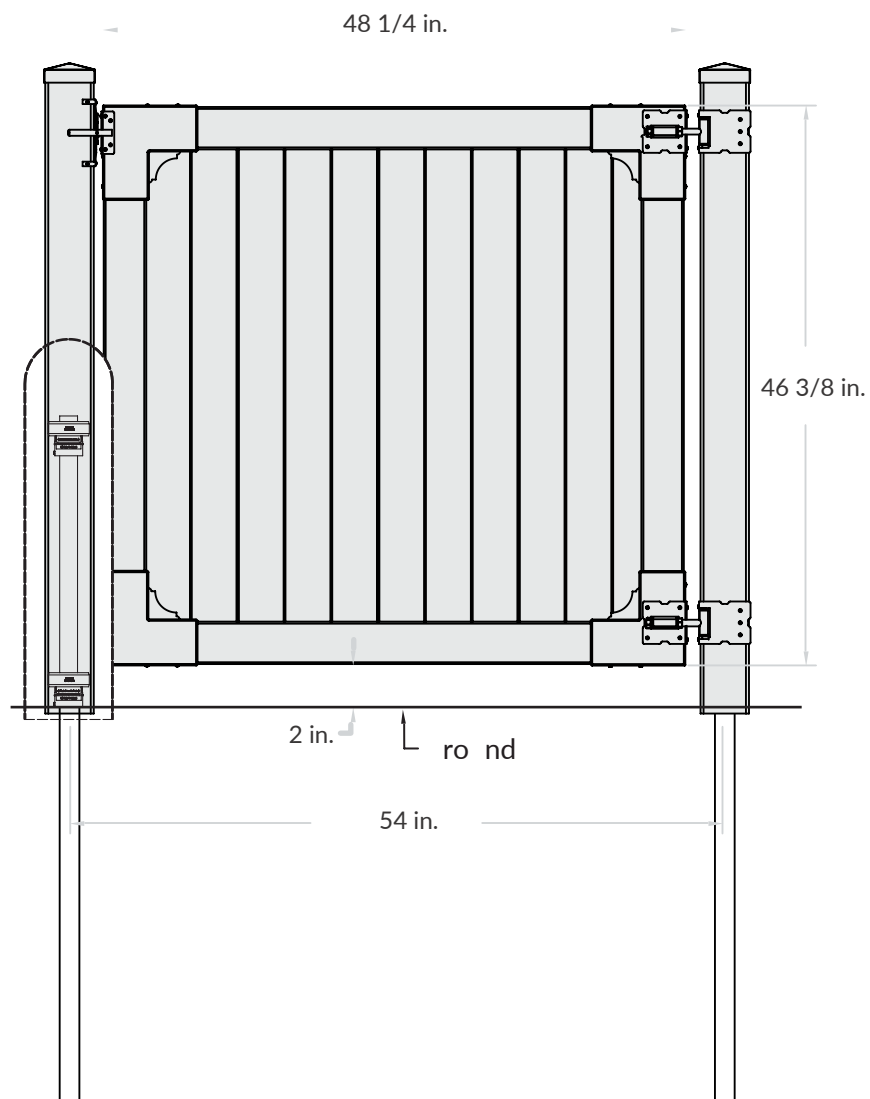


STEP 1: LAY OUT MATERIALS

► Tools required for a smoother installation experience.


► Drill



► Wood Blocks

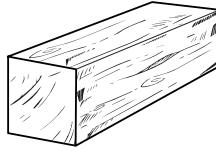

A ►

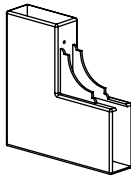


Gate Bracket (4)

B ►



1¼" Self-Drilling
Stainless Steel
Screw (16)


G ►

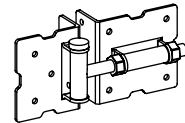


Hinge with Fasteners (2)
with 1¼" Black Stainless
Steel Screws (26)

C ►

Rail (2)
1½" x 3½" x 47¾"

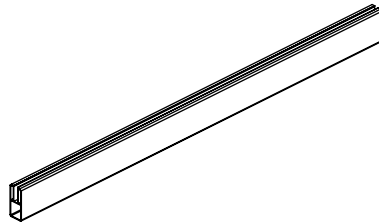

H ►

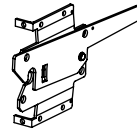

Latch Catch (1) with 1¼"
Black Stainless Steel
Screws (6)

D ►




Vertical Stile (2)
1½" x 3 ½" x 38 ⅞"

E ►




Trimmed Board (1)
½" x 9 ½" x 42 ⅜"

F ►




Boards (3)
½" x 12" x 42 ⅜"

I ►

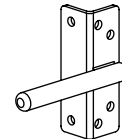

Latch Finger (1) with
1¼" Black Stainless Steel
Screws (6)

J ►




4" Tension Pin (2)

STEP 1: ASSEMBLE GATE FRAME

STEP 2.1 ▶


▶ Insert the Rail (C) all the way into the Gate Brackets (A) until it hits the corner of the gate bottom bracket as illustrated. Ensure the bottom rail hits the back of the bottom brackets as illustrated.

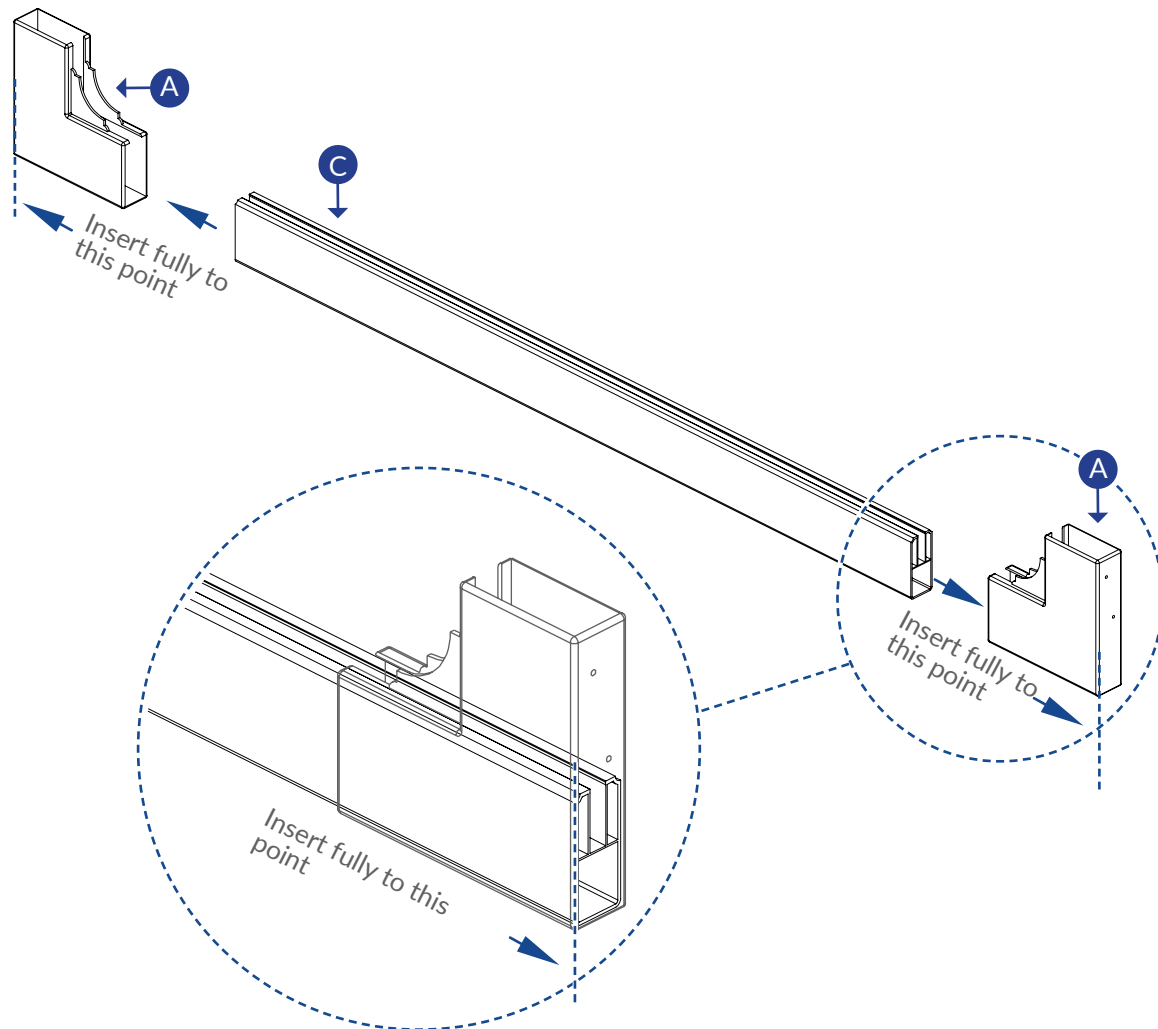

IMPORTANT: Light force may be required to push the rail to the back of the bracket.


STEP 2.2

- Insert (2) Vertical Stiles (D) into the gate bottom brackets until they hit the bottom rail.

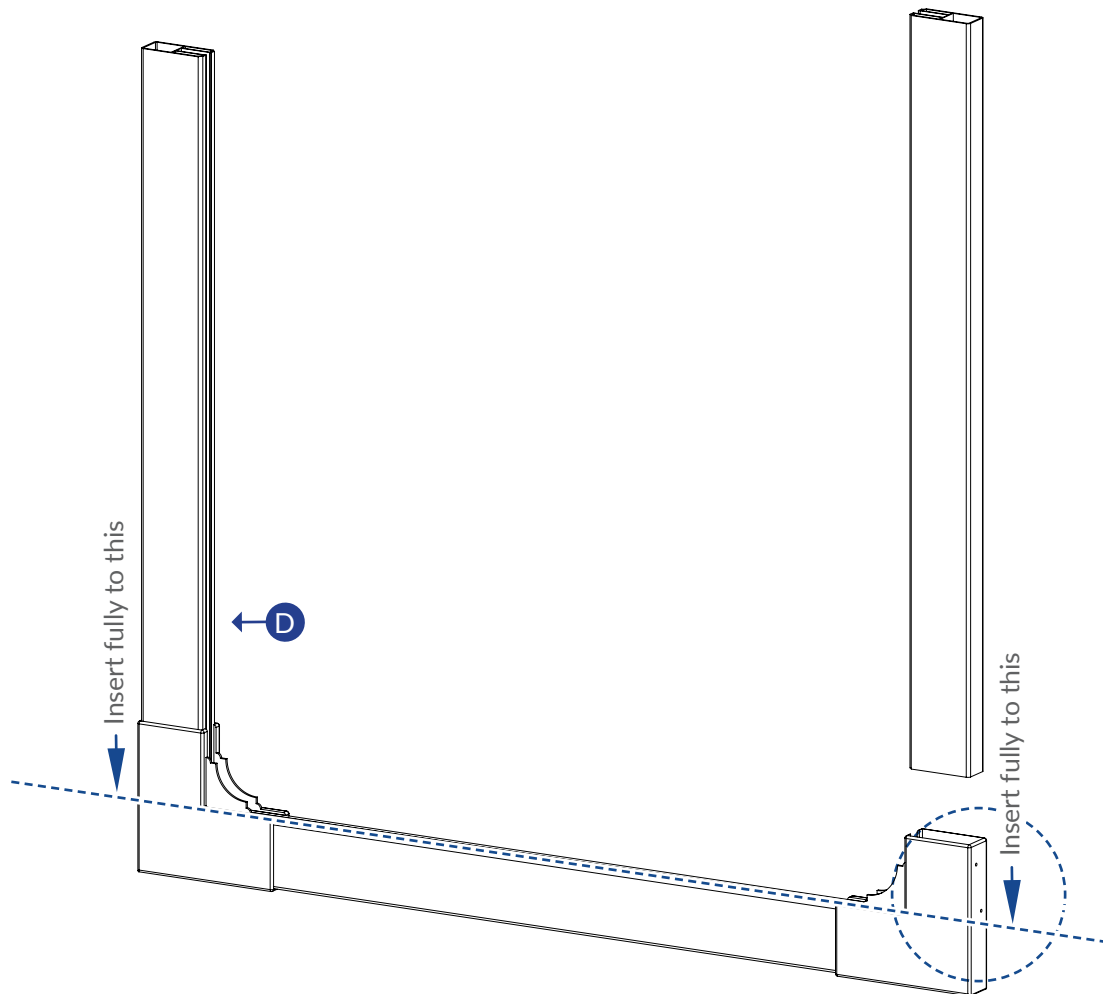


STEP 2.3)▶

► Insert (1) Trimmed Board (E) and (1) Board (F) into the side vertical stiles followed by (2) middle Boards for simplest install.

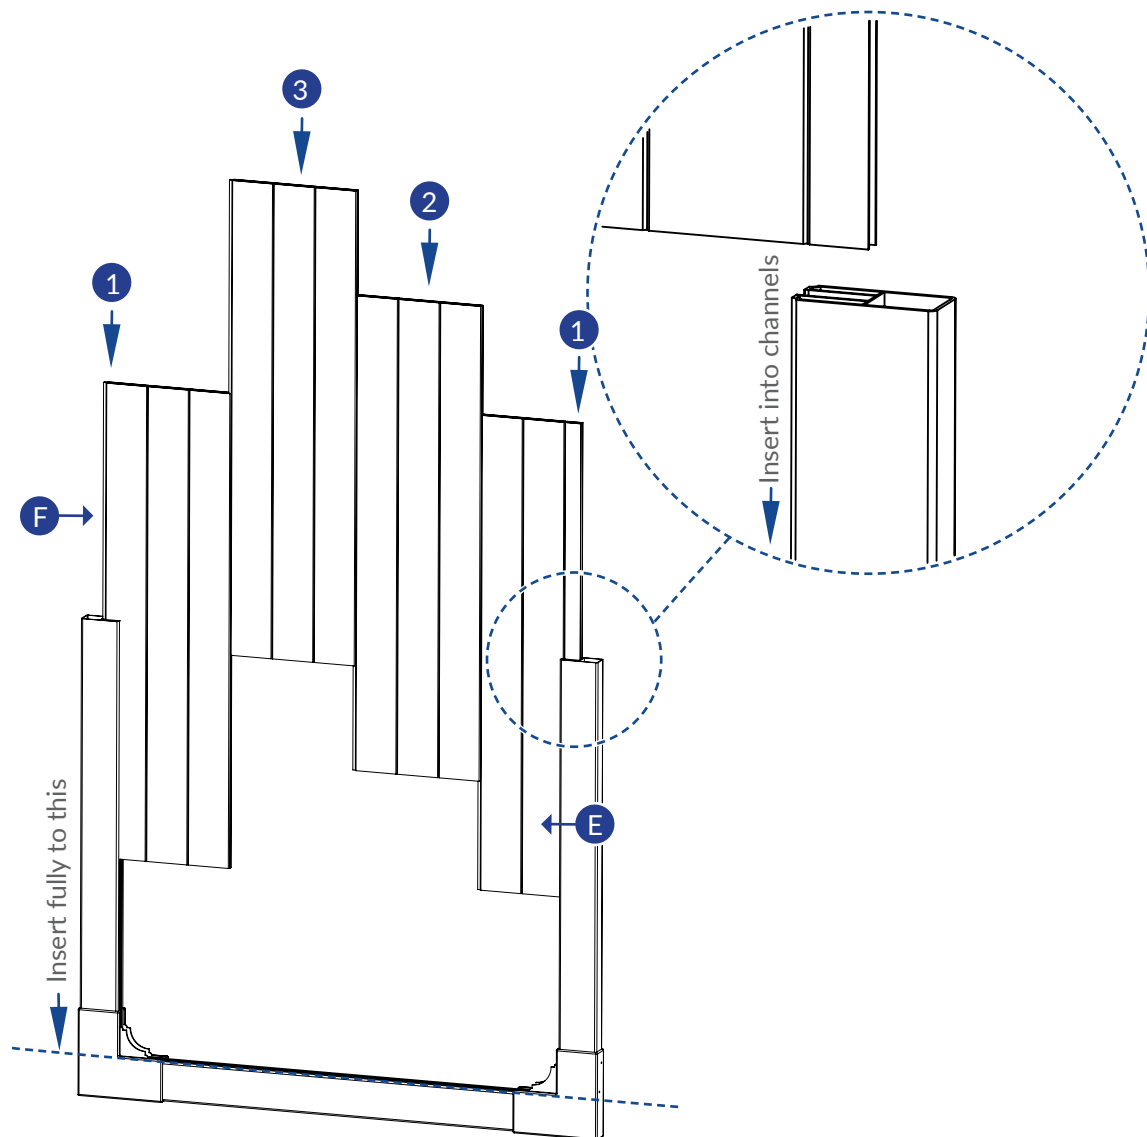


STEP 2.4

► Insert the Top Rail (C) all the way into the Gate Brackets (A) until it hits the corner of the gate bottom bracket as illustrated. Ensure the top rail hits the back of the brackets just as you did in step 2.1.

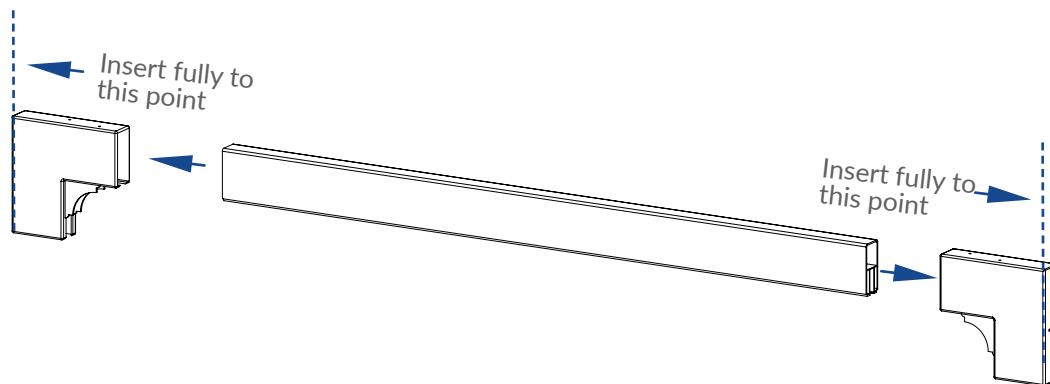**STEP 2.5**


► Fit your finished Top Rail & Gate Brackets over top of your gate. Ensure it is pushed down snug into the channels.

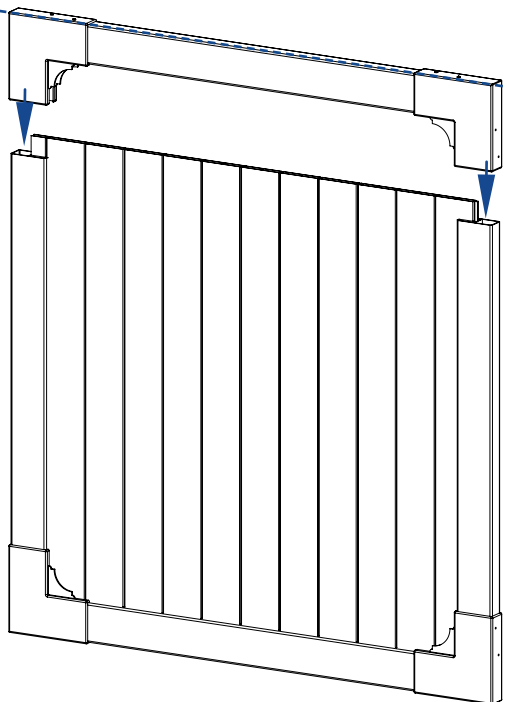


STEP 3: FASTEN GATE HINGES AND LATCH FINGER

STEP 3.1

- ▶ Secure each gate bracket with (4) 1¼" Self-Drilling Stainless Steel Screws to hold your frame together.

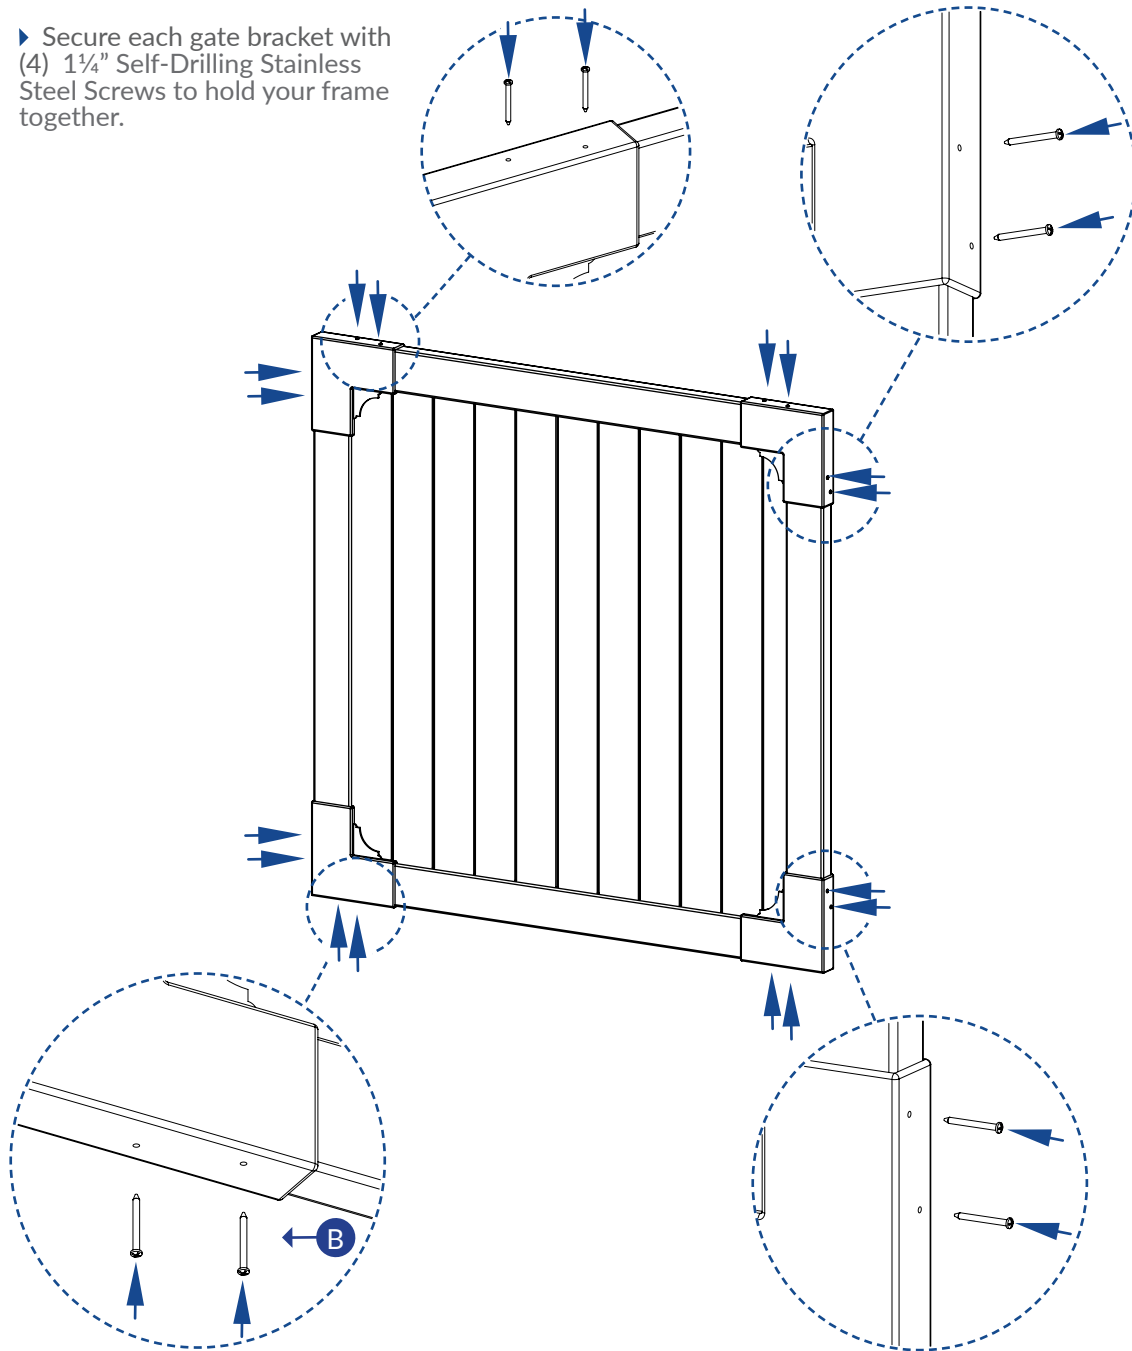

STEP 3.2

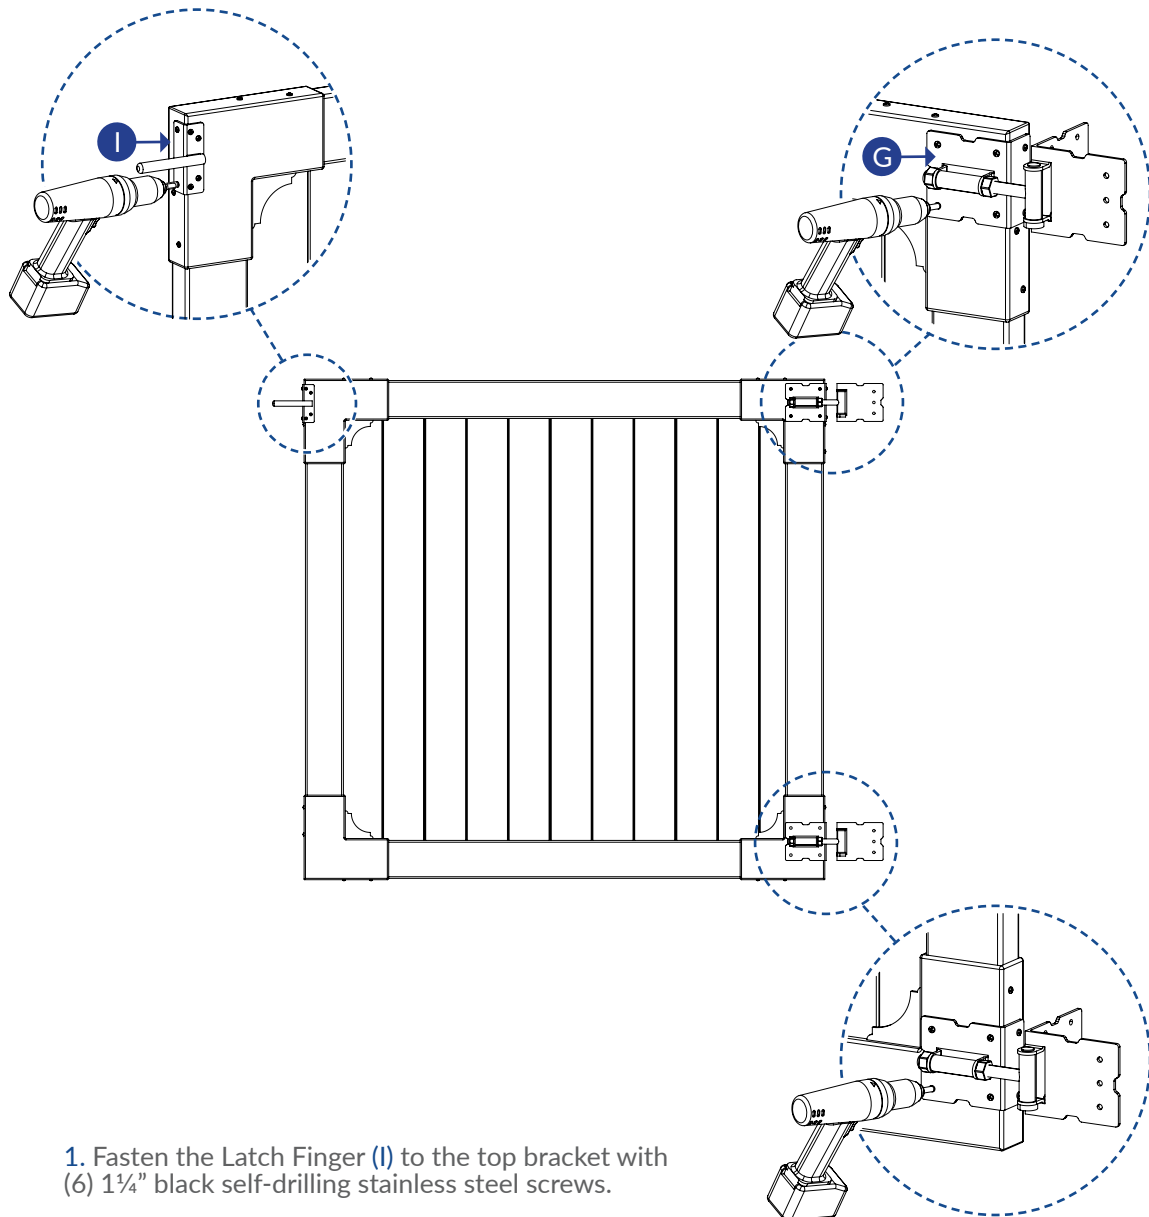


1. Fasten the Latch Finger (I) to the top bracket with (6) 1 ¼" black self-drilling stainless steel screws.
2. Fasten the Hinge (G) to the front of the gate brackets with (8) total 1 ¼" black self-drilling screws.

STEP 4: ALIGN AND SECURE GATE HINGES TO POST

STEP 4.1


► Use temporary spacers or wooden blocks to rest the gate on during alignment and installation. Fasten the gate hinges to the post using (6) 1¼" black stainless steel screws.

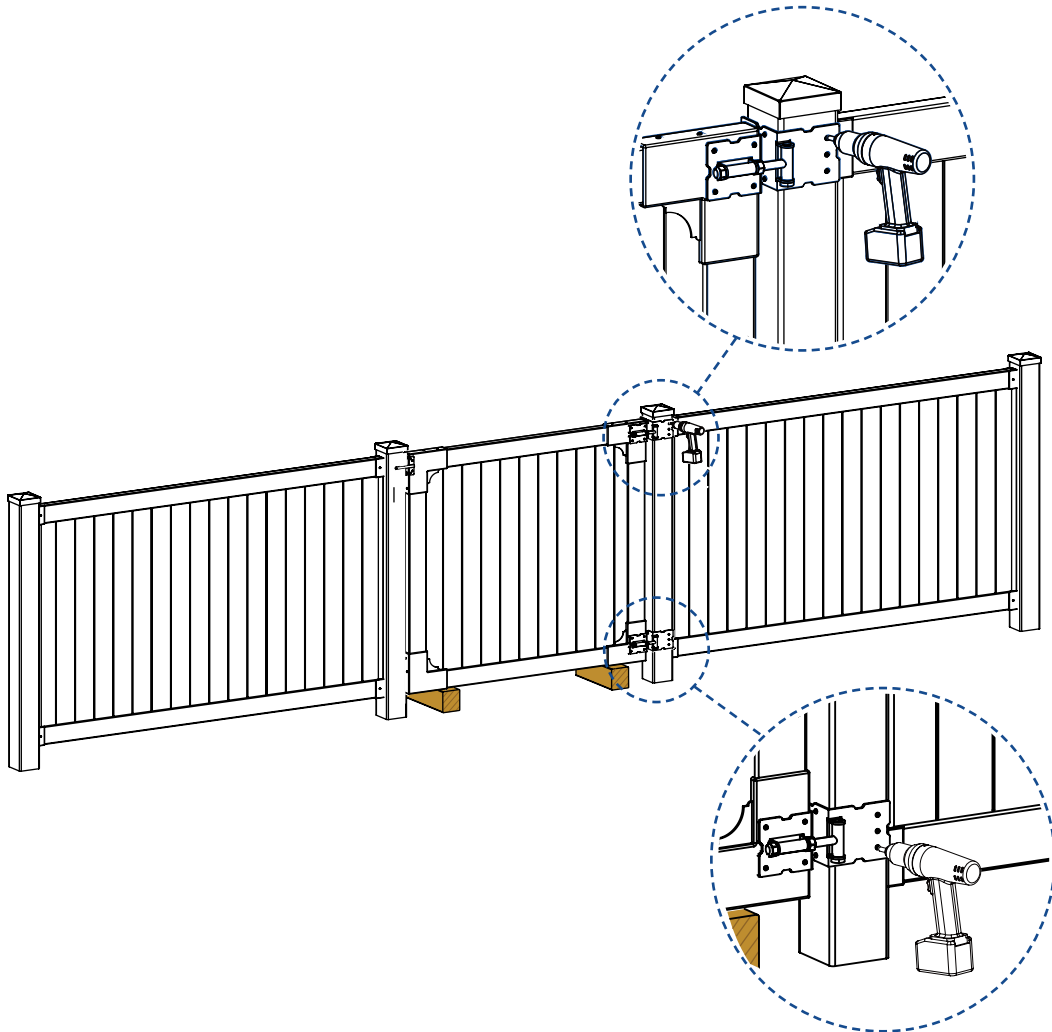

STEP 4.2

1. Fasten the gate hinges to the inside of the fence post with (8) total 1¼" black self-drilling stainless steel screws by swinging the gate out as illustrated.


2. Fasten the hinges to the inside of the gate brackets with (4) total screws.

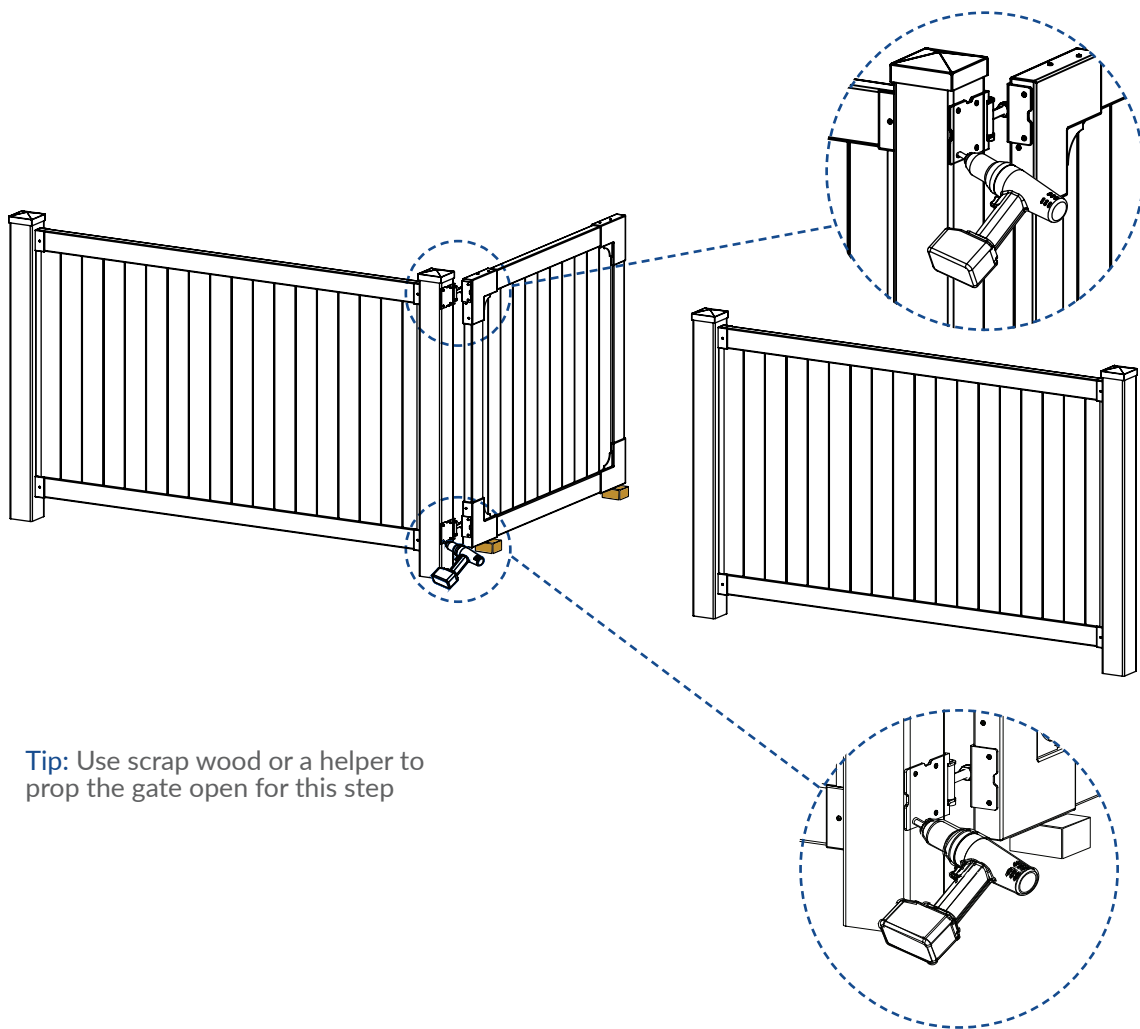

STEP 5: LEVEL GATE AND ADJUST HINGES

STEP 5.1 ▶


- ▶ Level the gate to the fence post. Check the gate to make sure it functions correctly.

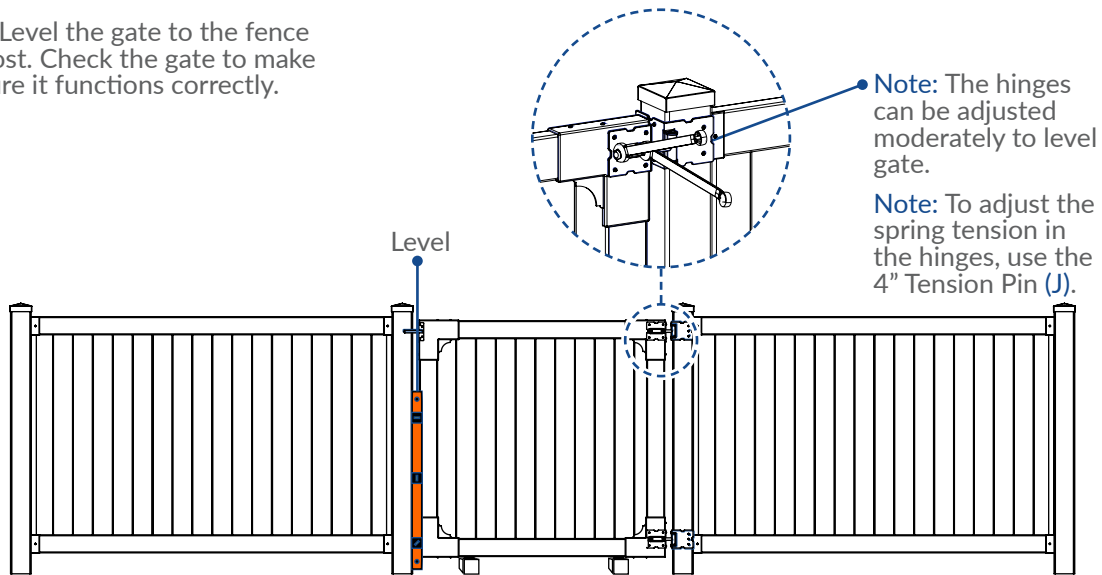

STEP 6: ALIGN AND INSTALL LATCH

STEP 6.1 ▶

- ▶ Align and fasten the Latch Catch (H) with (6) 1 1/4" black self-drilling stainless steel screws.

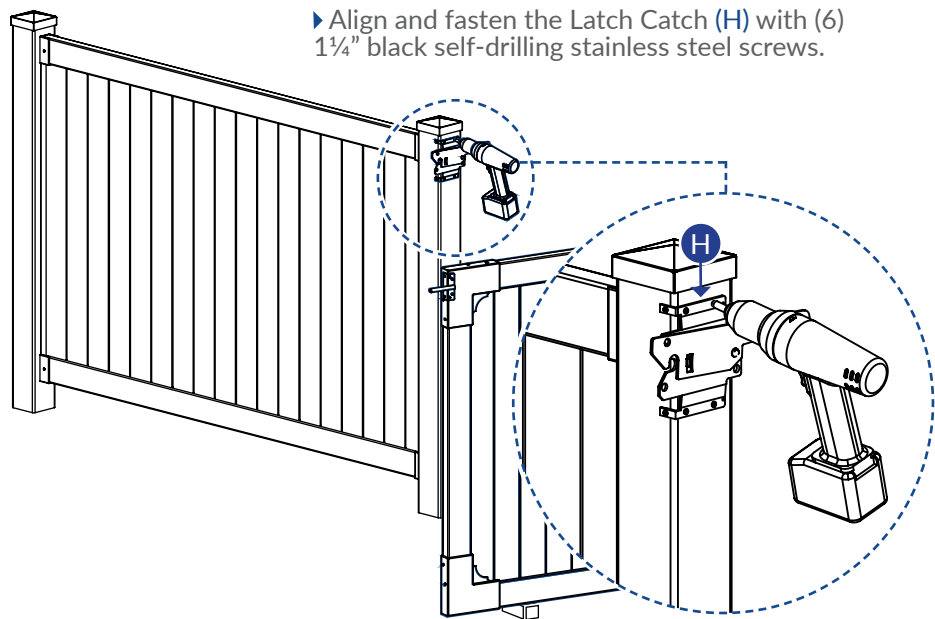



6935 Reames Rd. Ste.
K.



hmmm@wambamfence.com

704-892-5222
877-778-5733



WWW.WAMBAMFENCE.COM