



# Metal Platform Bed Frame

## Instruction Manual

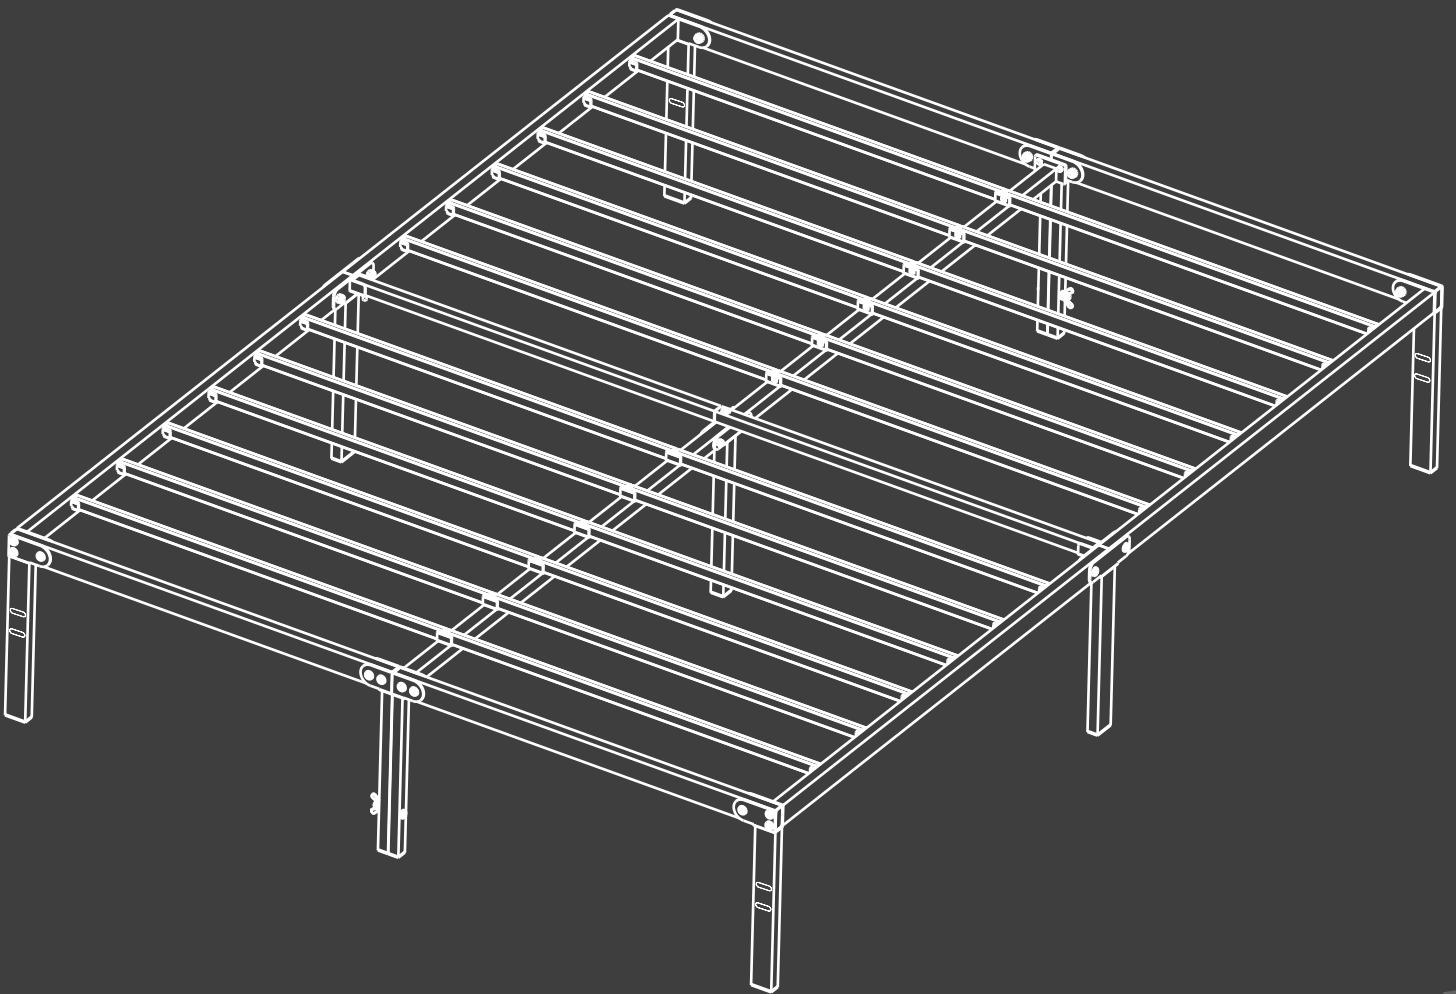

# 1 Component List


---

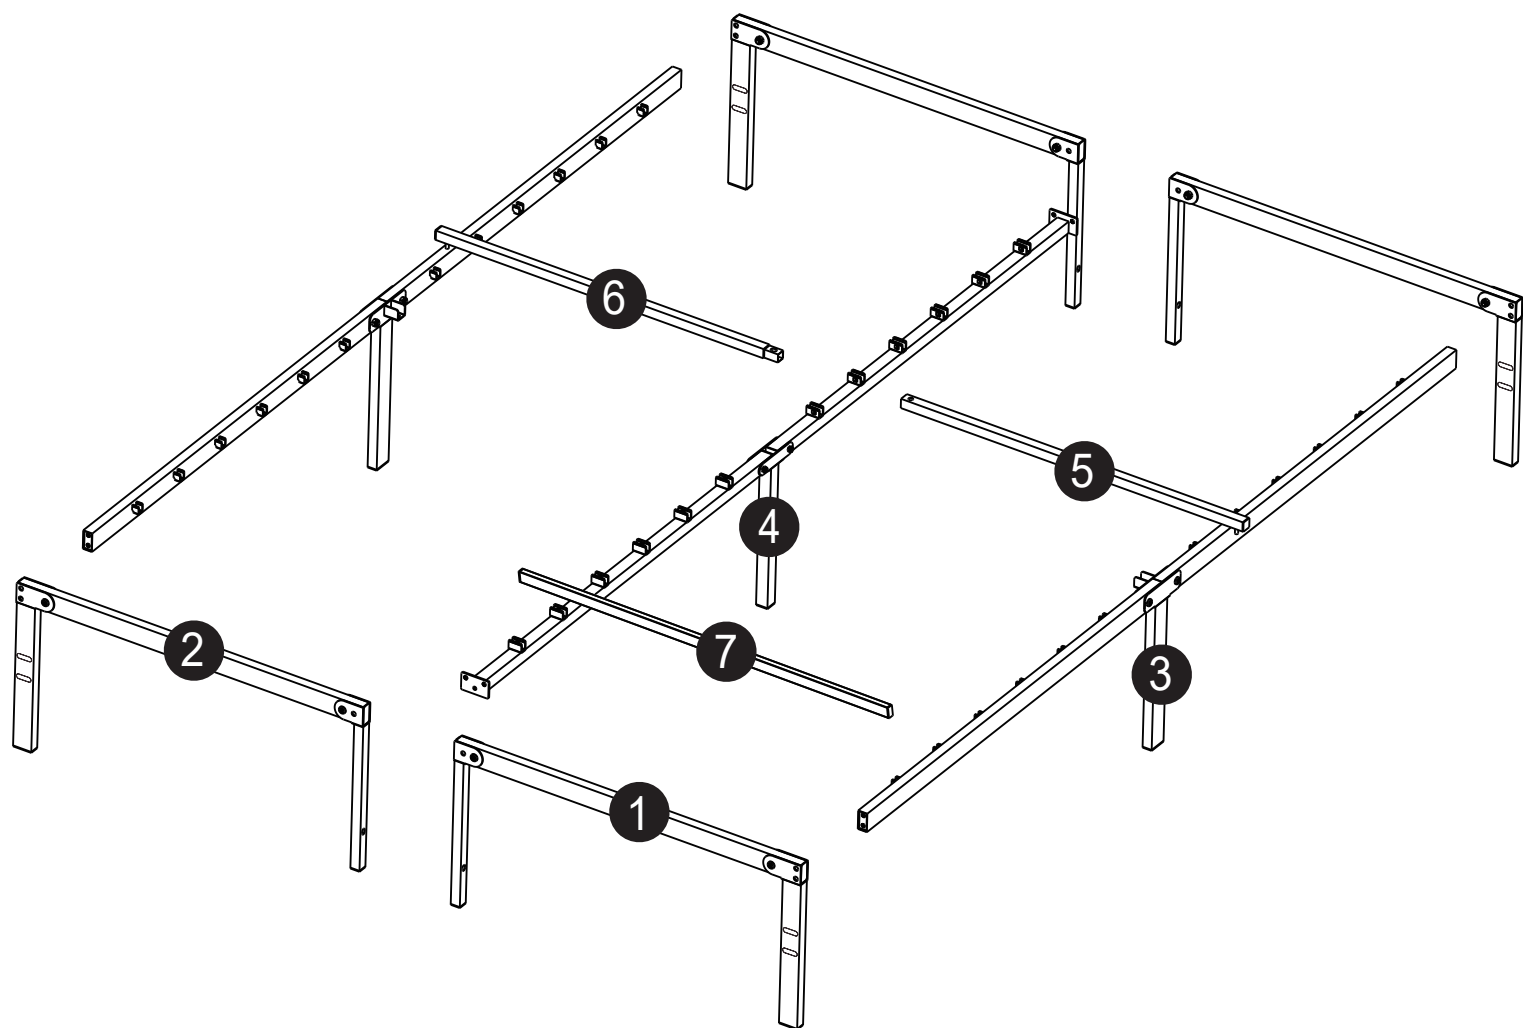

## 2 Package List

---


1

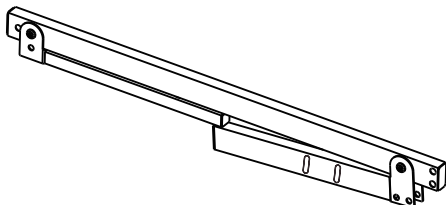

x2

Frame


2

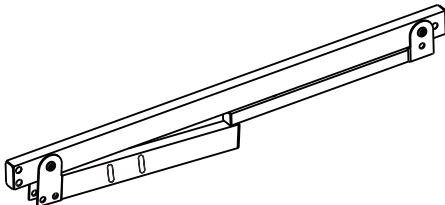

x2

Frame


3

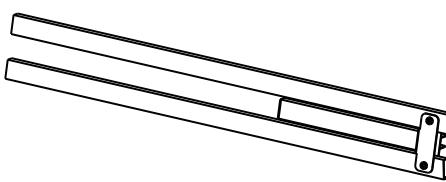

x2

Side Frame


4

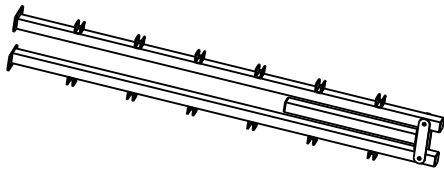

**x1**

Middle Frame


5

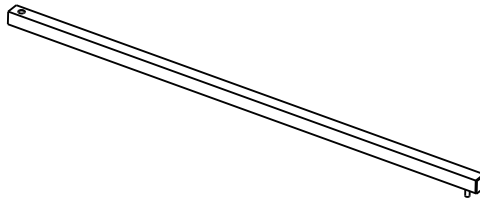

**x1**

Center Slat


6

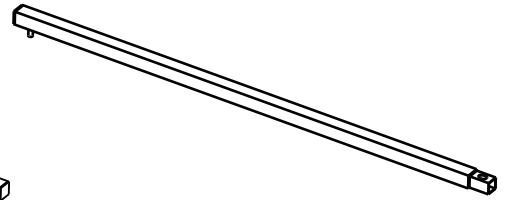

**x1**

Center Slat


7

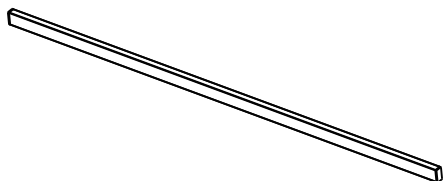

**x24**

Slats

A

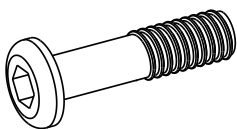


**x4**

Screws

M8 x 32mm

B




**x8**

Screws

M8 x 40mm

C




**x2**

Screws

M8 x 50mm

D



**x1**

Screws

M8 x 60mm


E



**x4**

Nut

M8



**x1**

Wrench

# Step 1



## ATTENTION

For longer use .

Re-tighten bolts every 3 months by using the enclosed allen-key.


\*Using an electric drill can damage the frame.

Please re-tighten bolts manually .

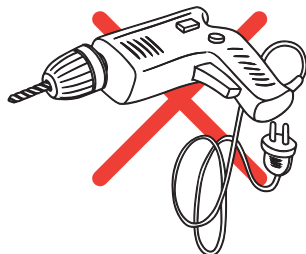

M8 x 40mm


Bx8

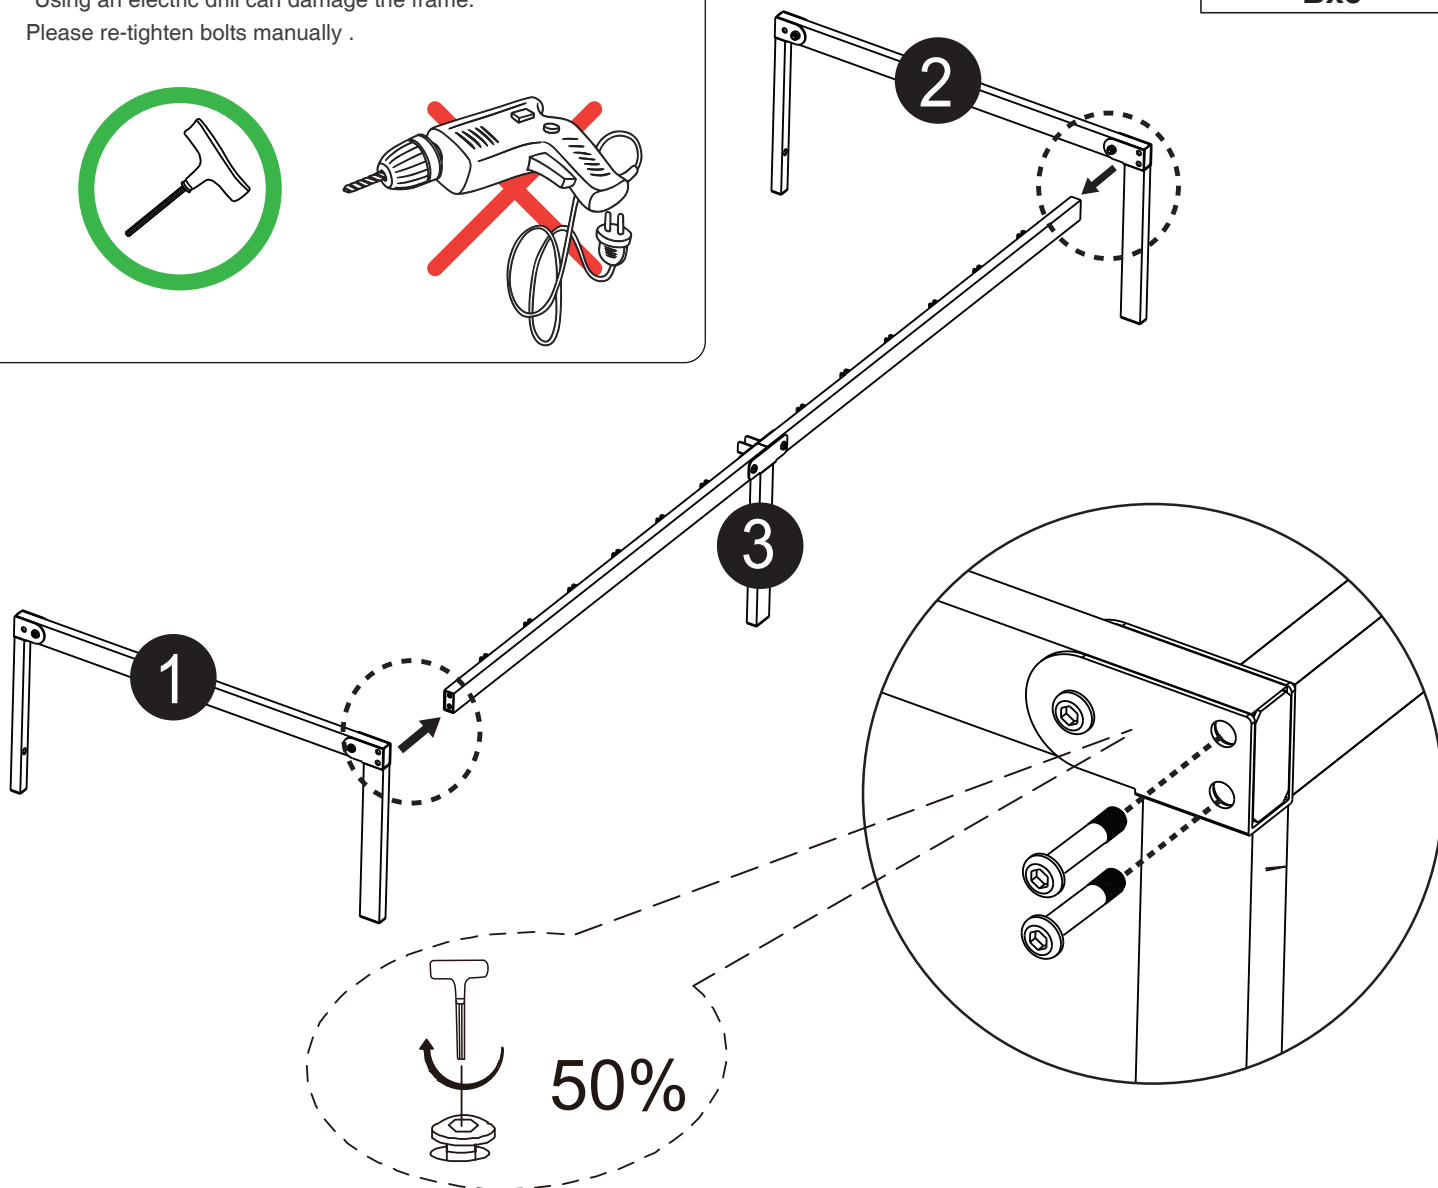

Attach Side Frame **(3)** to the side of the Frames **(1&2)** with Screws **(B)\*4**. Repeat the same installation steps to get Two installed Frames.

**Note:** Fully expand the frame before installing the screws. Otherwise the screw cannot be twisted in.  
The screws are tightened by 50% first.


## Step 2

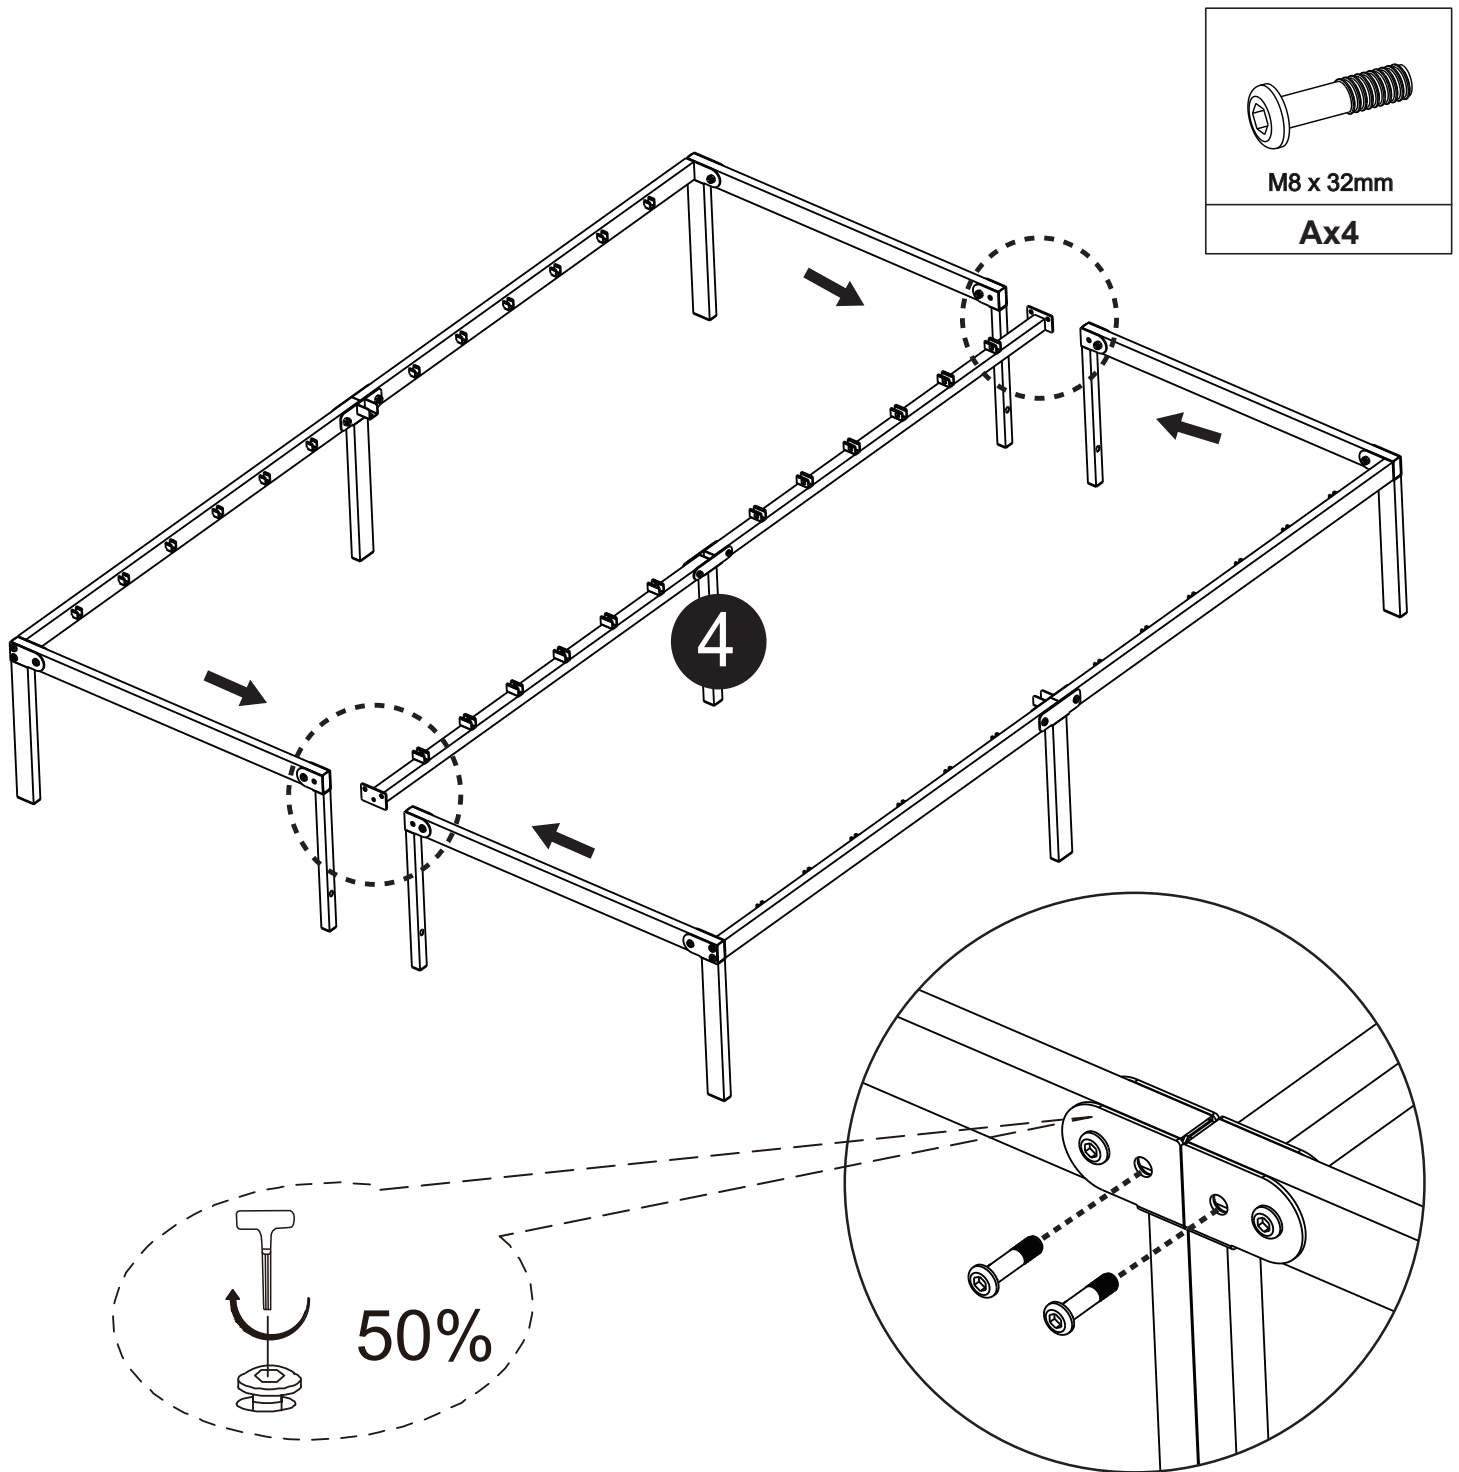


Align the head and tail of the Middle Frame **(4)** with the two installed Frames, and secure them completely with Screws **(A)\*4**.

**Note:** The screws are tightened by 50% first.

## Step 3


|                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |
| M8 x 50mm                                                                           | M8                                                                                  |
| Cx2                                                                                 | Ex2                                                                                 |

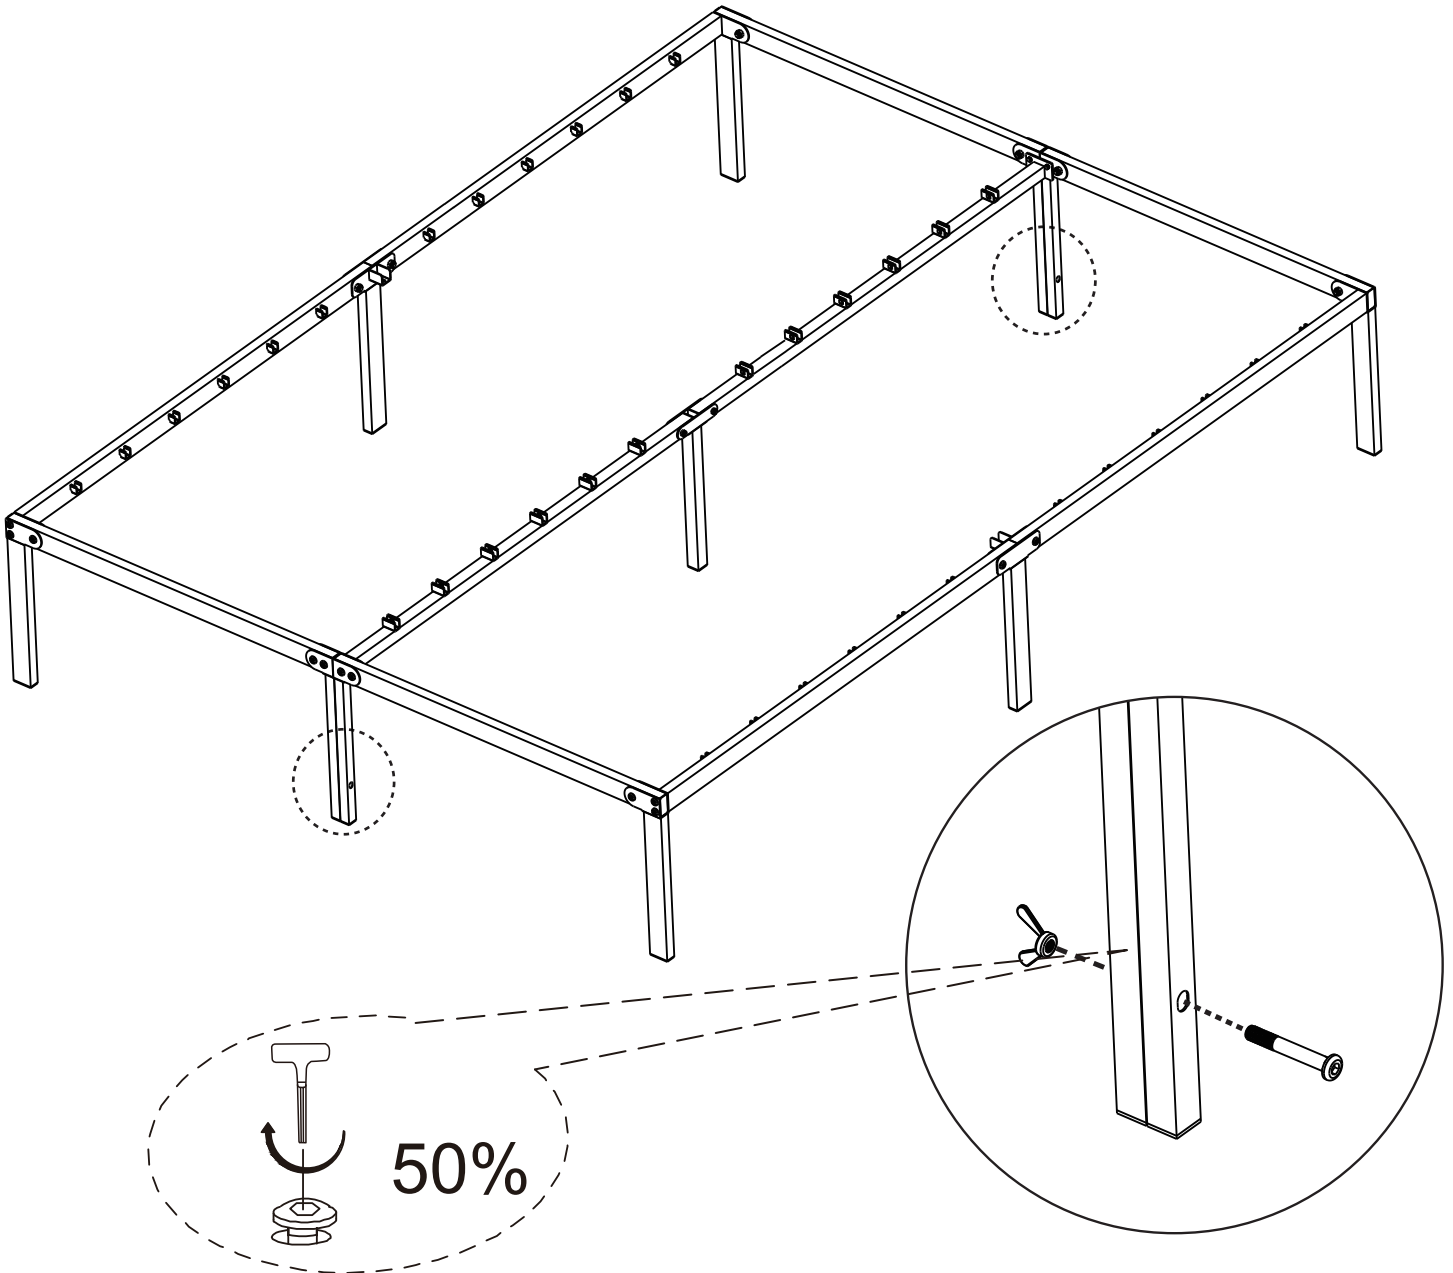

Align the screw holes on the legs of the two Frames, and secure them completely with Screws **(C)\*2** and Nut **(E)\*2**.

**Note:** The screws are tightened by 50% first.

## Step 4

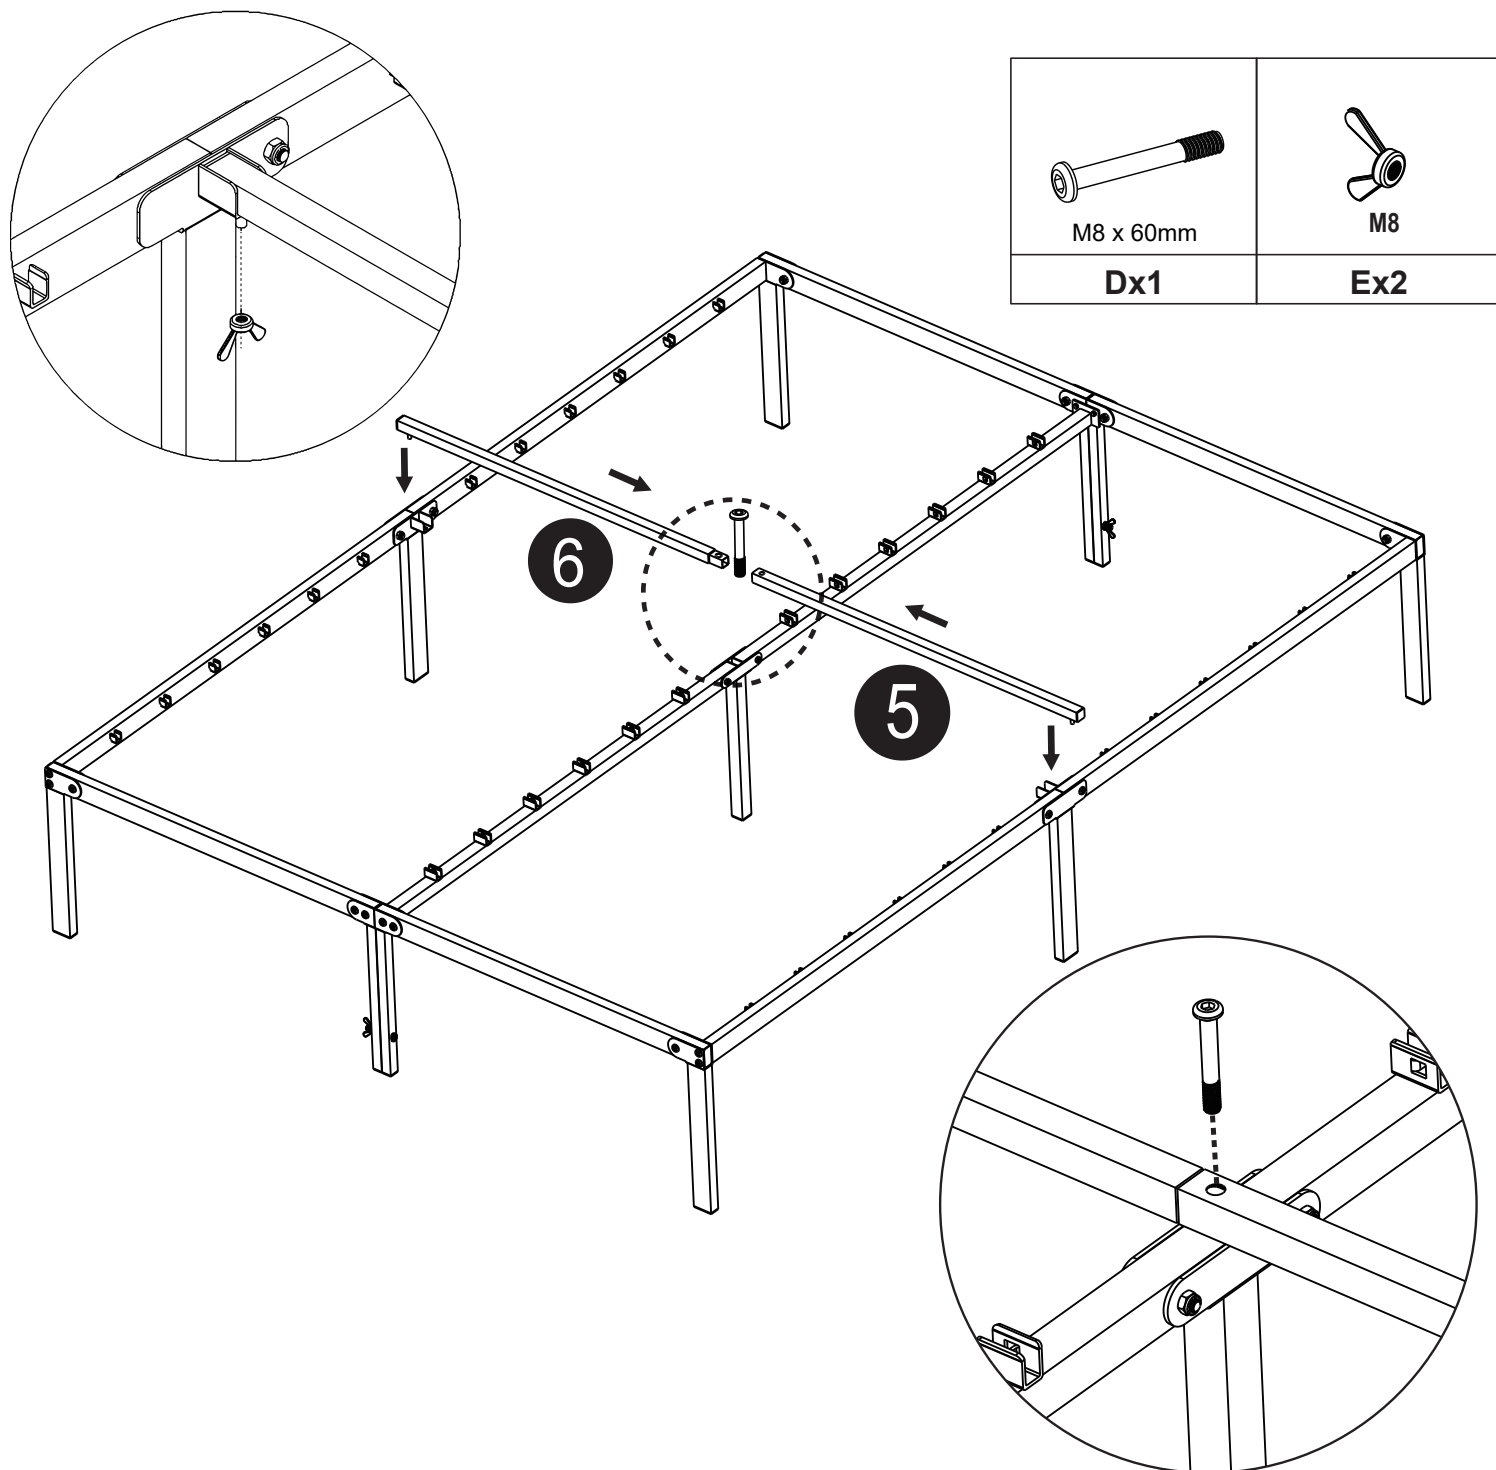


Insert Center Slat **(6)** into the Center Slat **(5)**. After fixing both, insert them onto the **groove** in the middle of the Side Frame **(3)\*2**, and fix the Center Slats **(5&6)** to the Middle Frame **(4)** with Screw **(D)\*1**. Finally, the Central Slat **(5)** and the Central Slat **(6)** are fixed with a Nut **(E)\*2**.

**Note:** Once installation is complete, tighten all screws 100%. Tighten the screws again every 3 months.

## Step 5

---

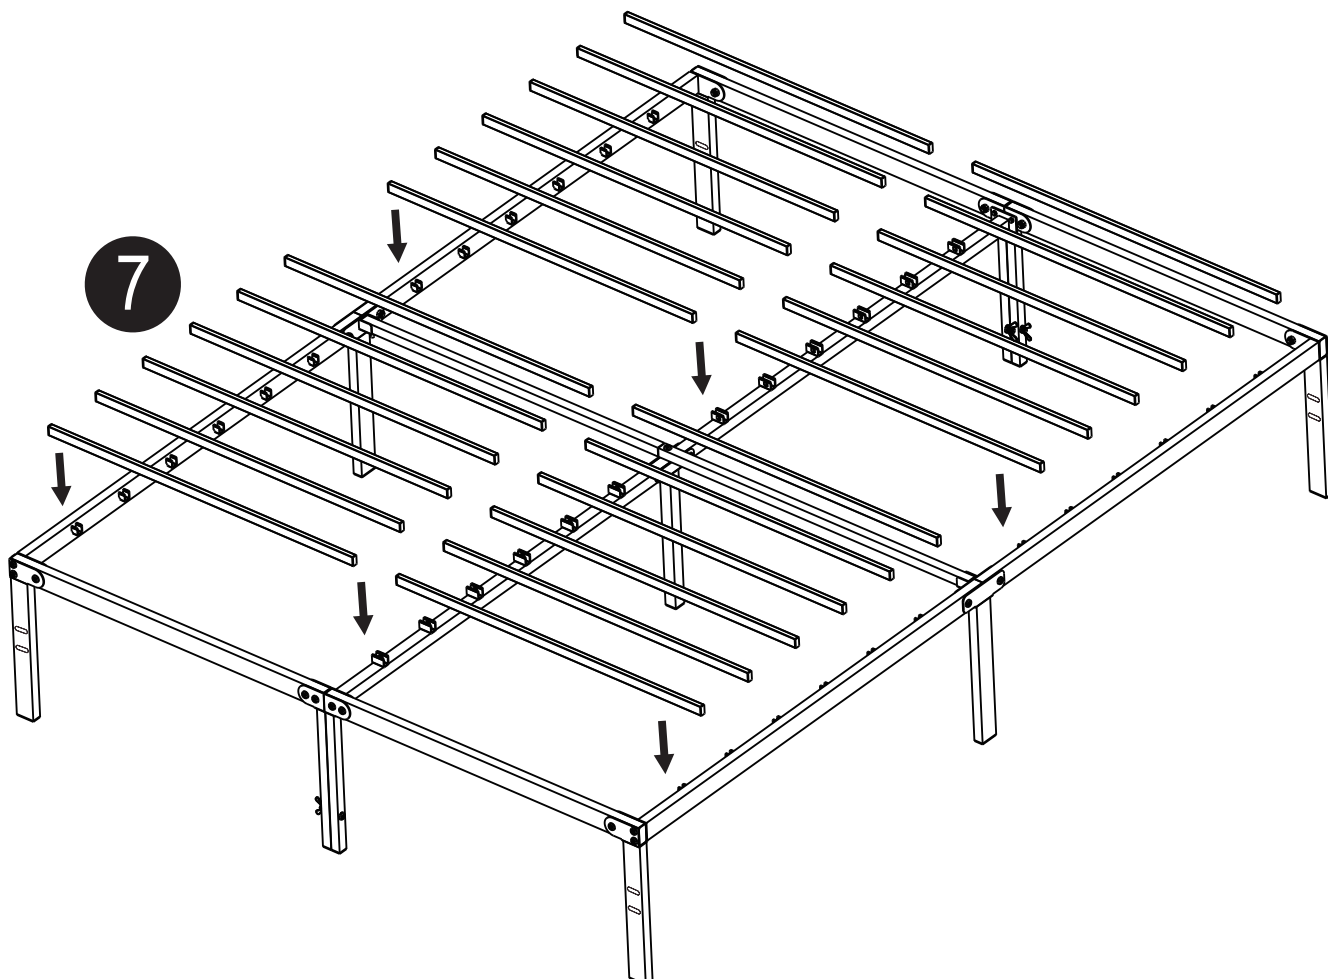

Insert Slats **(7)\*24** evenly onto **each groove** of the Frames **(3&4)**.

