


ASSEMBLY INSTRUCTIONS


TWIN HOUSE BED WITH TRUNDLE

If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net











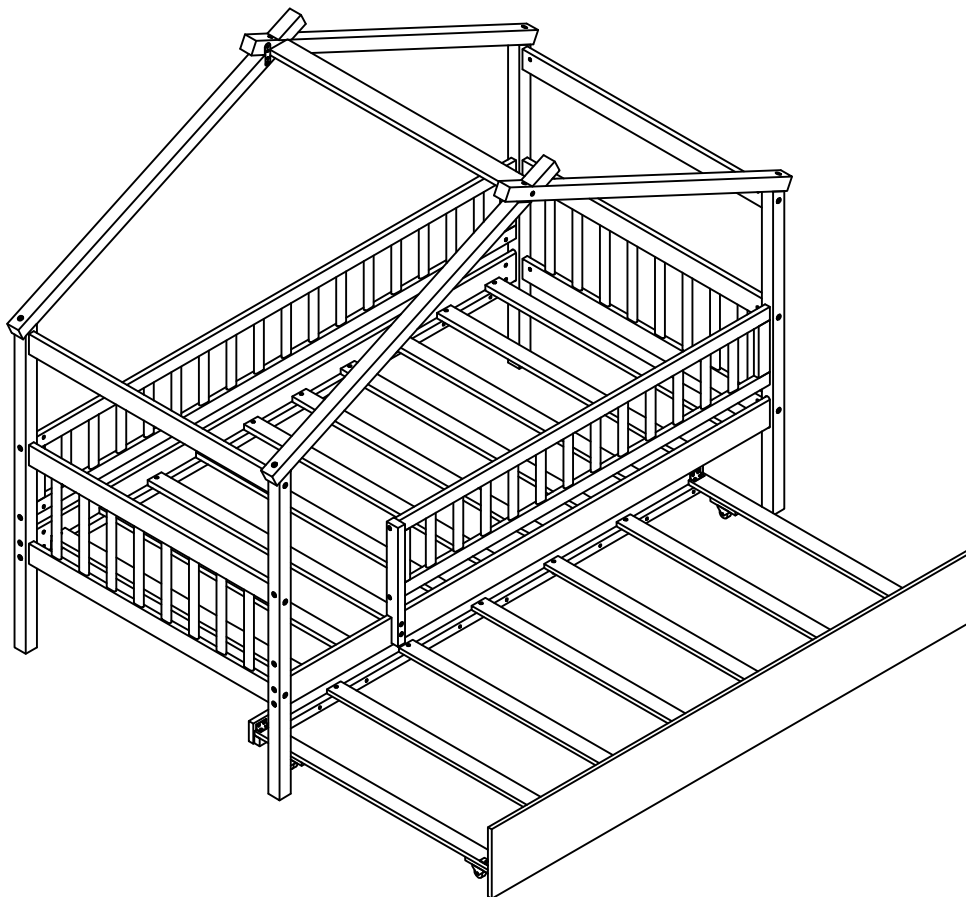


WF302178






Detail View

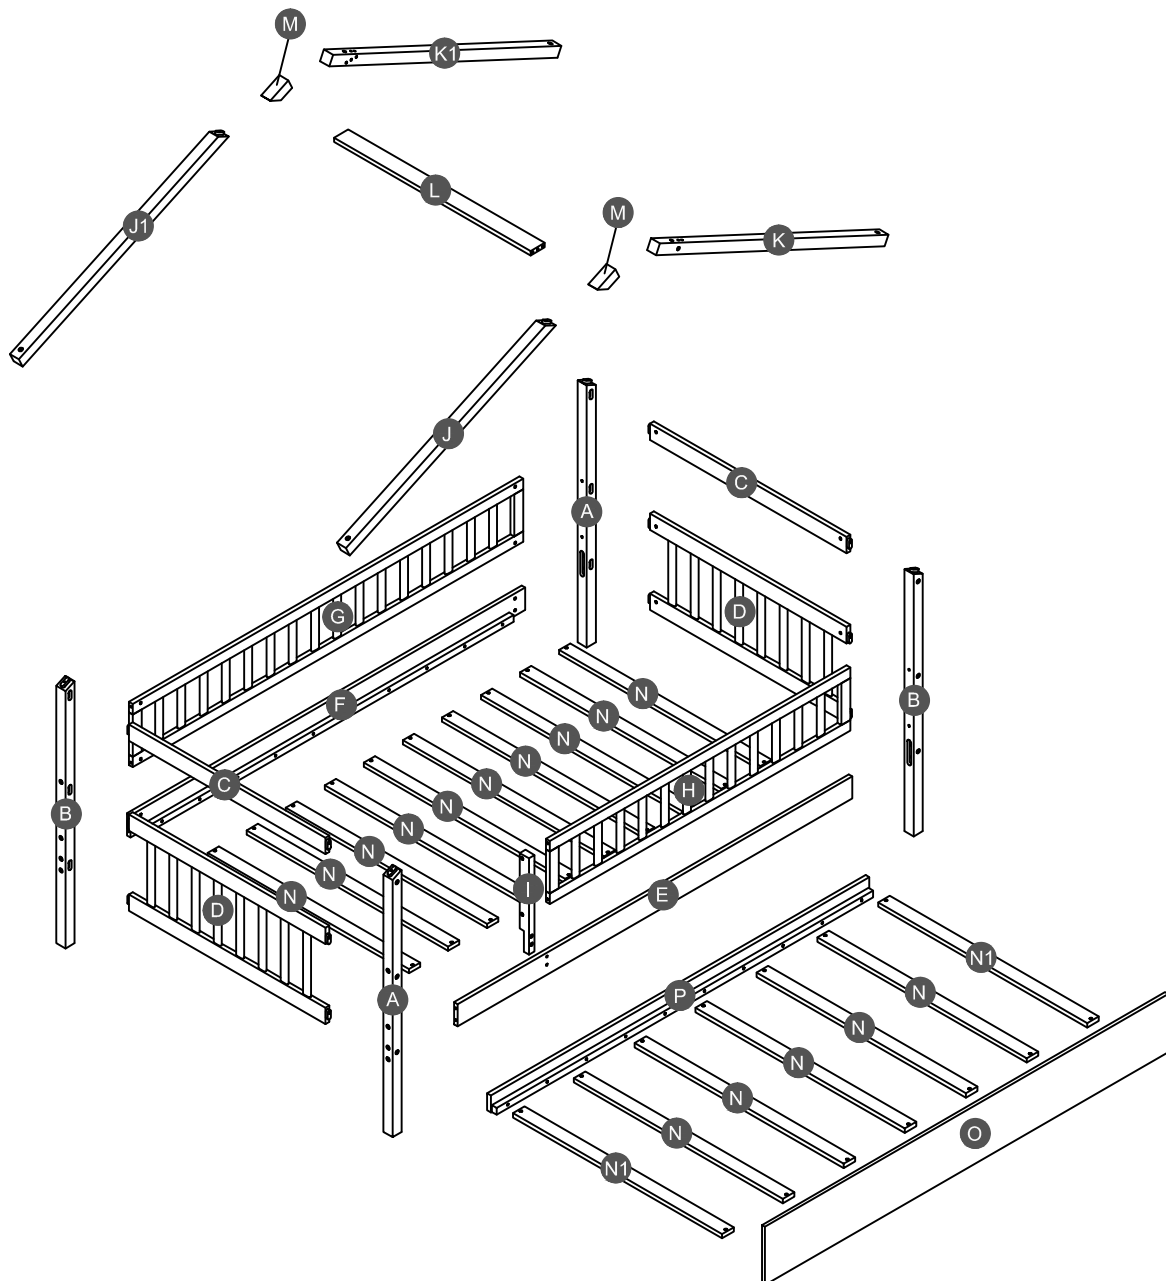


Part List

A  Leg (Left Front/Right Back) - 2pcs	B  Leg (Left Back/Right Front) - 2pcs	C  Horizontal bar HB/FB - 2pcs
D  Frame HB/FB - 2pcs	E  Side rail (Front) - 1pc	F  Side rail (Back) - 1pc
G  Long guard rail (Back) - 1pc	H  Short guard rail (Front) - 1pc	I  Support guard rail(Left) - 1pc
J  Upper (Left Front) - 1pc	J1  Upper (Left Back) - 1pc	K  Upper (Right Front) - 1pc
K1  Upper (Right Back) - 1pc	L  Upper horizontal bar - 1pc	M  Block - 2pcs
N  Slats - 15pcs	N1  Slats - 2pcs	O  Front panel of Trundle - 1pc
P  Back panel side rail of Trundle -1pc		

Hardware List


1  $\varnothing 8 \times 30 \text{mm}$ Wood dowel (6pcs)	2  $(\varnothing 15) 1/4" \times 100 \text{mm}$ Hex-Head bolts (14pcs)	3  $(\varnothing 15) 1/4" \times 80 \text{mm}$ Hex-Head bolts (16pcs)
4  $(\varnothing 12) 1/4" \times 35 \text{mm}$ Hex-Head bolts (2pcs)	5  $(\varnothing 12) 1/4" \times 65 \text{mm}$ Hex-Head bolts (8pcs)	6  $1/4" \times 15 (9.5 \text{mm})$ Horizontal-Hole bolts (30pcs)
7  $(1/4") 4.5 \times 58 \text{mm}$ Allen key (1pc)	8  $\varnothing 4 \times 30 \text{mm}$ Wood screws (42pcs)	9  $\varnothing 3.5 \times 19 \text{mm}$ Wood screws (8pcs)
10  $75 \times 20 \times 2 \text{ mm}$ Metal bracket (2pcs)	11  $100 \times 63 \times 20 \text{mm}$ Wheels (4pcs)	12  $95 \times 95 \times 18 \times 3 \text{mm}$ Metal bracket (2pcs)
13  $40 \times 18 \times 18 \times 2 \text{mm}$ Metal bracket (2pcs)	14  $\varnothing 3.5 \times 15 \text{mm}$ Wood screws (16pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

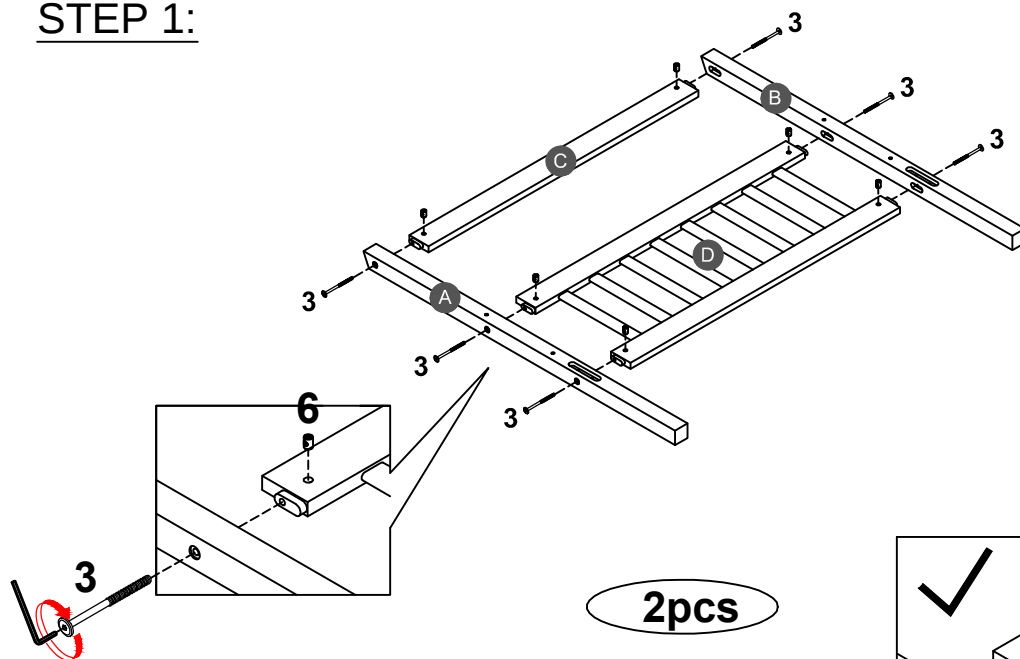

3




12PCS

6




12PCS

Note: Part 6 will face up with the "x" mark on it, otherwise it cannot be tightened

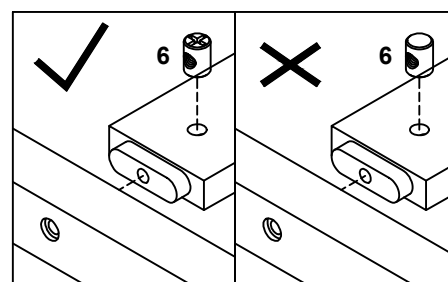

STEP 2:

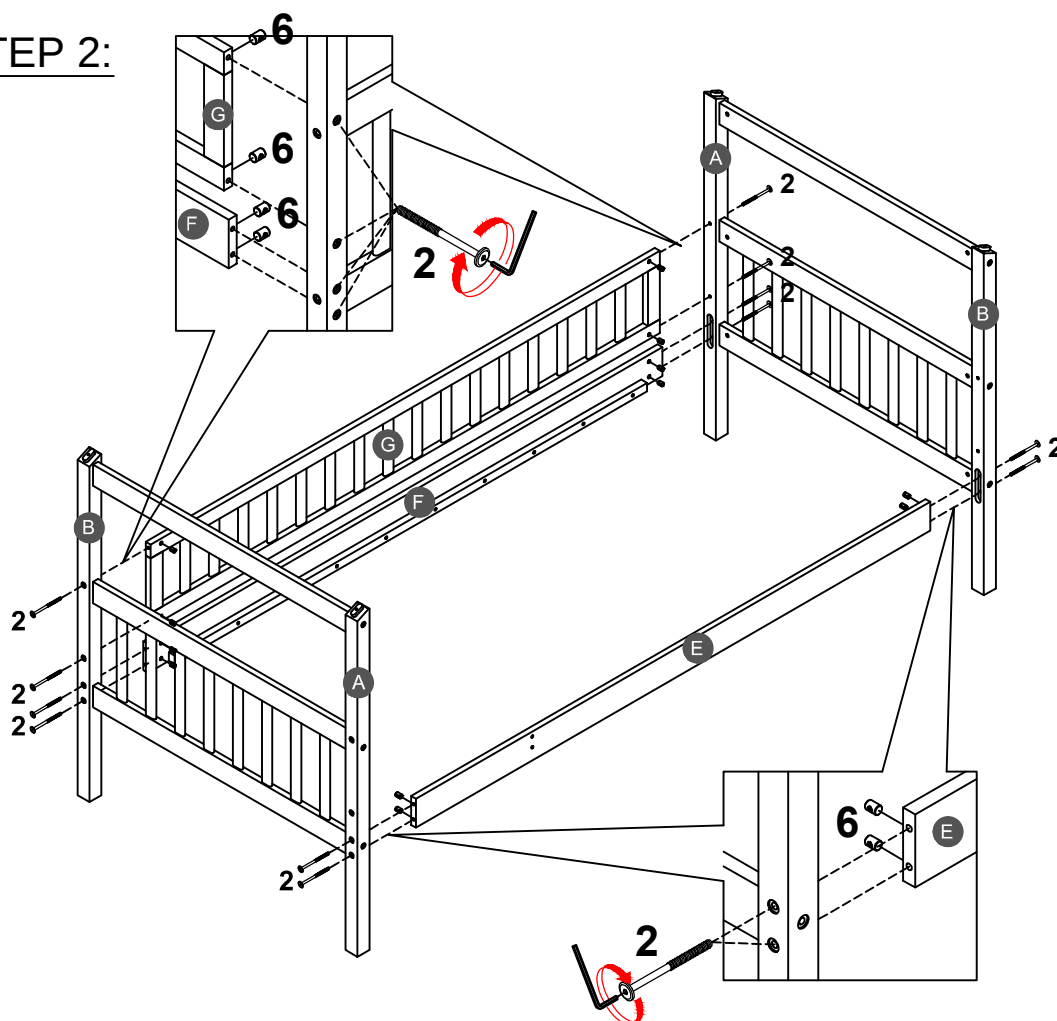

2



12PCS


6




12PCS

STEP 3:


2		3		4		6	
2PCS		2PCS		2PCS		4PCS	

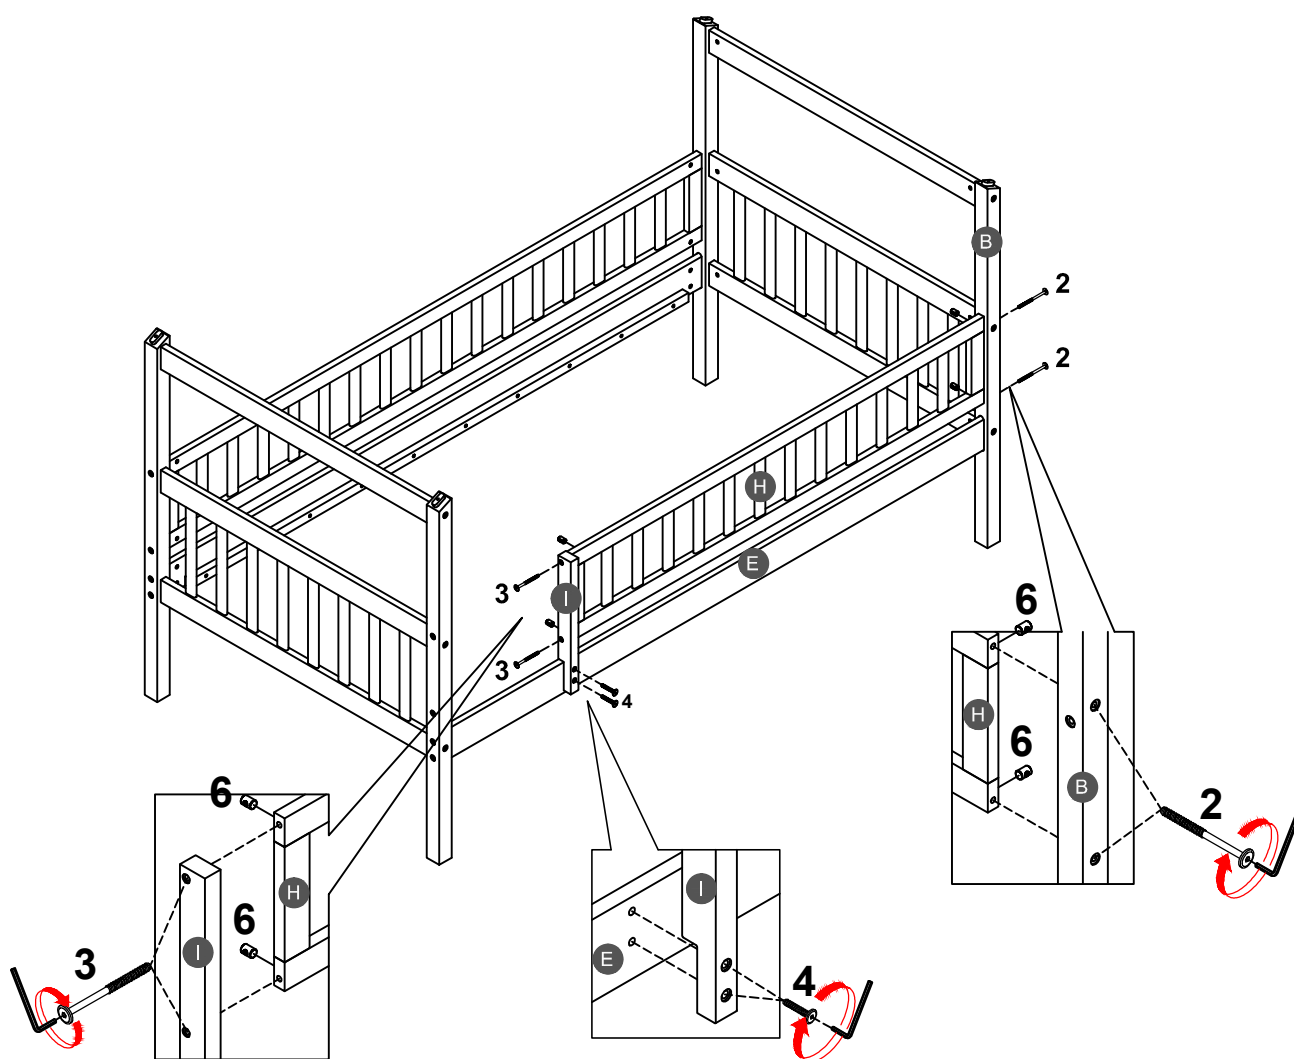



STEP 4:

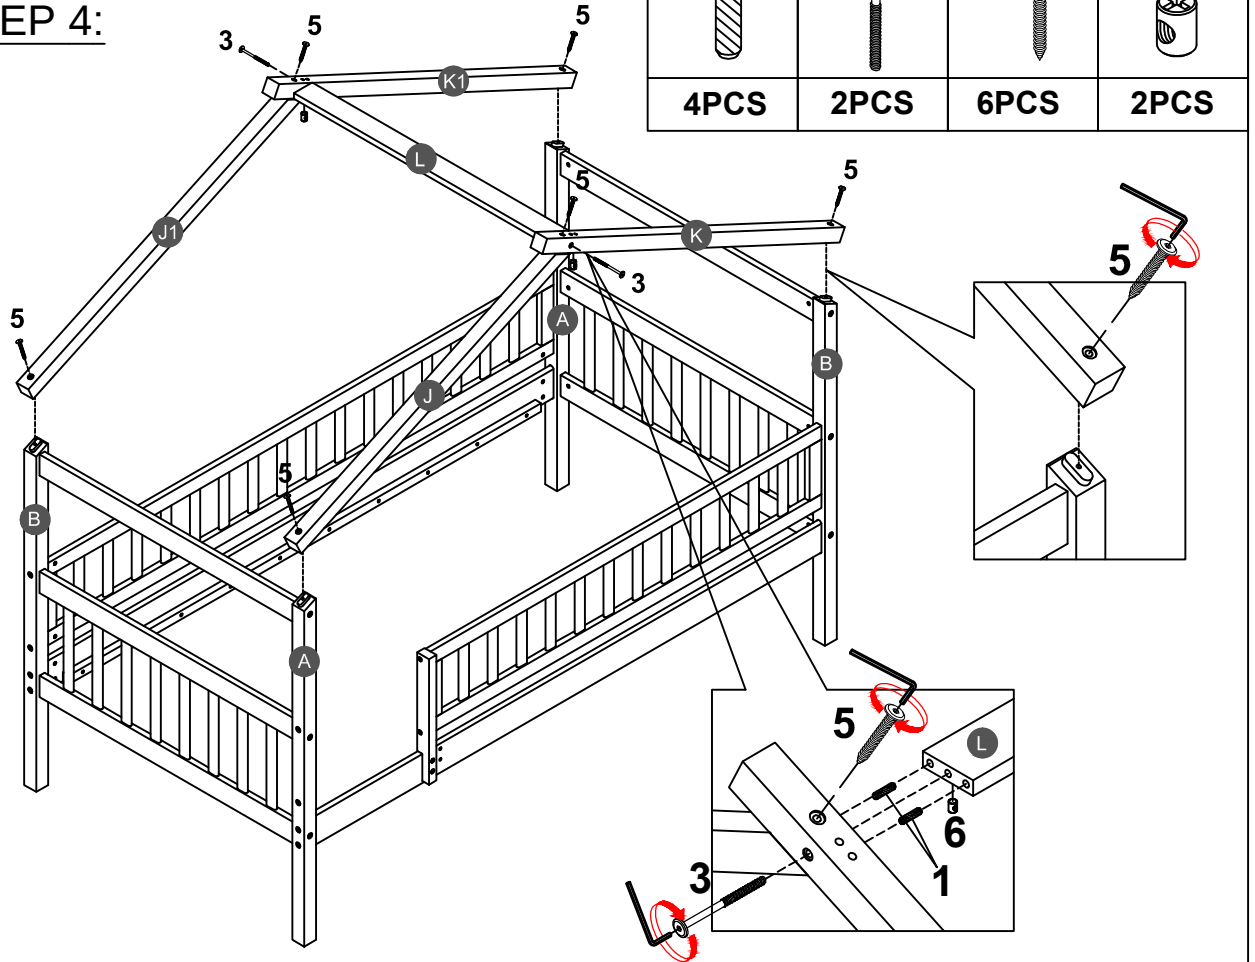

STEP 5:

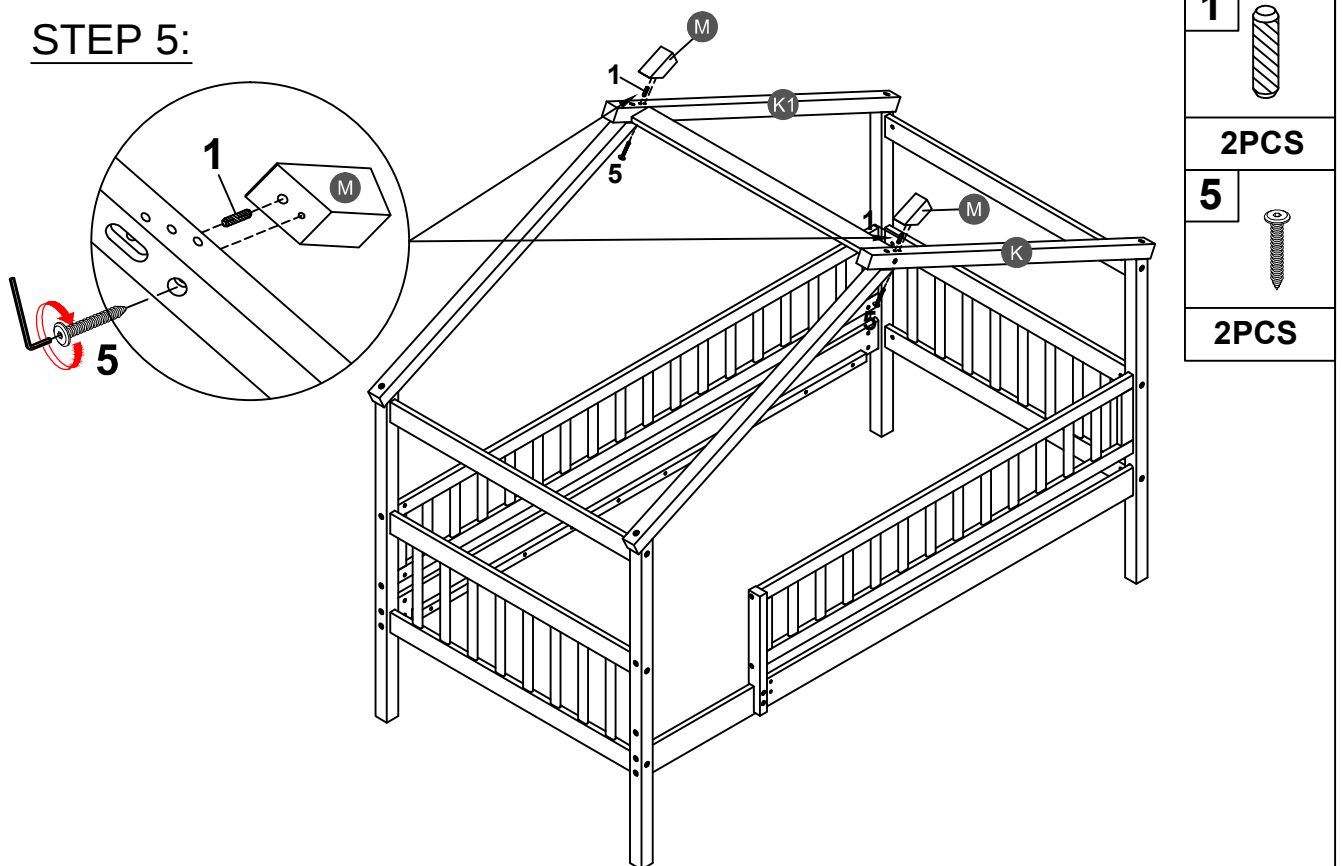

STEP 6:

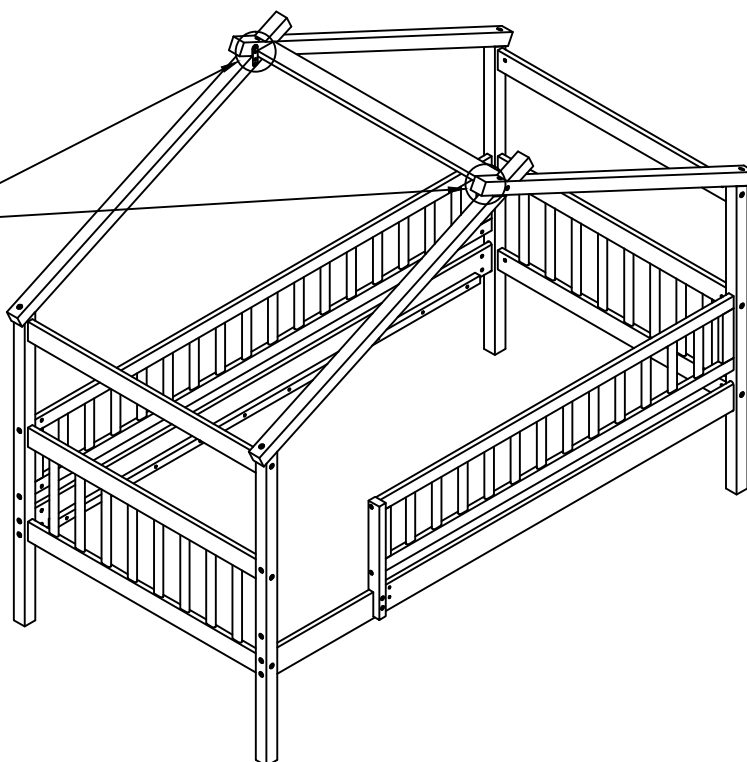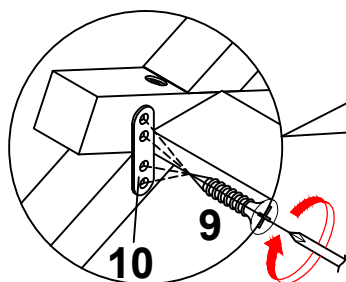

9




8PCS

10



2PCS



STEP 7:

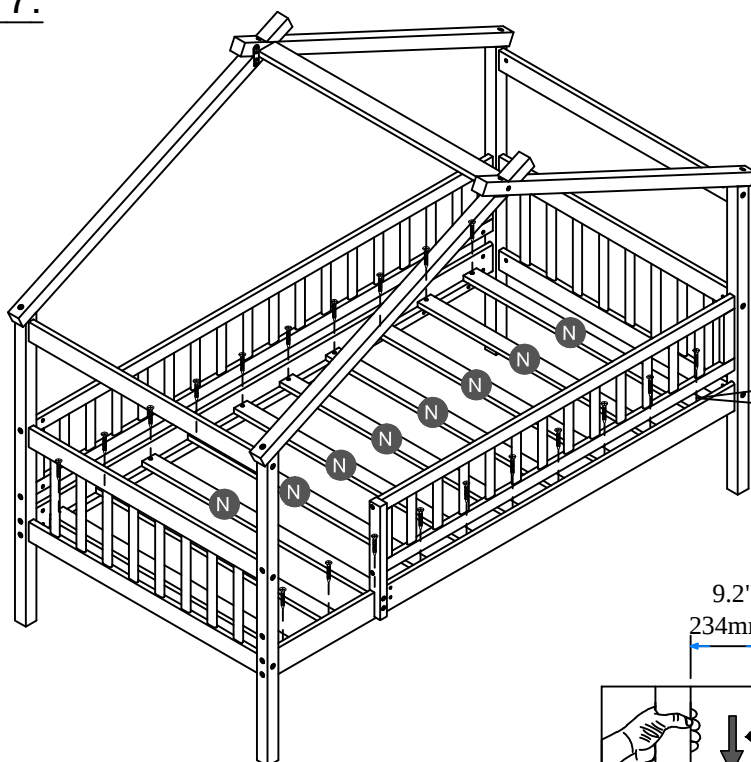

8




20PCS

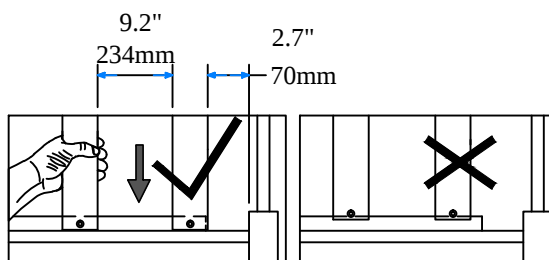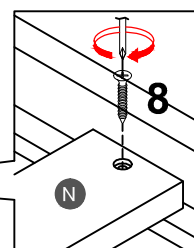

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

STEP 8:

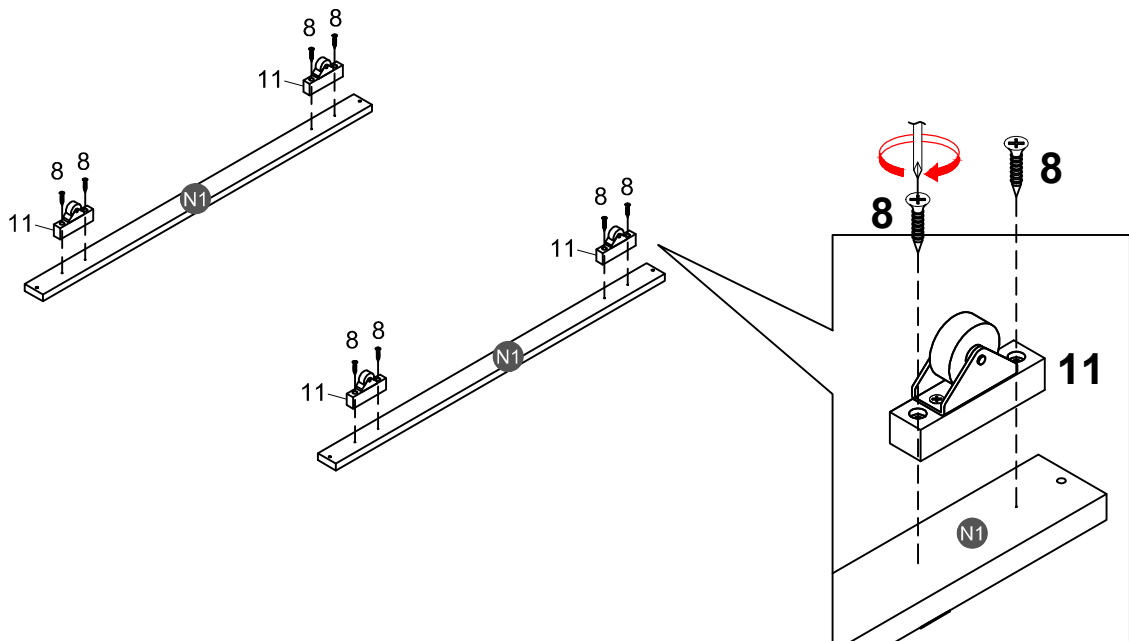

8




8PCS

11



4PCS



STEP 9:

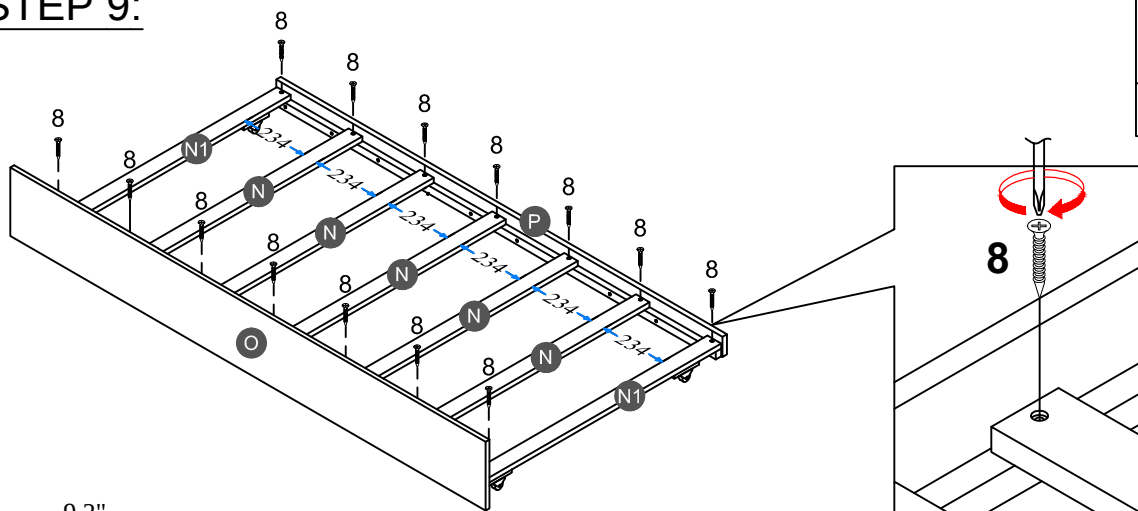

8




14PCS

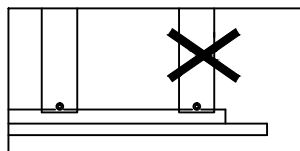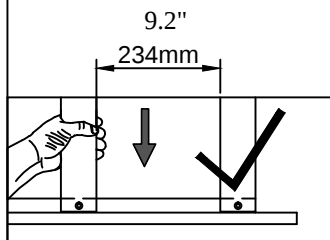

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.


STEP 10:

12	14
	
2PCS	8PCS

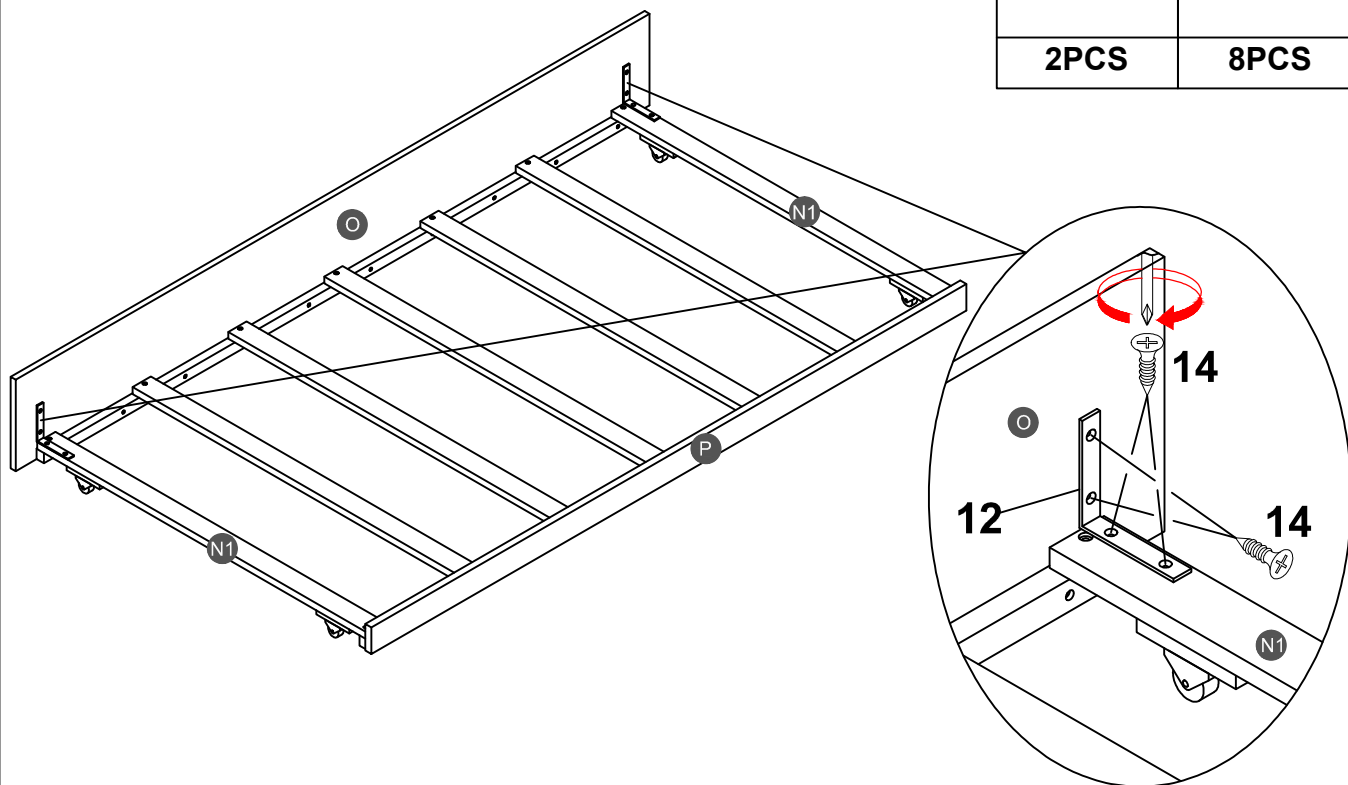


STEP 11:

13	14
	
2PCS	8PCS

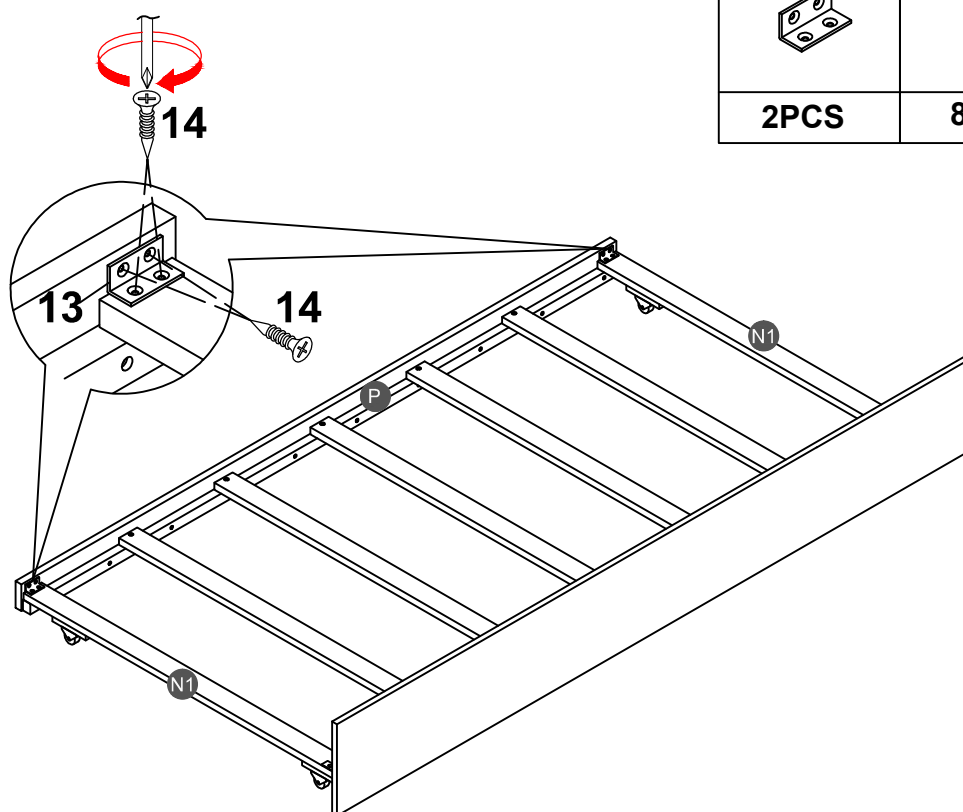

STEP 12:

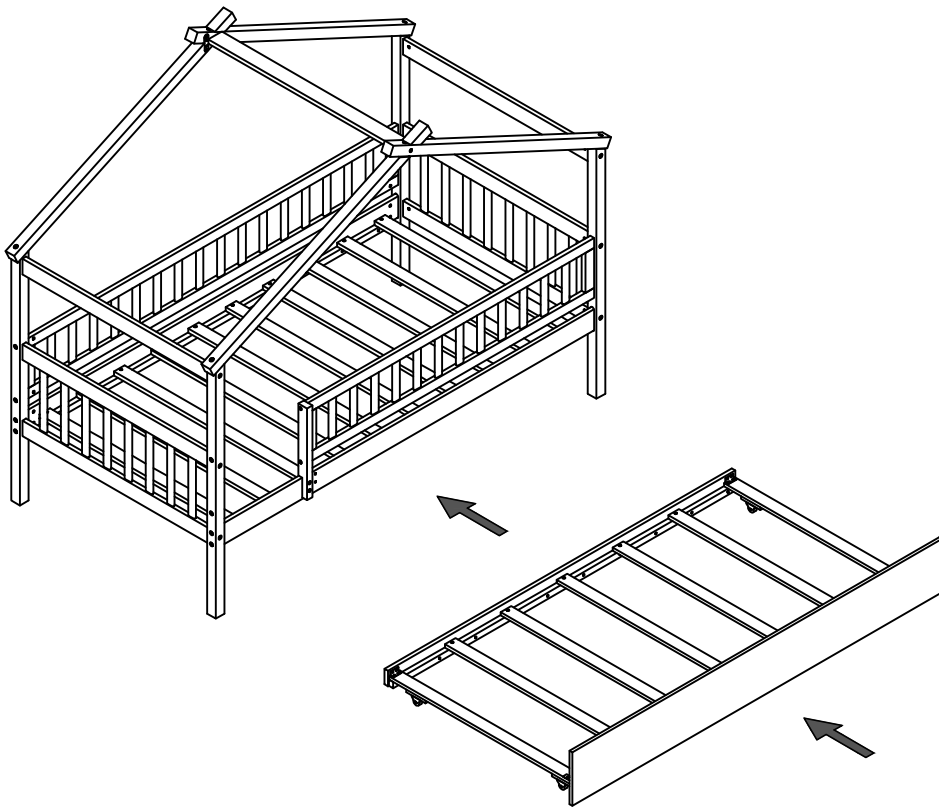

Push Trundle and Drawer under the bottom of Bunkbed.

