



30 : 00

estimated
assembly time



2 or more

people required

Ok, let's
get started!



- Put on mood music!
- To prevent damage to product, use the clean side of package carton or rug as working surface.
- In the event of missing or damaged parts, delivery problems etc., please reach out to our team.
We will be happy to fix the problem!

care guide

- Clean regularly with a soft and dry cloth.
- To protect finish, avoid use of abrasive cleaners.
- Wipe up spills immediately. Please!


ⓘ While assembling the product, tighten the bolts up to 50%. Once all parts are in place, only then fully tighten the bolts.



product parts




A
Cabinet base
x1

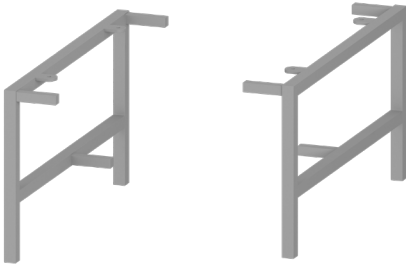


B
Legs
x2



C
Rod
x1

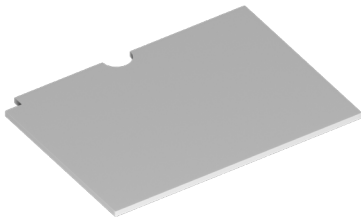

D1
Left Shelf
x1

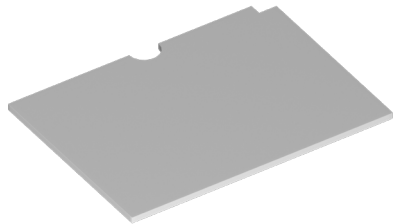

D2
Right Shelf
x1

what's included



(E) - Washer
(Ø18mmxØ8mm)
x4




(F)-Lock Washer
(Ø15mmxØ8mm)
x4




(G) - Bolt
(M6x20mm)
x4



(H) - Bolt
(M6x10mm)
x12



(I)- Allen Key
(Ø4mmx110mm)
x1



(J)- Shelves hook
x8

assembly instructions


Friendly Tip: Take a deep breath going in. This may be a tricky part, but nothing too overwhelming. Just follow these steps to the T and the outcome will be worth it!



- ⓘ While assembling the product, tighten the bolts up to 50%. Once all parts are in place, only then fully tighten the bolts.


step 1:

Start by turning the cabinet base (A) upside-down. Unscrew the pre-installed metal rods (using Allen Key (I)) on the cabinet base by 50%. See the highlighted areas below for point reference.

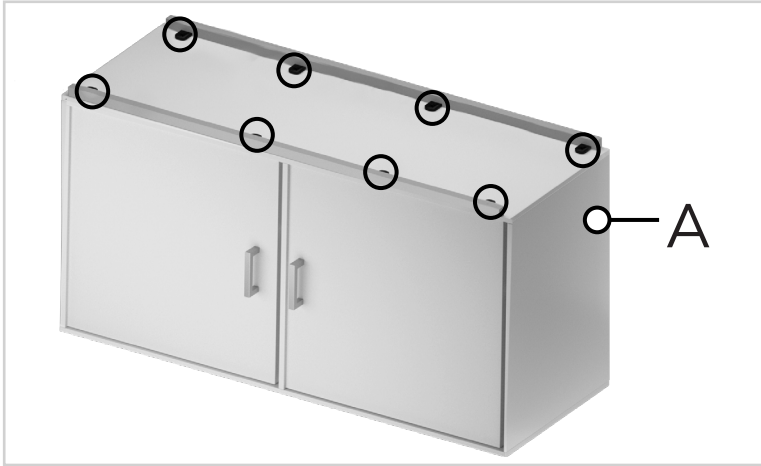


step 2:

Now, insert the left metal leg (B left) into the metal rods on the cabinet base. See this image for reference.

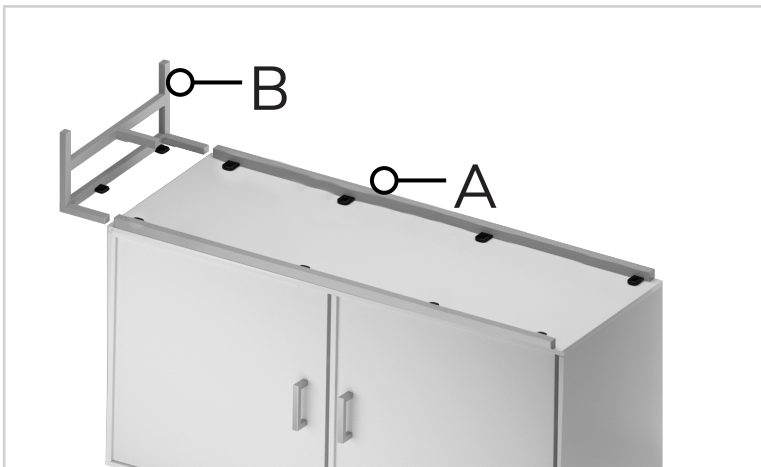


step 2:

Slide rod (C) onto the leg (B) as shown in the image. Next, insert the other leg (B) into rod (C) and the preinstalled rods on cabinet base (A). We're off to a great start.

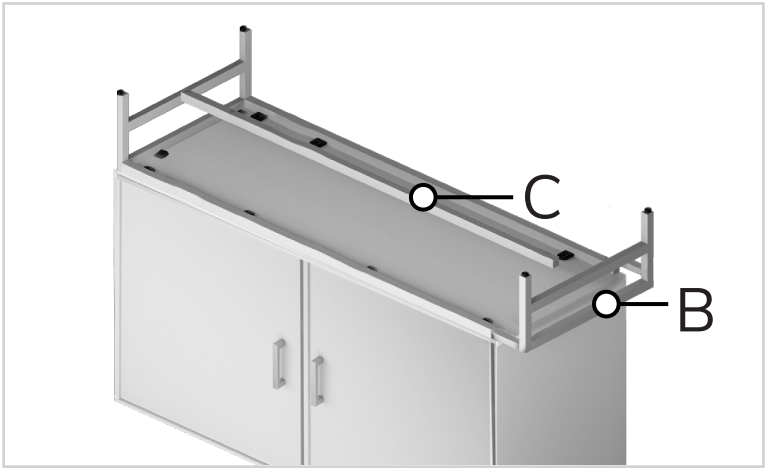


step 3:

Check out the holes on rod (C) and the preinstalled rods as highlighted in the image. That's where you'll be inserting bolts (H).

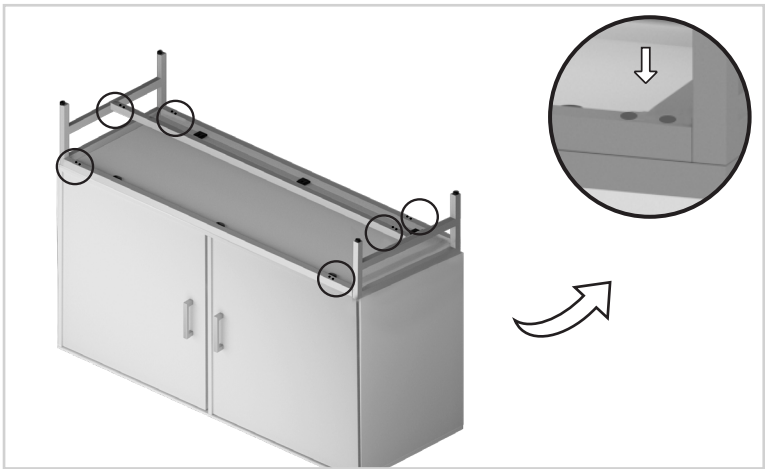


step 4:

Using bolts (H) and allen key (I), secure them in place.

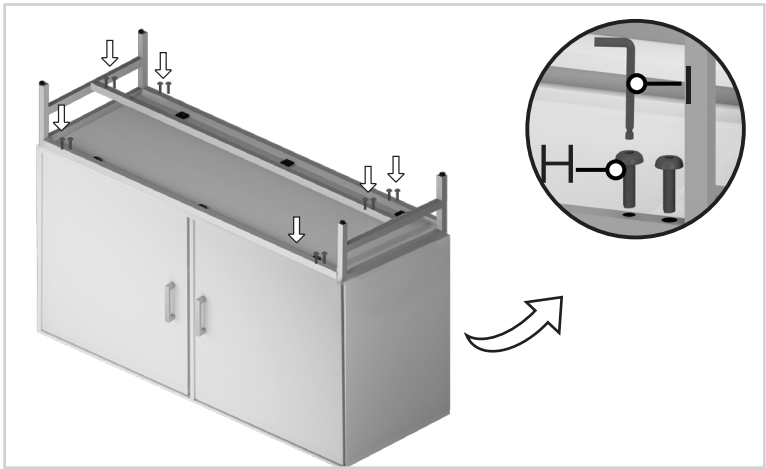


step 5:

Refer to the highlighted areas to see where you'll be inserting bolts (G) next.

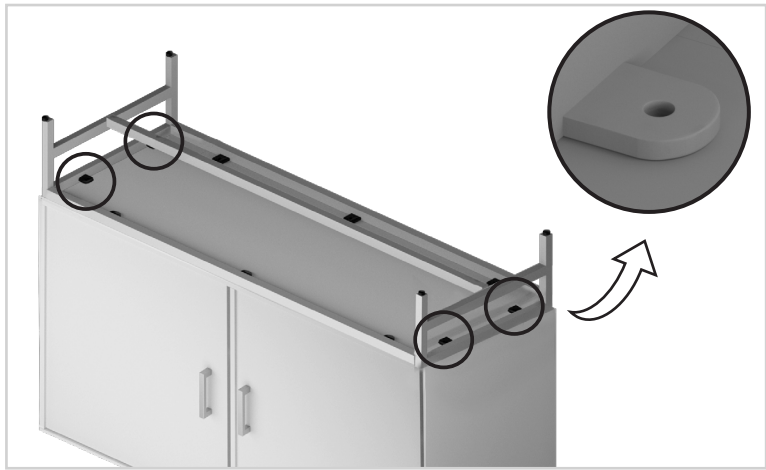


step 6:

Placing lock washers (F) on top of washers (E), fasten bolts (G) on all four holes using allen key (I).

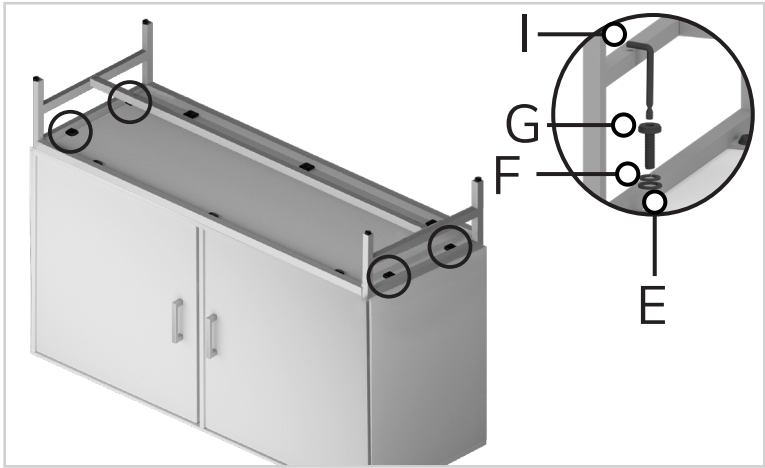


step 7:

Taking this image as reference, attach shelf hooks (J) to your preferred pre-drilled slot (as per height requirement). Make sure all 4 shelf hooks on each side are attached to slots on the same height.

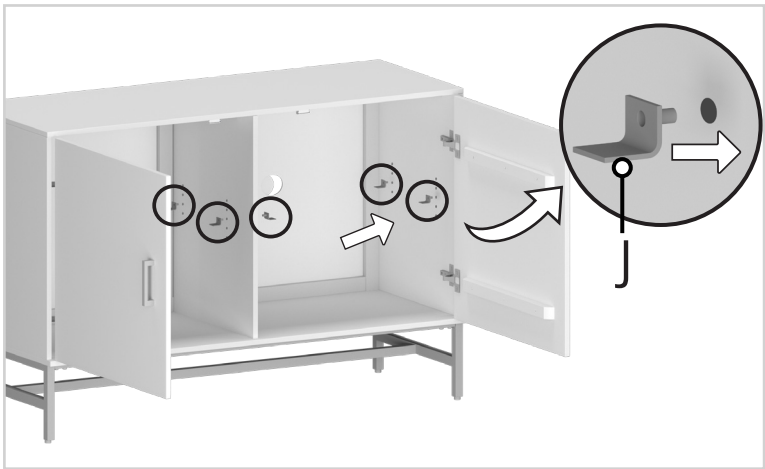


step 8:



Place shelves (D1 & D2) on shelf hooks (J).

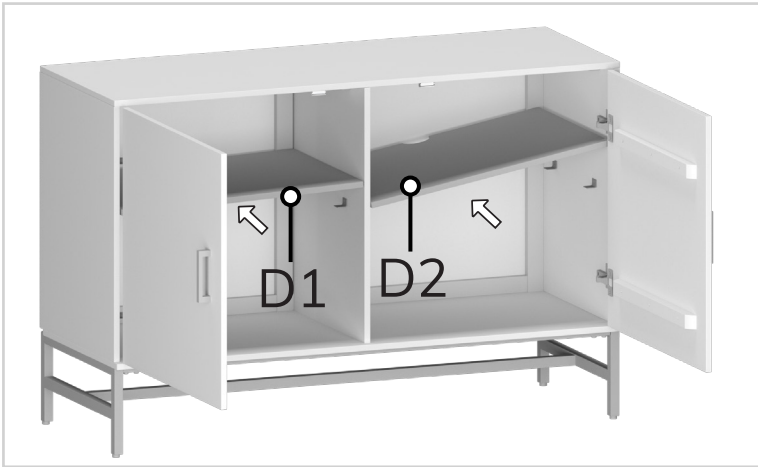

step 9:

If the door does not appear square or aligned, loosen or tighten the appropriate screws on each case hinge as shown in images.

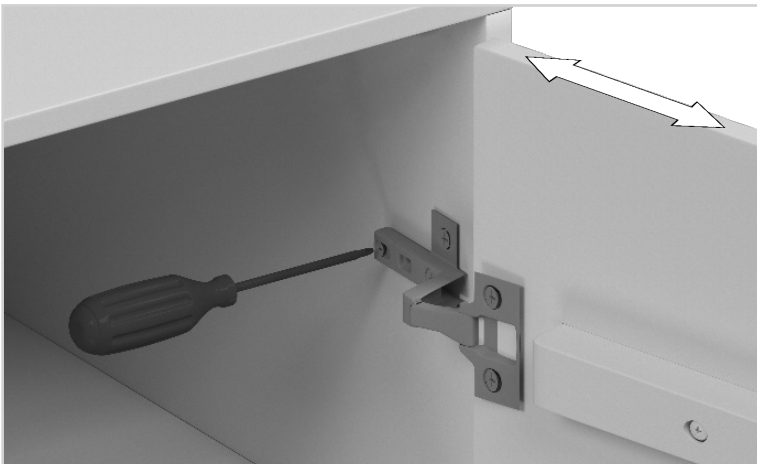

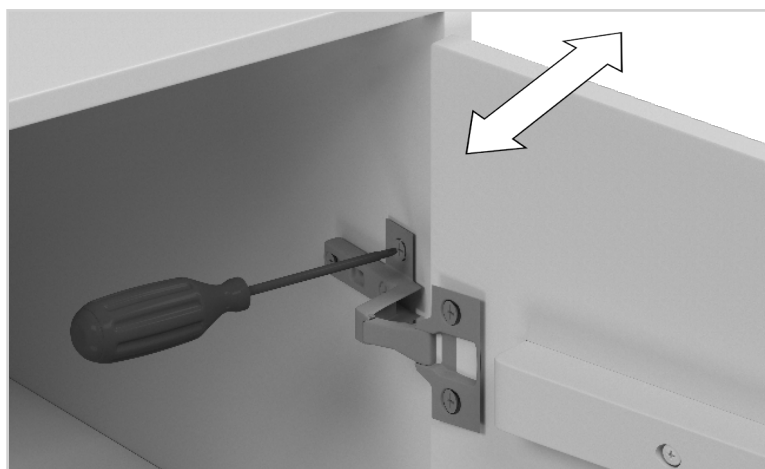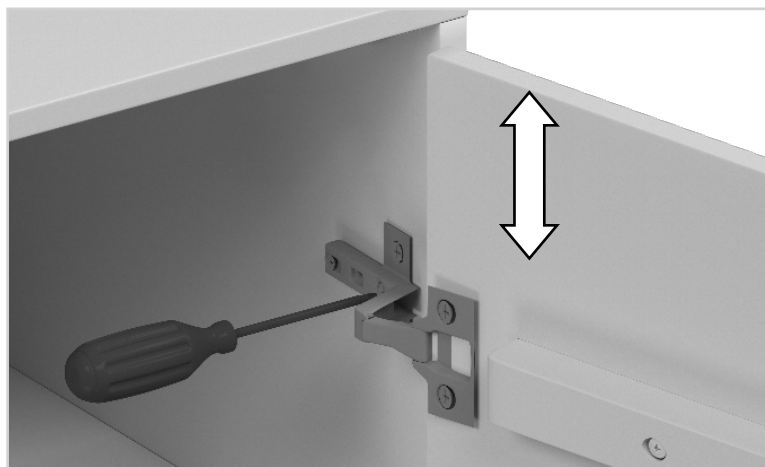



Voila! Your side board is now assembled and secure!

you've
got
a home
with us

