


NIGHTSTAND

Assembly Instructions

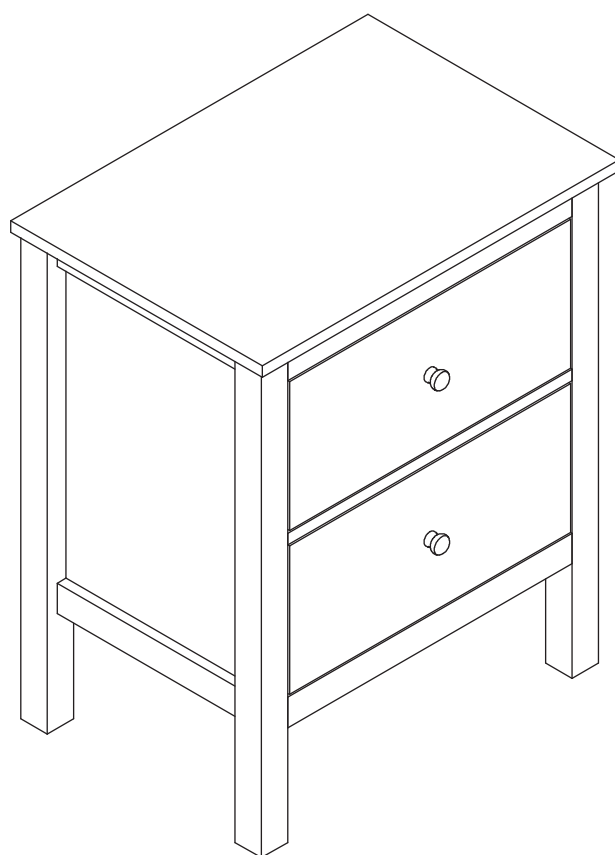

Product Refs-HM-ST013-001


Imported By: Forward Industries, 33401. U.S.A

Safety and Care Advice

1. The maximum weight that can be placed on this product is 110lbs.
2. This product must not be used as a seat.
3. Check carefully to ensure correct and complete assembly before using.
4. Don't allow children to play near the product as their behaviour is unpredictable. The manufacturer is not responsible for loss, injury, or damage due to improper actions or use.
5. Do not use corrosive or abrasive materials near the product. Please ensure that the cleaner used will not pollute the environment.
6. Cleaning should not be attempted by children without supervision.
7. Please make sure there are no hazard sources in your operating environment. e.g., do not leave tools around. Always be careful to dispose of the packaging materials in order to avoid any possible danger, e.g. plastic bags may lead to choking hazard to children.
8. We recommend you keep the original packaging of the item in case of the need for return or future transportation.
9. Do not use outdoors. **SAVE THESE INSTRUCTIONS.** For Household use only.




2 PERSON ASSEMBLY

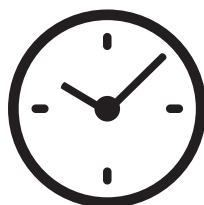


**APPROXIMATE 1 HOUR
ASSEMBLY TIME**

Main Components


Please check you have all the parts listed below

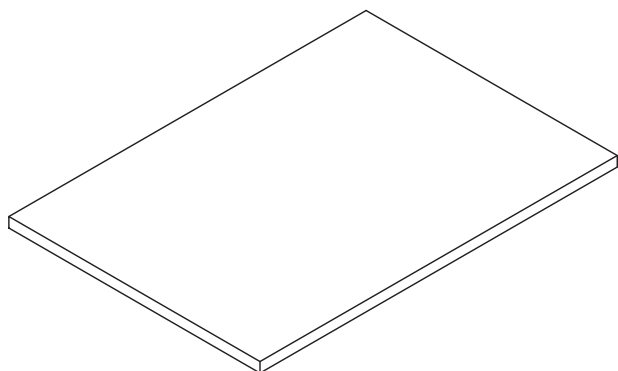


1 Top Panel Qty 1
(21.25×14.96×0.59")

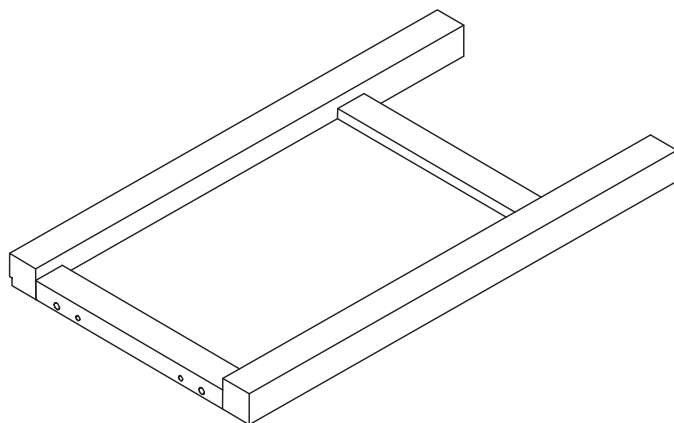


2 Side Panel (Right) Qty 1
(14.37×25.39×1.57")

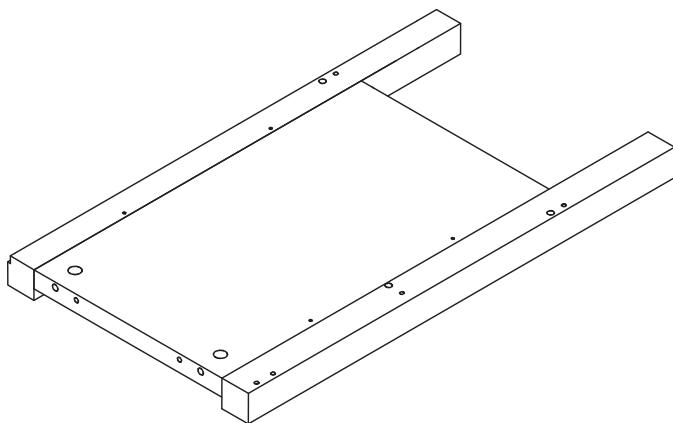


3 Side Panel (Left) Qty 1
(14.37×25.39×1.57")

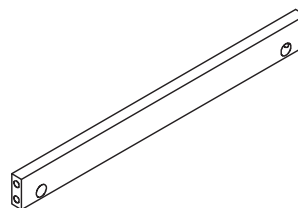

4 Bottom Stretcher Qty 3
(16.92×17.71×0.59")

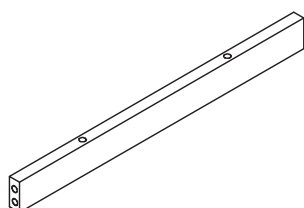


5 Upper Stretcher Qty 1
(16.92×17.71×0.59")

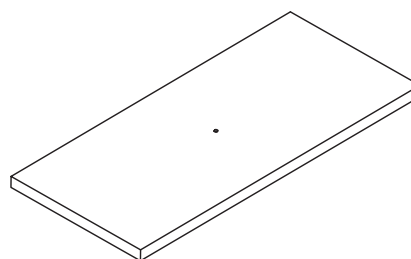


6 Drawer Front Qty 2
(16.77×8.46×0.59")

Main Components


Please check you have all the parts listed below

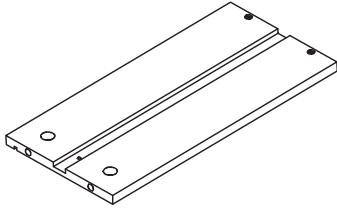


7 Drawer Side (Left) Qty 2
(13.38×6.29×0.47")

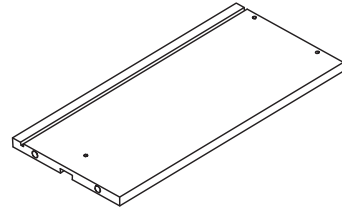


8 Drawer Side (Right)Qty 2
(13.38×6.29×0.47")

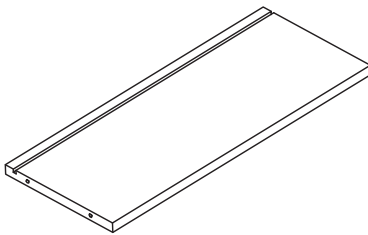


9 Drawer Back Panel Qty 2
(15.66×6.29×0.47")

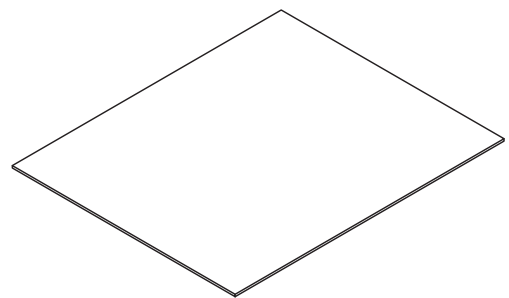

10 Drawer Base Qty 2
(13.22×15.98×0.11")

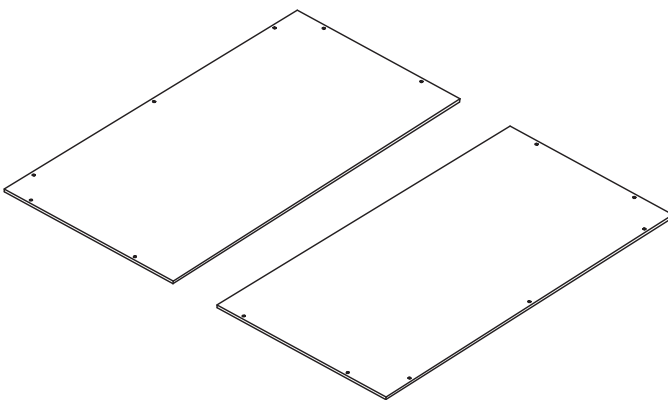

11 Back Panel Qty 2
(17.71×10.62×0.11")









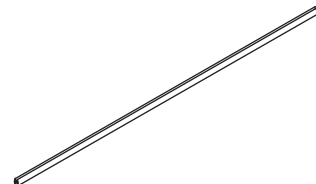


12 Sealing Strip Qty 1
(166.14×0.39")

Fixings, Fittings And Tools

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

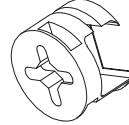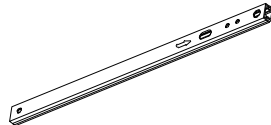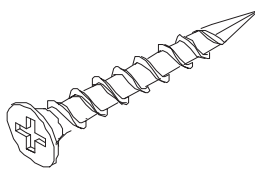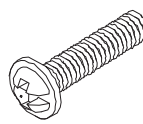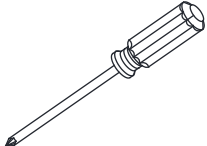A  Wooden Dowel Qty 16 (M6×1.18")	B  Cam Dowel Qty 18 (M5×1.37")	C  Large Cam Nut Qty 6 (M15×0.47")
D  Small Cam Nut Qty 12 (M15×0.37")	E  Drawer Runner Qty 4 (11.81")	F  Screw Qty 8 (M3×0.47")
G  Screw Qty 4 (M4×0.39")	H  Wood Screw Qty 8 (M4×1.18")	I  Screw Qty 14 (M2.5×0.39")
J  Knob Qty 2 (0.66")	K  Screw Qty 2 (M4×0.7")	 Screwdriver (Not supplied)

If you have questions regarding the operation of your purchase, or in the unlikely event you need to return the unit because it is faulty or is no longer wanted, please contact our product returns department at customerservice@forwardindustries.com, or 561-465-0030, Option 0.





Address: Forward Industries, 105 South Narcissus Avenue Suite 412, West Palm Beach, FL 33401

Assembly Steps


STEP 1

Fit cam dowels **B** to side panels **2** and **3** and drawer front **6**.

Fit wooden dowels **A** into side panels **2** and **3** as shown.

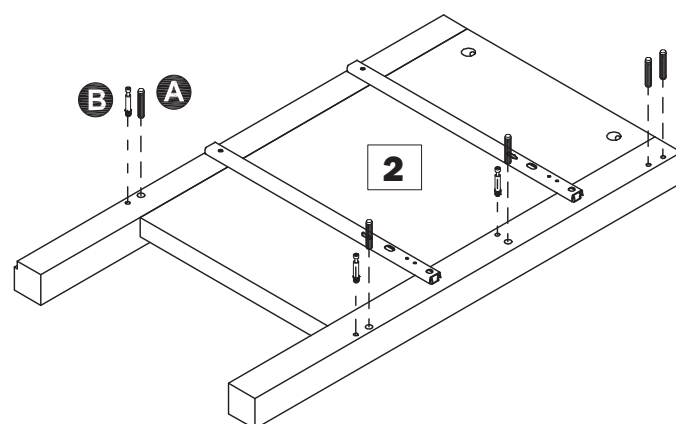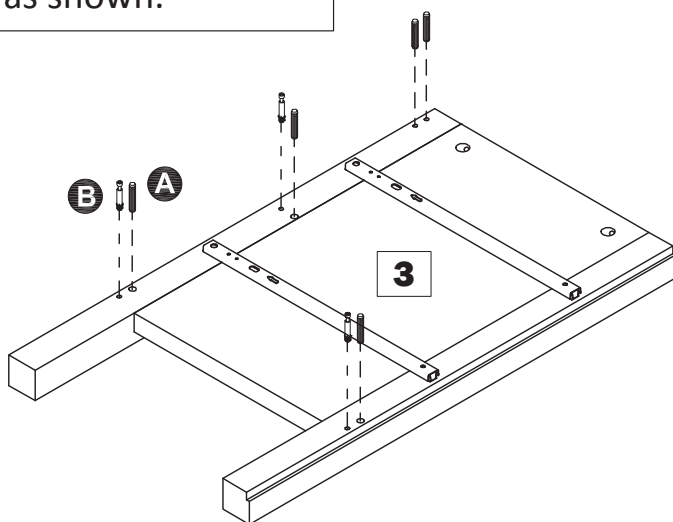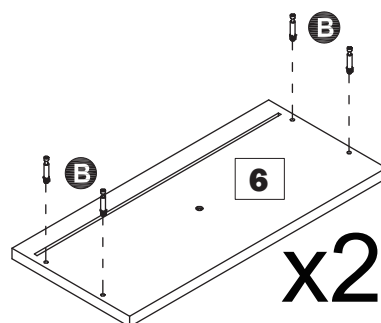

Cam Dowel Qty 14





Wooden Dowel Qty 10


STEP 2

Fit cam dowels **B** to top panel **1**.

Fit wooden dowels **A** into top panel **1** as shown.

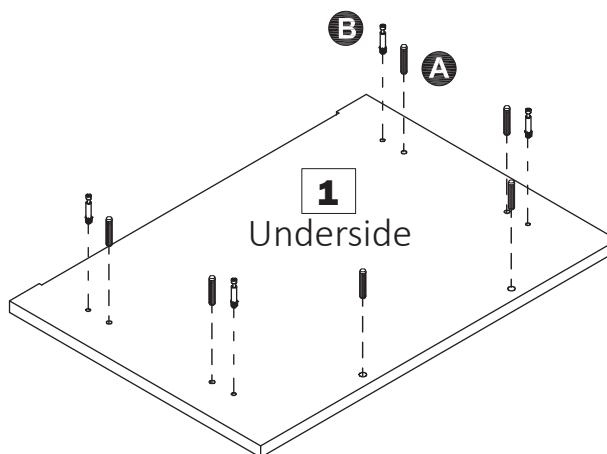

Wooden Dowel Qty 6







Cam Dowel Qty 4

Assembly Steps

STEP 3

Assemble drawer runners **E** to side panels **2** and **3** using screws **F**.

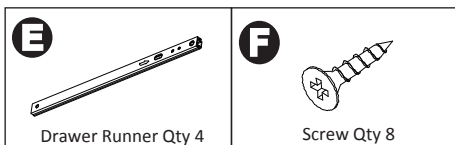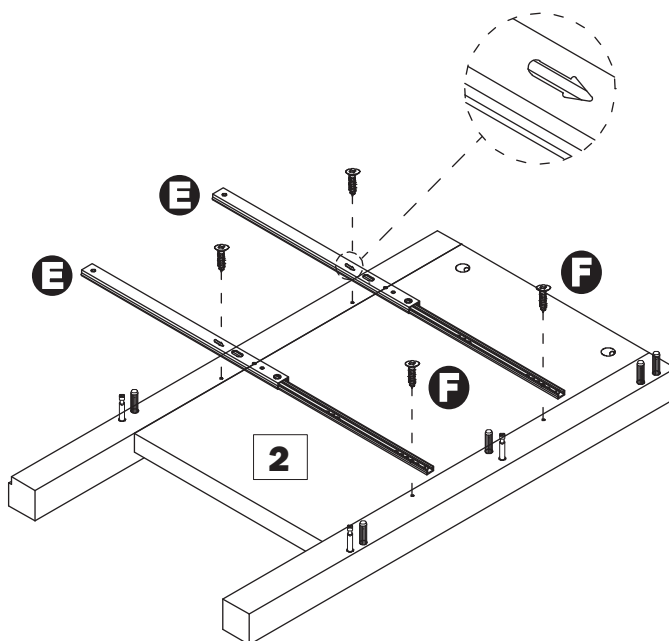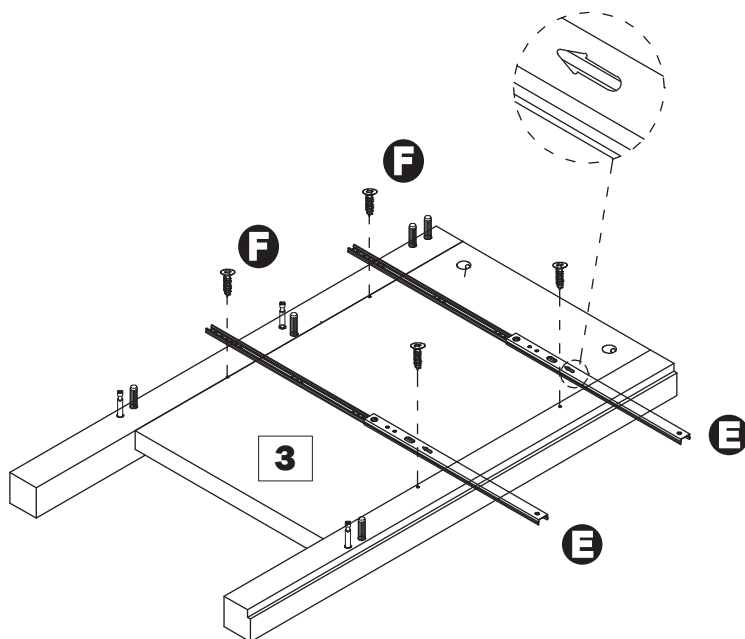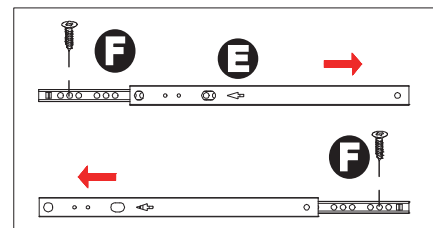

Assembly Steps


STEP 4

Fit large cam nuts **C** into bottom stretchers **4**.

Locate into position on left side panel **3**.


Secure by tightening cam nuts.

Locate top stretcher **5** in the position shown.

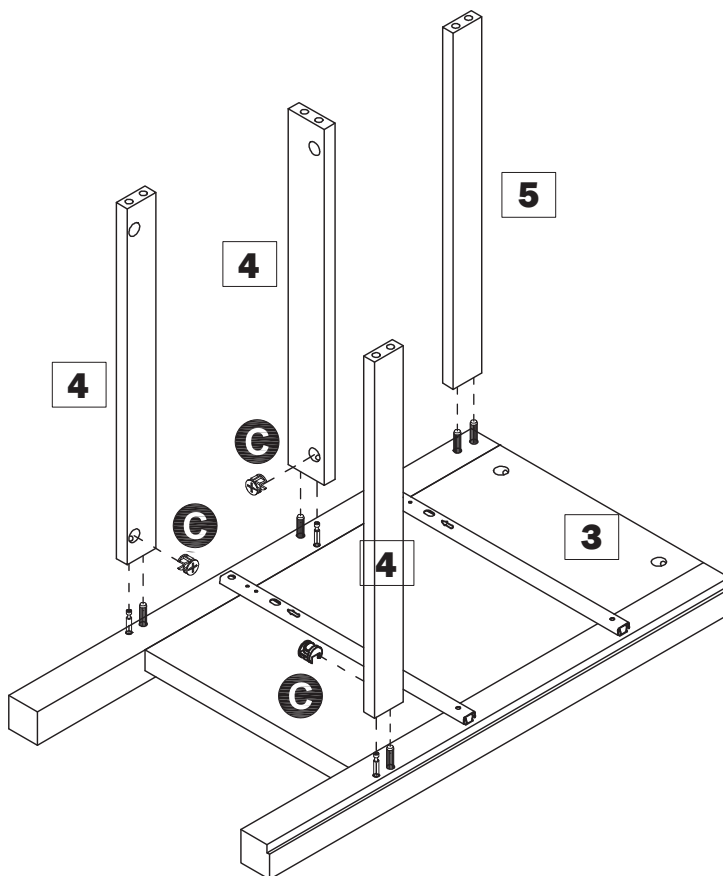

STEP 5

Repeat step 4 to assemble side panel **2**.

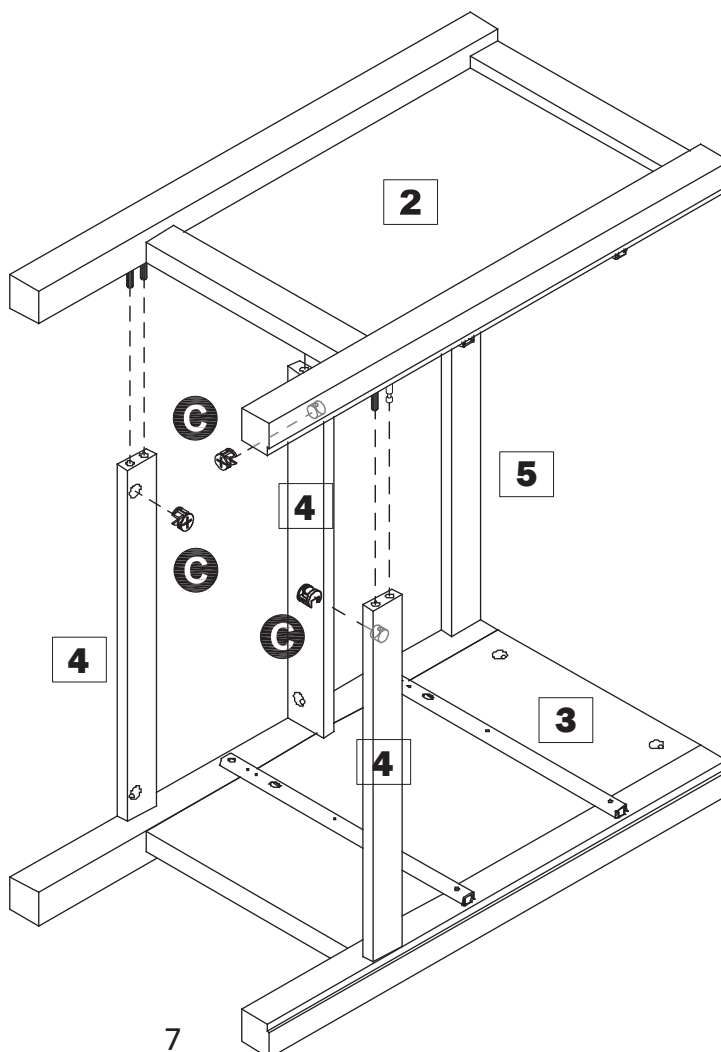


Assembly Steps

STEP 6

With help, stand the unit upright.

Insert cam nuts **D** into side panels **2** and **3**.

Locate top panel **1** into position and secure by tightening cam nuts.

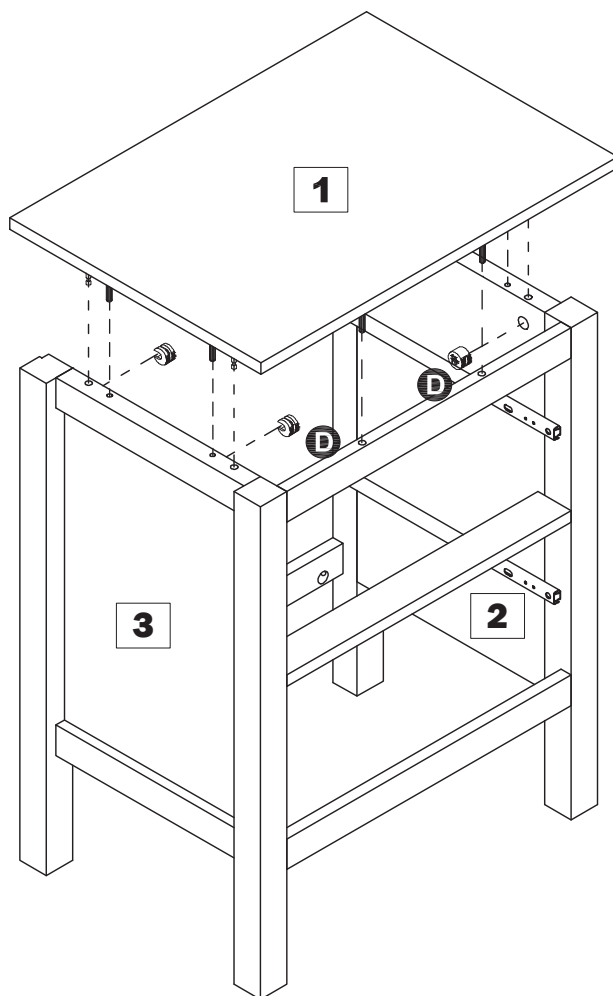

D




Small Cam Nut Qty 4

Assembly Steps

STEP 7



Slide back panels **11** into the grooves at the back of the unit.

Ensure sealing strip **12** is located in between the back panels.

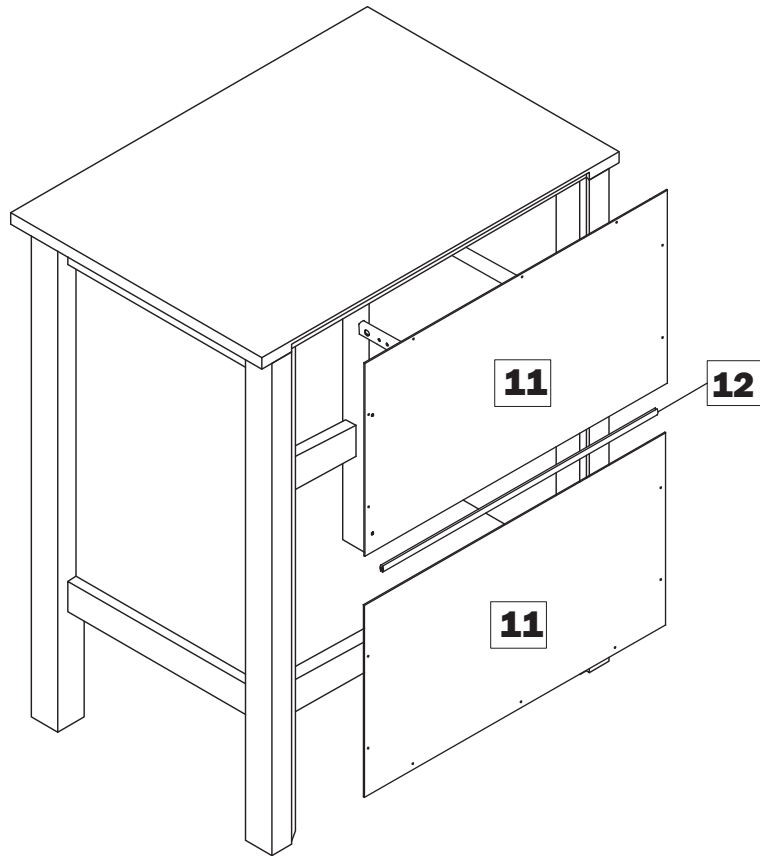

STEP 8

Secure back panels **11** using screws **I**.

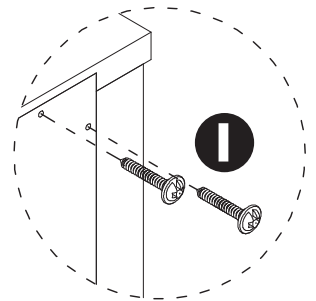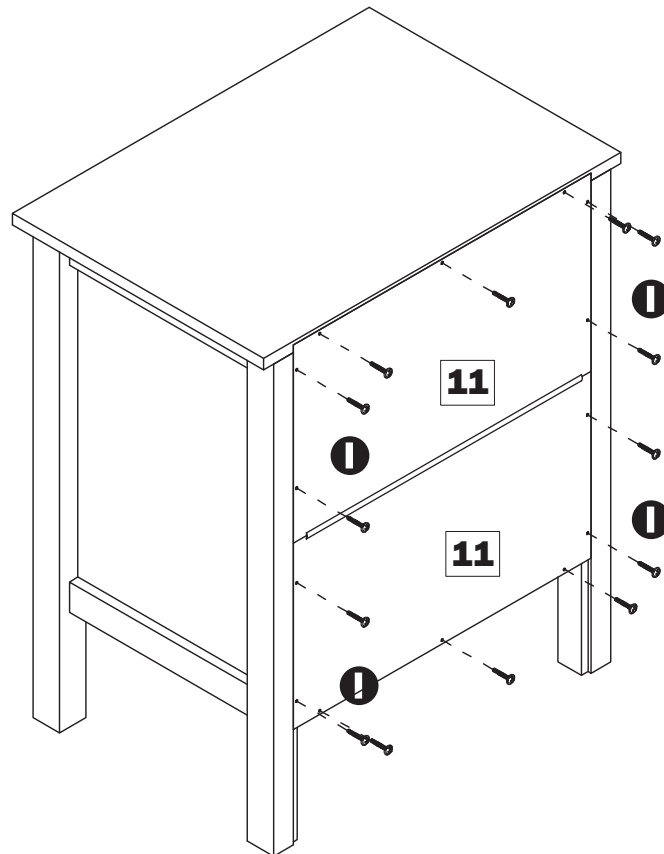


Screw Qty 14

Assembly Steps


STEP 9

Assemble drawer back panel **9** and side panels **7** and **8** using screws **H**.


x2

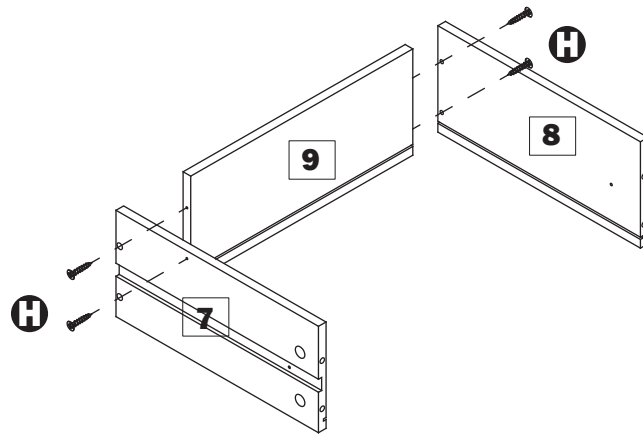

Slide drawer base **10** into grooves.

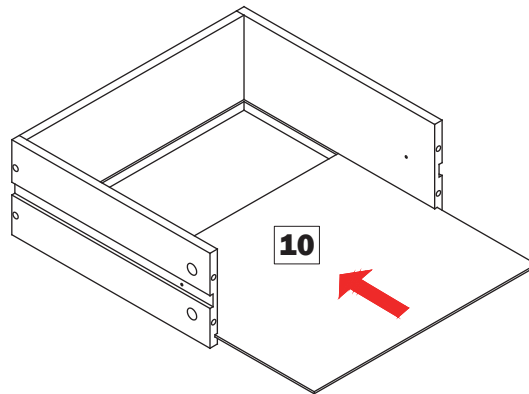


Assemble drawer front **6**. Secure using small cam nuts **D**.

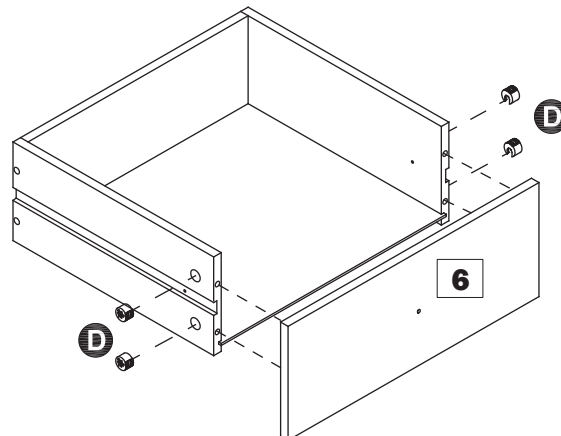

Fit drawer knob **J** using screw **K**.

Repeat for both drawers.

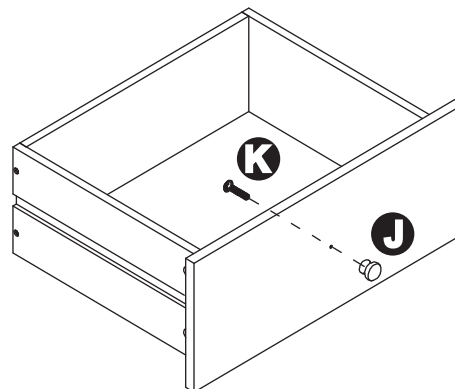

H



Wood Screw Qty 8

D



Small Cam Nut Qty 8

J



Knob Qty 2

K



Screw Qty 2


Assembly Steps

STEP 10

With help, stand the unit upright.

Engage the drawer runners.


Repeat for both drawers.

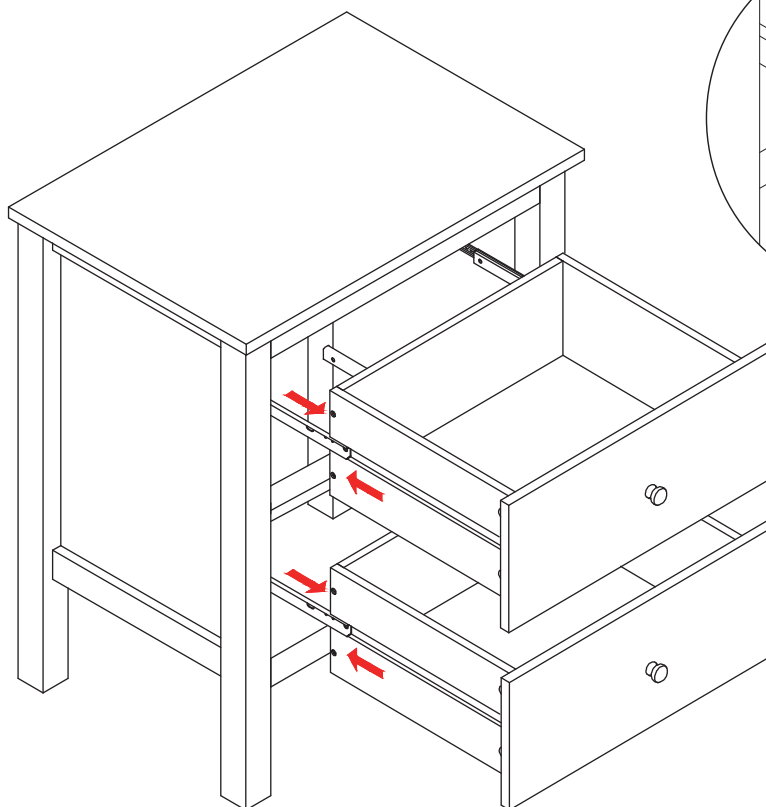

STEP 11

Secure drawer bodies to runners using screws **G**.

Repeat for both drawers.

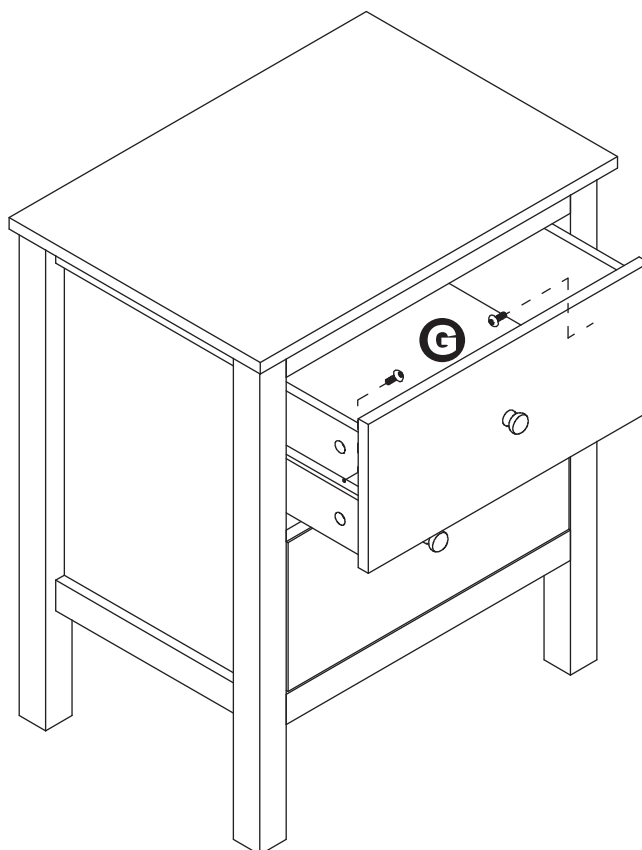


G



Screw Qty 4

Assembly Steps

STEP 12

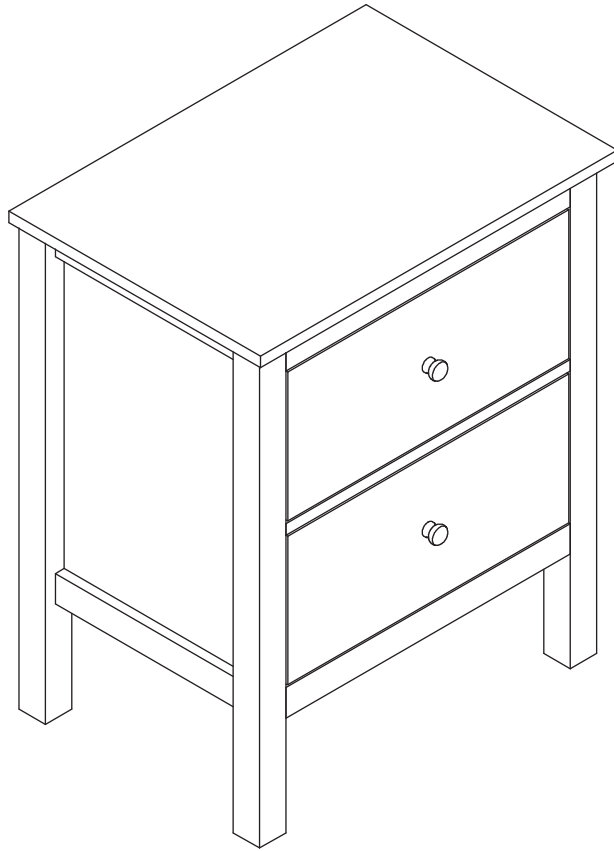

After Sales Support / Product Returns

If you have questions regarding the operation of your purchase, or in the unlikely event you need to return the unit because it is faulty or is no longer wanted, please contact our product returns department at **customerservice@forwardindustries.com, or 561-465-0030, Option 0.**

Address: **Forward Industries, 105 South Narcissus Avenue Suite 412, West Palm Beach, FL 33401**