



ASSEMBLY INSTRUCTIONS

TWIN BED WITH 2 DRAWERS
















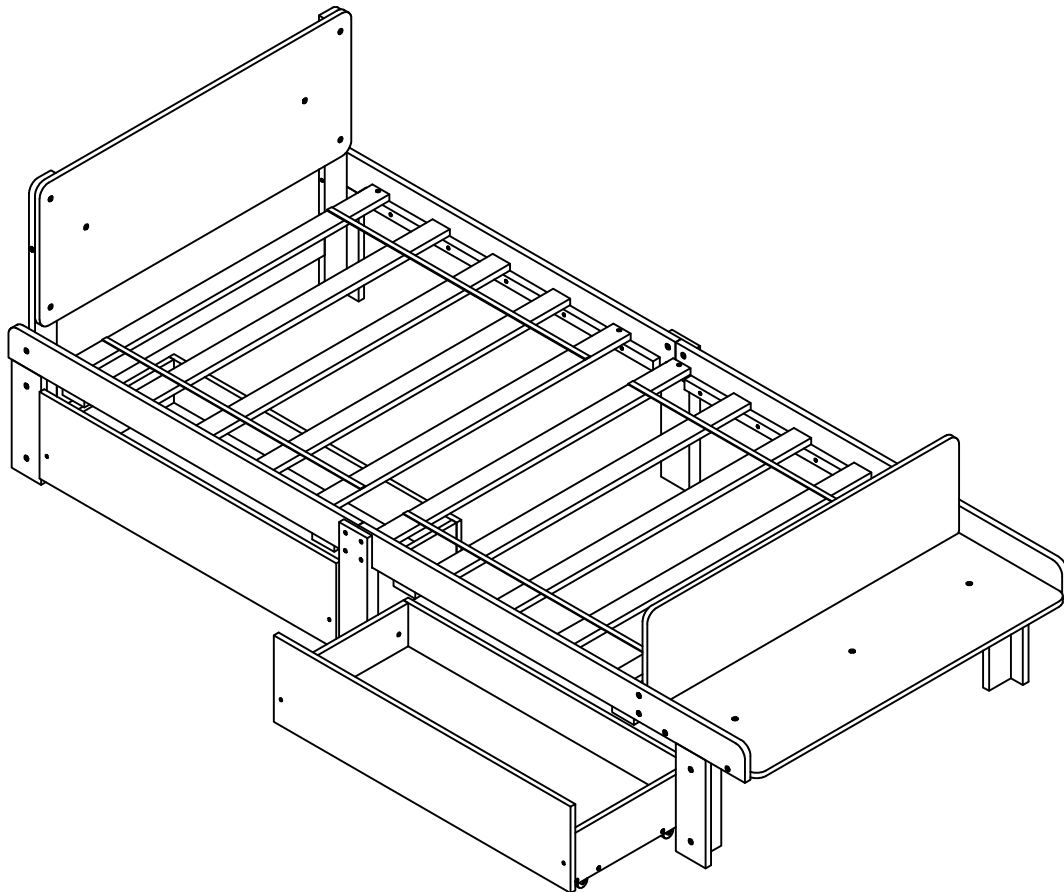


ILA33772




Detail View

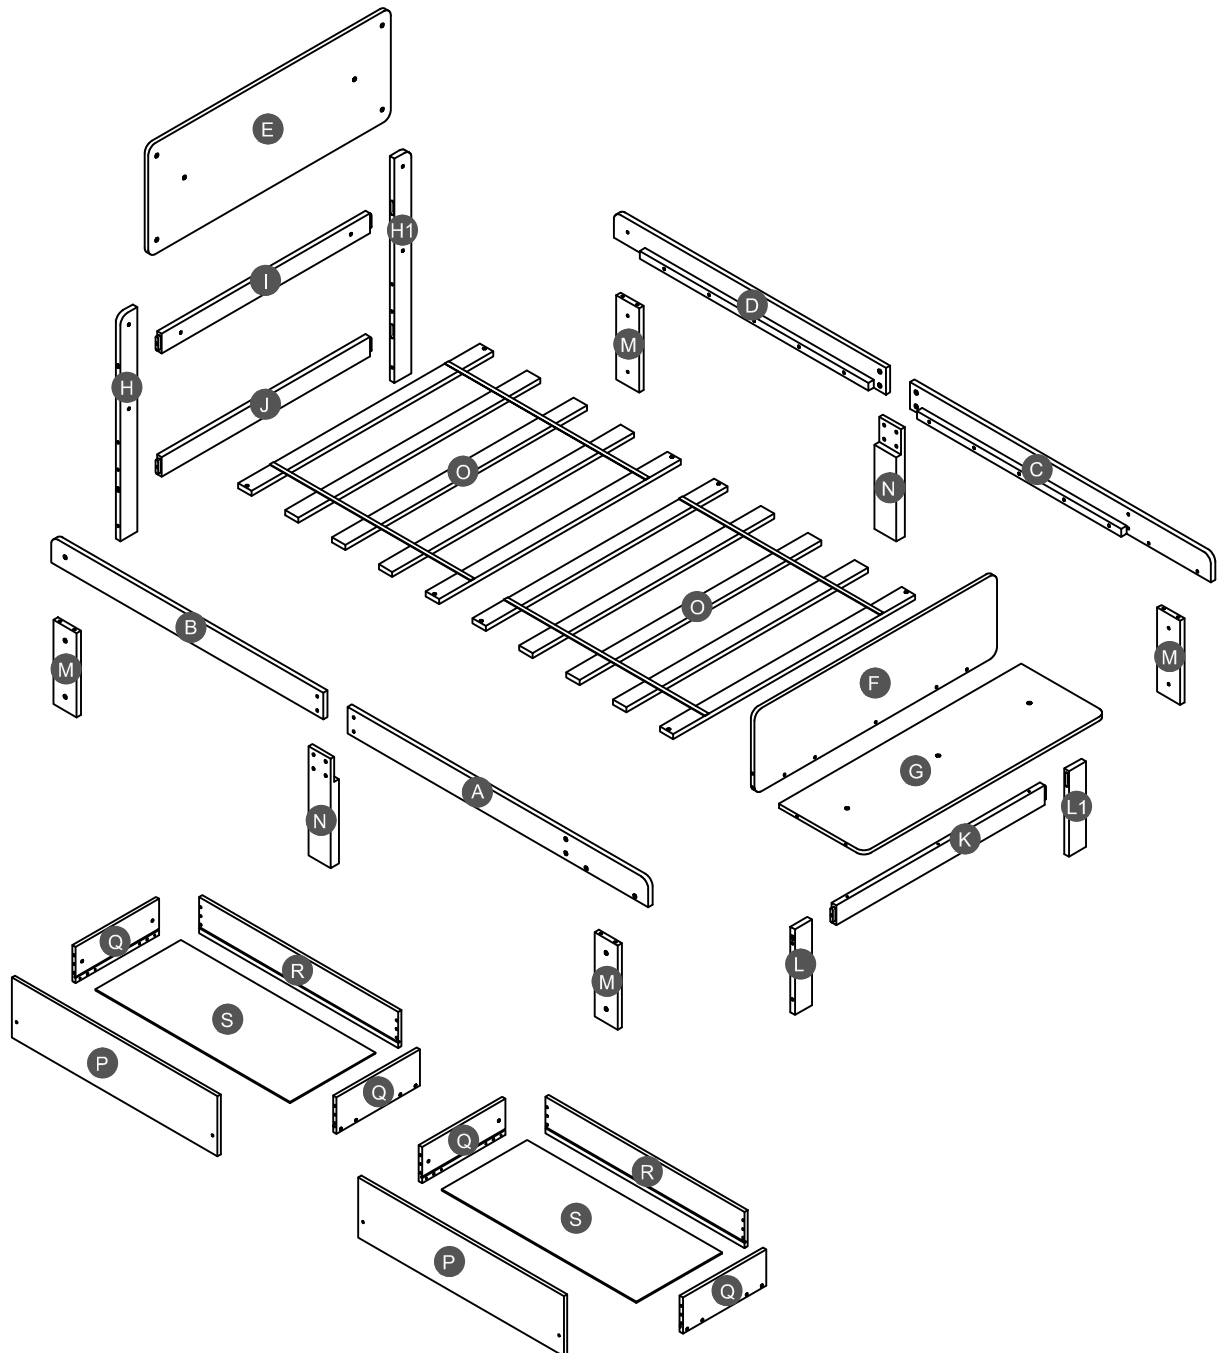


Part List

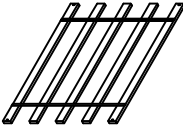A  Side rail (Left front) - 1pc	B  Side rail (Left back) - 1pc	C  Side rail (Right front) - 1pc
D  Side rail (Right back) - 1pc	E  Back panel - 1pc	F  Divider panel - 1pc
G  Front panel - 1pc	H  Leg HB (Left) - 1pc	H1  Leg HB (Right) - 1pc
I  Upper horizontal bar HB - 1pc	J  Lower horizontal bar HB - 1pc	K  Horizontal bar FB - 1pc
L  Leg FB (Left) - 1pc	L1  Leg FB (Right) - 1pc	M  Support leg - 4pcs
N  Support side rail - 2pcs	O  Slat - 2Set (1Set = 5pcs)	P  Front drawer panel - 2pcs
Q  Left / right drawer panel - 4pcs	R  Back drawer panel - 2pcs	S  Drawer bottom - 2pcs

Hardware List


1  Ø8*30mm Wood dowel (26pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (6pcs)	3  (Ø12)1/4"*60mm Hex-Head bolts (29pcs)
4  (Ø12)1/4"*30mm Hex-Head bolts (14pcs)	5  1/4"*15 (9.5mm) Horizontal-Hole bolts(35pcs)	6  (Ø12)1/4"*40mm Hex-Head bolts (3pcs)
7  (1/4")4.5*58mm Allen key (1pc)	8  Ø4*30mm Wood screws (32pcs)	9  75*20*2 mm Metal bracket (4pcs)
10  24*28*28*2mm Metal bracket (4pcs)	11  Ø3.5*15mm Wood screws (24pcs)	12  70*35*19 mm Drawer stopper (4pcs)
13  100*54*20 mm Wheels (8pcs)	14  Ø10*20mm Wood dowel (8pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

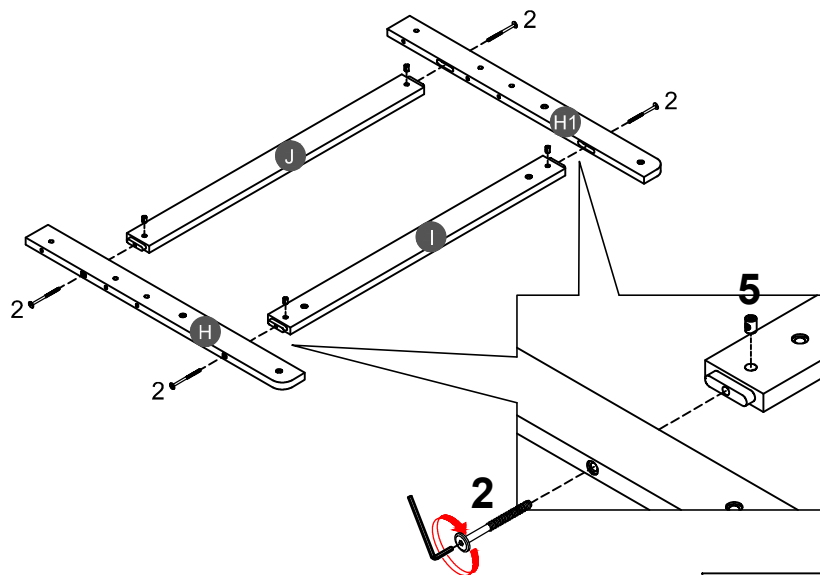



2		5	
4PCS		4PCS	

Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

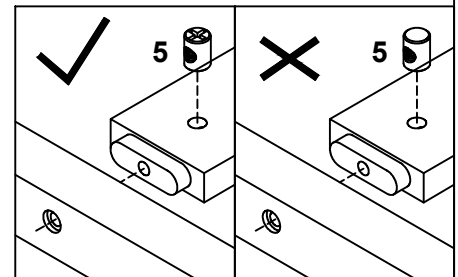


STEP 2:

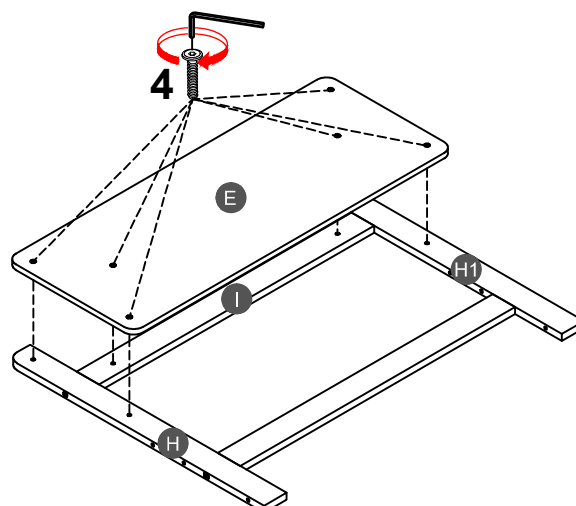

4	
6PCS	


STEP 3:

8	12
	
4PCS	2PCS

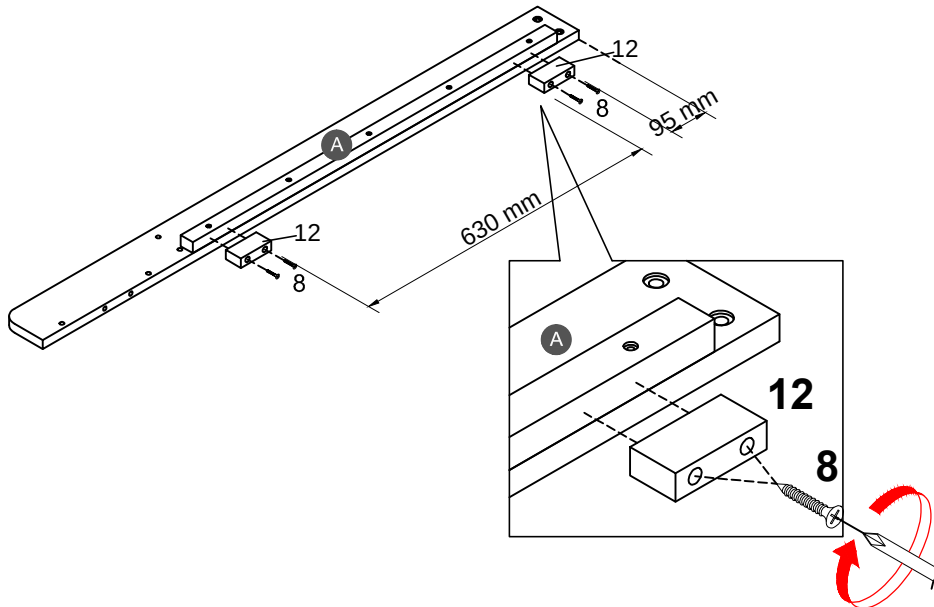


STEP 4:

8	12
	
4PCS	2PCS

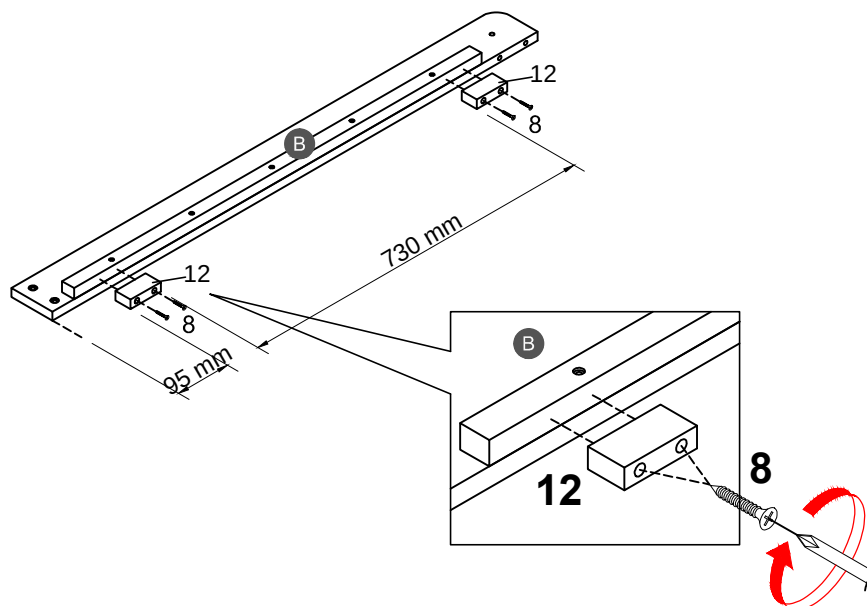

STEP 5:

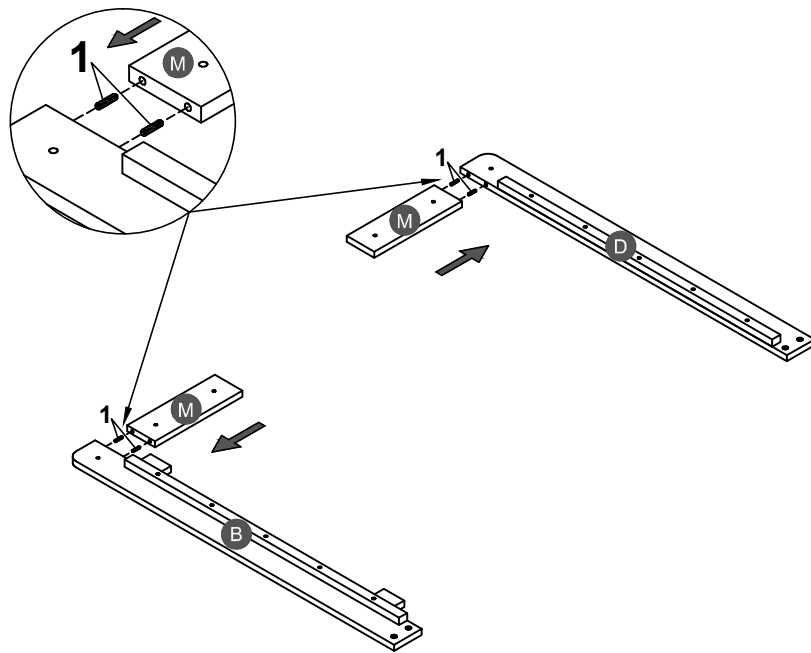


1



4PCS

STEP 6:

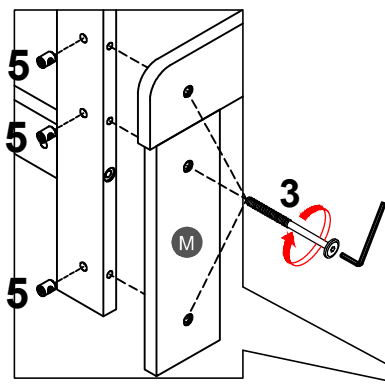

3



6PCS

4





4PCS

5




6PCS

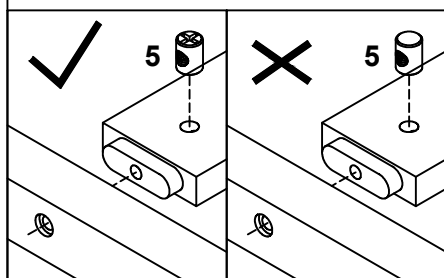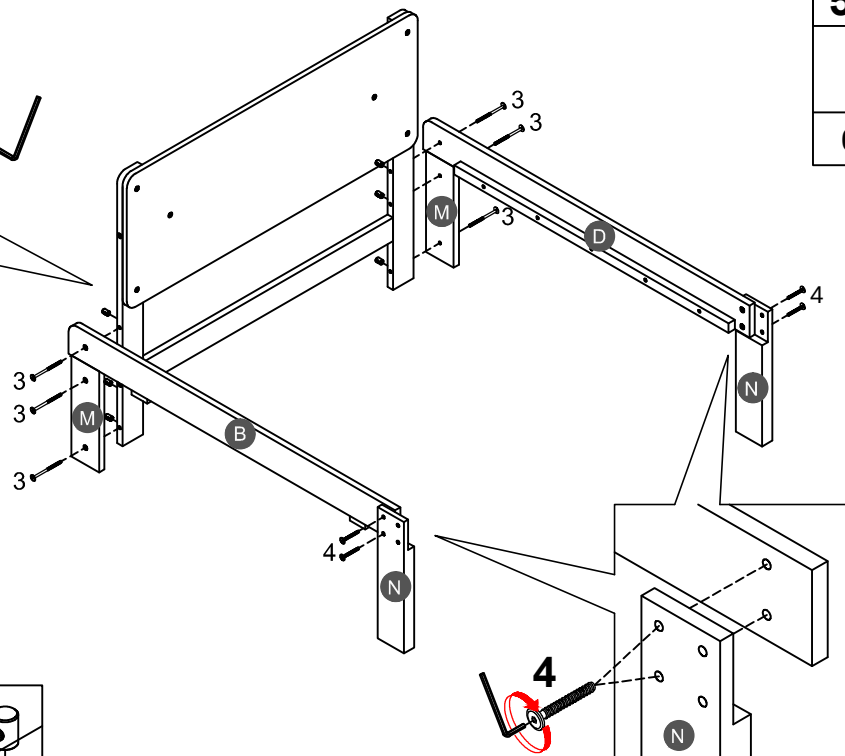


Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 7:

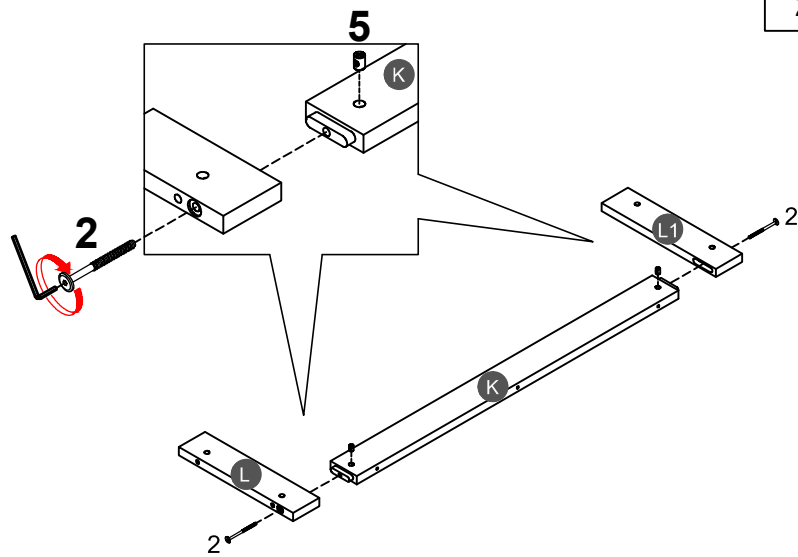


2		5	
2PCS		2PCS	

STEP 8:

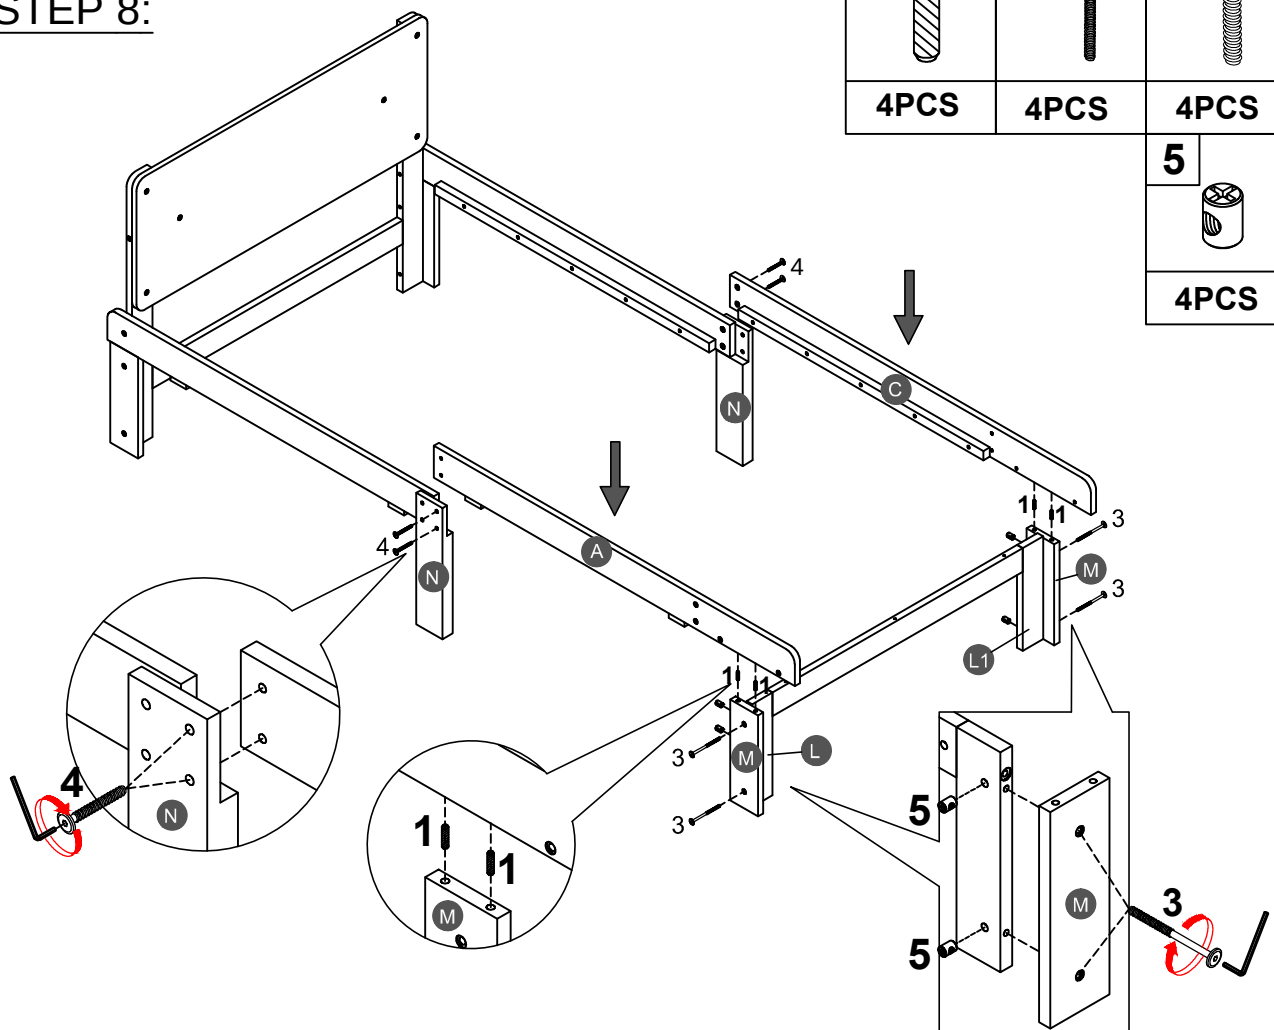


1		3		4	
4PCS		4PCS		4PCS	
				5	
				4PCS	

STEP 9:

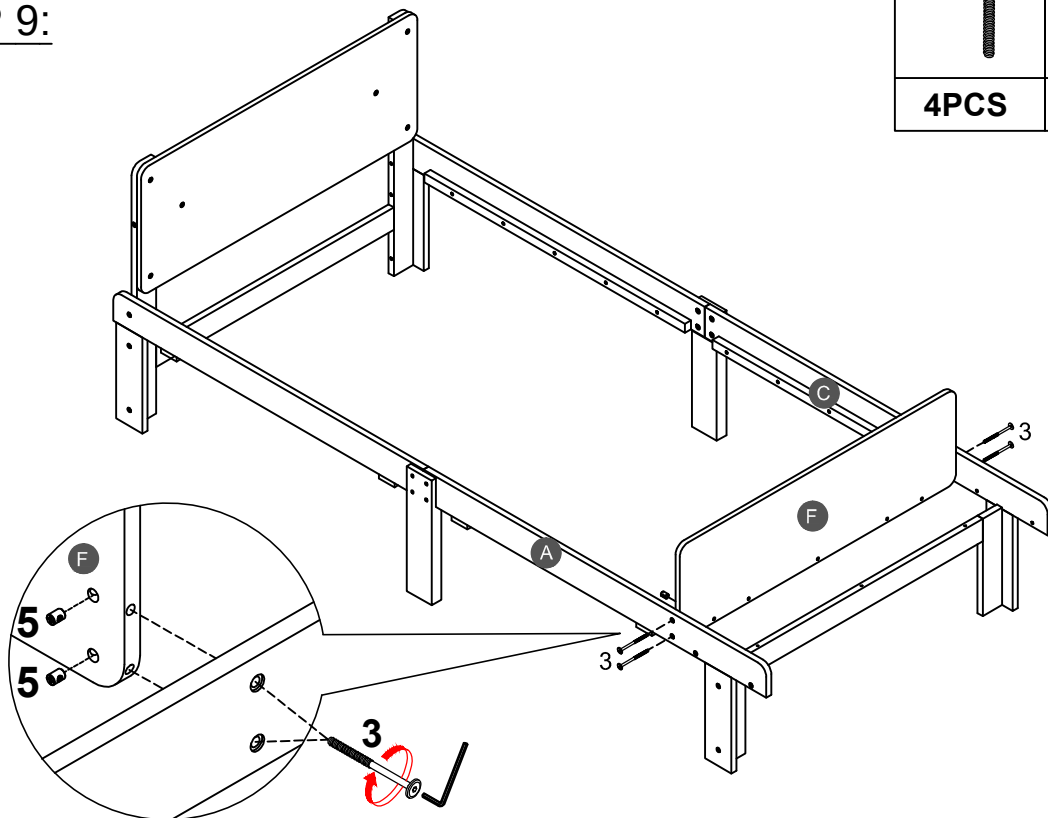


3		5	
4PCS		4PCS	

STEP 10:

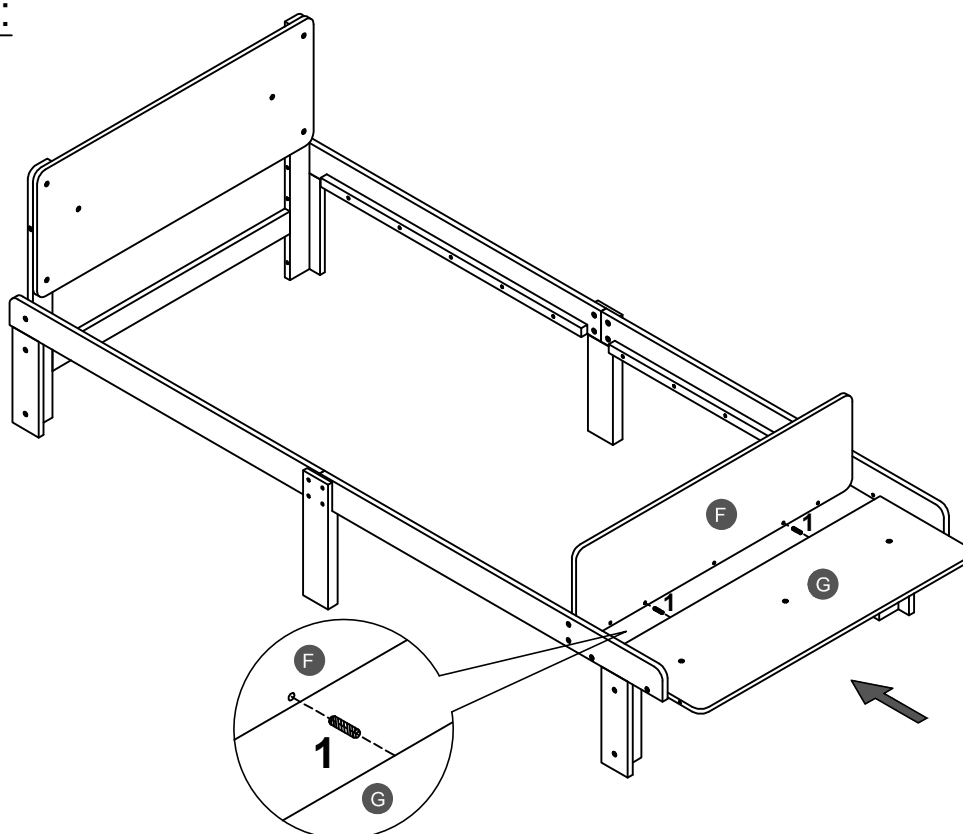


1	
2PCS	


STEP 11:

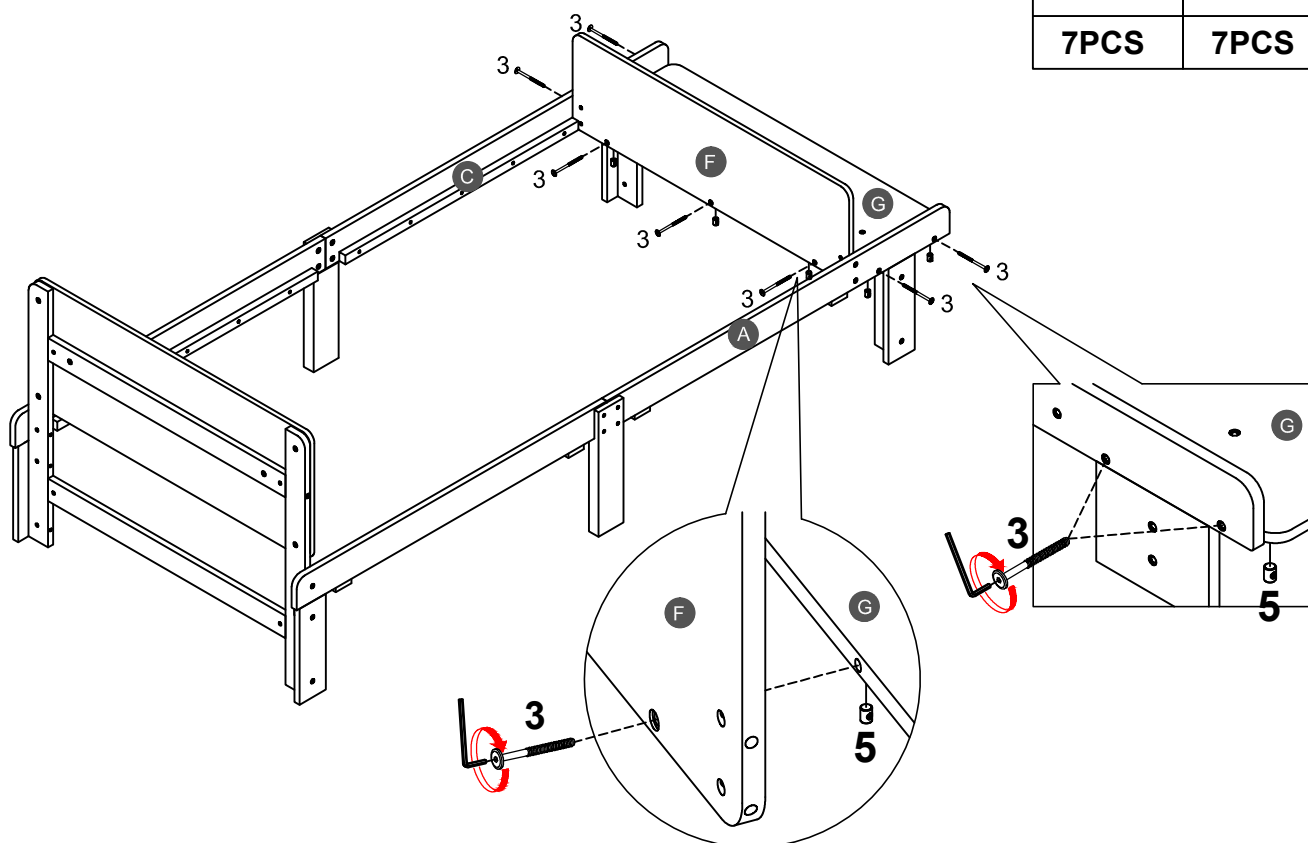

STEP 12:

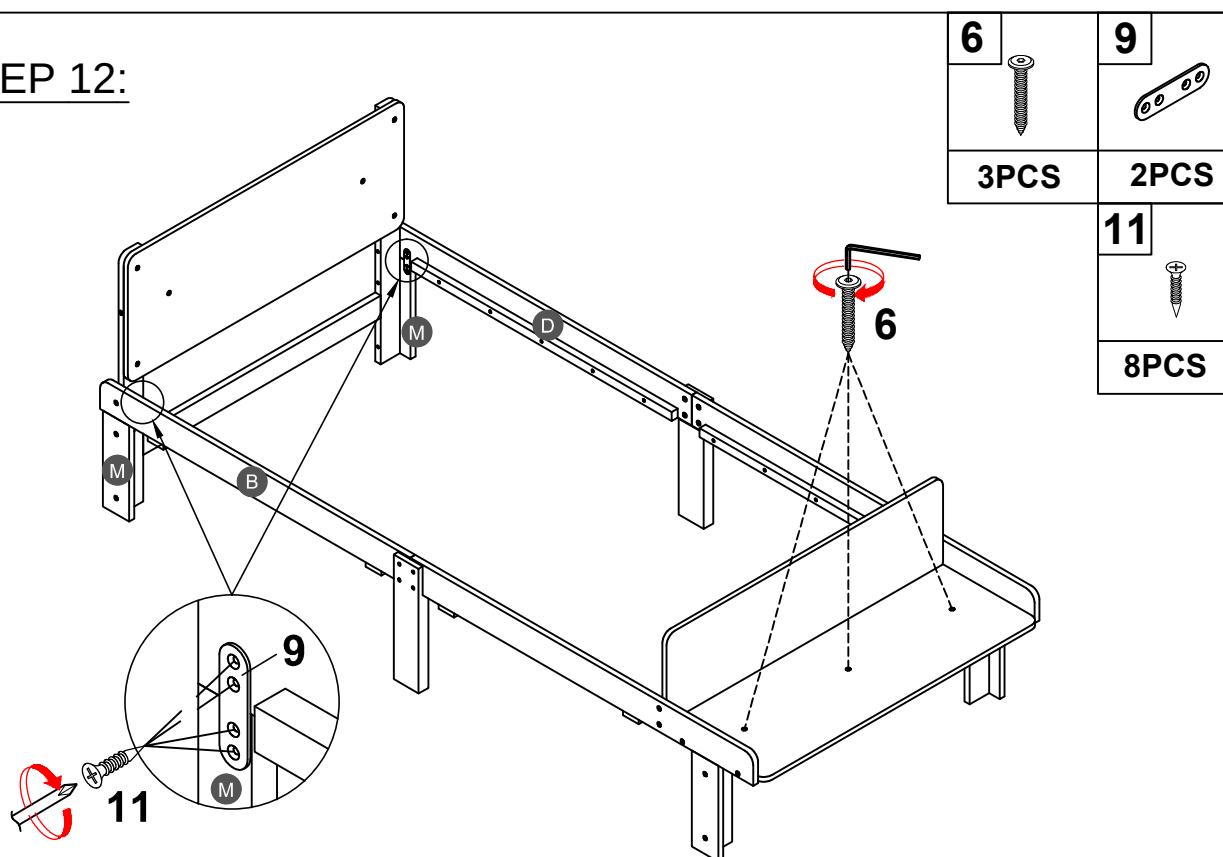


STEP 13:

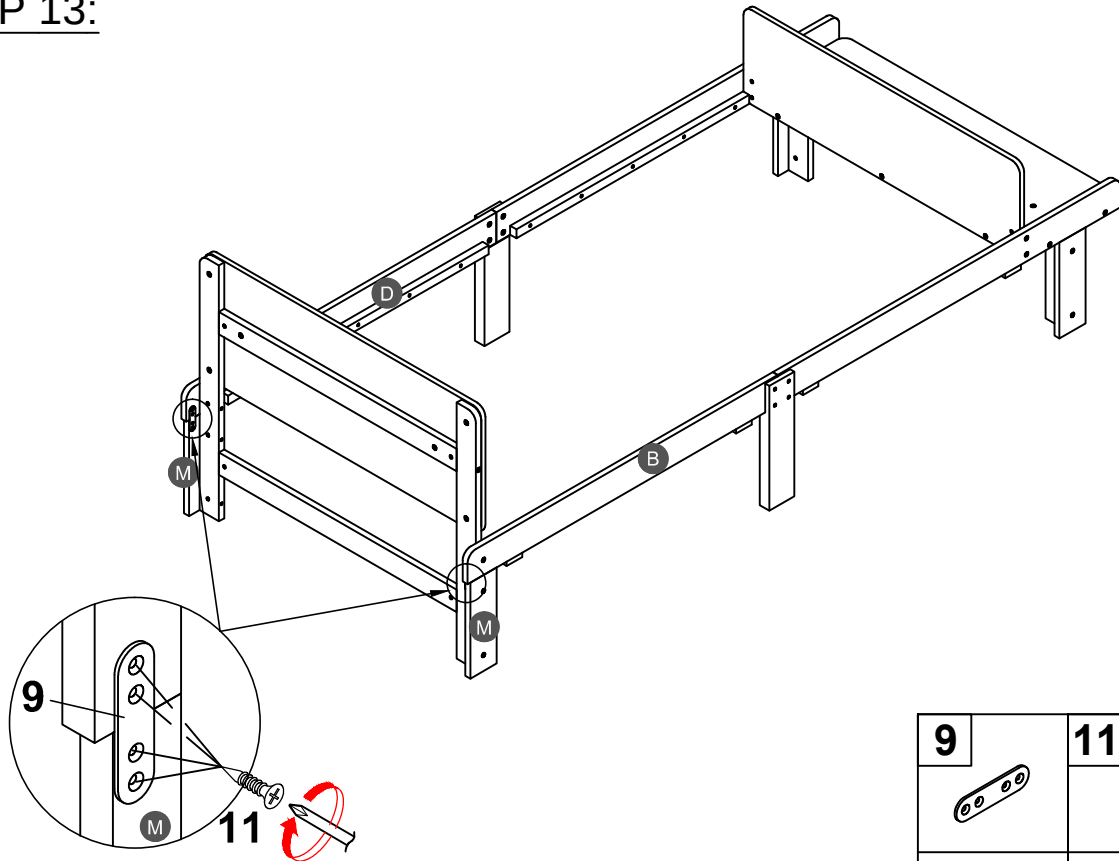



9		11	
2PCS		8PCS	
10		11	
2PCS		4PCS	

STEP 14:

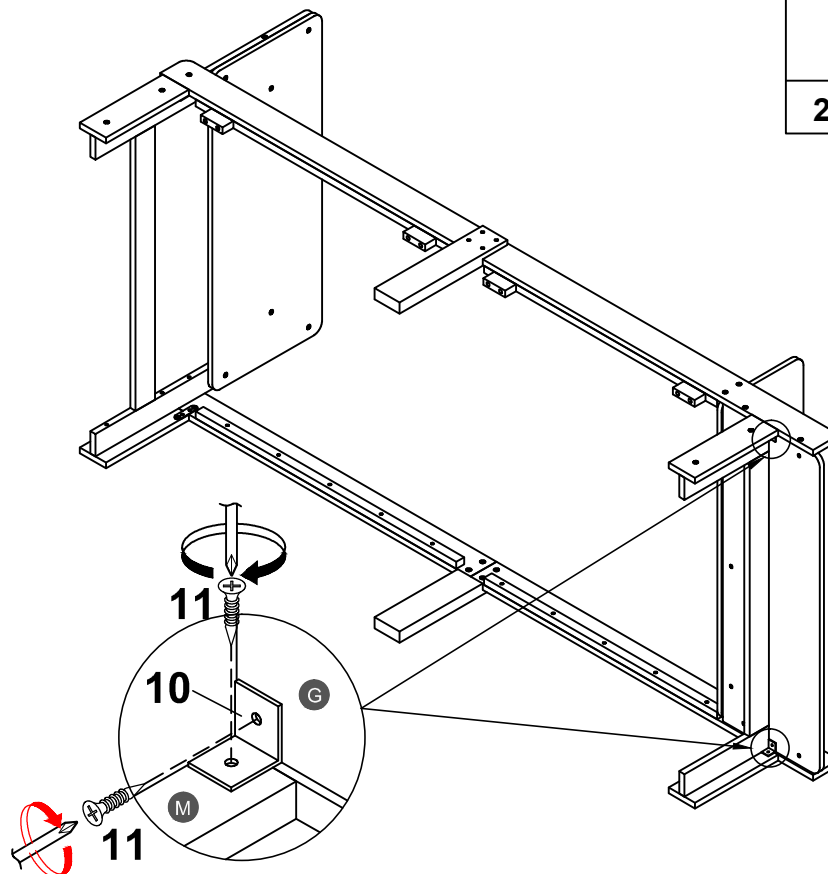

STEP 15:

10	11
	
2PCS	4PCS


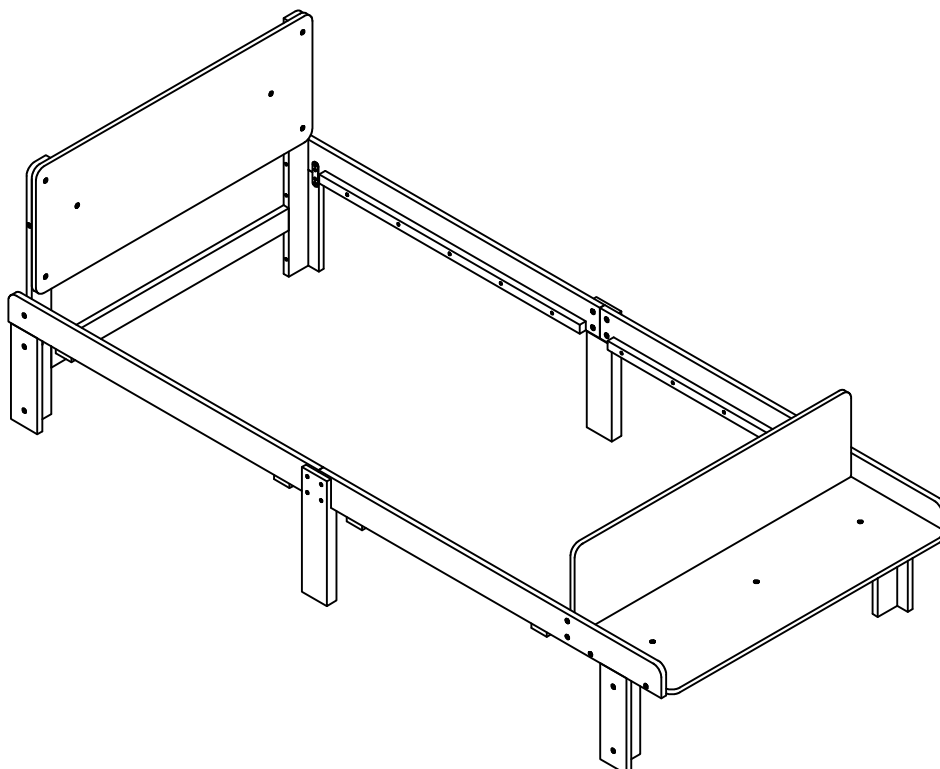
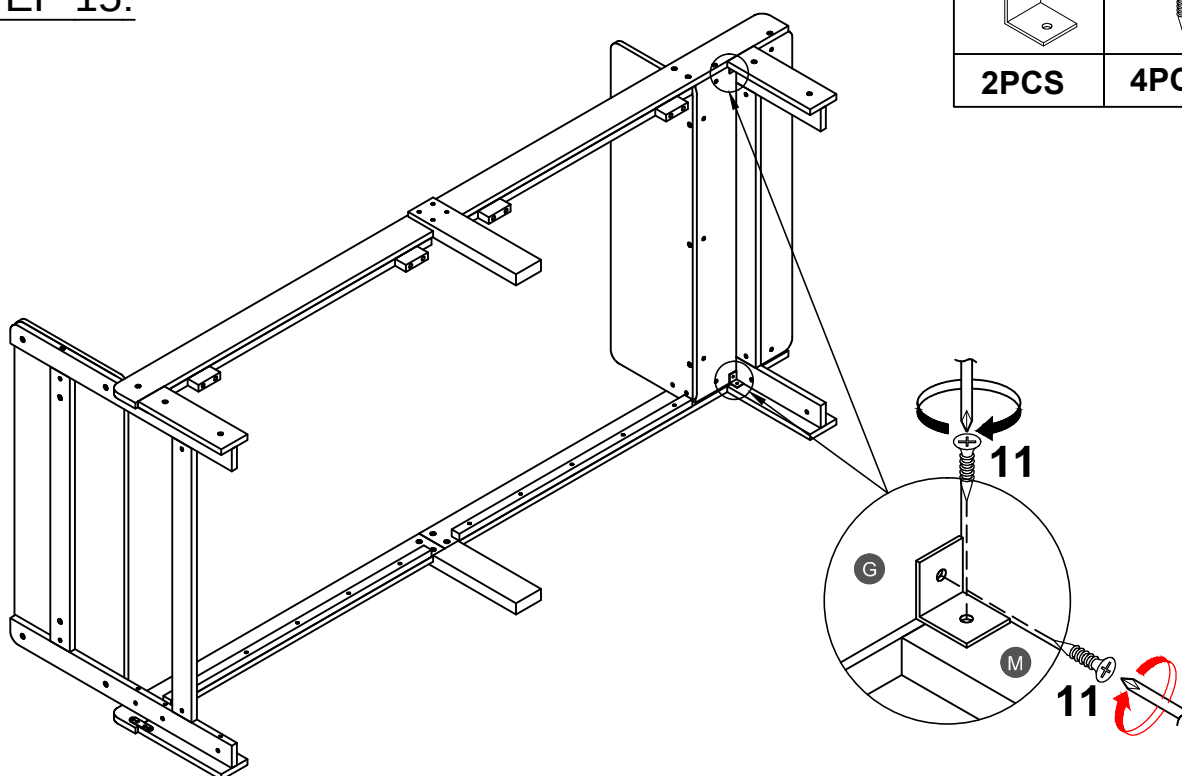


STEP 16:

8



8PCS

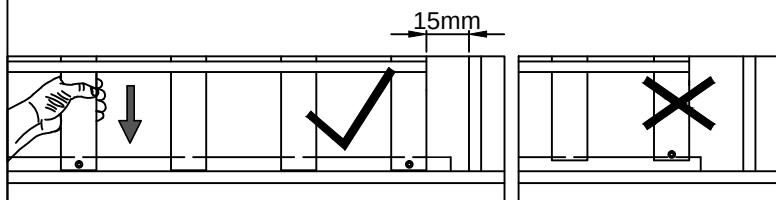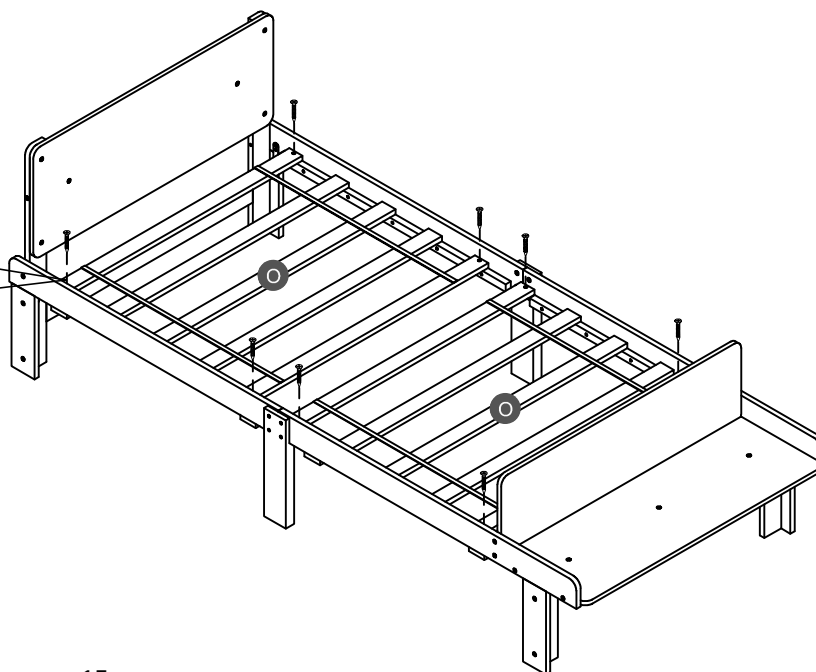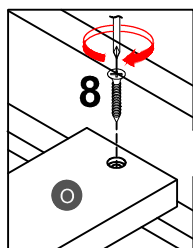

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

STEP 17:

1



8PCS

3




4PCS

5




4PCS

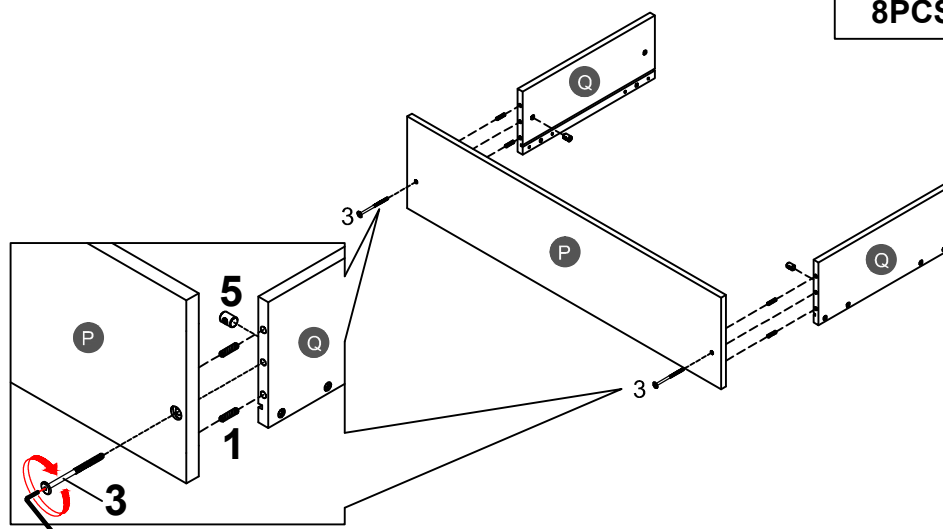

x 2

STEP 18:


1		3		5	
8PCS		4PCS		4PCS	

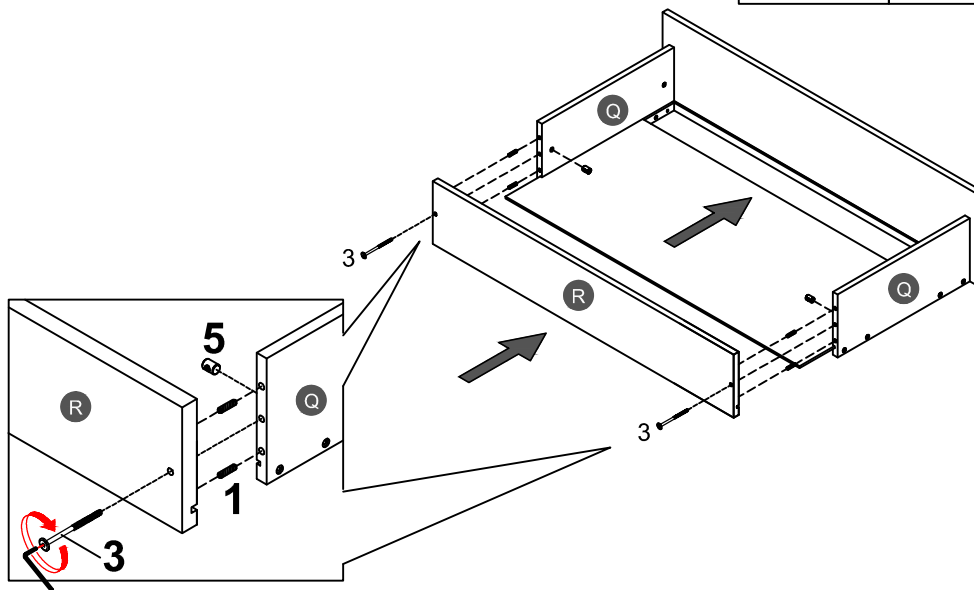

x 2


STEP 19:

8		13		14	
16PCS		8PCS		8PCS	

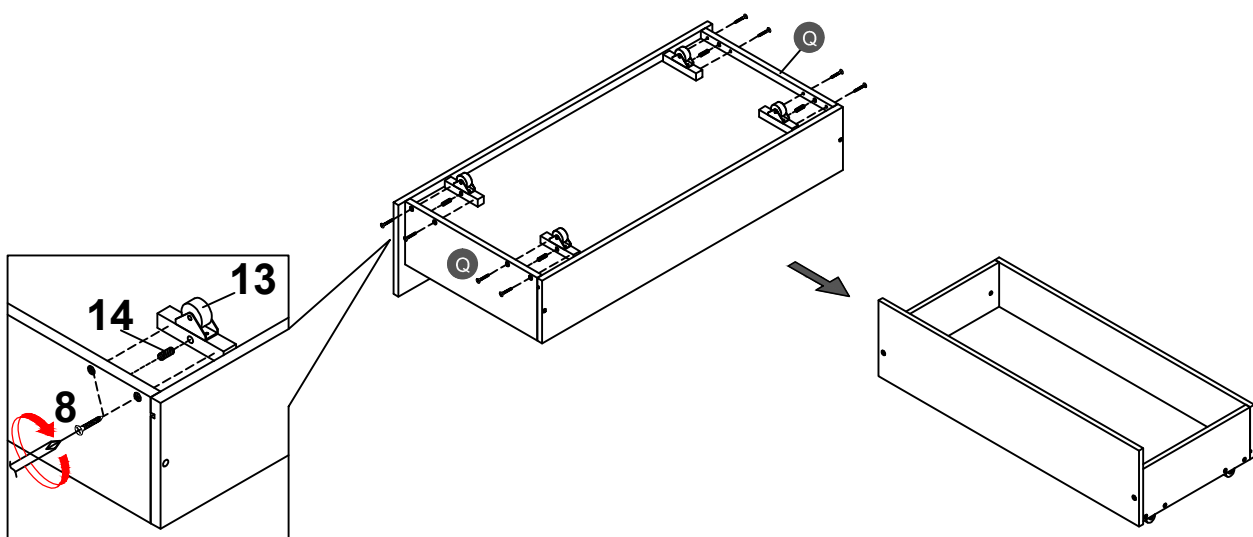

x 2

STEP 20:

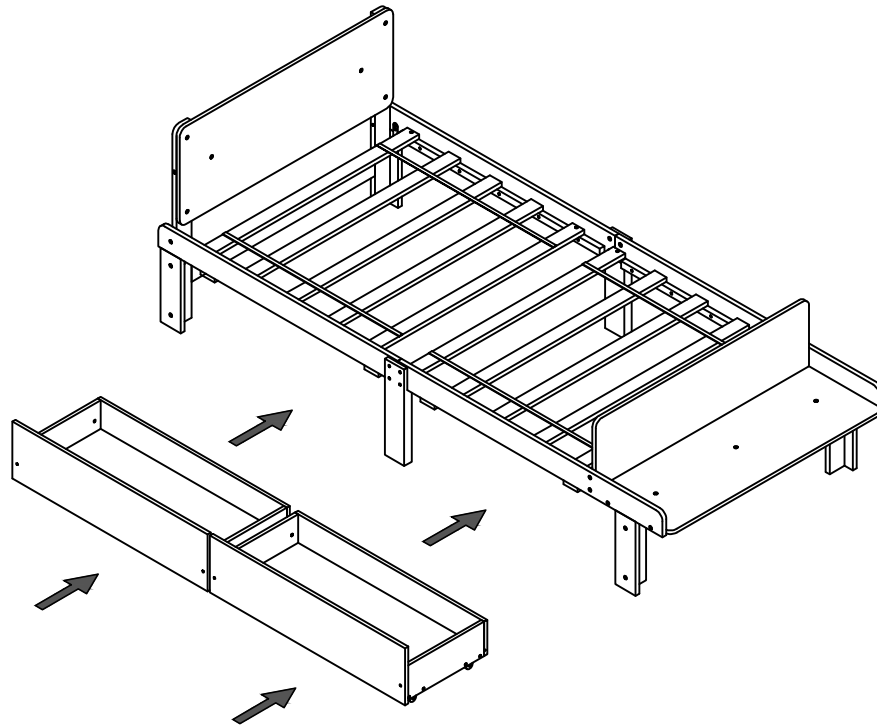

Push Drawer under the bottom of Bunk Bed.

