For Style 1205P16 Assembly Instruction Sheet #IS-1205P16


Blaquired: Flathand screwithrer, Philips screwithrer, piters, who critise, who shippers, electrical type, safely glasson.
Stourner (8) 50 LED Bath Max 2M (Not Inducts).
Stourner (8) 50 LED Bath Max 2M (Not Inducts).
Stourner (9) 50 LED Bath Max 2M (Not Inducts).
serial control of the property of the parts before beginning installation. Check package content led and diagrams below to be sure all parts are missing or demagned, do not alterning installation. Check package content led diagrams below to be sure all parts are missing or demagned, do not alterning to sessentist, heatal, or operate the follow. Contact customer service for replacement

∆Warnings and Cautions

We strongly recommend that a licensed, professional electrician perform the installation. lum off electricity at circuit breaker or main fuee box before installation. Consult a licensed electrician if in doubt see Instructions are provided for your safety. It is very Important you read them completely before installing the fixture

Disconnect fixture from power source before replacing builbs. Make sure builbs are given sufficient time to cool before removel.

Package Contents



888 PART Hardware Contents DESCRIPTION QUANTITY
Decorative Cape 2pcs
Electrical Marrets 2pcs
Outlet Box Screw 2pcs
Nounting Screw 2pcs •8 pos 8

A.Thread the power cord to the Middle Rods , fix the STEP 1 - Install Rods to Fixture Body the fxiture body Middle Rods with Celling Canopy

finally fix the Canopy other pieces of Rods to connect the with the Rode then the same P(Middle Rod)

> APass the supply wires through the Mounting STEP 3 - Attach Mounting bracket to Outlet Box the Outlet Box with the head of the Green Ground Screw facing you. Secure it bracket (EE). Attach the Mounting bracket (EE) to


Tighten until anug. with Outlet Box Screws (CC). Outlet Box Screws Ground Wire Supply Wires with Figure 3 **Outlet Box** Ħ 8

Alline up a set of holes on the STEP 2 - Attach Mounting Screws, Lock Washers and Hex Nuts to Mounting bracks bracket (EE). Pass Lock holes on the Mounting Screws (DD) into the canopy. Thread Mounting and Holes on the ceiling Mounting bracket (EE) Canopy ġ Ŕ

Nuts onto the Mounting land tighten until enug Screws (DD). Washers and thread Hex

A. Use standard wire connectors to make all wire STEP 5 - Wire Connections connections. Twist connectors until wires are tightly joined tagether. Wrap each connection with approved electrical tage B.Please put the Glass Shade to the Fixture Body(A) and carefully stuff all the connected wires into the Outst Box.


The amoke glass ball is installed on the lamp holder. from outlet box White wire White wire from fluture

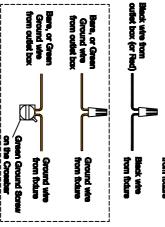

A. Fit the ceiling canopy to Mounting Screue (DD) and secure with Decorative Cape (AA). Note: The ceiling canopy should be arrug against the ceiling and the Decorative Cape (AA). If not, adjust the length of the Mounting Screwe (DD) by unacrowing the Hax Nut and Lock Weather and then STEP 4 - Fit Calling Caropy to Mounting bracket Assembly and ceiling canopy and proceed to Step 5 . ceiling canopy is secure, remove the Decorative Caps (AA) tracket (EE) until the correct length is achieved. Once the ving Mounting Screws (DD) in or out of the Mounting A Carefully tuck all wires into the outlet box and por STEP 6 - Install Ceiling Canopy to Ceiling ceiling canopy of the Foture Body (A) over the outst box.
Align the holes in the ceiling canopy with the Mounting Screws (DD). Secure with Decorative Caps (AA) and hand

Ceiling Canopy


몽

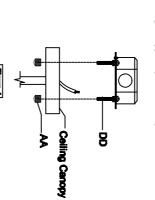

A. Install bulbs (Not Include) into sockets and push STEP 7 - Install Glass Shade , Bulbs. snug into place. Figure 0



(smoke)

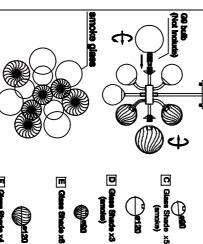



E Class Shade x8

F Glass Shade x

Figure 5

Figure 7

2 of 2