


DESIGNED FOR LIFE

Assembly Instructions

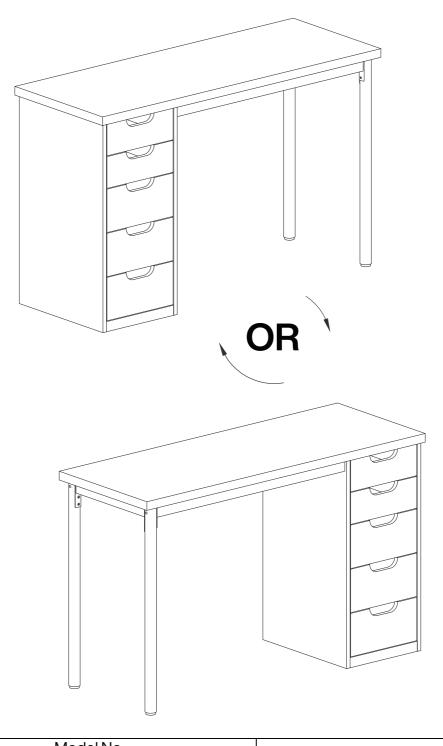

Computer Table

Model No. HOGA-RY0060X/HOGA-RY0146 HOGA-RY0191/HOGA-RY0227 HOGA-RY0268



www.tribesigns.com

Contact Us We're here to help you.




Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

- 1. Carefully read these instructions and keep them for future reference.
- 2. Check the parts list and confirm everything's there before starting assembly.
- 3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
- 4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video

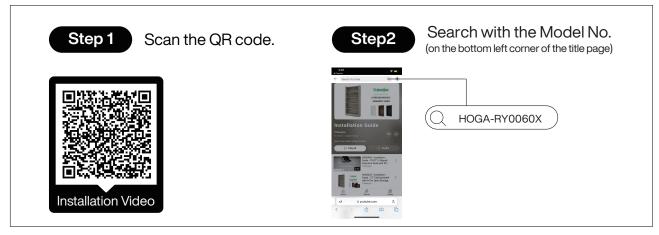


Note: If you can't find the assembly video, please contact us.

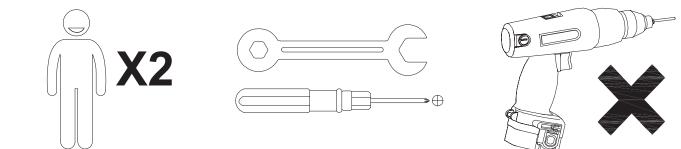


We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

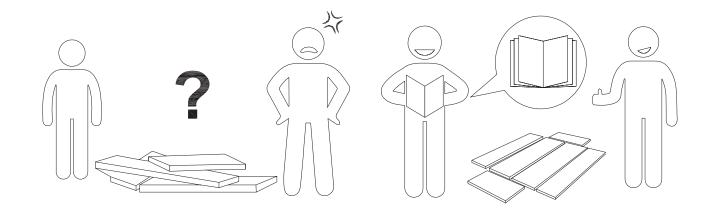

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

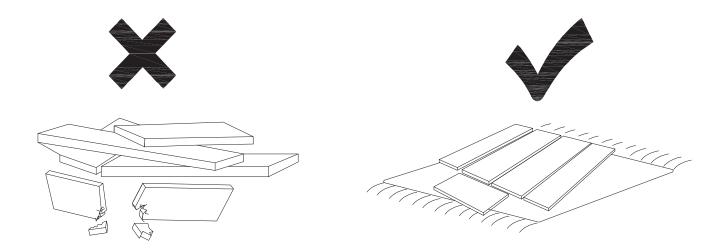

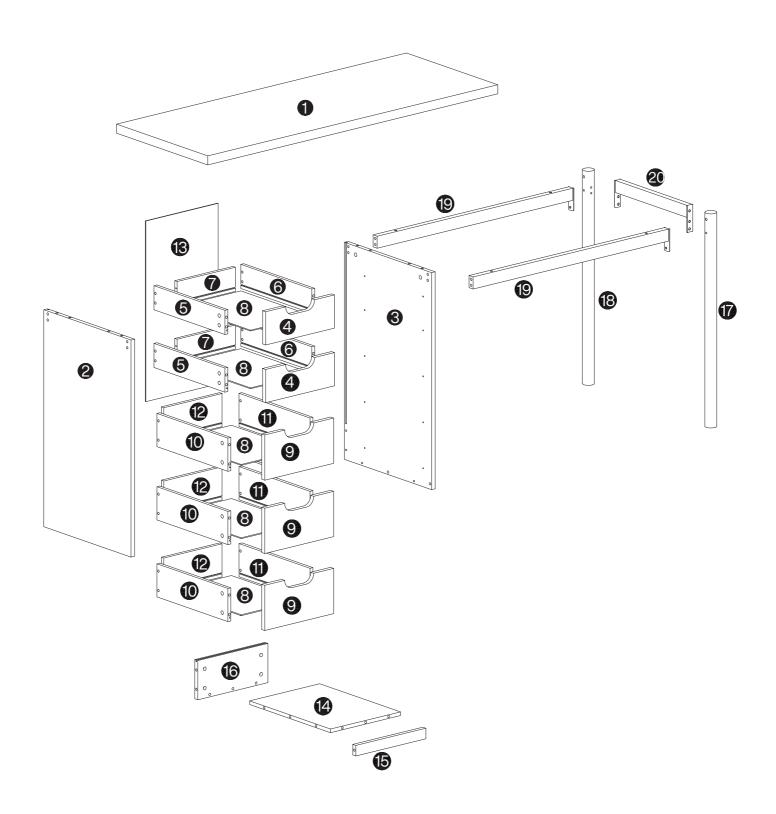




Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.


Parts List


Гт

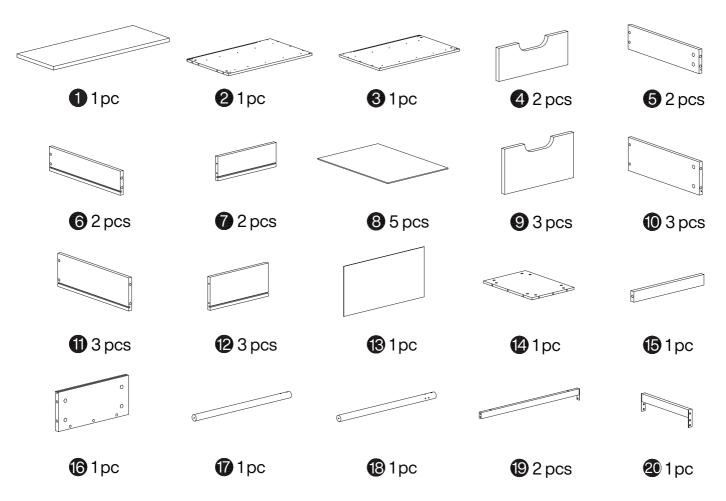


Hardware List


Α	X36+1	В	X16+1	С	X20+1	D	X10+1	E	X1	F	X44+1
		A A A A A A A A A A A A A A A A A A A	X								
Ø6X	Ø6X35 mm		(12 mm	Ø15X10 mm		Ø8X30 mm		M4X55 mm		3.5X14 mm	
G	X20+1	Н	X6+1	I	X4+1	J	X6+1	K	X4	L	X2
	< <u> </u>		(0)						0	6	
Ø4X	Ø4X35 mm		12 mm	M6X	35 mm	M6X	(55 mm	14X14	X9 mm	M6XQ	ð32 mm
	М	X5	N	X5	0	X5	Р	X5	Q	X1	
					Ø.	Ĵ.		-		\geq	
	L350 mm		L350	mm	L350	mm	L350	mm	Ø20 r	nm	

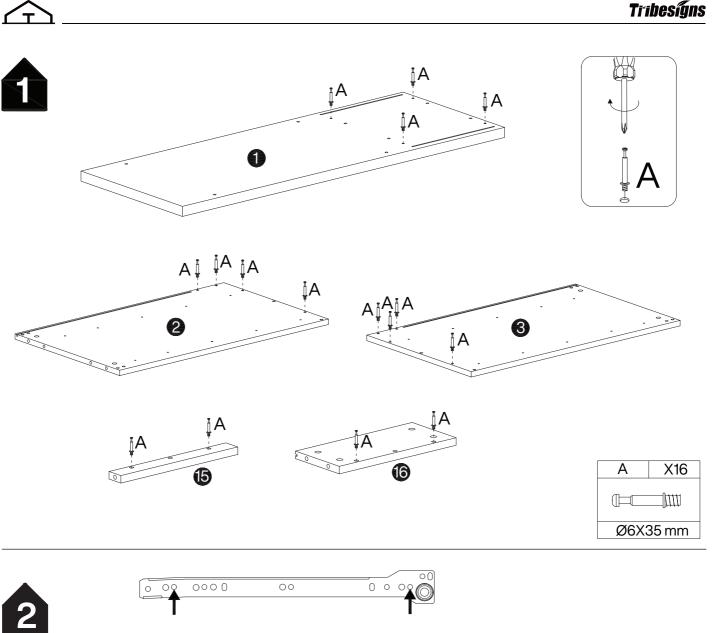

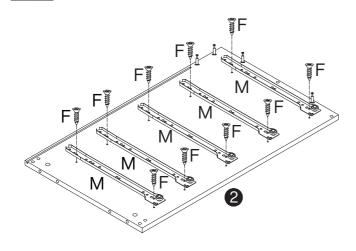

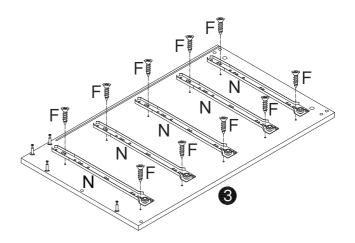





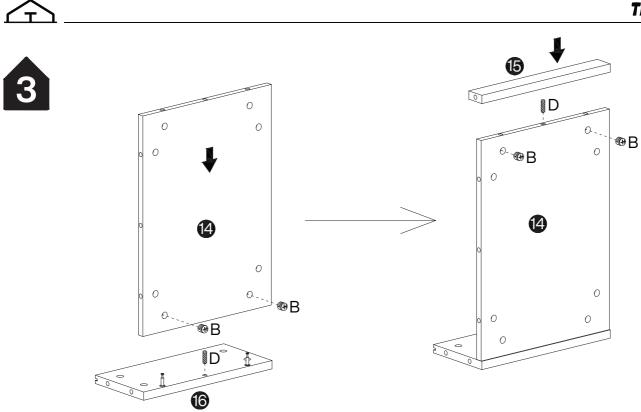


Step 1	Step 2	Step 3		X A		VO
			В	X4	D	X2
0	Ð	R				
		200 ×	Ø15X	12 mm	Ø8X3	30 mm



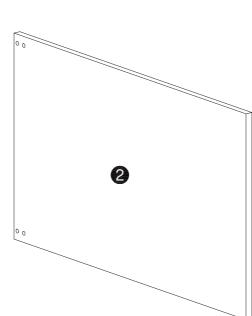

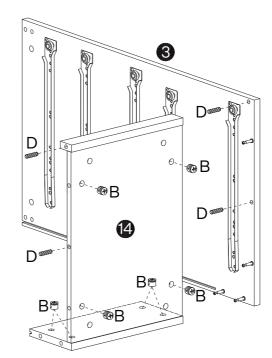

В	B X8		X4	
Ø15X	12 mm	Ø8X30 mm		

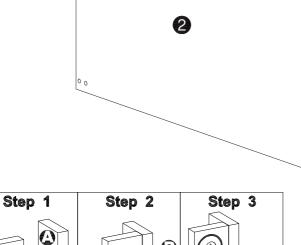

€


Ø

Ø


0¢

Ø

R

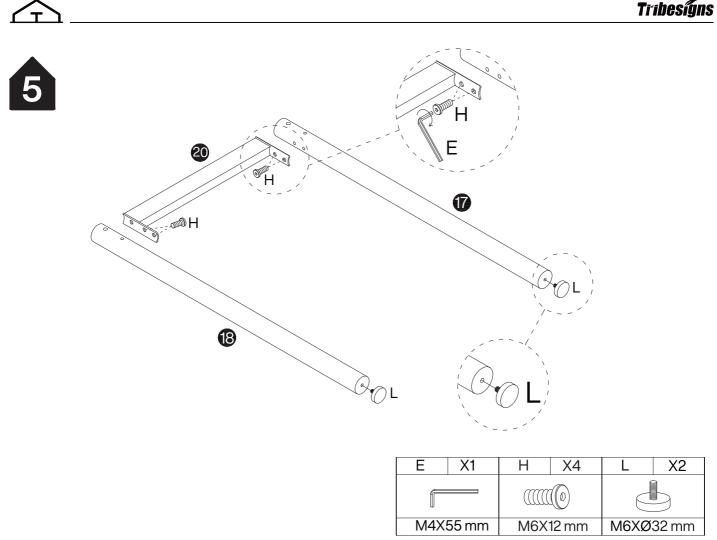


6

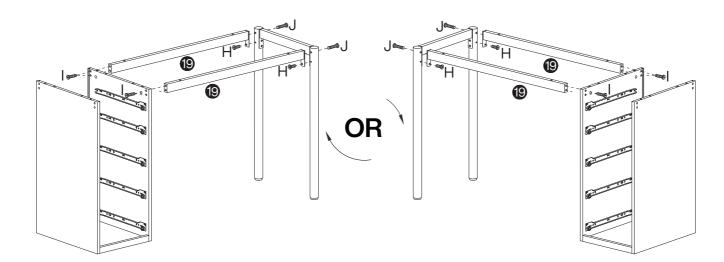


Н	X2	I X4		J X2	
M6X12mm		M6X35mm		M6X55mm	

7


 \triangle

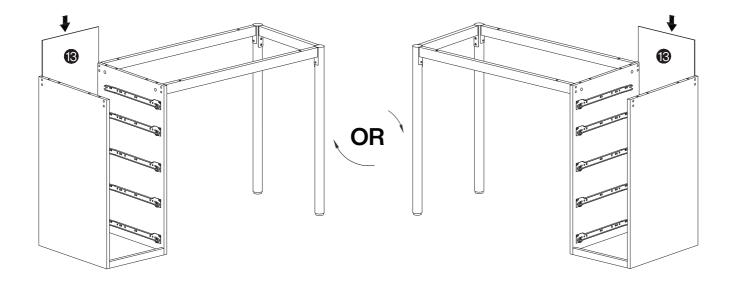

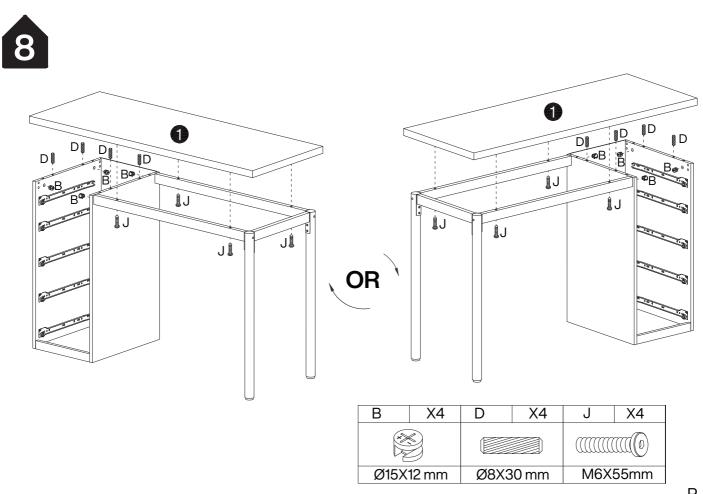



9

 \bigtriangleup

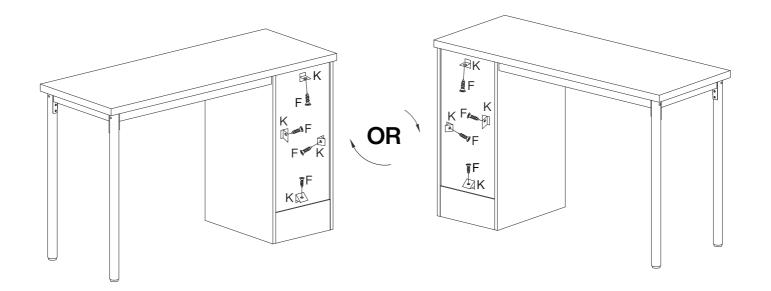


F	X4	K	X4		
3.5X14 mm		14X14X9 mm			

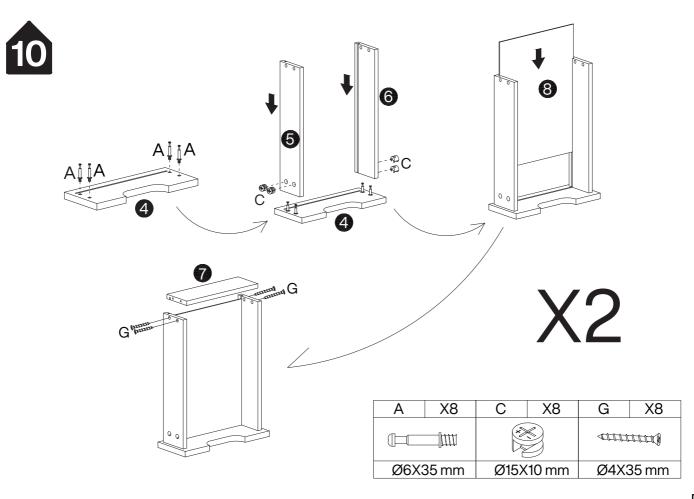


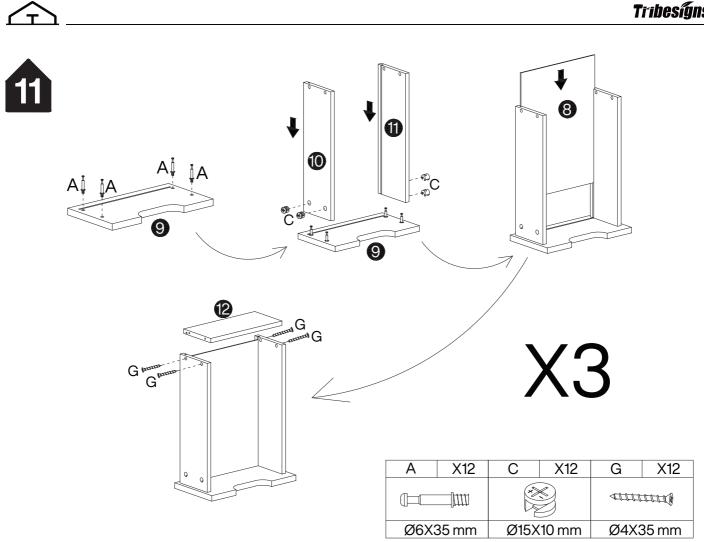



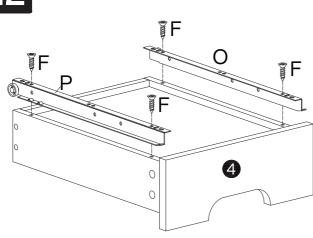




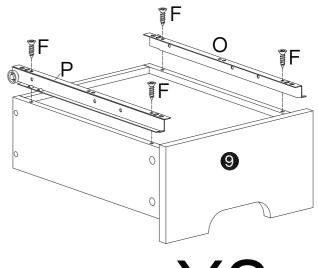


X3

F	X20	0	X5	Р	X5
CINNA (
3.5X14 mm		L350 mm		L350 mm	

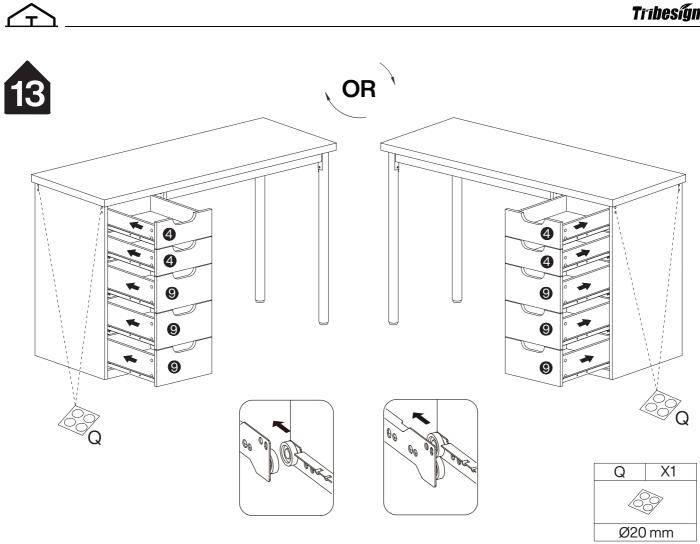



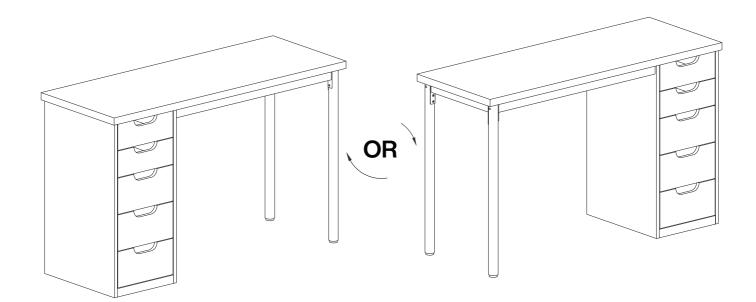

P-11



DESIGNED FOR LIFE

Thank you for your support!

