


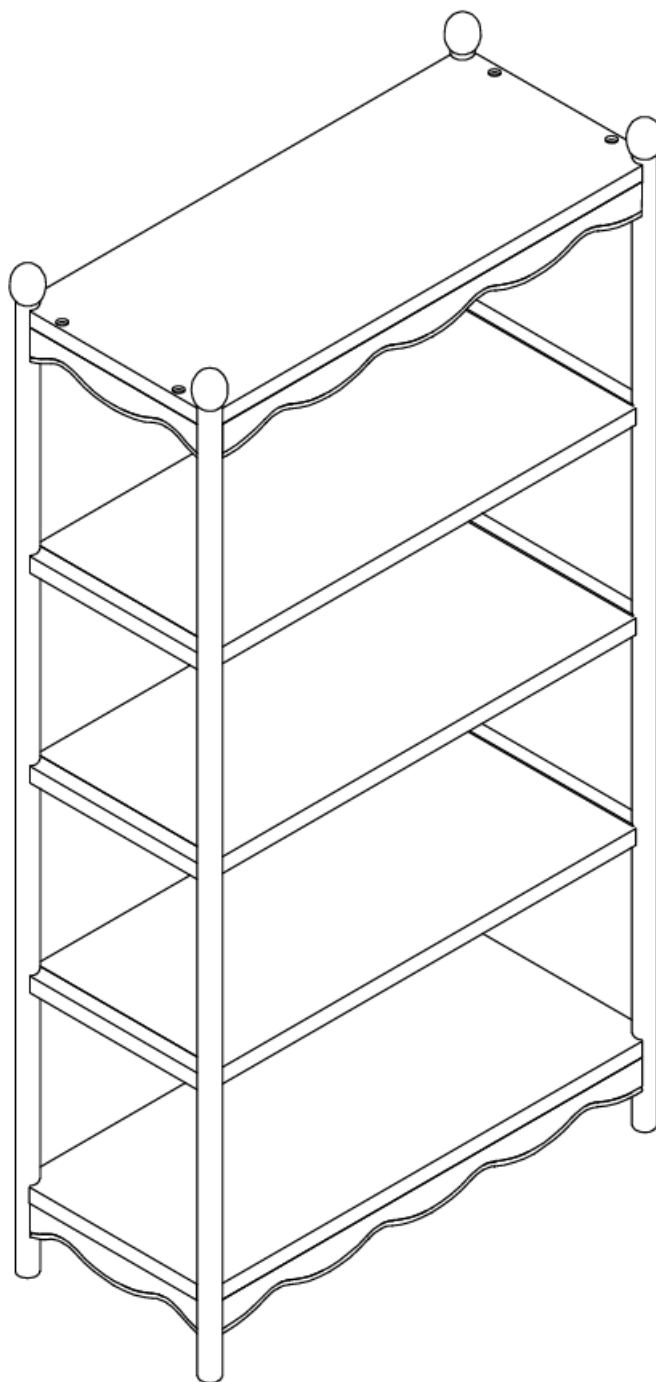

ASSEMBLY INSTRUCTIONS

Bookshelf

EEI-7793/ V0.04.27.26

modway



Questions? Contact us!
609.256.9000
cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 30 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

1		Metal Bracket	x4
2		Short Screw	x2
3		Restraint Strap	x2
4		Long Screw	x2
5		Wall Plug	x2
6		Bolt Ø¼" x 40mm	x20
7		Spring Washer Ø6	x20
8		Flat Washer Ø6	x20
9		Allen Key	x1

WHAT YOU NEED:







Phillip



Phillip Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

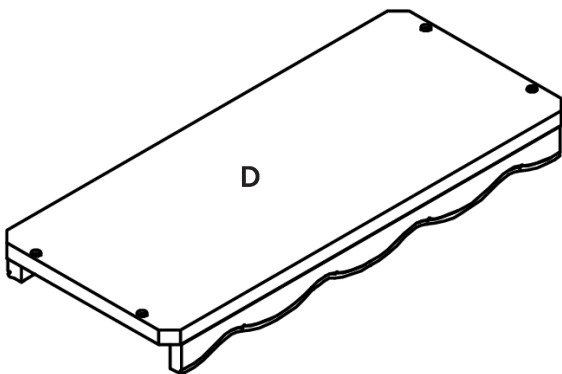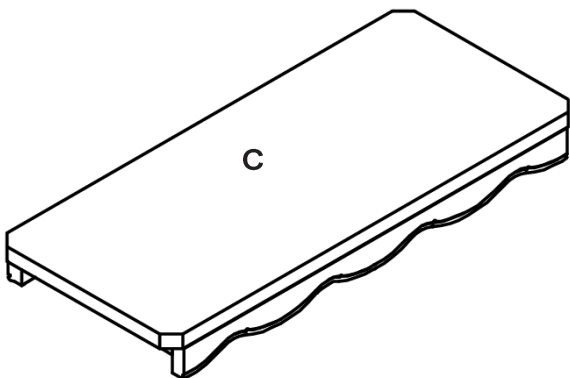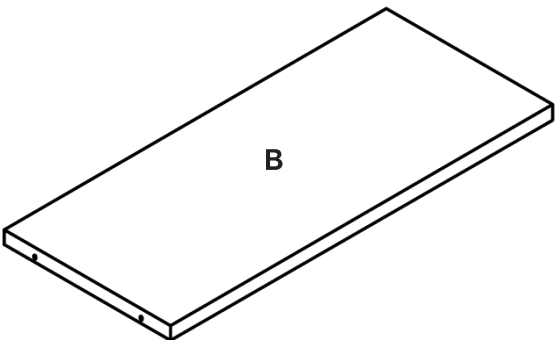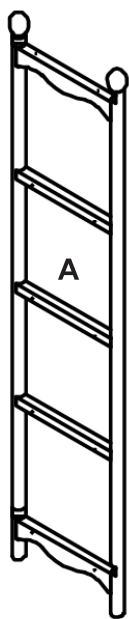

A Side Frame	x2	C Bottom Frame	x1
B Shelf Frame	x3	D Top Frame	x1


STEP 01

HARDWARE

⑥ Bolt Ø¼" x 40mm	x8
⑦ Spring Washer Ø6	x8
⑧ Flat Washer Ø6	x8
⑨ Allen Key	x1

COMPONENTS

Ⓐ Side Frame	x1
Ⓑ Shelf Frame	x3
Ⓒ Bottom Frame	x1

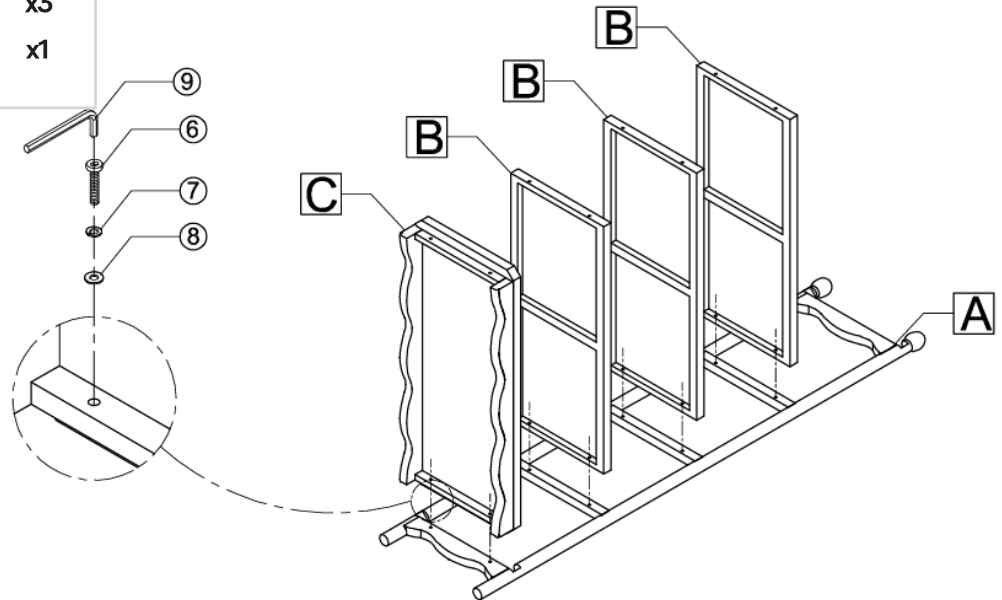


STEP 02

HARDWARE

⑥ Bolt Ø¼" x 40mm	x4
⑦ Spring Washer Ø6	x4
⑧ Flat Washer Ø6	x4
⑨ Allen Key	x1

COMPONENTS

Ⓐ Side Frame	x2
Ⓑ Shelf Frame	x3
Ⓒ Bottom Frame	x1
Ⓓ Top Frame	x1

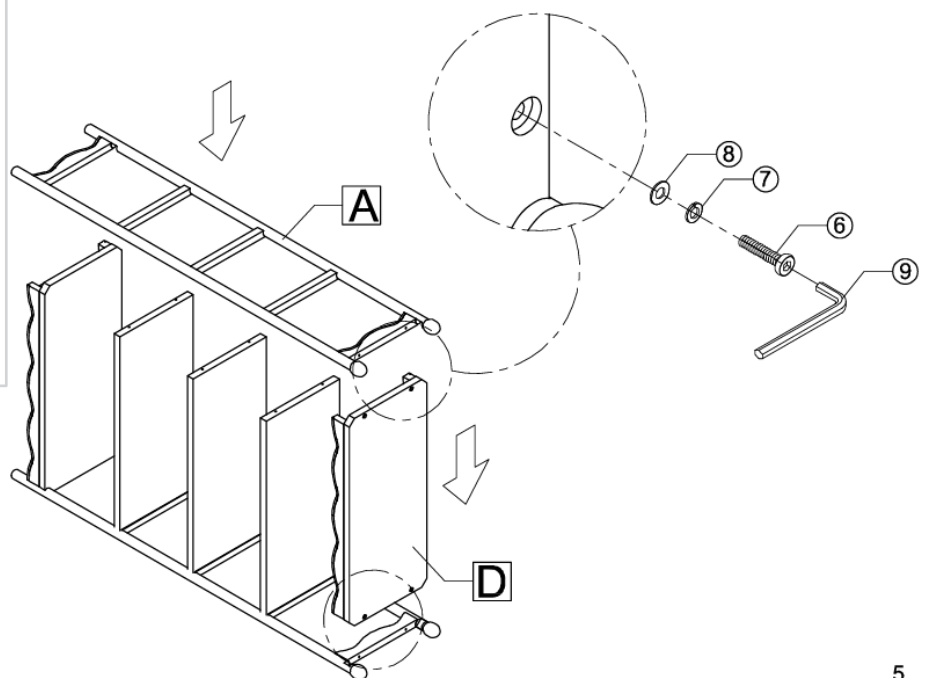


STEP 03

HARDWARE

- | | |
|--------------------|----|
| 6 Bolt Ø¼" x 40mm | x8 |
| 7 Spring Washer Ø6 | x8 |
| 8 Flat Washer Ø6 | x8 |
| 9 Allen Key | x1 |

COMPONENTS

- | | |
|----------------|----|
| A Side Frame | x2 |
| B Shelf Frame | x3 |
| C Bottom Frame | x1 |
| D Top Frame | x1 |

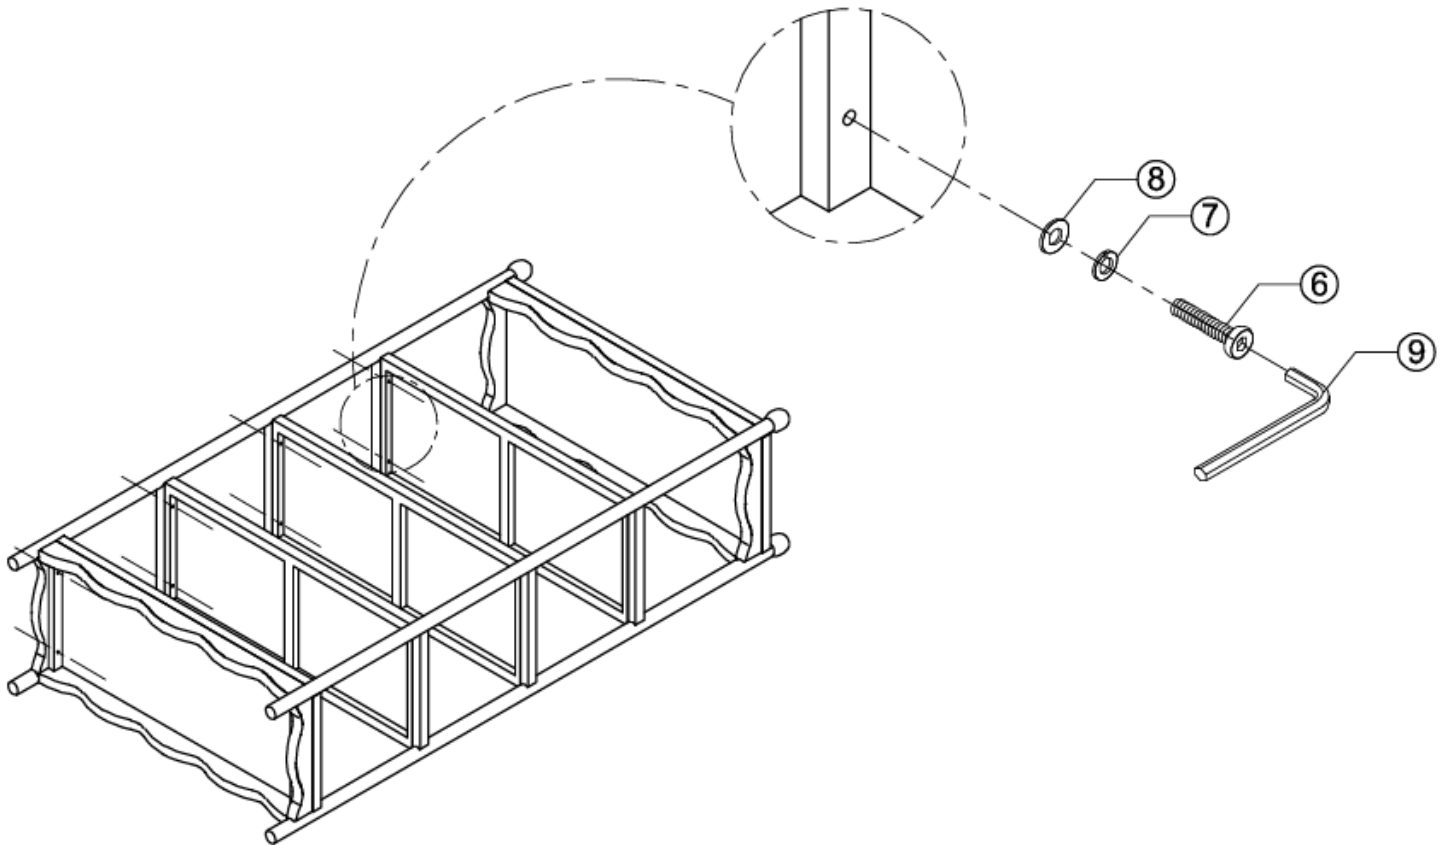


Great job!

Your new bookshelf is complete.

CARING FOR YOUR ITEM

- Depending on use, it may be necessary to tighten the hardware from time to time, so please save the tools that have been provided.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.

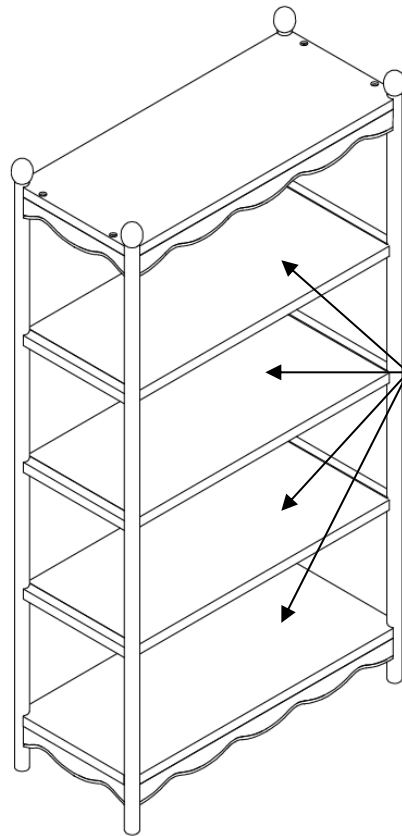

Max 30 Kgs / 66 Lbs



CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

modway



Questions? Contact us!

609.256.9000

cs@modway.com


TIPPING RESTRAINS KIT INSTALLATION GUIDANCE:

Different wall materials require unique wall fasteners.

The wall plugs (5) and screws (4) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

1		Metal Bracket	x4	4		Long screw	x2
2		Short screw	x2	5		Wall Plug	x2
3		Restraining strap	x2				

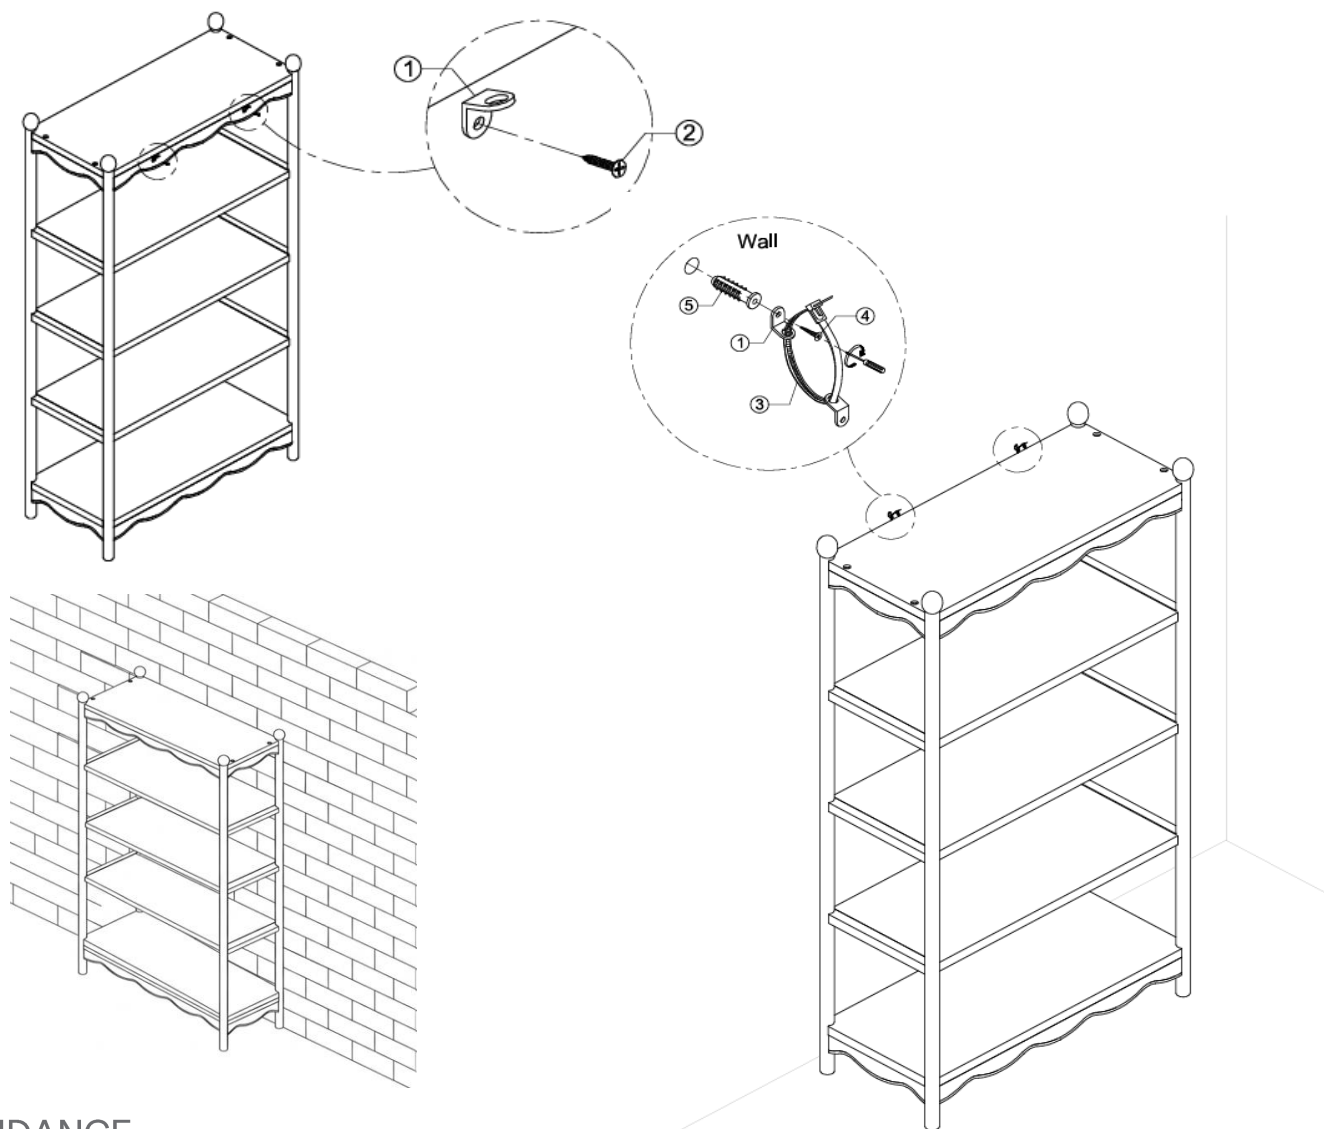

GUIDANCE

Installation Instructions :

1. Attach metal metal bracket (1) securely to the back top of the furniture using short screw (2) provided. Allow 8 – 10cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (5).
3. Locate the other metal bracket (1) on the wall over wall plugs (5). Place furniture into position so both metal brackets (1) are vertically in the line.
4. Lace the end of the restrains strap through the larger hole in each bracket. Ensure the restrains strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.