## **ASSEMBLY INSTRUCTIONS**

WF326034/ WF326035/ WF326036/ WF326037/ WF326038


## **IMPORTANT NOTE**

- \*\* Place all parts on a lean and smooth surface such ass a rug or carpet to avoid the parts from being scratched.
- \*\*Before you begin, please review the assembly instruction step by step.
- \*\*Return & Warranty policy:

-We strive to offer the highest quality products. We also provide positive solutions with replacements or refund if needed.


-If the itam is damaged or defective, please take photos to show the prolem and email to the seller.

-Please do not return back the products before contact the seller.

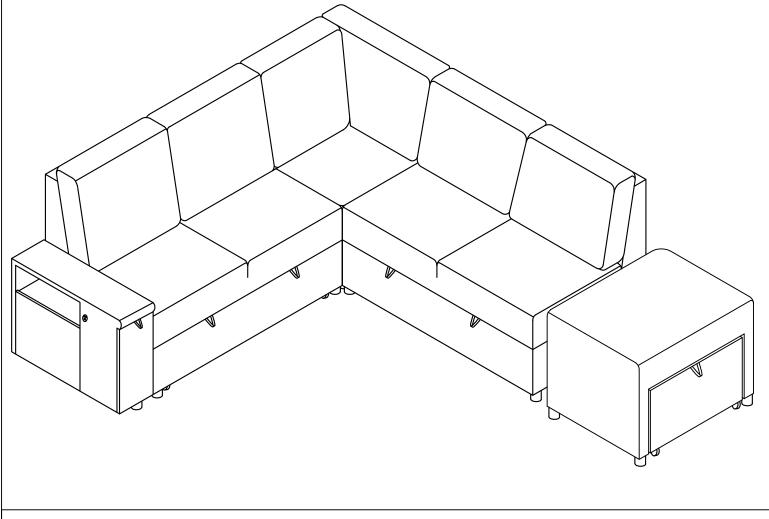



## **ASSEMBLY INSTRUCTIONS**


WF326034/ WF326035/ WF326036/ WF326037/ WF326038

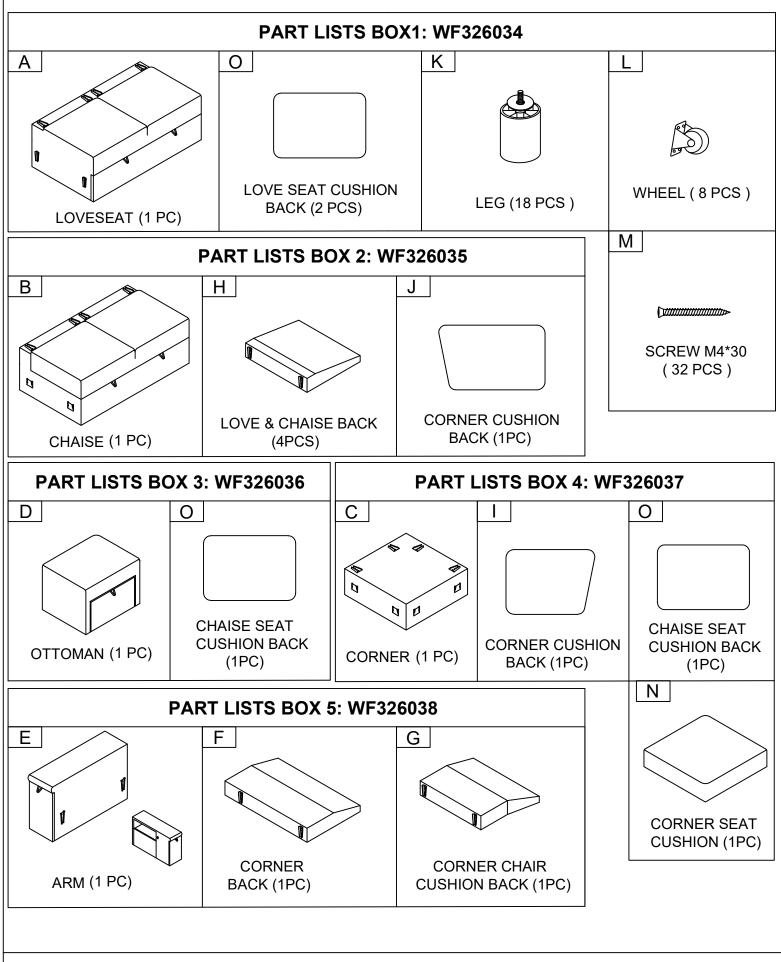


## Step 1

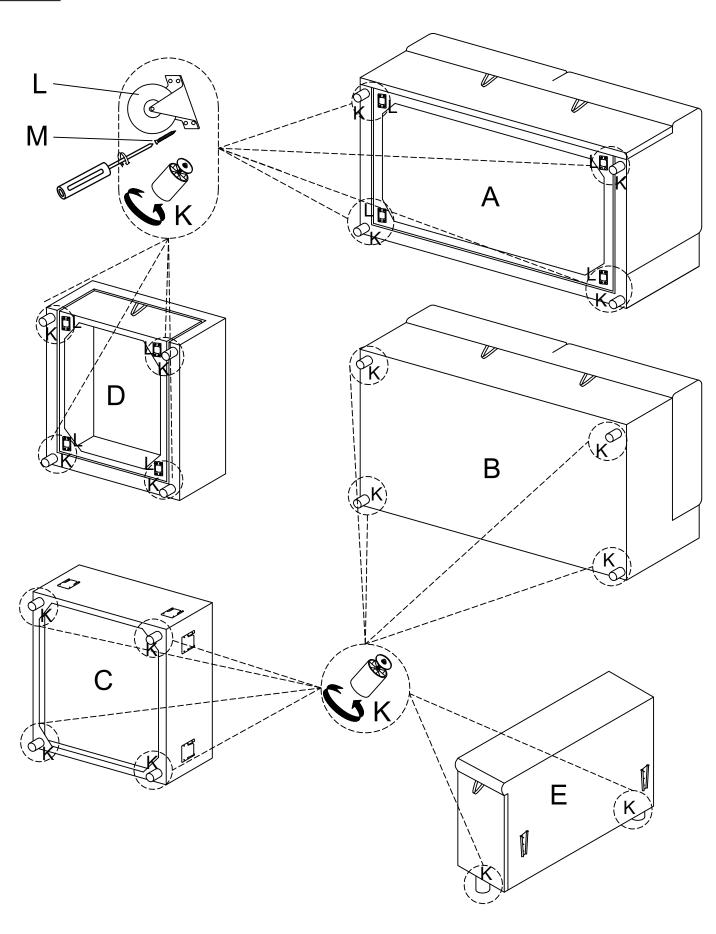

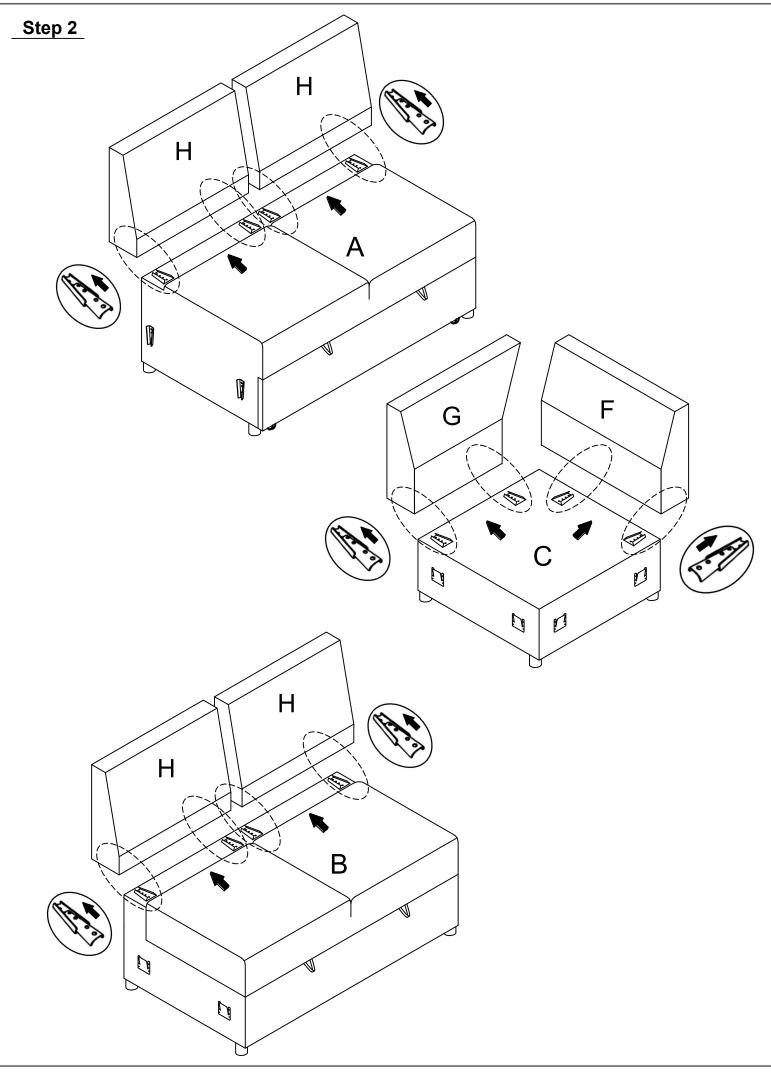

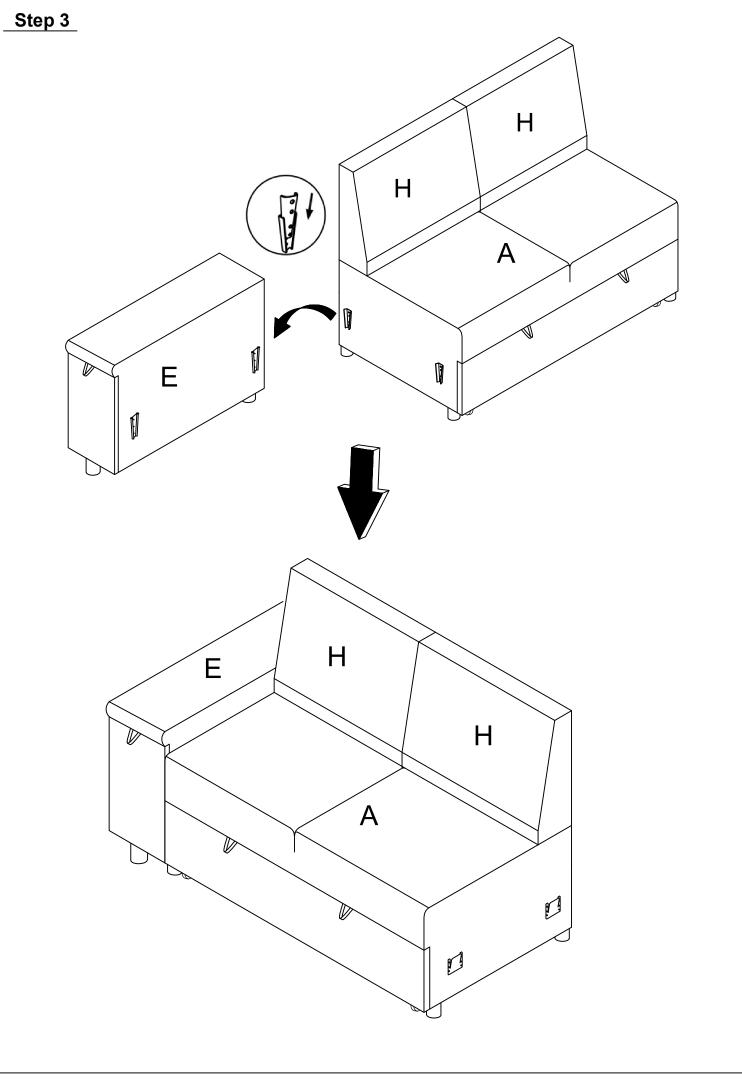

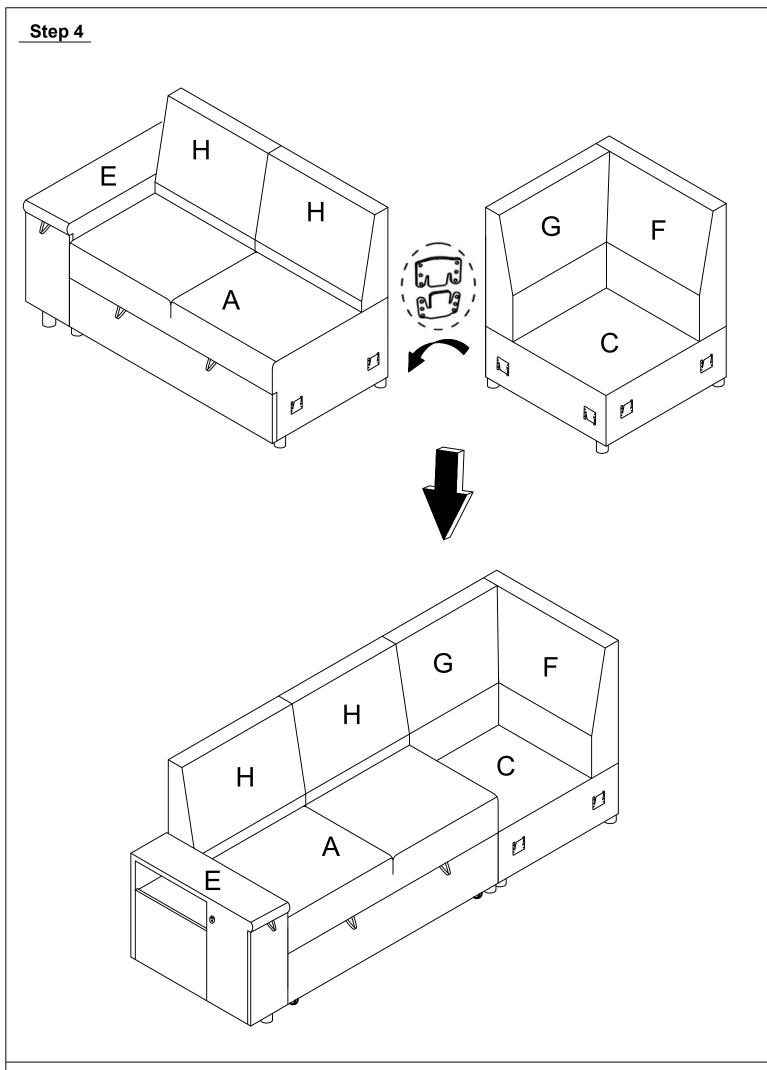

MADE IN VIET NAM

