


Mount the shelf end supports into the pole and tighten screw.

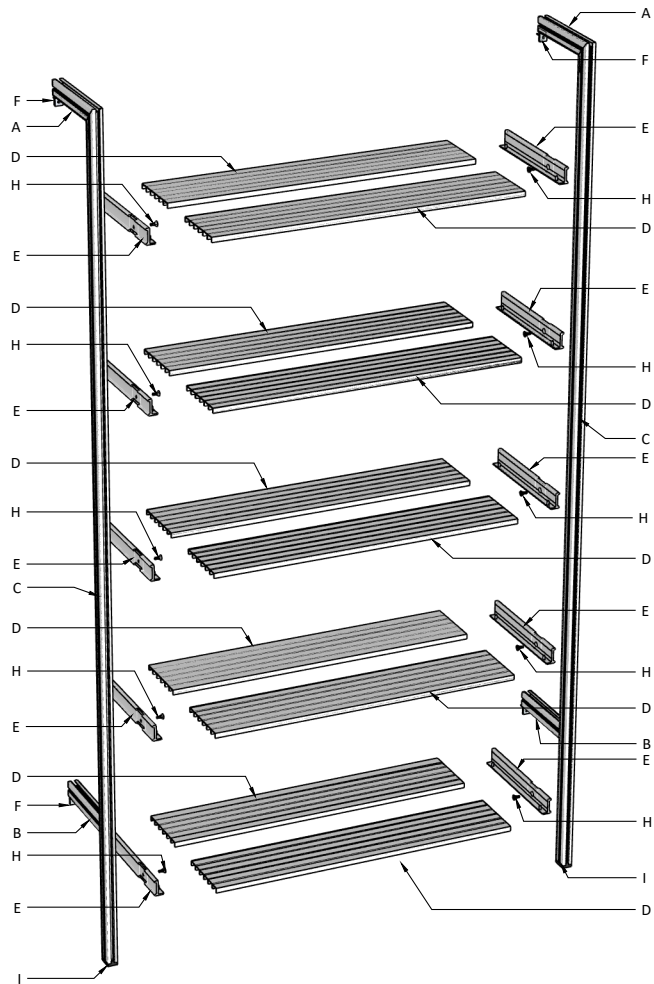

Additional Instructions
<https://www.modernshelving.com>


Modern Shelving®

All Aluminum Shelving System
ALUMPAL Series




ALUMPAL - 1231


31 inch Wide x 5 rows Adjustable Pole Mounted Shelving
 (31" W x 84" H x 12" D)

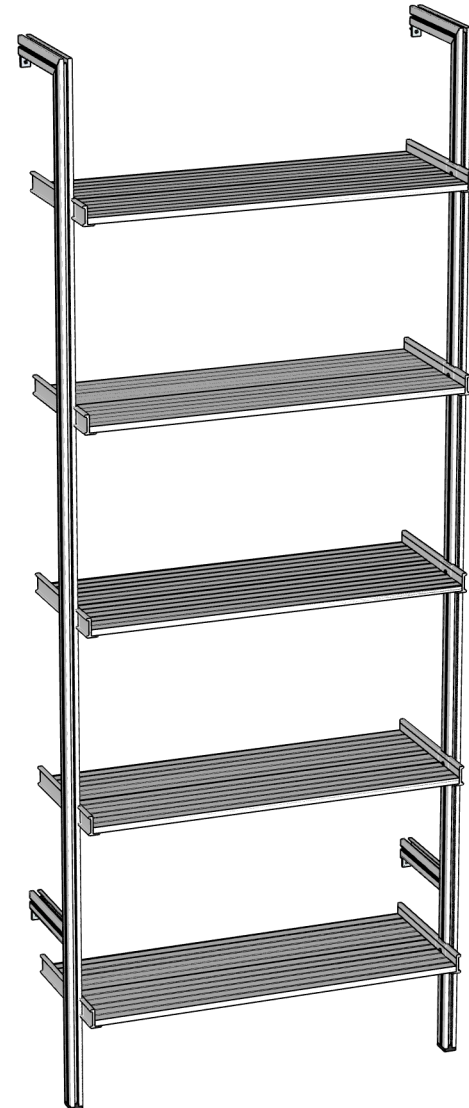


WHAT'S IN THE BOX

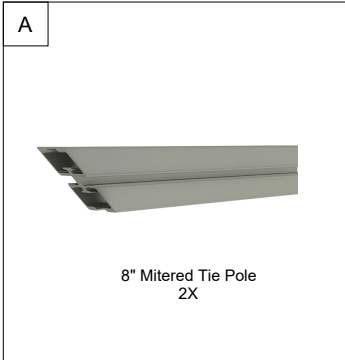


8" Mitered Tie Pole
2X

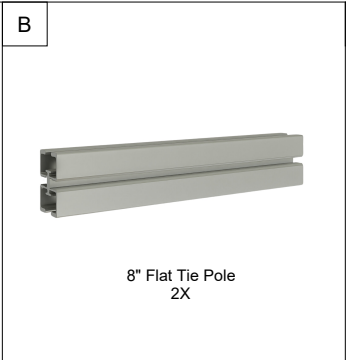


8" Flat Tie Pole
2X

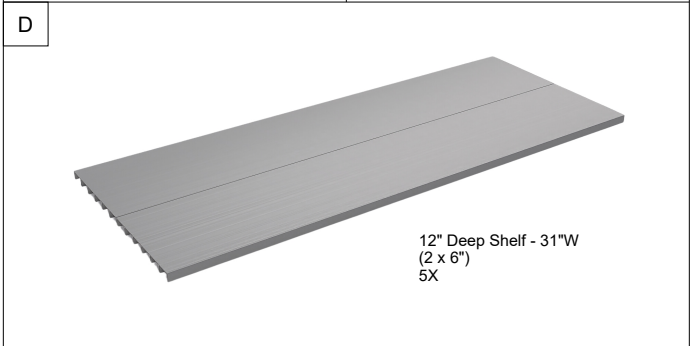


12" Deep Shelf - 31"W
(2 x 6")
5X

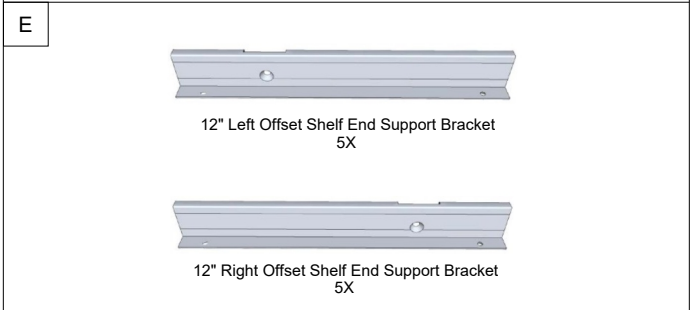

12" Left Offset Shelf End Support Bracket
5X




12" Right Offset Shelf End Support Bracket
5X

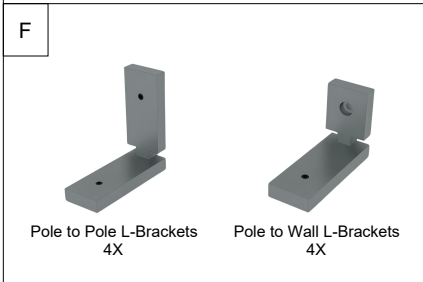


Pole to Pole L-Brackets

Pole to Wall L-Brackets
4X

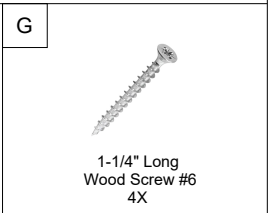


1-1/4" Long
Wood Screw #6
4X

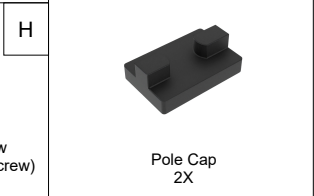

1/4" #20 Screw
1/2" Long (SES Screw)
10X





Pole Cap
2X

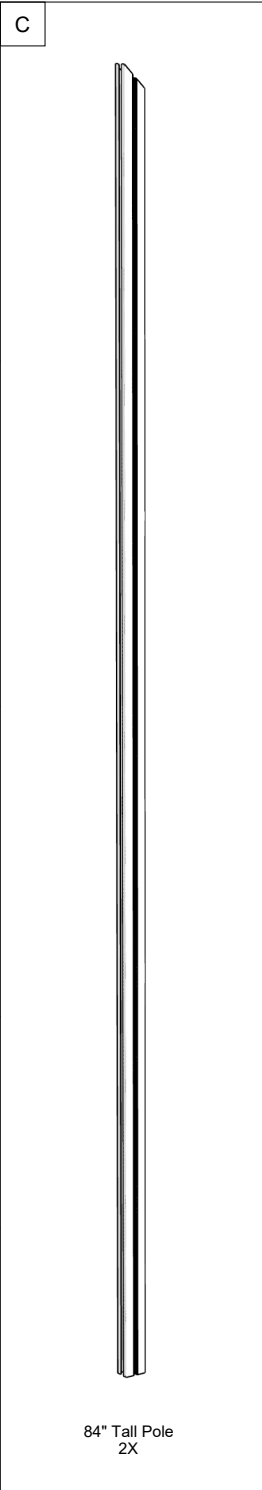


84" Tall Pole
2X

PAL POLE PROFILE

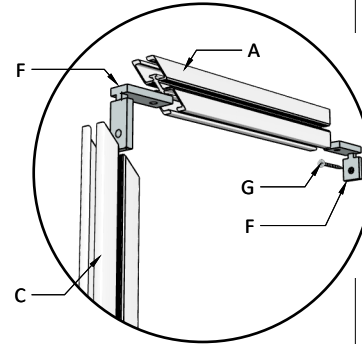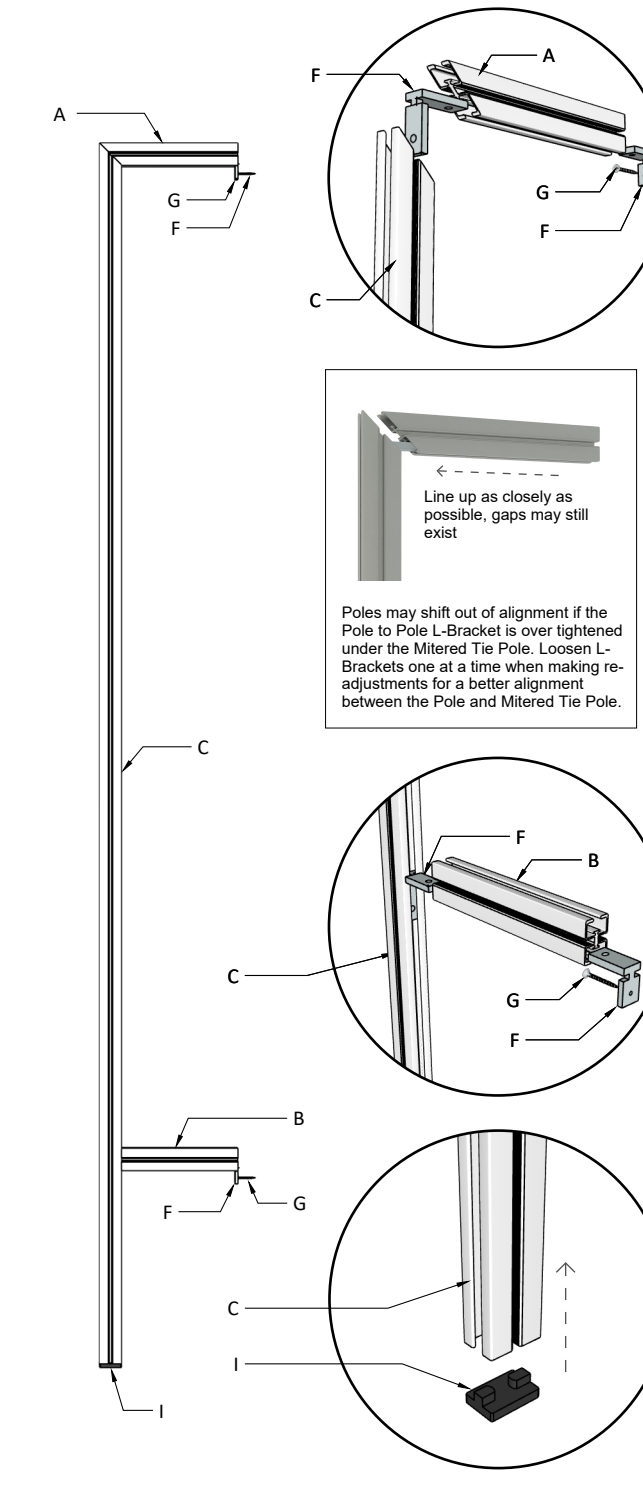


Leave a gap approximately 1/8" long between the top of the L-Bracket and the lip inside the Pole.


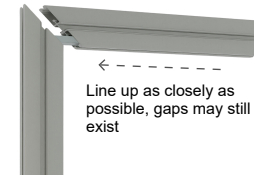


Line up as closely as possible, gaps may still exist

Poles may shift out of alignment if the Pole to Pole L-Bracket is over tightened under the Mitered Tie Pole. Loosen L-Brackets one at a time when making readjustments for a better alignment between the Pole and Mitered Tie Pole.

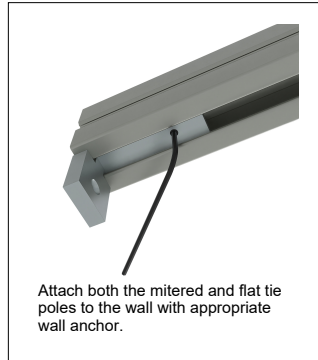

Attach both the mitered and flat tie poles to the wall with appropriate wall anchor.

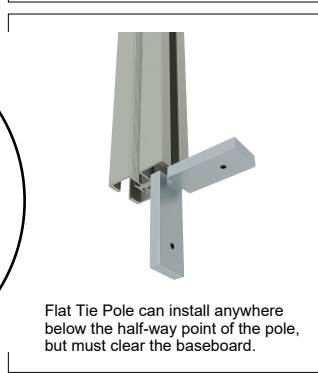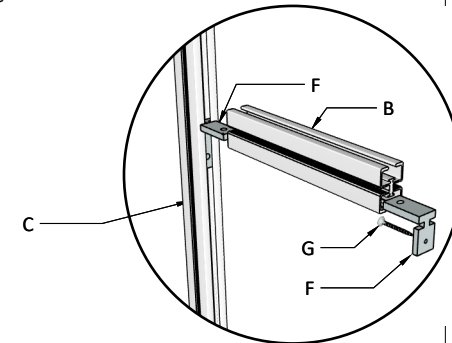

Flat Tie Pole can install anywhere below the half-way point of the pole, but must clear the baseboard.

