




MANHATTAN  
COMFORT

# Duane TV Stand TV-8GLF

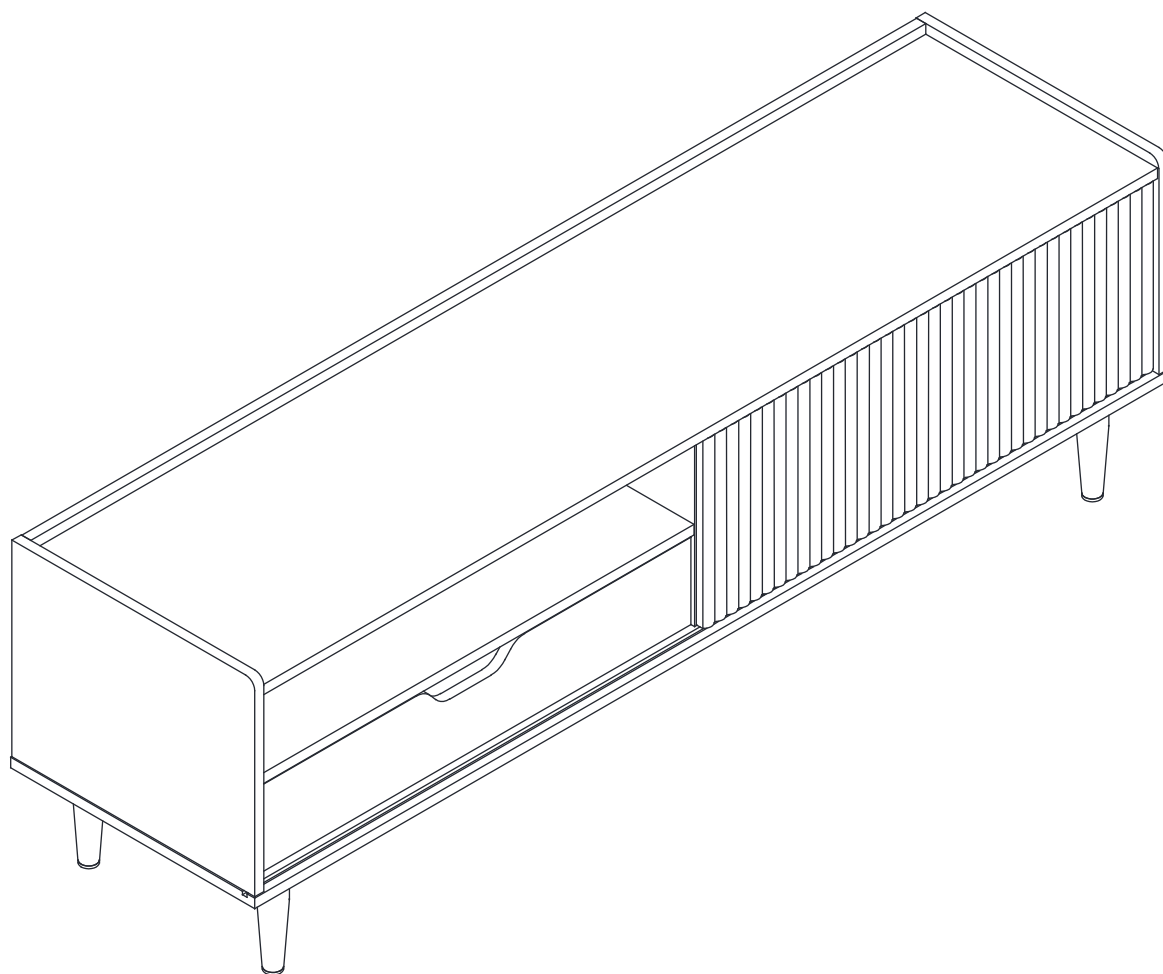




# STOP!


Before beginning the assembly process, ensure all boxes and parts have been delivered.

## FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

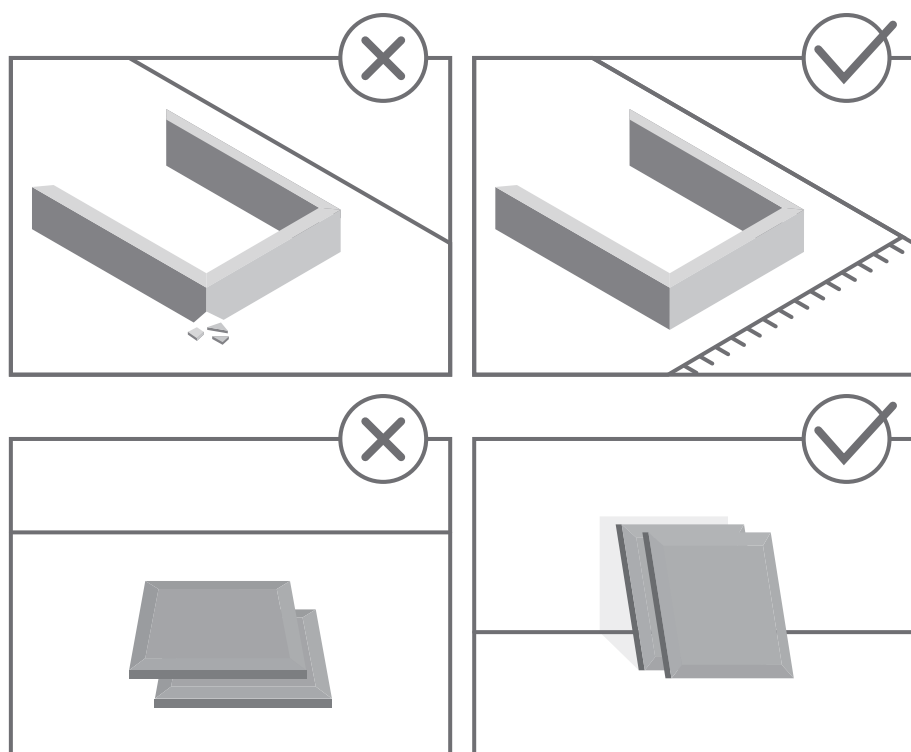

## TOOLS REQUIRED

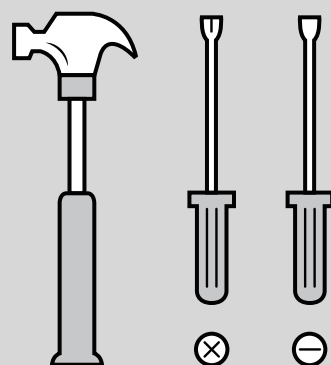

View our assembly video online:  
[WWW.MANHATTANCOMFORT.COM](http://WWW.MANHATTANCOMFORT.COM)




Stuck? Question? We are here to help.  
tel: 908-888-0818  
e-mail: [help@manhattancomfort.com](mailto:help@manhattancomfort.com)

# Included in this package:


---

- A. TOP(1)
- B. BOTTOM(1)
- C. LEFT END (1)
- D. RIGHT END(1)
- E. BACK(1)
- F. UPRIGHT(1)
- G. SHELF(1)
- H. DOOR(1)
- J. DRAWER FRONT(1)
- K. LEFT DRAWER SIDE(1)
- N. RIGHT DRAWER SIDE(1)
- L. DRAWER BACK(1)
- O. DRAWER BRACE(1)
- P. DRAWER BOTTOM(1)
- Q. LEG(2)
- R. BRACE (2)

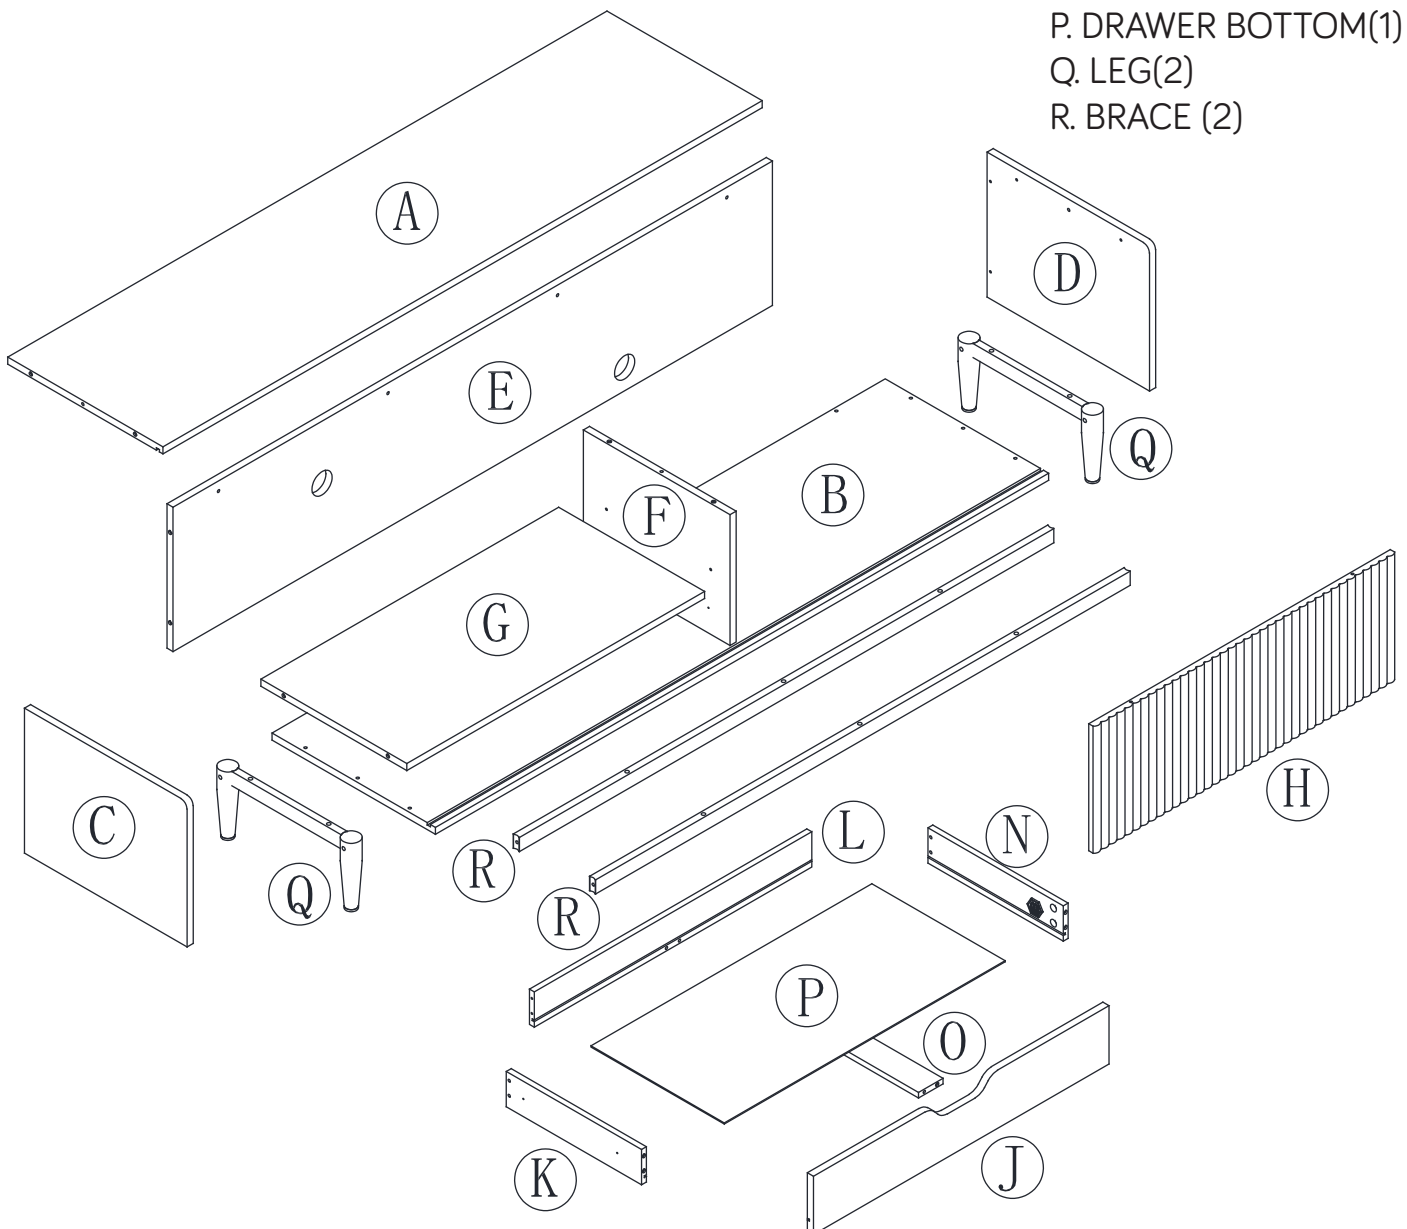


# Hardware Identification


① EXTENSION RAIL- 2pcs

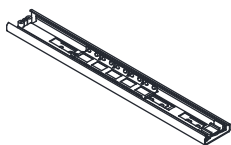


② EXTENSION SLIDE - 2pcs

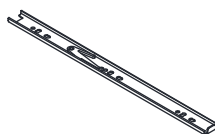


③ CAM SCREW - 19pcs

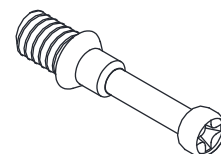


④ HIDDEN CAM - 19pcs

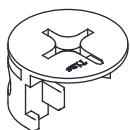


⑤ LOWER DOOR BRACKET - 2PCS

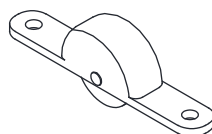


⑥ BOLT - 2pcs

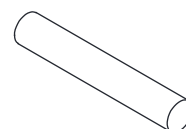


⑦ APPLIQUE CARD - 4pcs

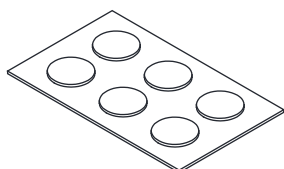


⑧ L-WRENCH - 1pc




⑨ BUMPER CARD - 1pc

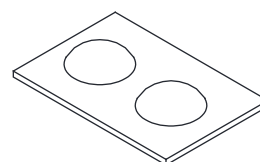


⑩ WOOD DOWEL- 7pcs

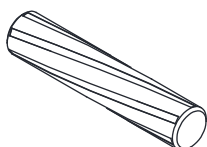


⑪ GROMMET WITH CAP - 2pcs

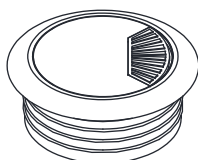


⑫ HEX HEAD SCREW  
M6\*55mm - 4pcs




⑬ HEX HEAD SCREW  
M6\*40mm - 10pcs



⑭ FLAT HEAD SCREW  
M5\*35mm - 14pcs




⑮ PAN HEAD SCREW  
M5\*30MM - 6pcs



⑯ FLAT HEAD SCREW  
M3\*15mm - 4PCS



⑰ FLAT HEAD SCREW  
M4\*12mm - 8pcs





# MANHATTAN COMFORT

## WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.


Our furniture products are not intended for outdoor use.

### THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.






319 Ridge Rd. Dayton, NJ 08810  
908-888-0818

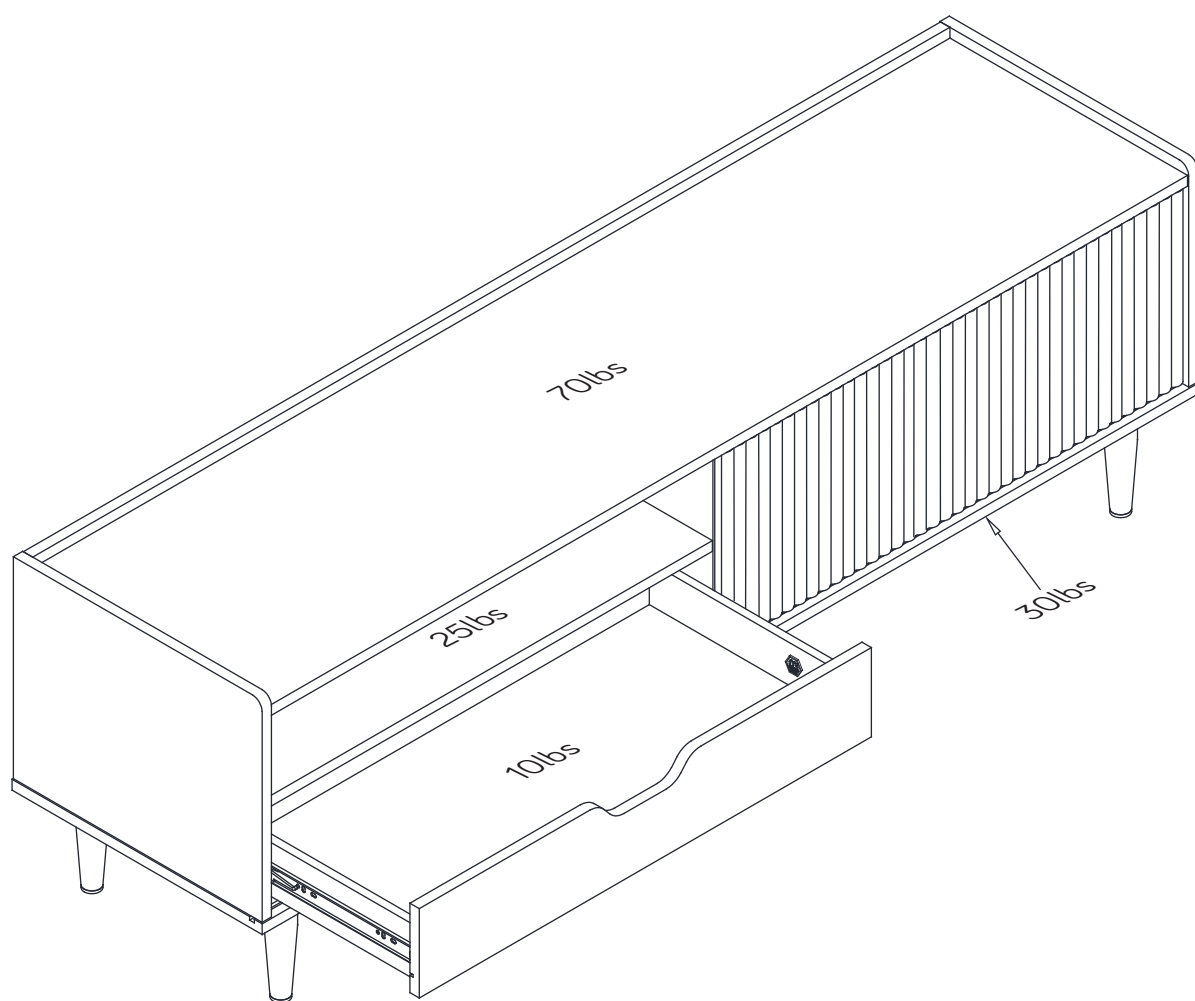


# Step 1

- ◆ Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- ◆ Turn nineteen CAM SCREWS (3) into the exact holes shown in the TOP (A), ENDS (C and D), UPRIGHT (F) and the DRAWER FRONT (J).

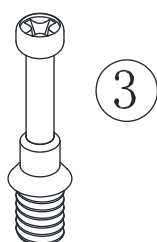



3

(19 PCS )

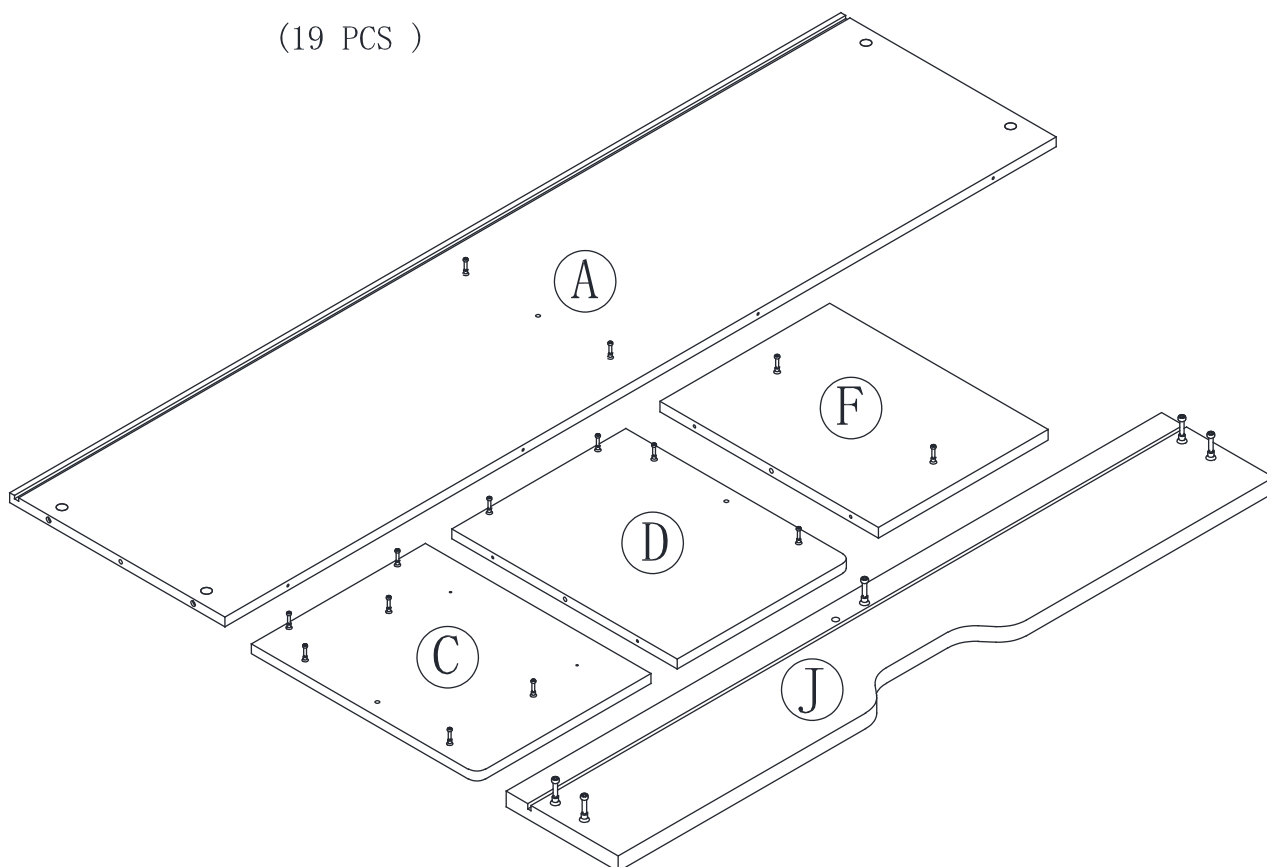

## Step 2


- ◆ Push nineteen HIDDEN CAMS (4) into the TOP (A), UPRIGHT(F), BACK (E), SHELF (G) DRAWER BRACE (O) and DRAWER SIDES (K and N).

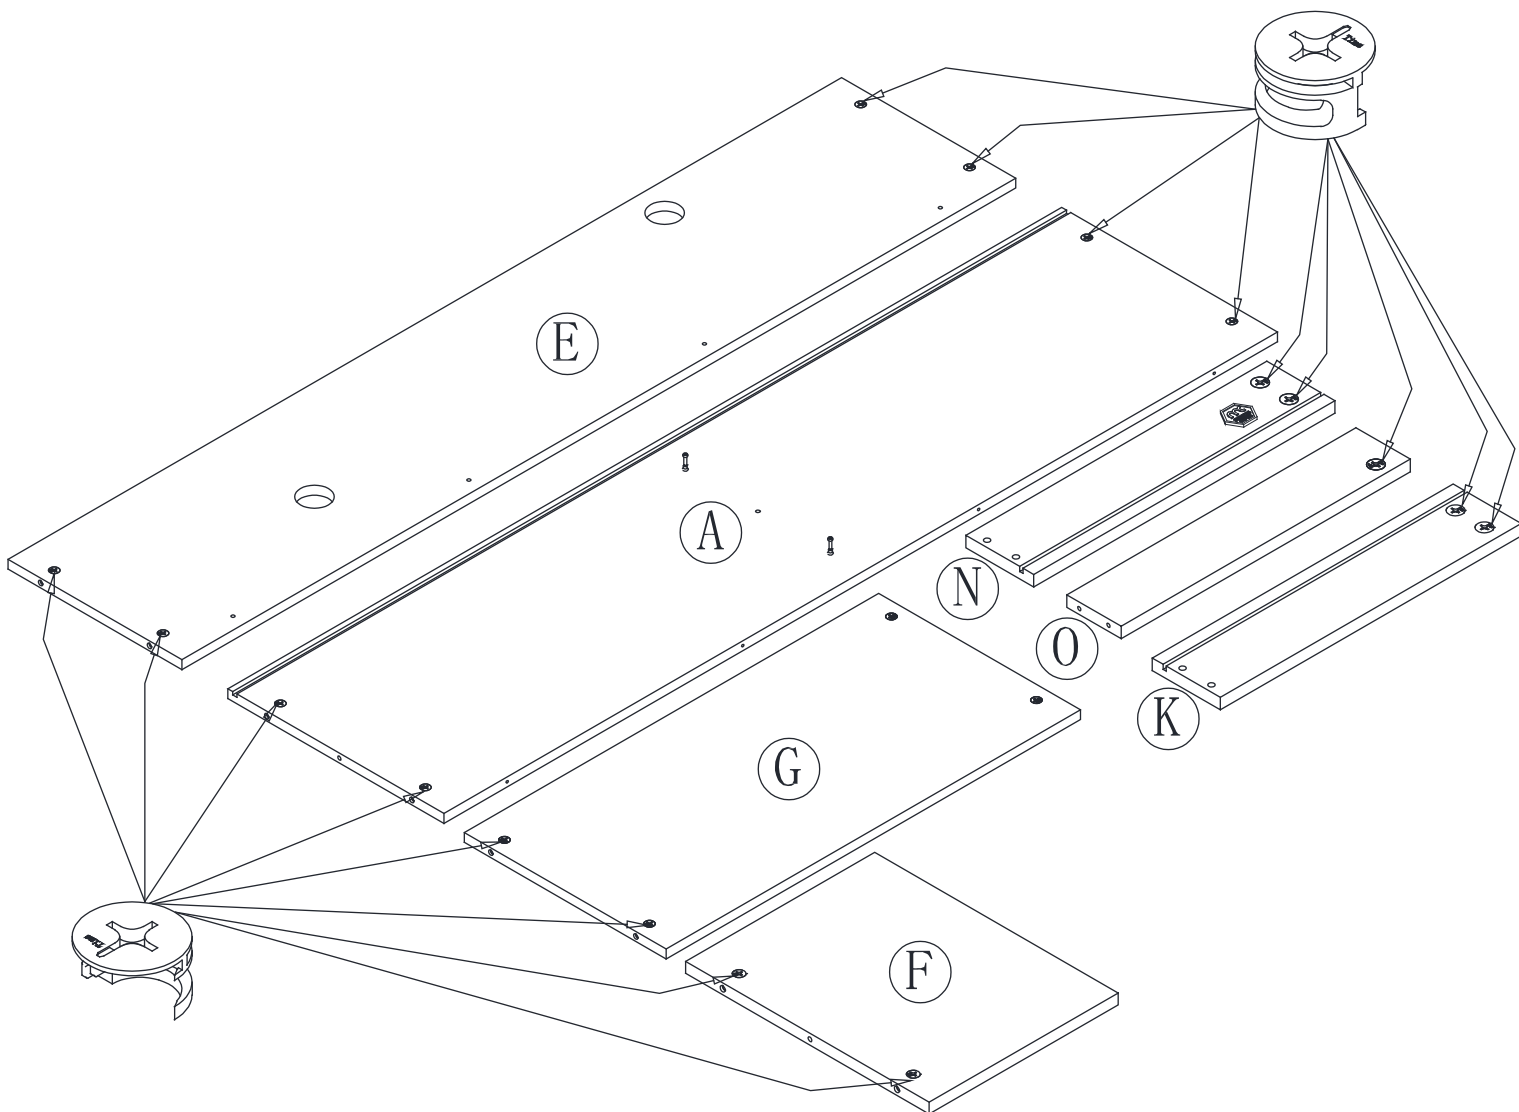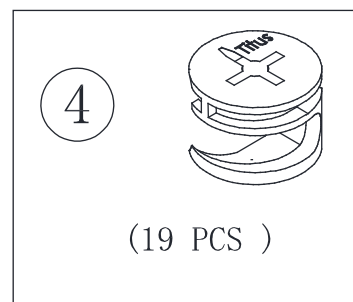








## Step 3

- ◆ Separate the EXTENSION SLIDES (2) from the EXTENSION RAILS (1) as shown in the upper diagram. Be prepared, the parts are greasy.
- ◆ Fasten two EXTENSION RAILS (1) to the LEFT END (C) and the UPRIGHT (F). Use four FLAT HEAD SCREWS (17) through the exact holes shown.

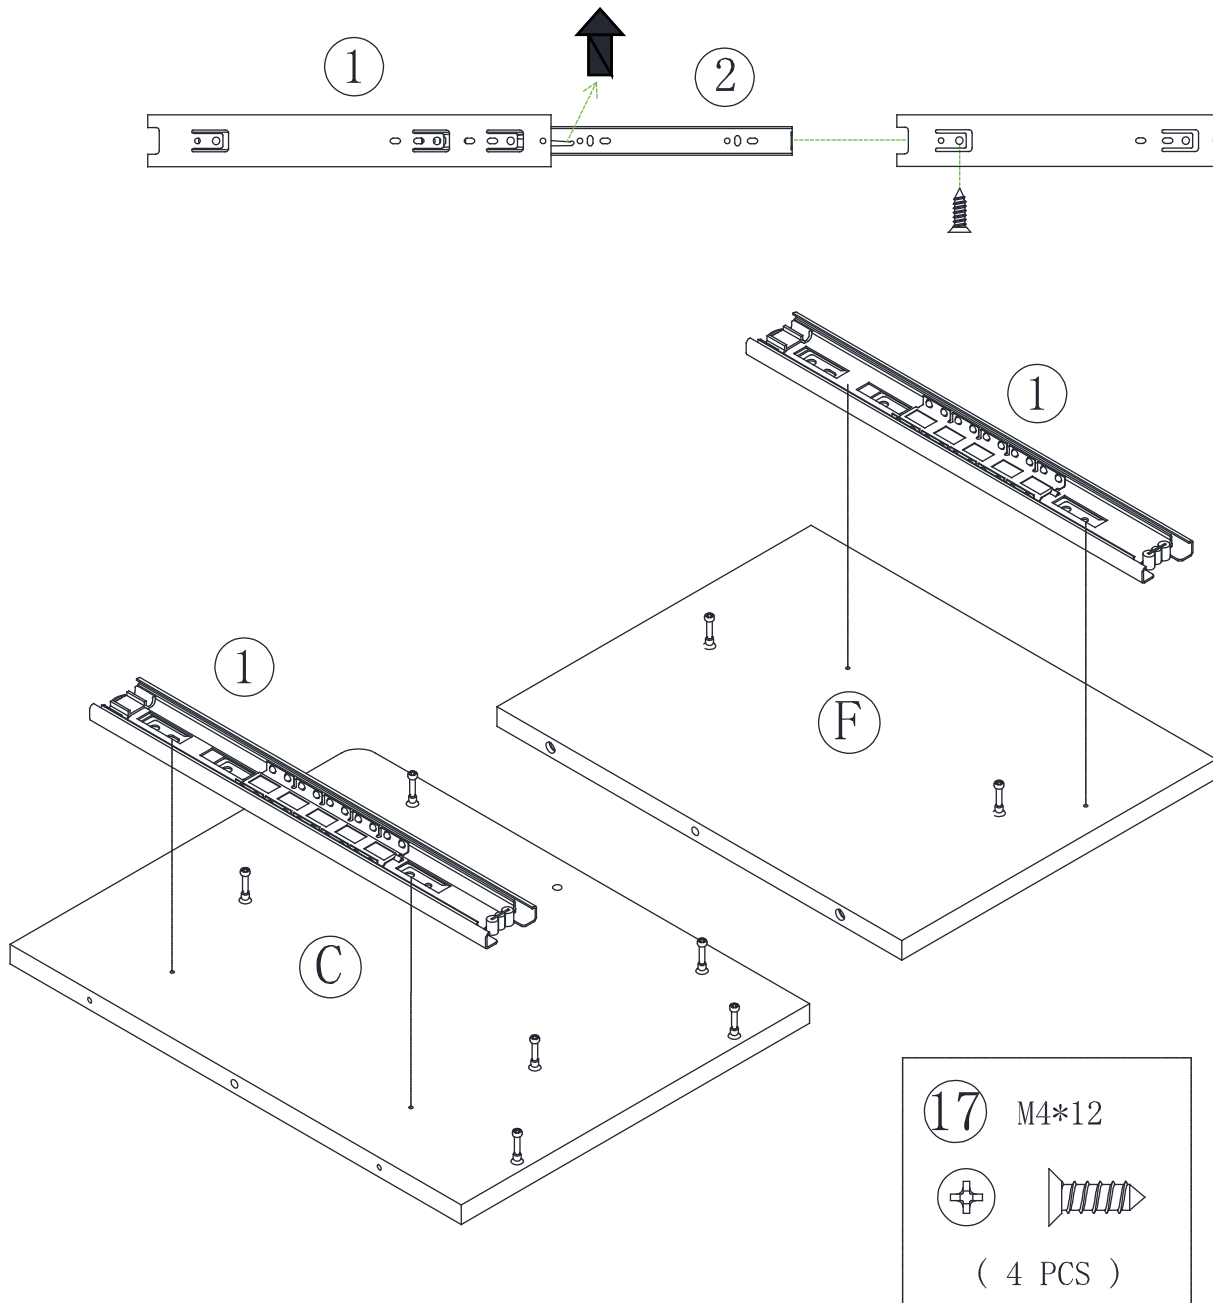





## Step 4

- ◆ Insert one WOOD DOWEL (10) to the TOP (A). Fasten the UPRIGHT (F) to the TOP (A). Tighten two HIDDEN CAMS.

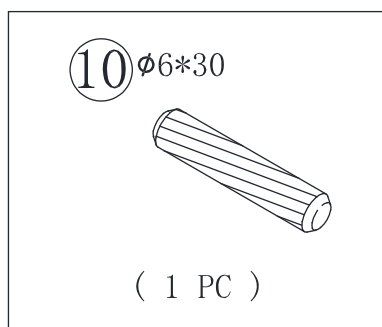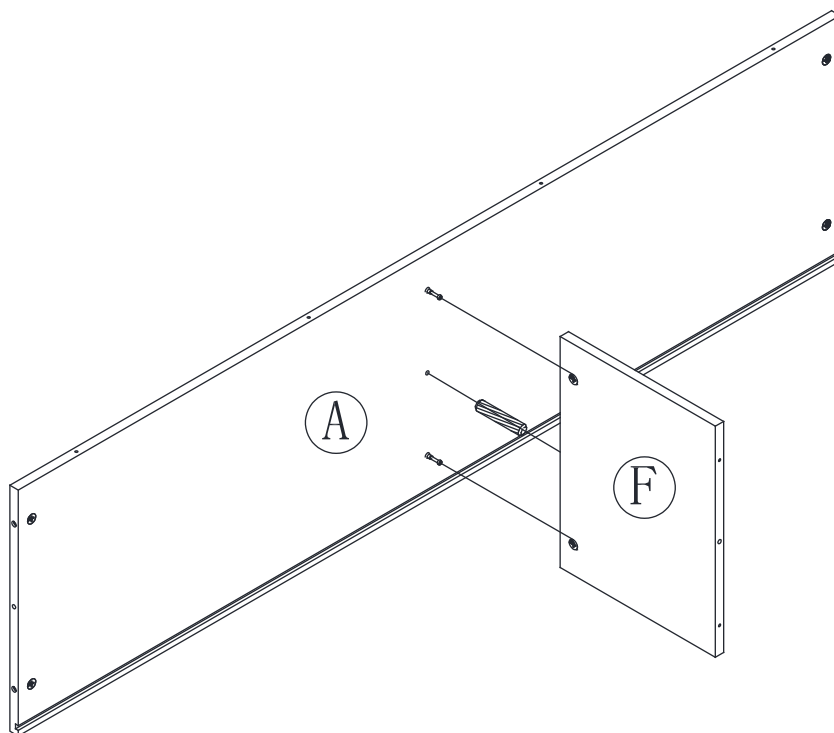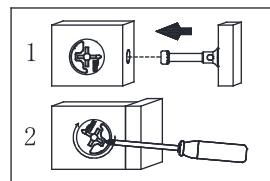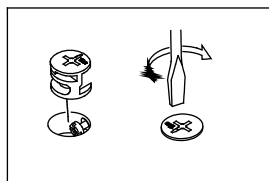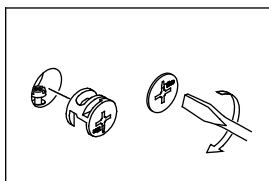





# Step 5

- ◆ Insert one WOOD DOWEL (10) to the TOP (A).
- ◆ Fasten the RIGHT END (D) to the TOP (A). Tighten two HIDDEN CAMS
- ◆ Fasten SHELF (G) to the UPRIGHT (F). Tighten two HIDDEN CAMS.

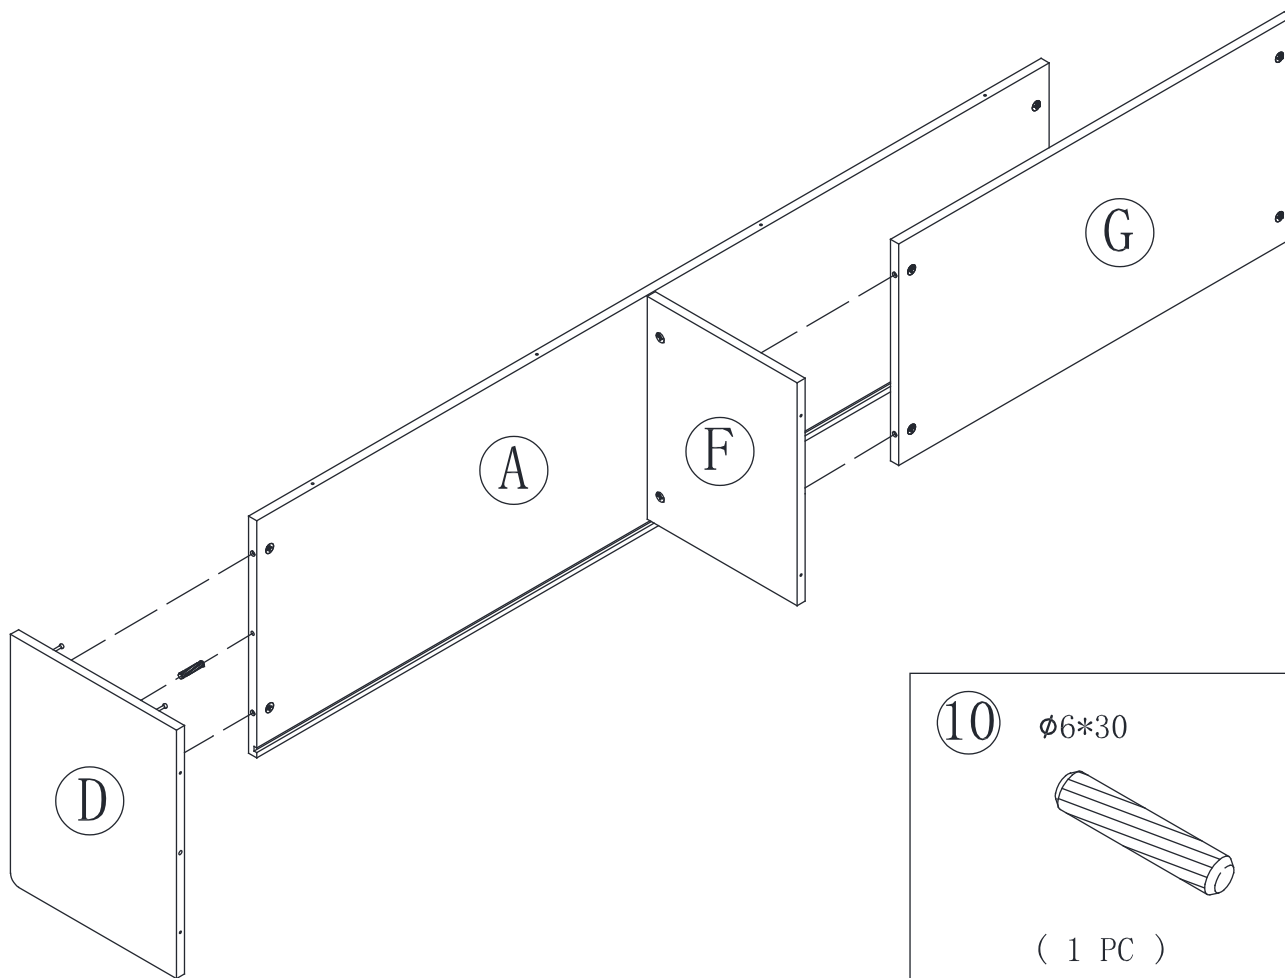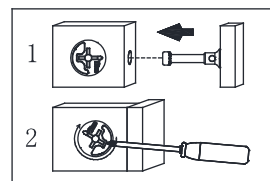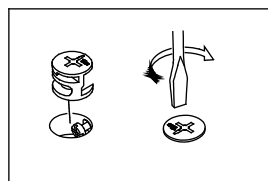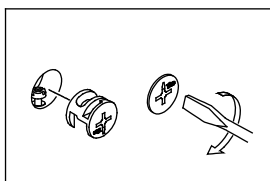


## Step 6

- ◆ Fasten the BACK (E) to the RIGHT END (D). Tighten two HIDDEN CAMS.

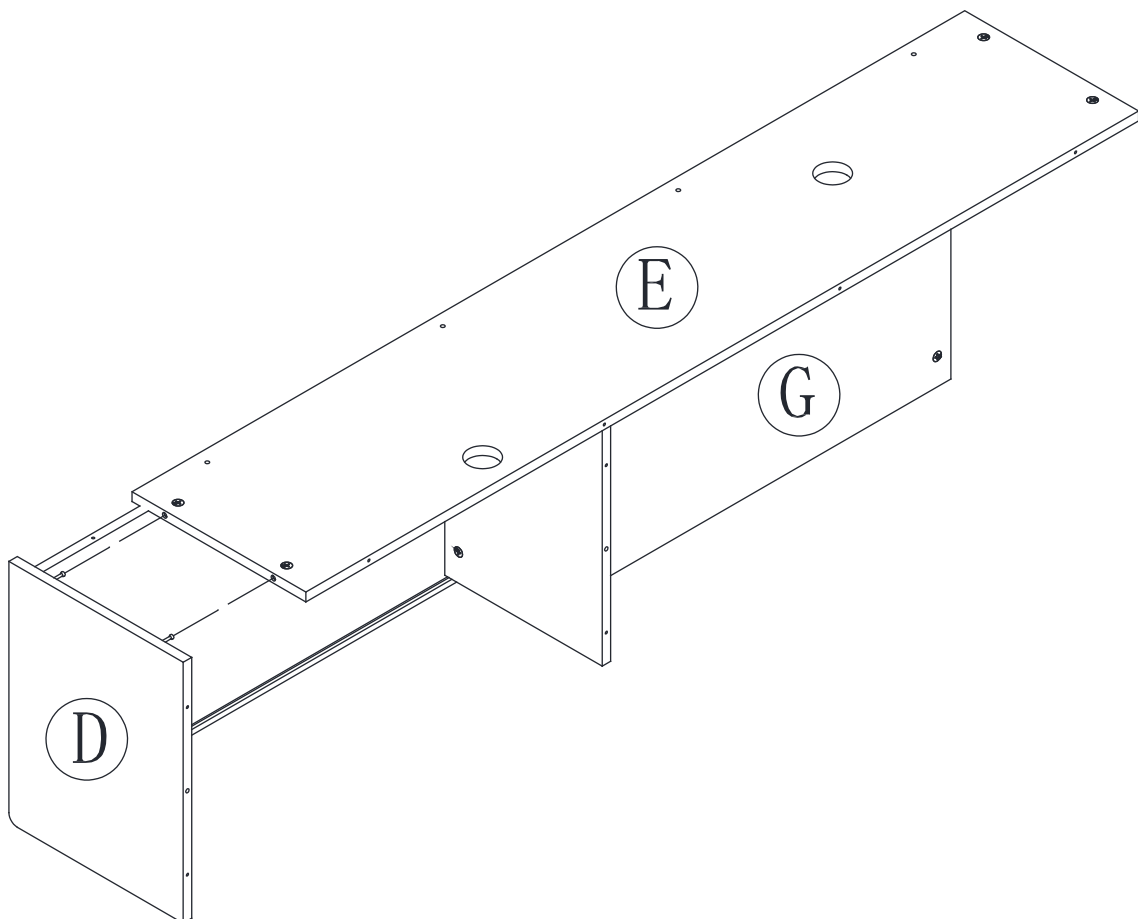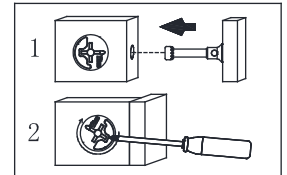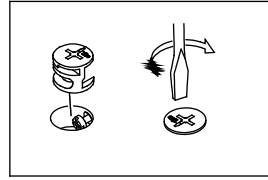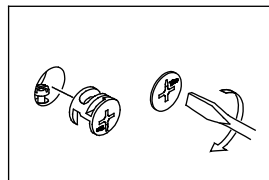



# Step 7

- ◆ Fasten the BACK (E) to the TOP (A). Use four FLAT HEAD SCREW (14)
- ◆ Insert one WOOD DOWEL (10) to the TOP (A).
- ◆ Fasten the LEFT END (C) to the TOP (A), BACK (E) and the SHELF (G).  
Tighten six HIDDEN CAMS.

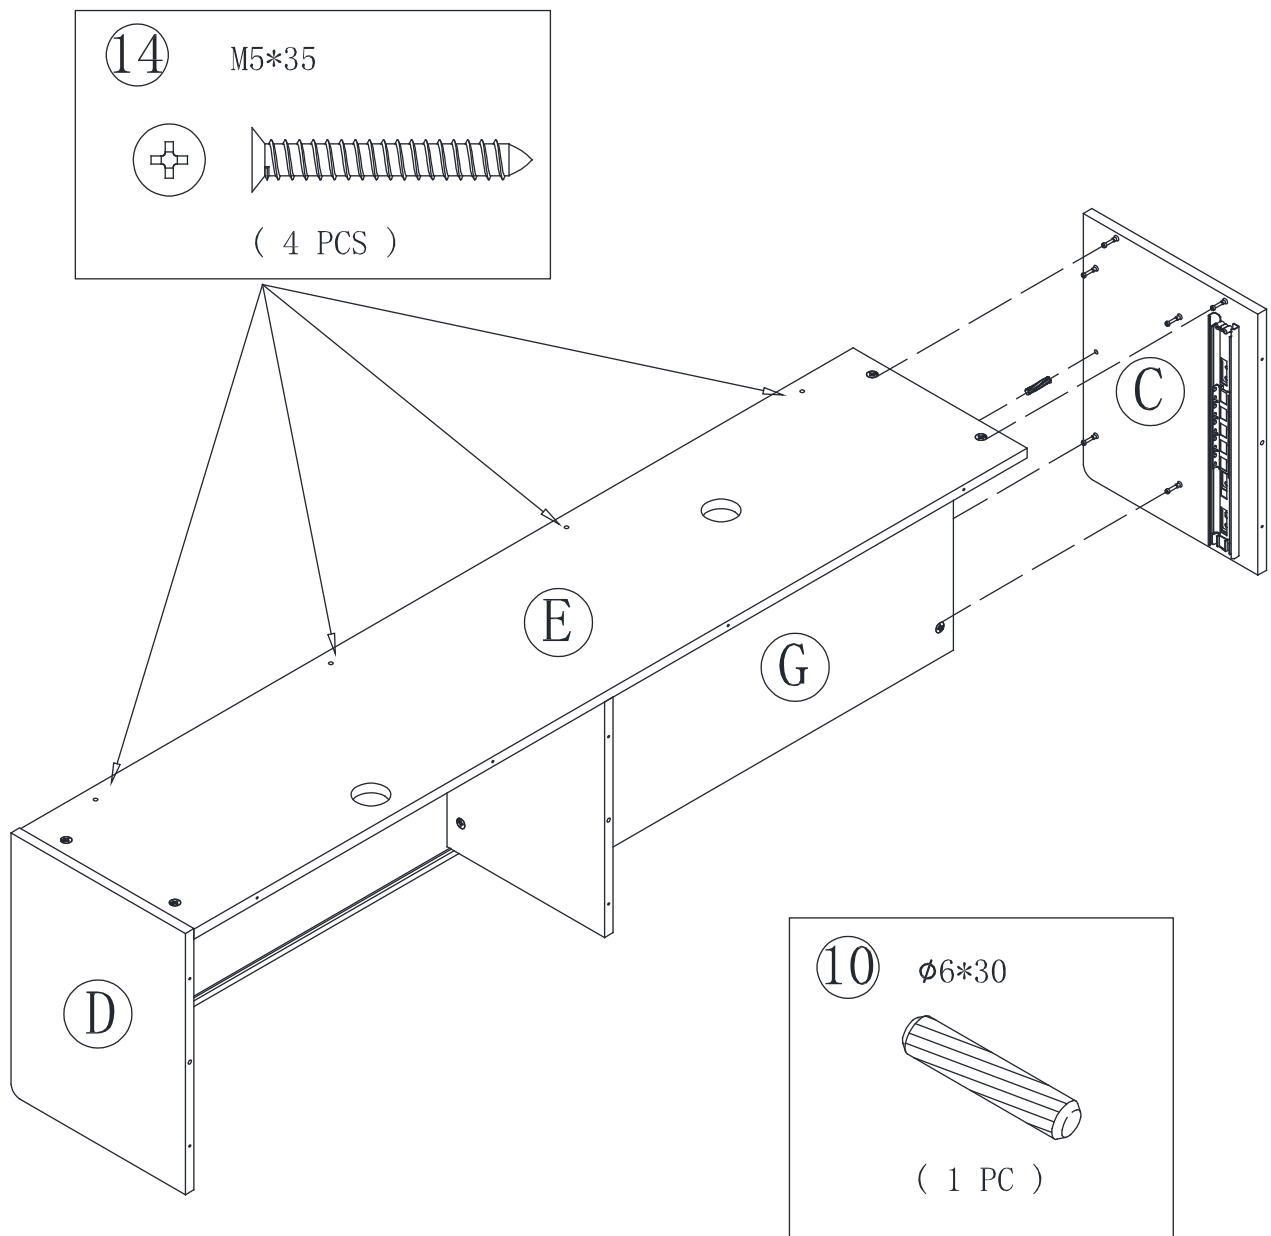


## Step 8

- ◆ Push two GROMMETS (11) into the BACK (E).

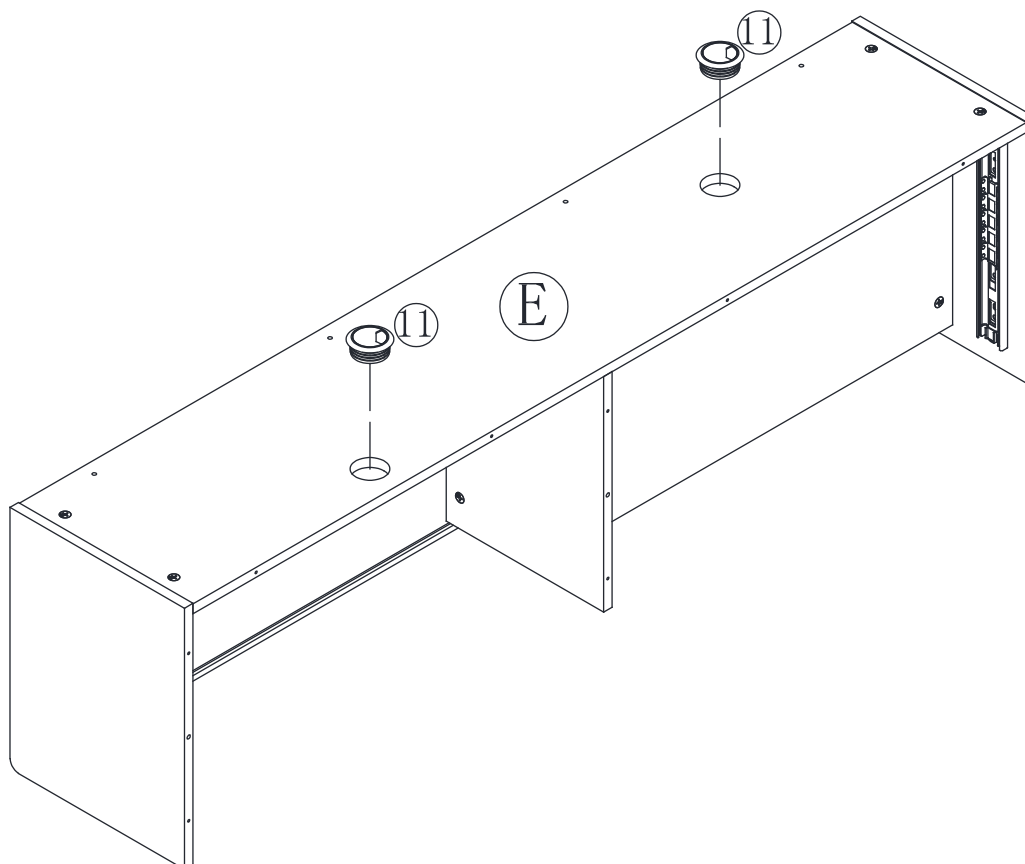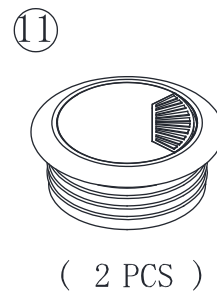


## Step 9

- ◆ Insert two BOLTS (6) into the holes of the DOOR (H).
- ◆ Fasten the LOWER BRACKETS (5) to the bottom of the DOOR (H). Use four FLAT HEAD SCREWS (16).

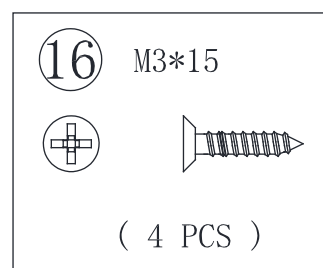


6 ( 2 PCS )

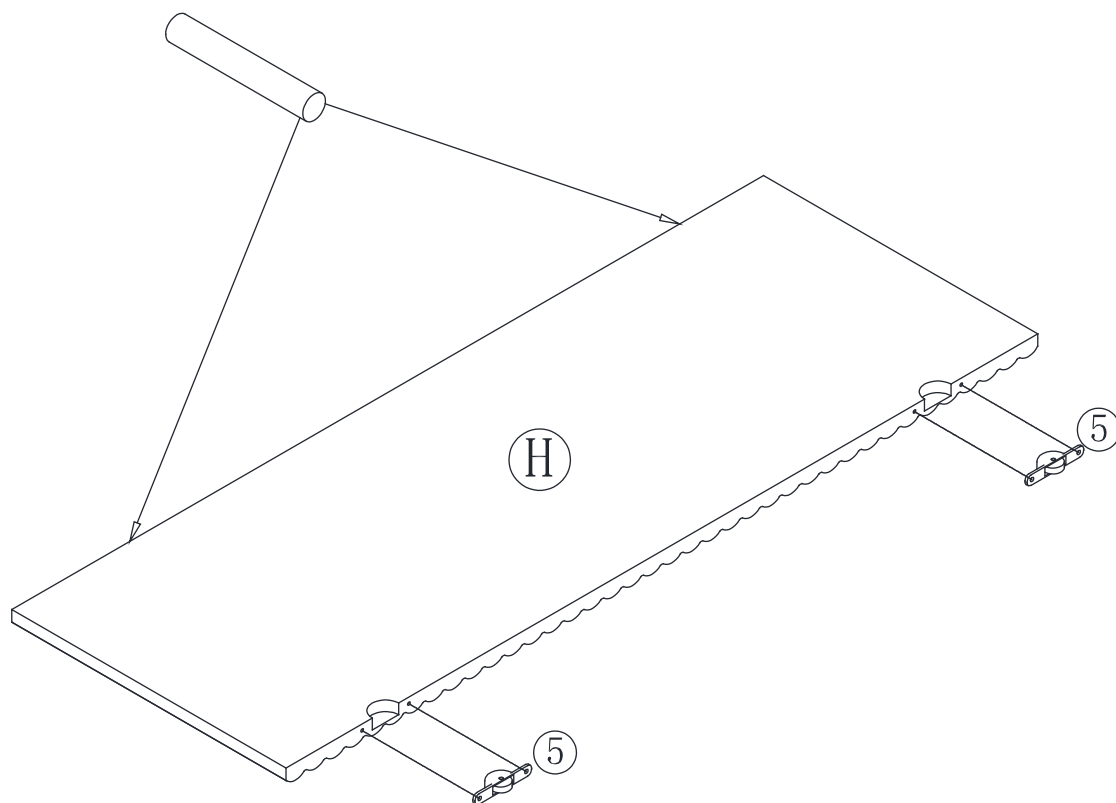

## Step 10




- ◆ Place the bolts of the DOOR (H) to the groove on the TOP (A).

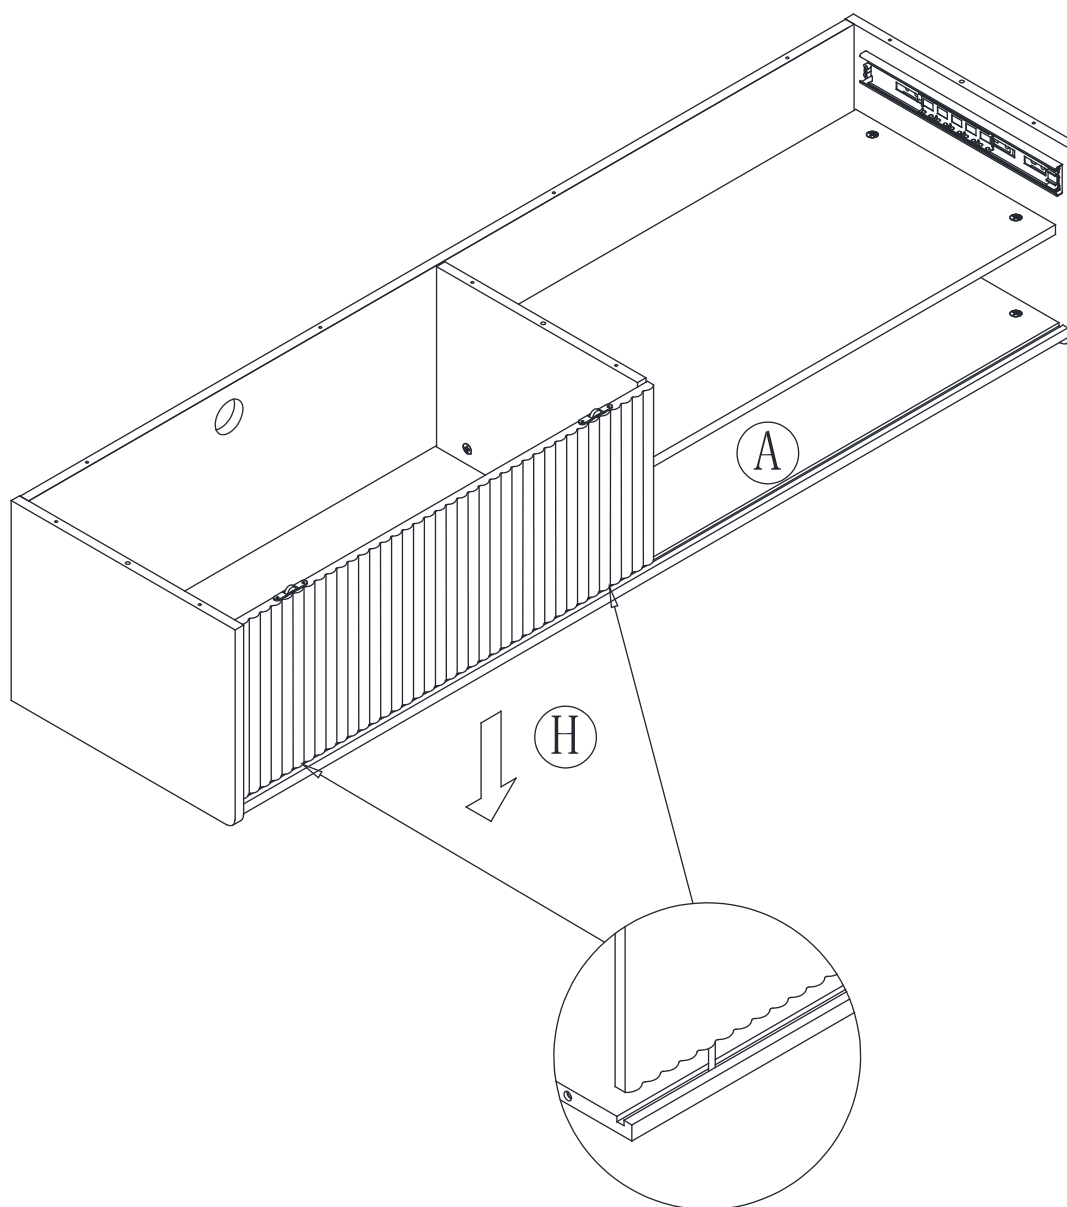



# Step 11

- ◆ Insert three WOOD DOWELS (10) into the ENDS (C and D) and UPRIGHT (F).
- ◆ Fasten the BOTTOM (B) to the ENDS (C and D), UPRIGHT (F) and BACK (E). Use ten FLAT HEAD SCREWS (14).

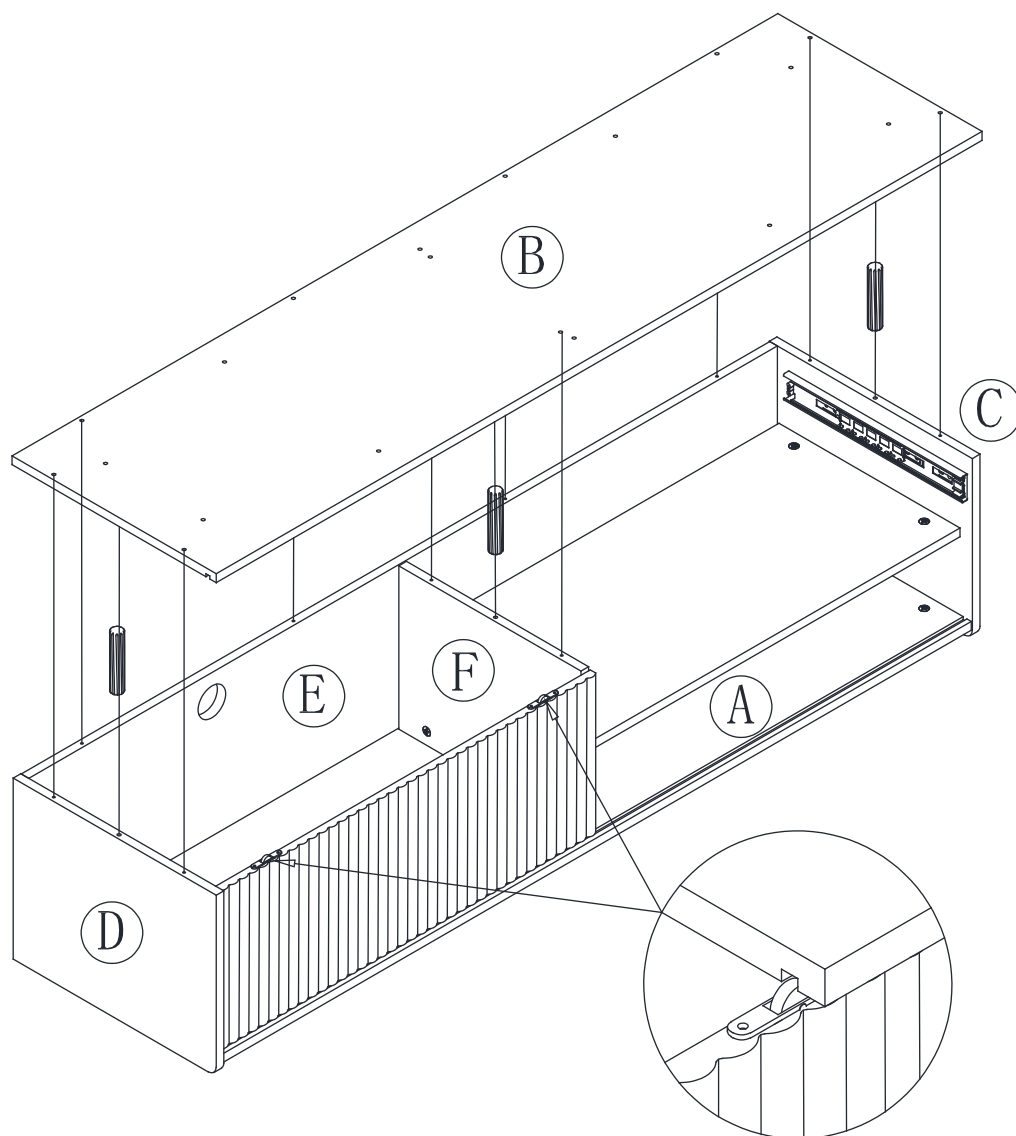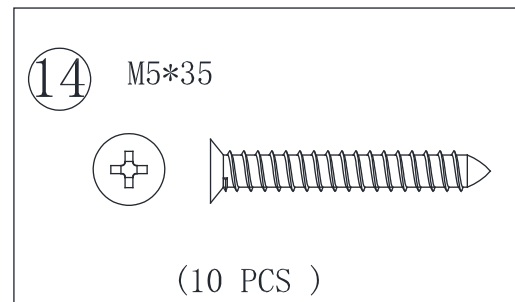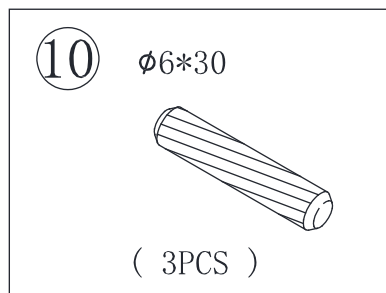


Note : Be sure the LOWER DOOR BRACKETS into the groove on the BOTTOM (B)


## Step 12

- ◆ Fasten the BRACES (R) to the LEGS (Q).  
Tighten four HEX HEAD SCREWS (12) using the L-WRENCH (8).

NOTE: You should start each SCREW a few turns before completely tightening any of them.

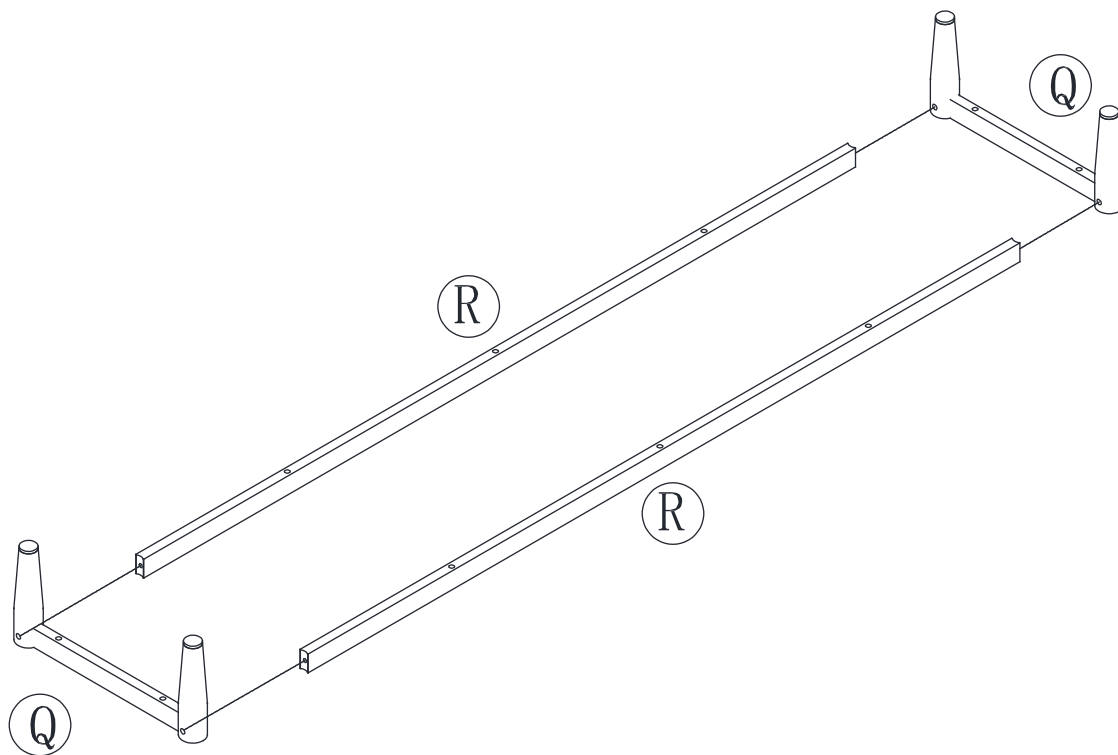


8



12


M6\*55



( 4 PCS )

## Step 13

- ◆ Fasten the LEG to the BOTTOM (B). Tighten ten HEX HEAD SCREW (13) using the L-WRENCH (8) .

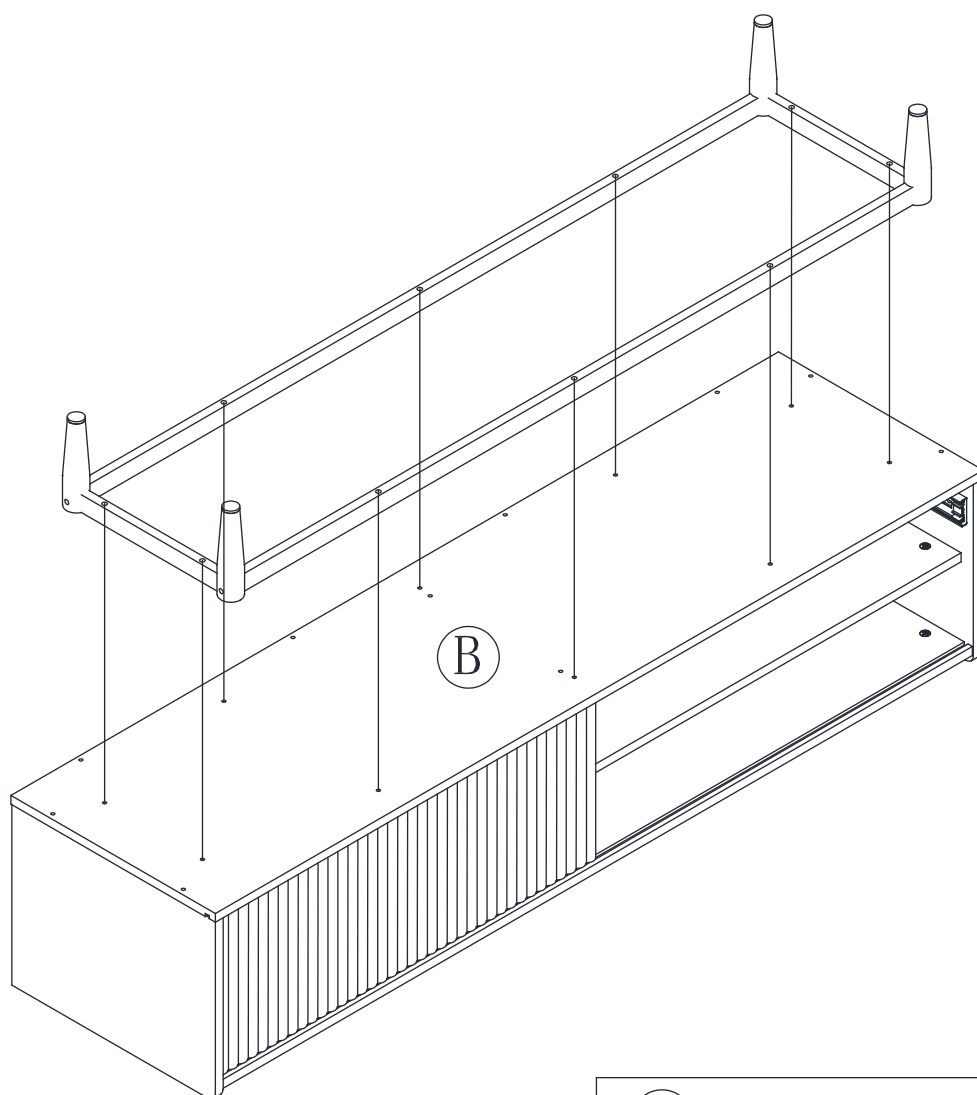


8



13

M6\*40




( 10 PCS )

# Step 14


- ◆ Fasten the DRAWER SIDES (N and K) to the DRAWER BACK (L).  
Use four PANHEAD SCREWS (15).

NOTE: You should start each SCREW a few turns before completely tightening any of them.


15 M5\*30MM



( 4 PCS )





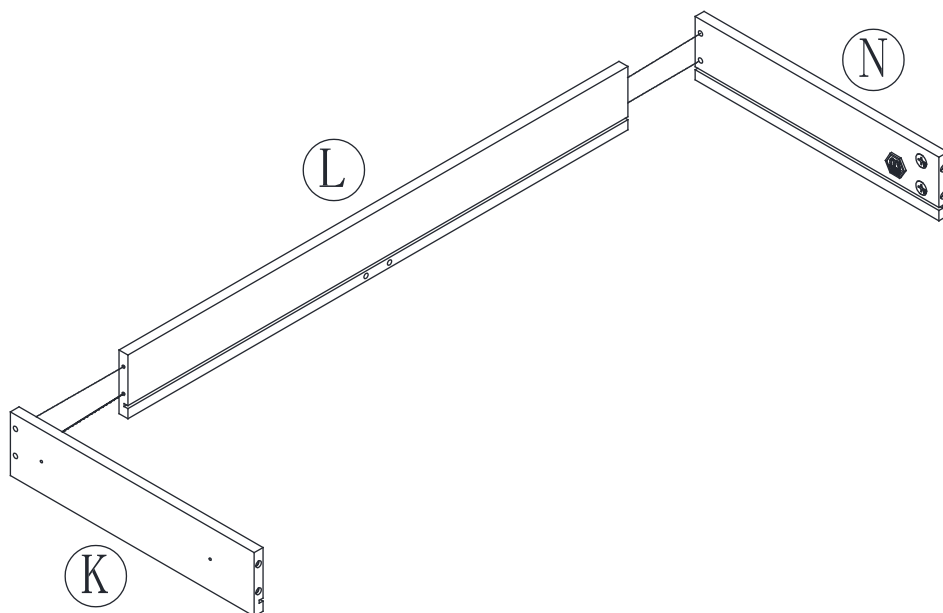


- ◆ Slide the SMALL DRAWER BOTTOM (P) into the grooves in the DRAWER SIDES (N and K) and DRAWER BACK (L).

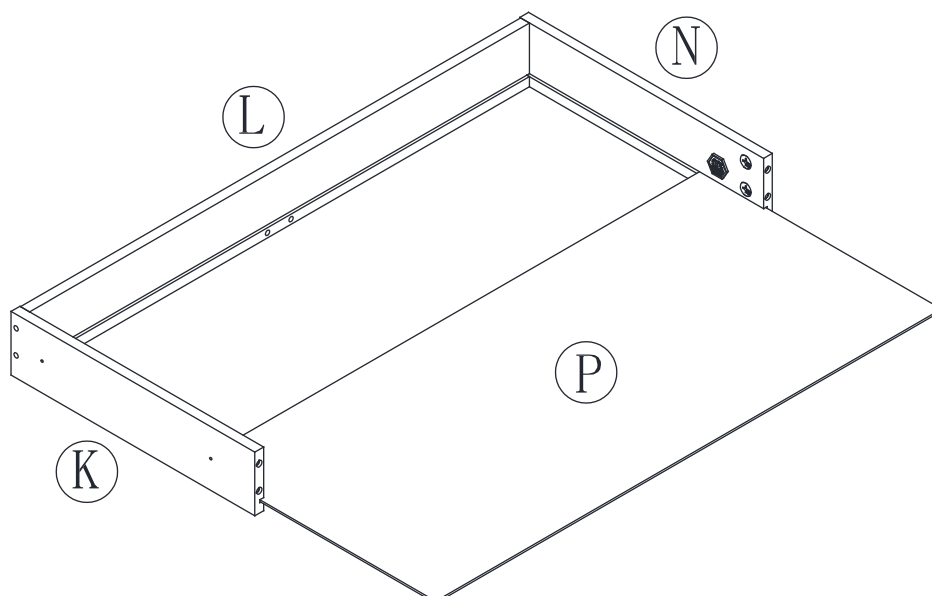



# Step 15

- ◆ Fasten the DRAWER BRACE (O) to the DRAWER BACK (L). Use two PAN HEAD SCREWS (15).

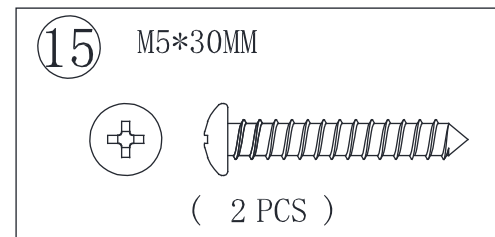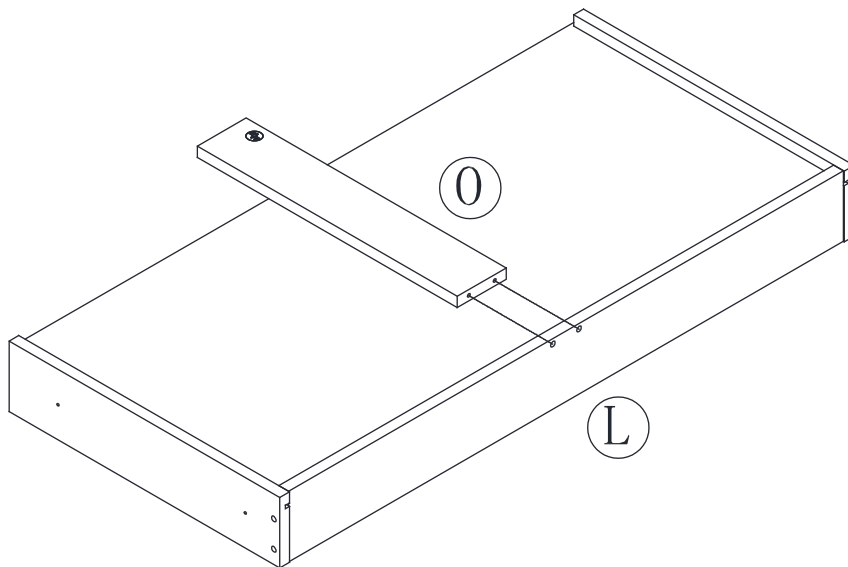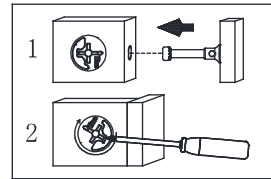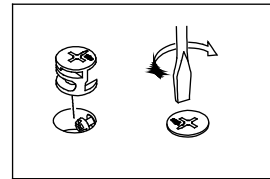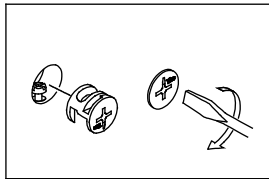


- ◆ Insert one WOOD DOWEL (10) to the DRAWER FRONT (J).
- ◆ Fasten the DRAWER FRONT (J) to the DRAWER SIDES (N and K) and the DRAWER BRACE (O)

Be sure the DRAWER BOTTOM inserts into the DRAWER FRONT groove.

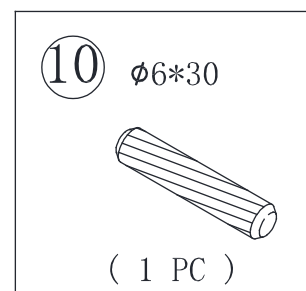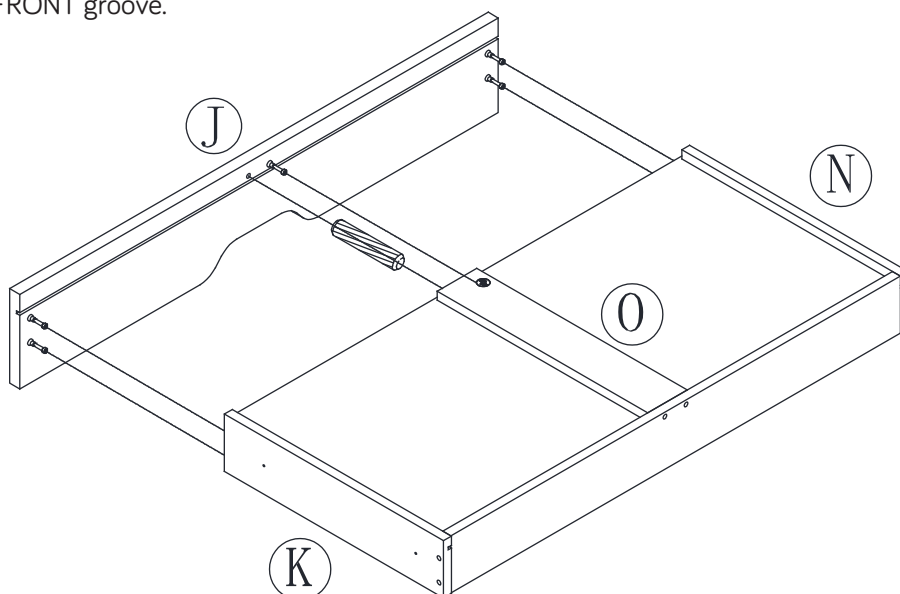

## Step 16



- ◆ Fasten two EXTENSION SLIDES (2) to the DRAWER SIDES (K and N). Use four FLAT HEAD SCREWS (17) through the exact holes shown.

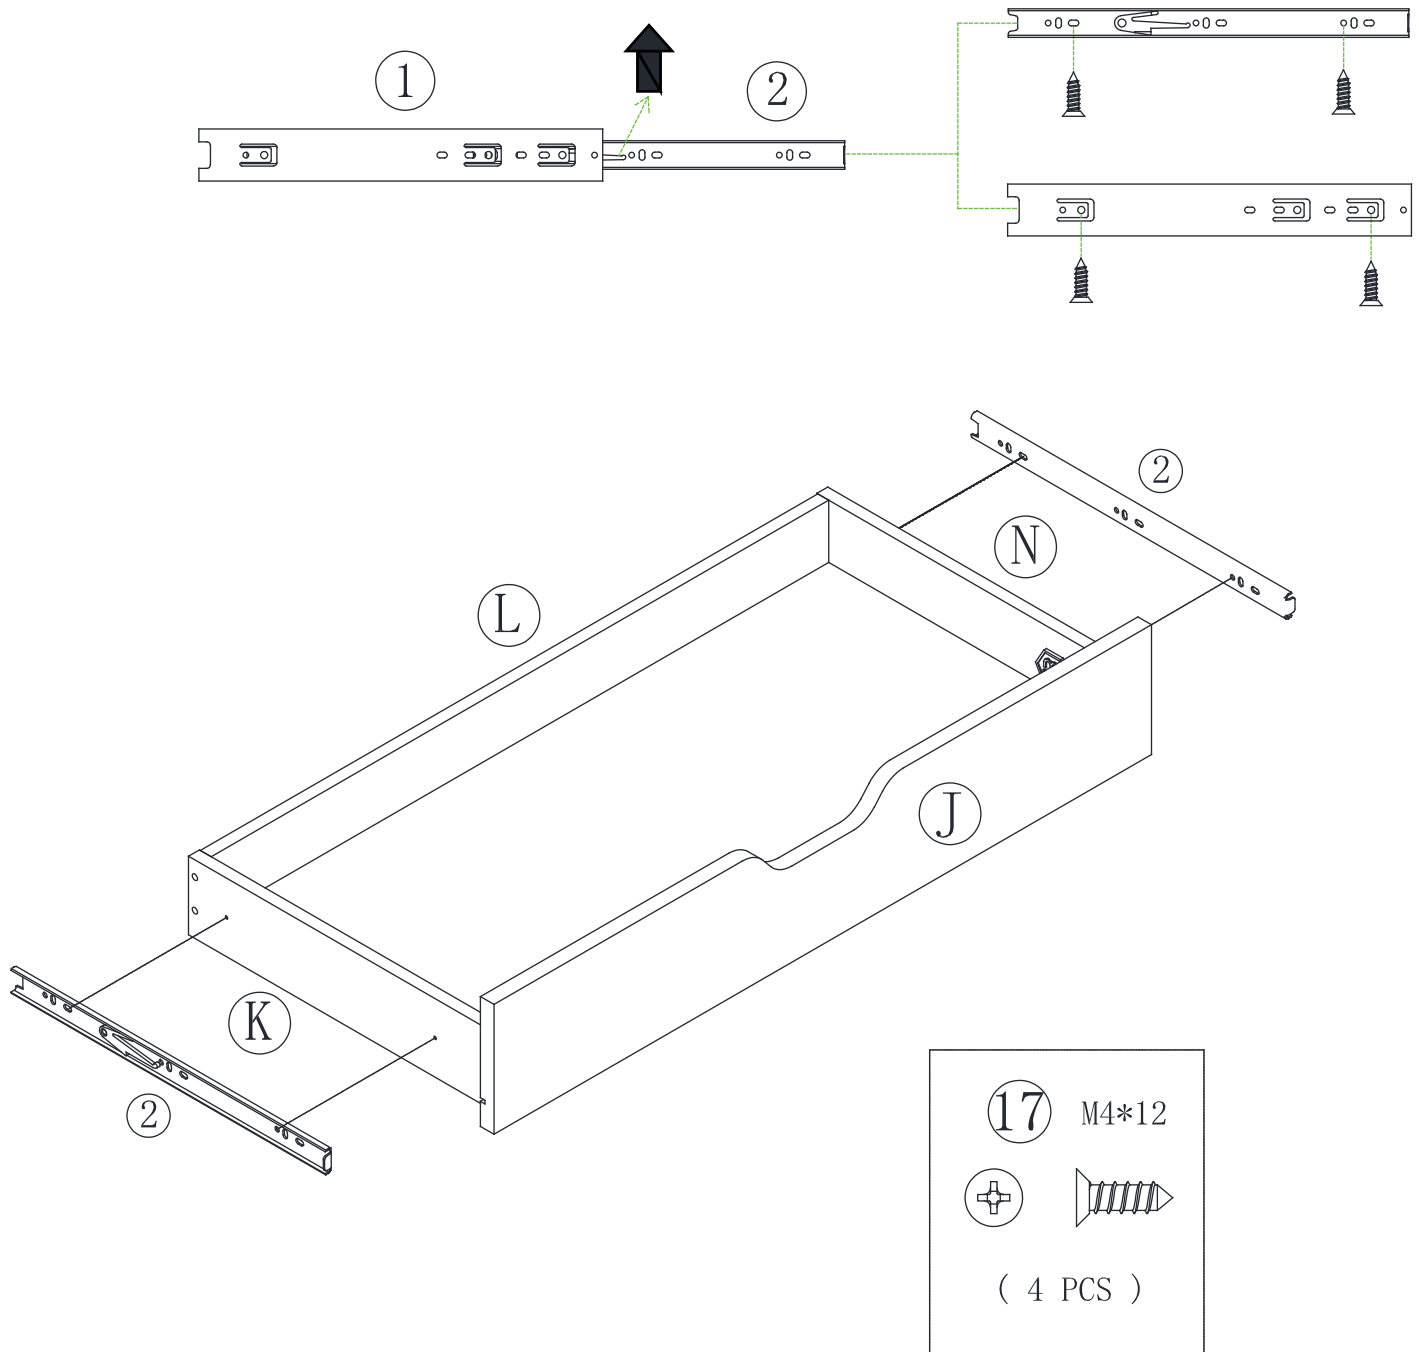

## Step 17

To insert a drawer into your unit, line up the EXTENSION SLIDES on the drawer with the EXTENSION RAILS on the

- ◆ unit and push the drawer into the unit until the drawer is fully inserted. The drawer will push in hard until it is all the way in, then it will slide in and out easier.

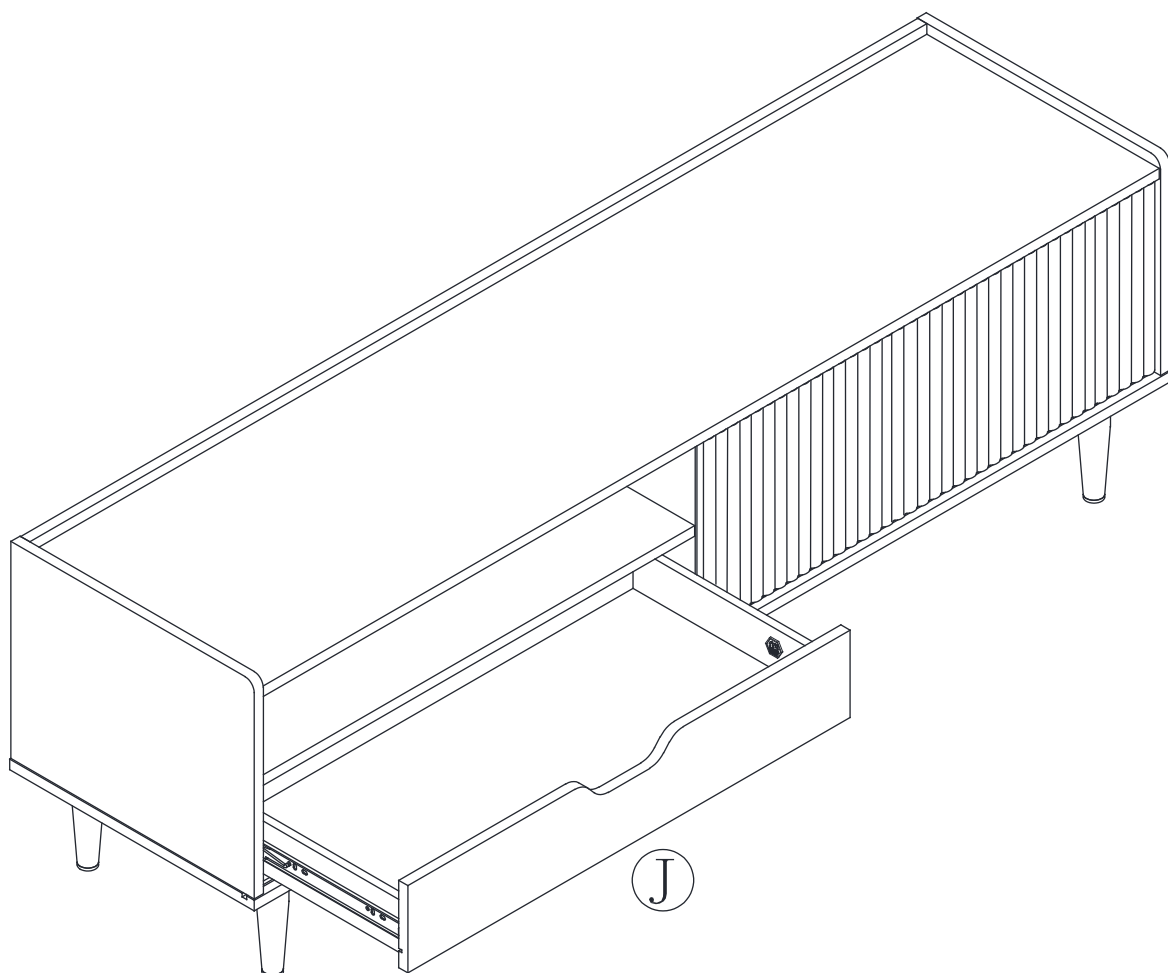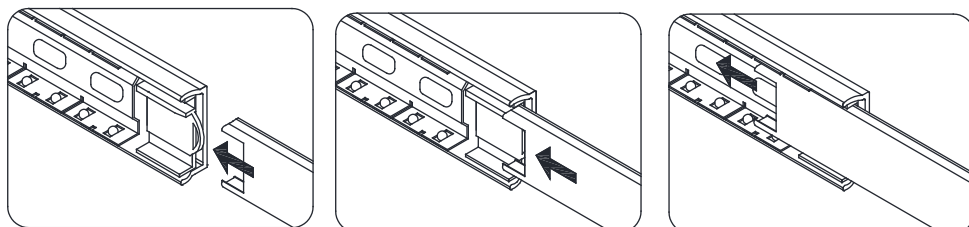

## Step 18

- ◆ Peel APPLIQUES from the APPLIQUE CARDS (7) and stick them onto each visible HIDDEN CAM.
- ◆ Peel the BUMPERS from the BUMPER CARDS (9) and stick them onto the edges of the DOORS (H)

