
ASSEMBLY INSTRUCTIONS 36 INCH BATH VANITY (COMBO)



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!

We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller


Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

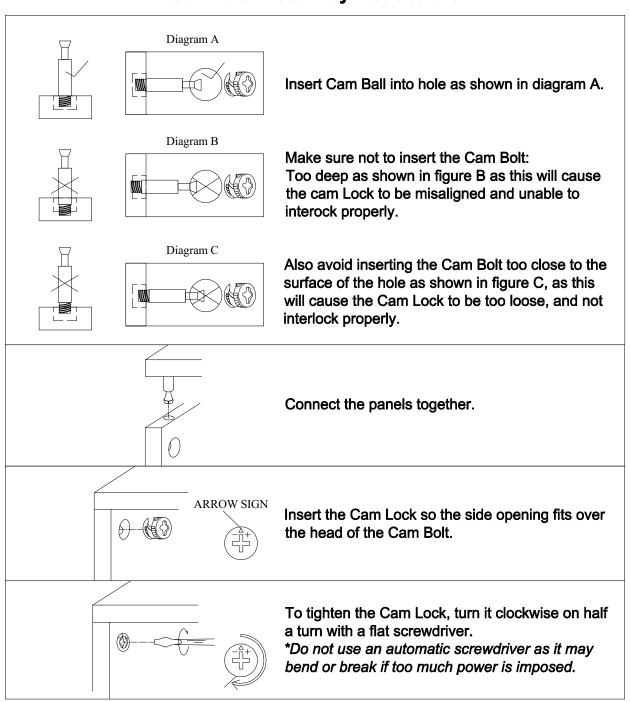


Detail View - BATH VANITY

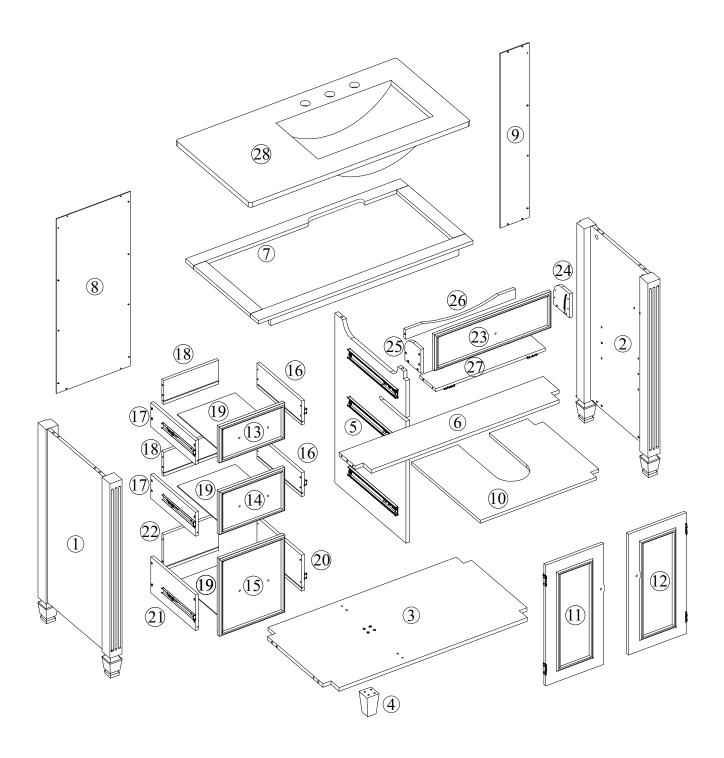


Identifying the Hardware -Indentify the hardware using the illustrations below.

Part List - N7259P284623K/B

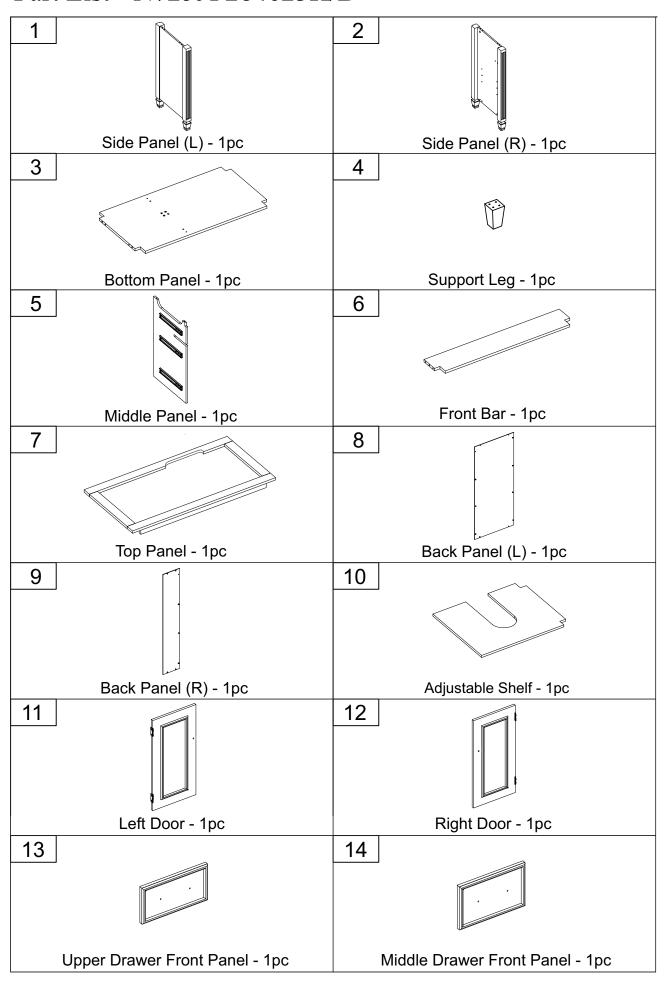



Part List - N7259P284623K/B

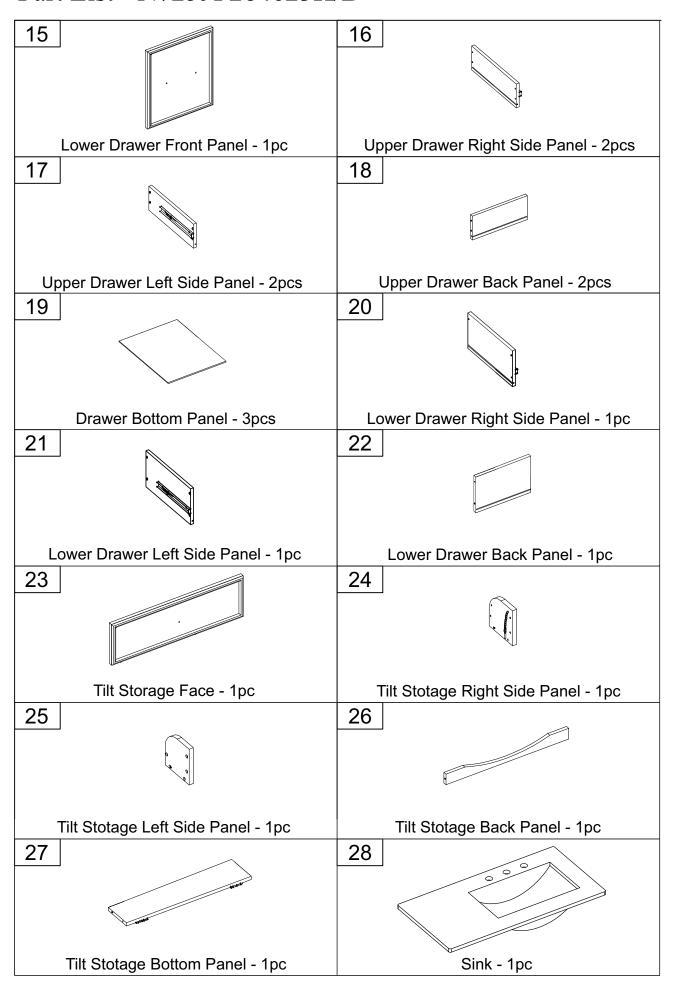



Hardware List - N7259P284623K/B


A	В	C ()Y////)
ø6x35mm	ø14.5x9.5mm	ø6x30mm
Three in one bolts - 15pcs	Three in one lock - 15pcs	Wood dowel - 15pcs
D	Ø5/32"x20mm	F
Laminate pad - 4pcs	Handle bolt - 9pcs	Handle 3pcs
G	H	
	ø3x12mm	ø3x12mm
Handle 3pcs	Flat head screw - 15pcs	Round head screw - 21pcs
	K x x x x x x x x x x x x x x x x x x x	
ø4x20mm	ø4x25mm	ø4x35mm
Flat head screw - 2pcs	Flat head screw - 37pcs	Flat head screw - 7pcs
M Supplementary	N Ø1/4"x16x1mm	0
Plastic stopper - 2pcs	Washer - 4pcs	Tipover Restraints - 2pcs

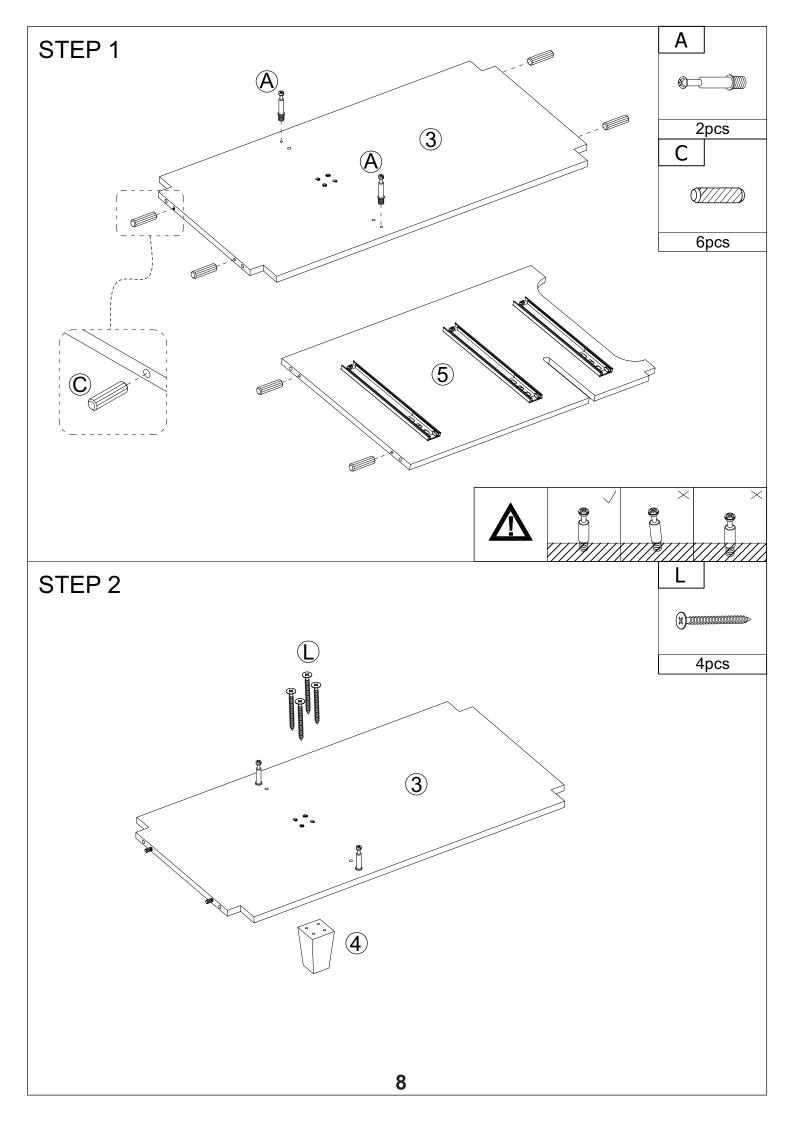


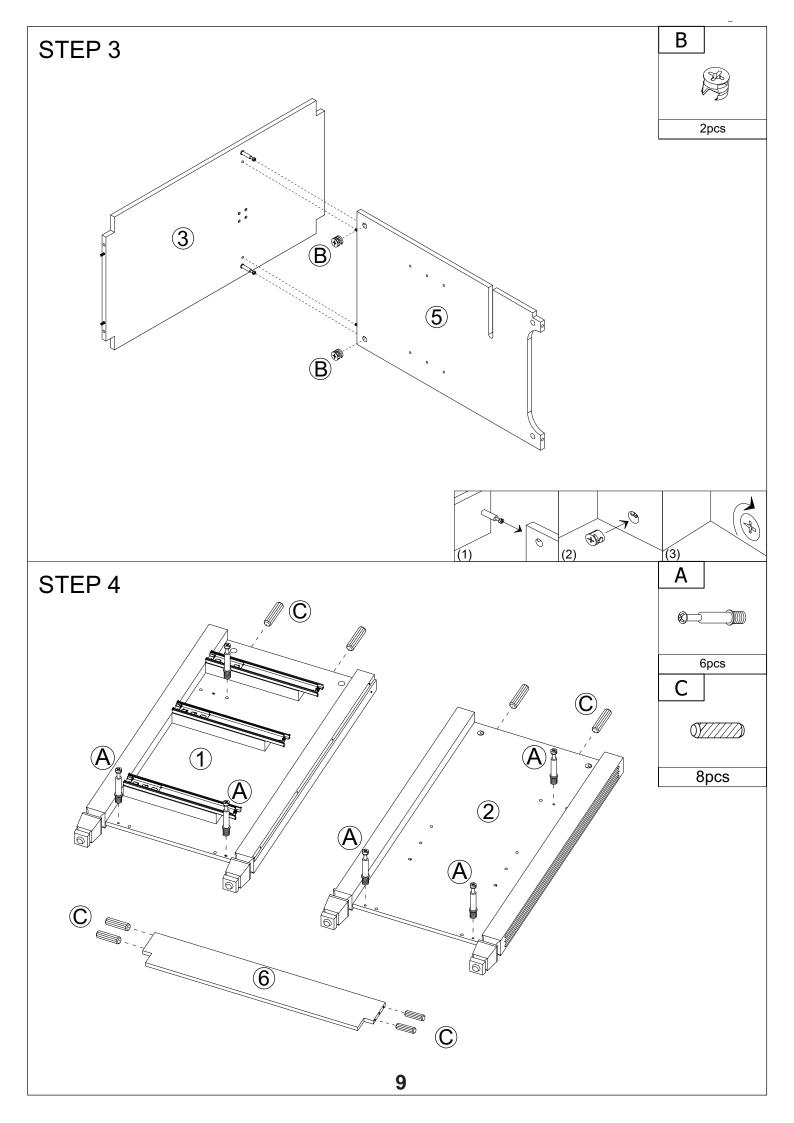


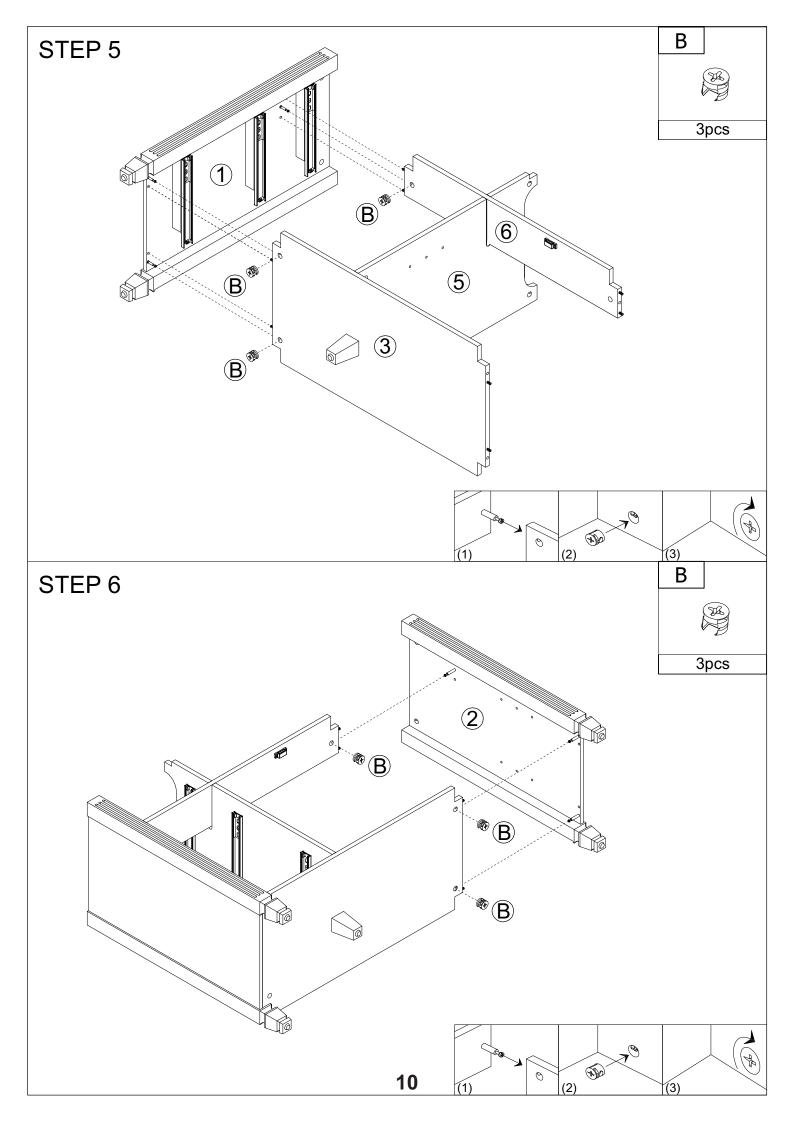


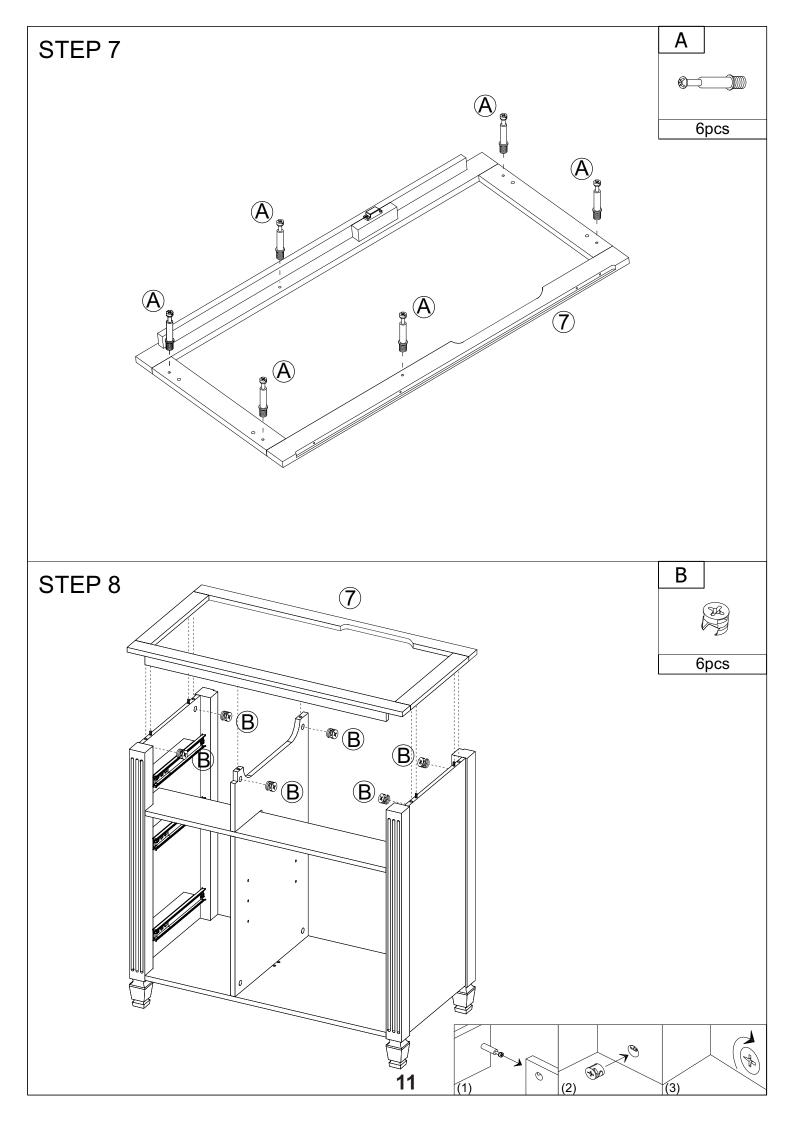


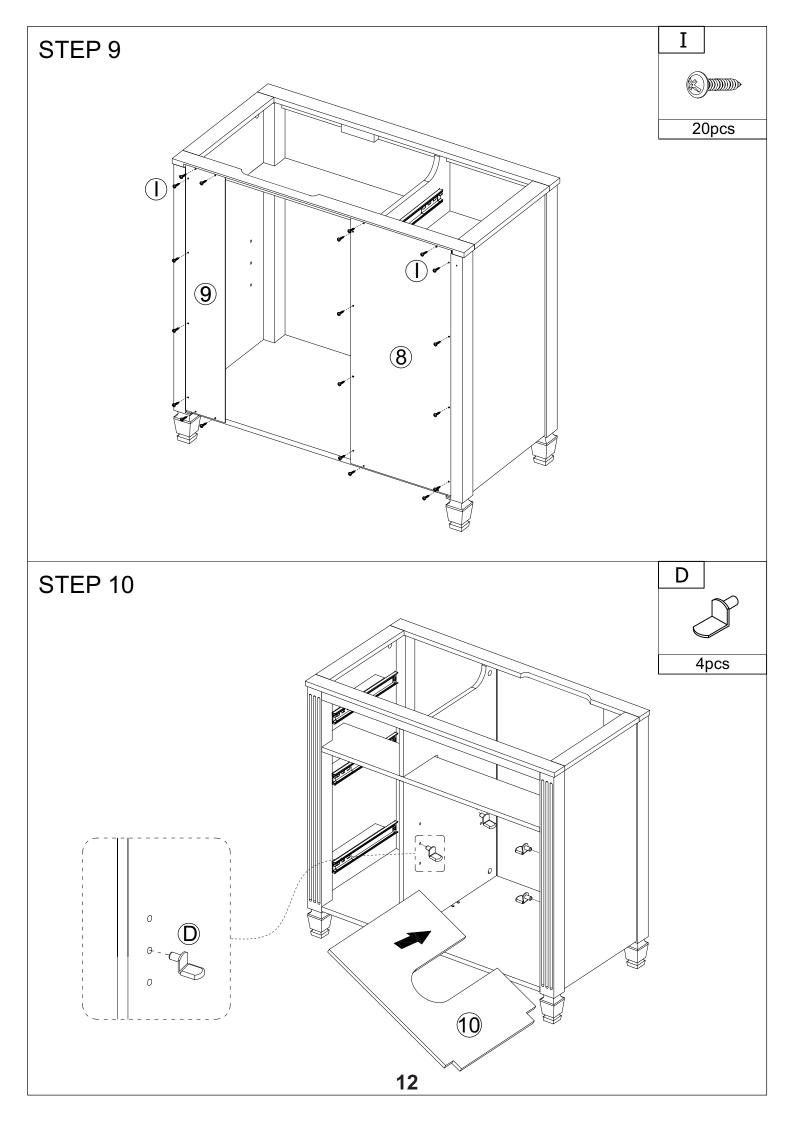


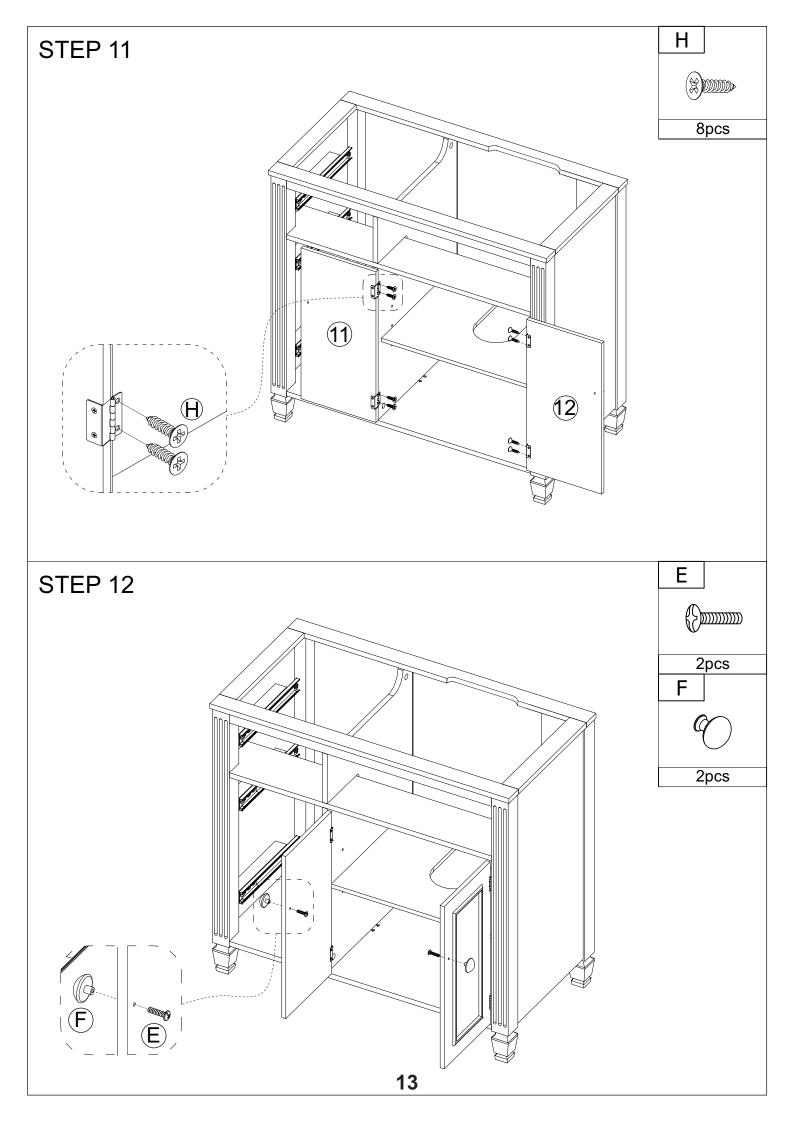


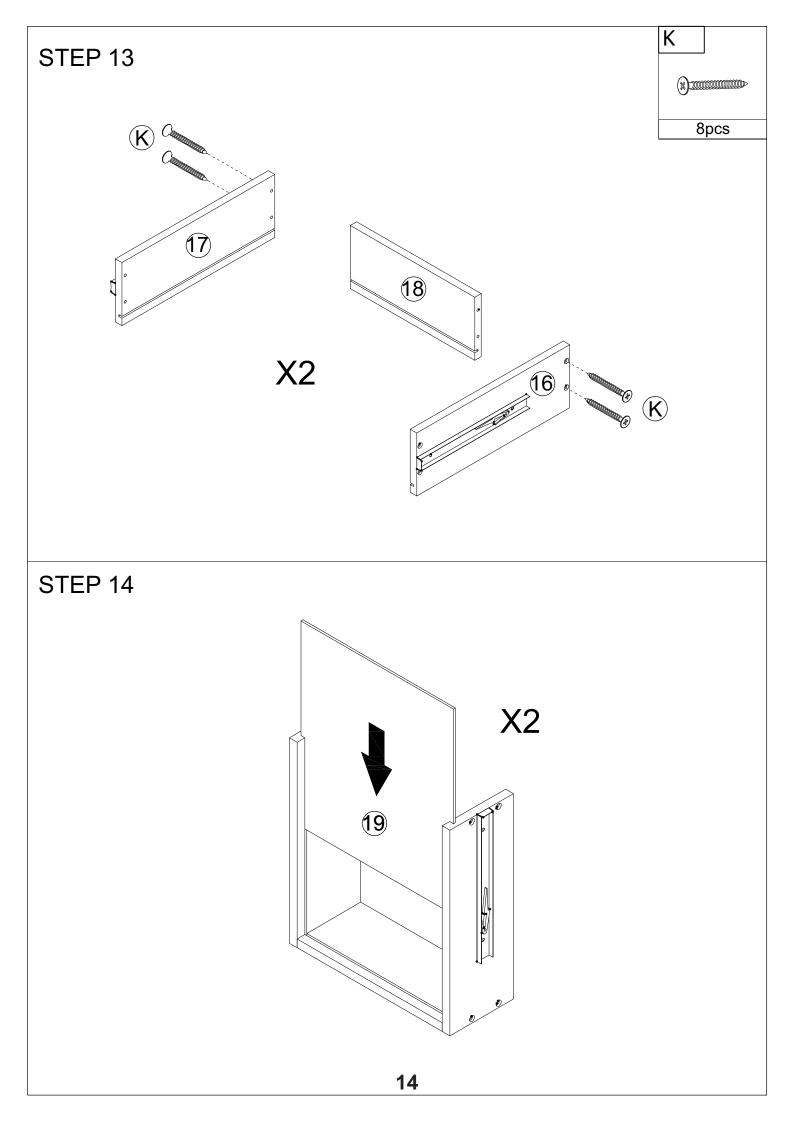


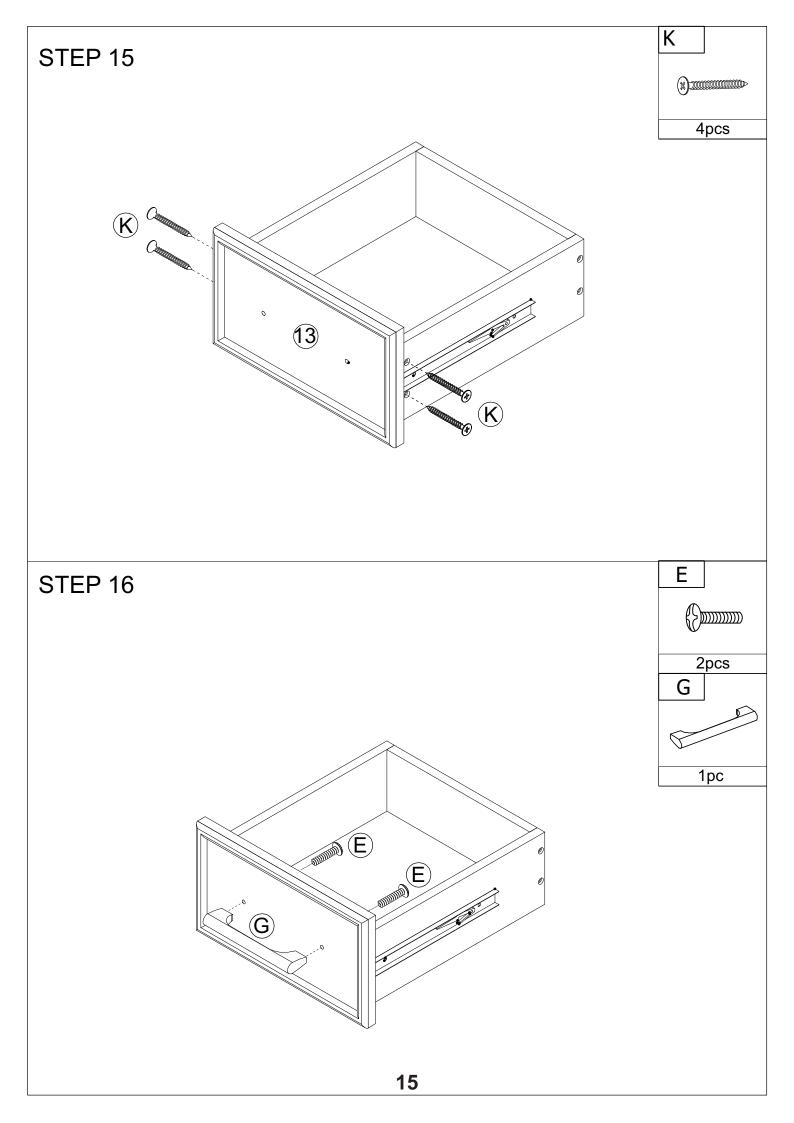


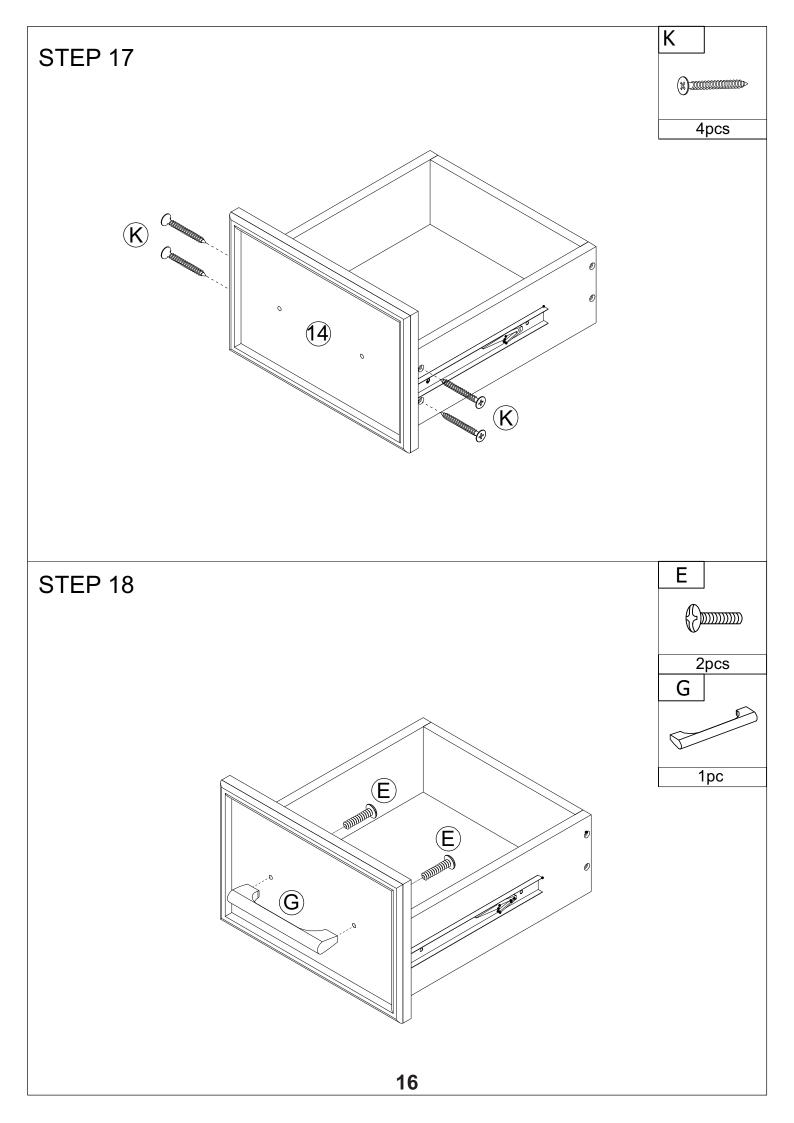


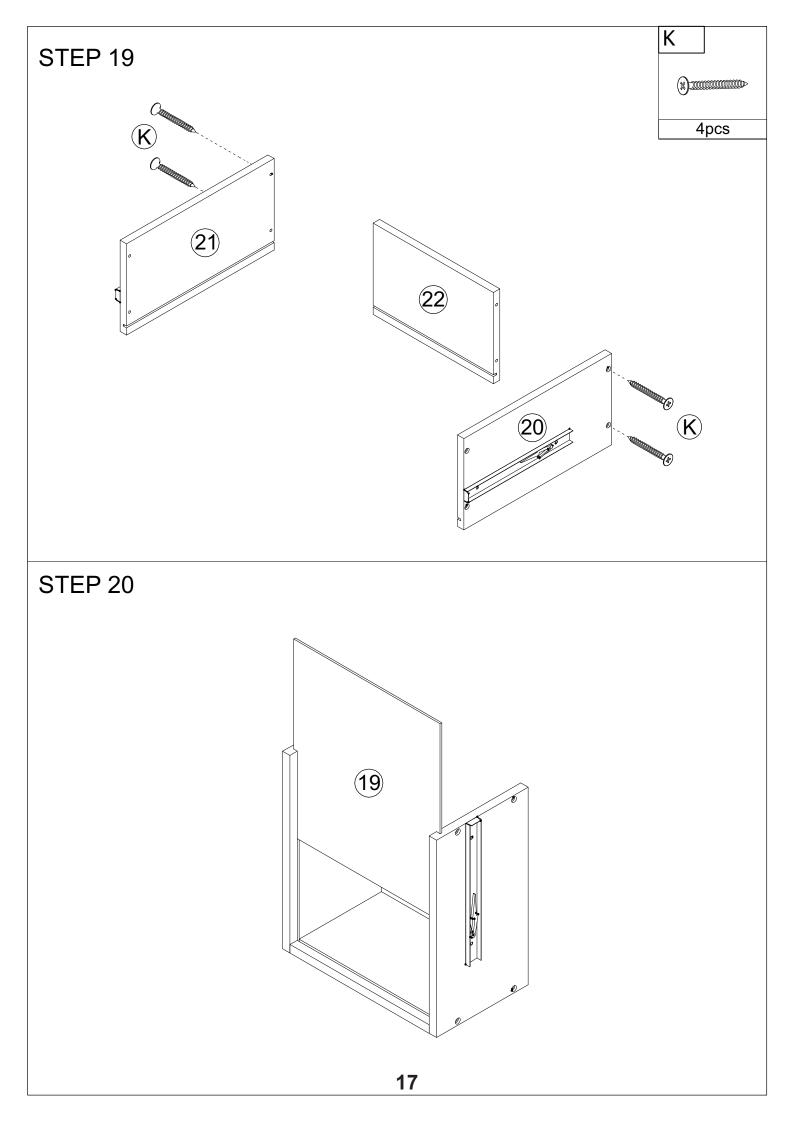


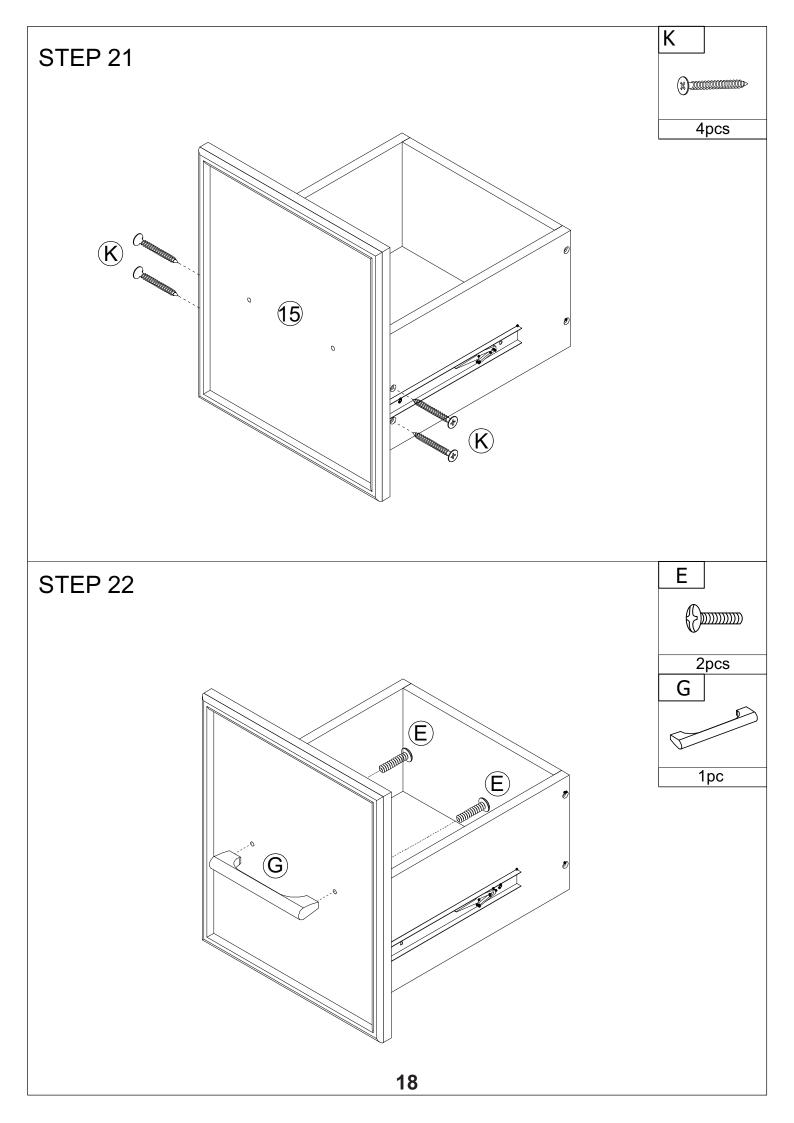

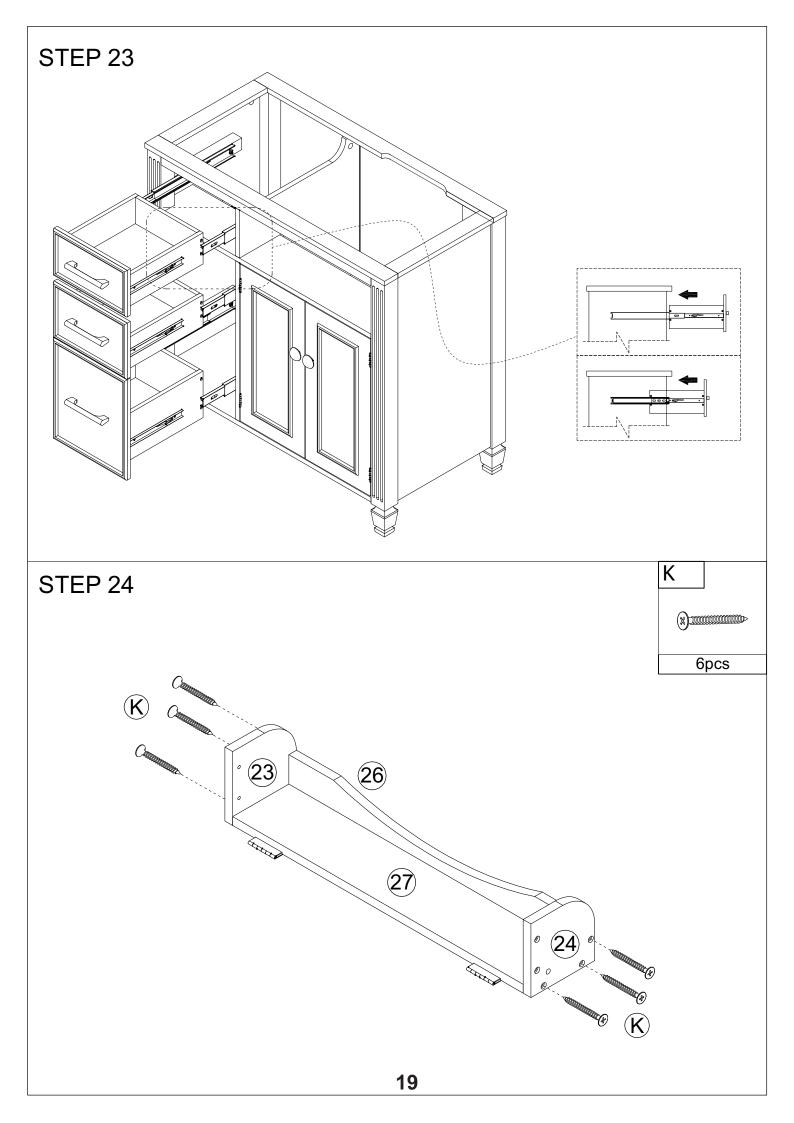


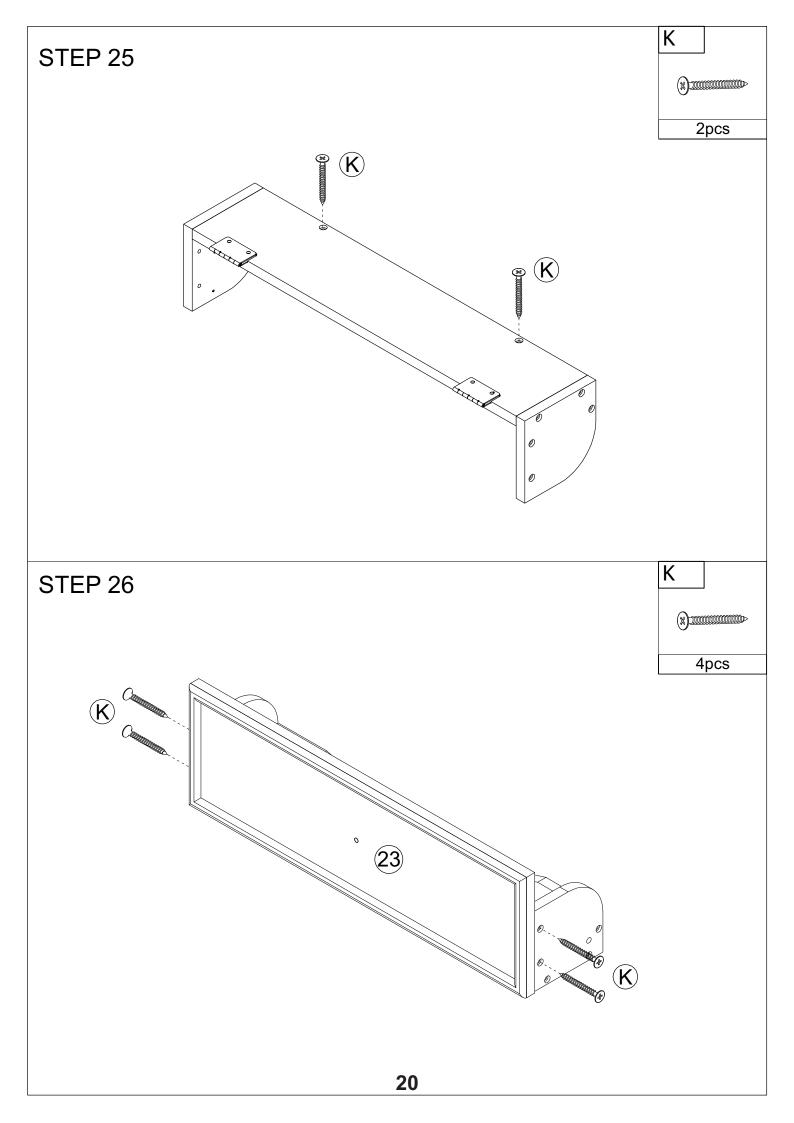

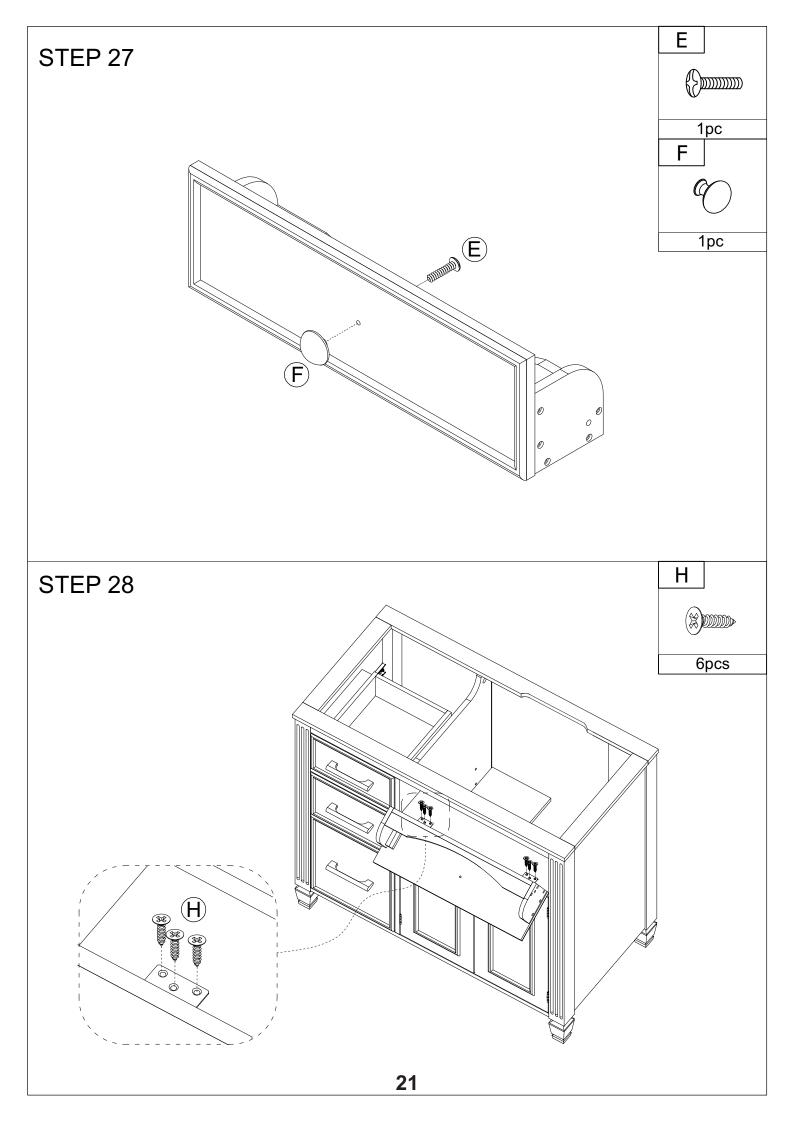


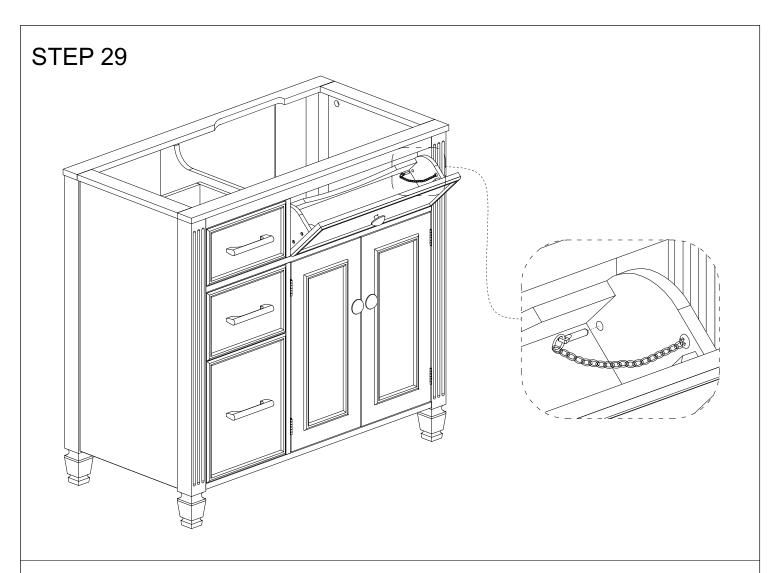



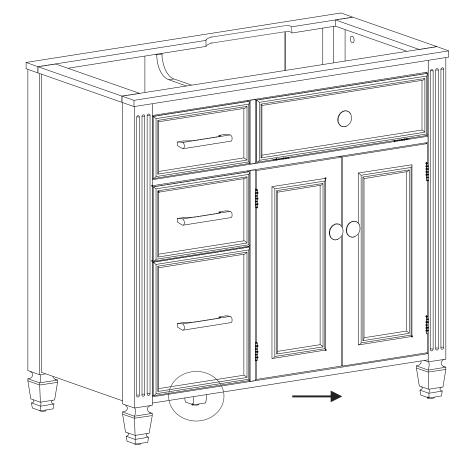






Adjust height for balance

Adjust low for balance

Adjust Pre-installed Levellers height for balance

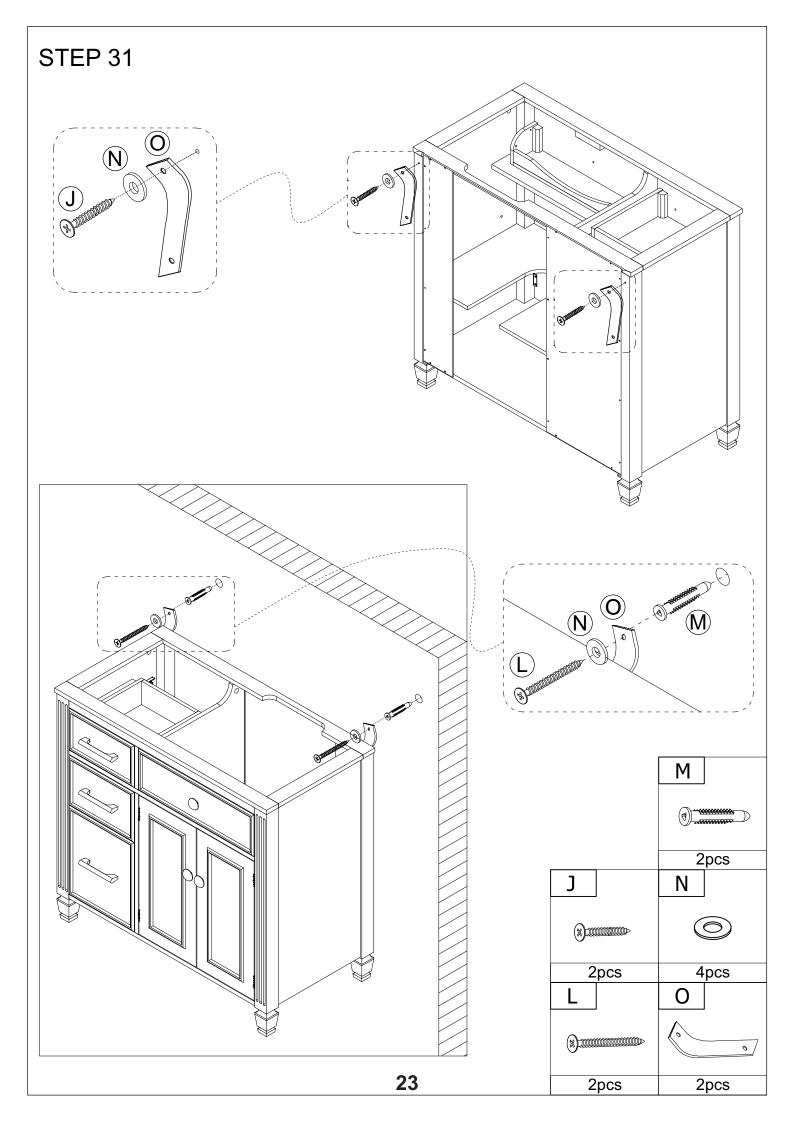

STEP 32

Install the sink on the cabinet with glue. Let stand for 24 hours.

