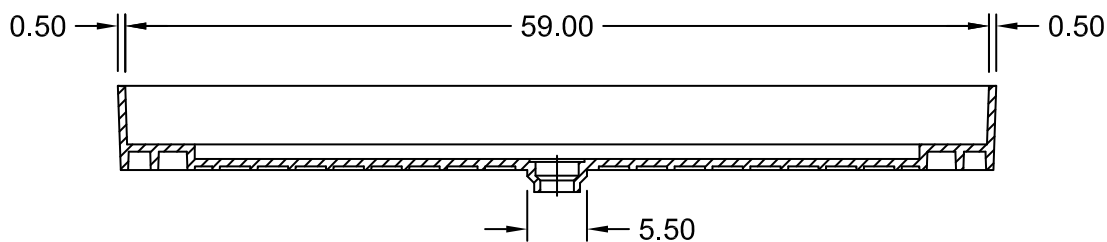
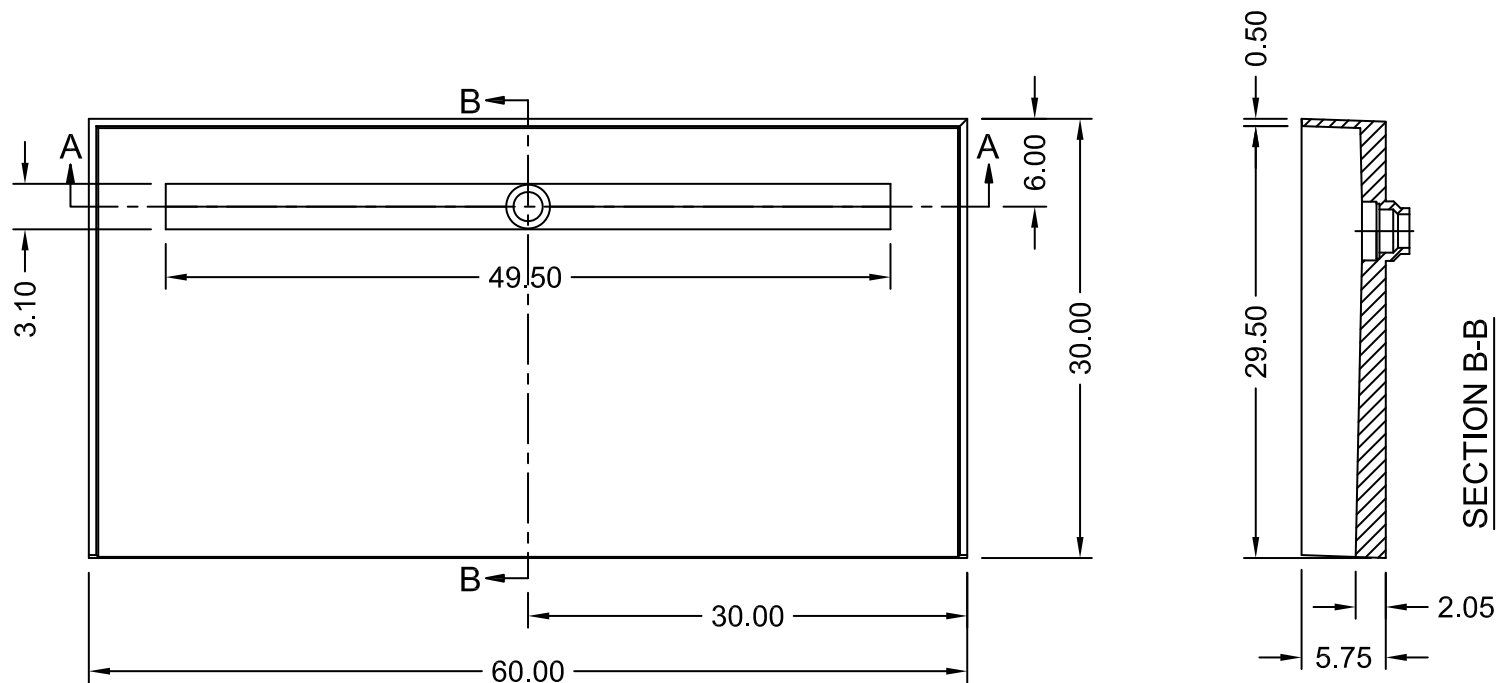


(Not to scale)

SECTION A-A

Redi Free Installation: For a proper barrier free pan installation, subfloor must be recessed to the depth of the front lip of pan in accordance with local codes.