

PLASTIC GARDEN SHED P05x4

Instructions for Assembly



WARNING

Please read the instruction manual carefully before assembly.
Please assembly strictly in accordance with the instruction.
Please double-check to ensure that all parts of the package contents intact.
To avoid injury, work gloves are recommended during assembly.

SITE PREPARATION | PRÉPARATION DU SITE | **PREPARACIÓN DEL LUGAR** | VORBEREITUNG DES AUFSTELLUNGORTES | **VOORBEREIDING VAN HET TERREIN** | PREPARAZIONE DEL LUOGO DI ASSEMBLAGGIO | **PREPARAÇÃO DO LOCAL**


Level the ground surface | Nivelez la surface du sol | **Nivele la superficie del suelo** | Ebnen Sie die Bodenoberfläche | **Maak de bodem vlak** | Livellare la superficie del terreno | **Nivele a superfície do solo**



Recommendation: Construct a wooden or concrete base as a foundation | Recommandation: fabriquez une base en bois ou en béton en guise de fondation | **Recomendación: construya una base de madera o de cemento a modo de cimiento** | Empfehlung: Bauen Sie als Fundament eine Grundfläche aus Holz oder Beton | **Aanbeveling: maak een houten of betonnen ondergrond als fundering** | Raccomandazione: Costruire una base di legno o di cemento come fondamenta | **Recomendação: Construa uma base de madeira ou de cimento como fundação**


Option | Opción | optie | opzione | opção

A

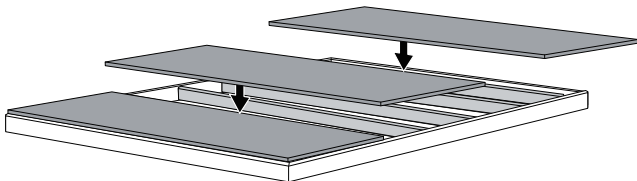


Option | Opción | optie | opzione | opção

B

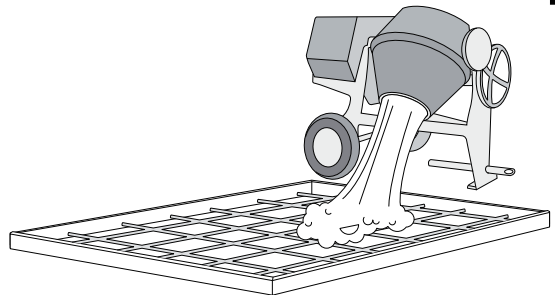

External floor measurements are: | Les mesures externes de la étage sont: | **Las medidas del suelo externo son:** | Die Außen-Bodenmaße betragen: | **De afmetingen van de externe vloer zijn:** | Le dimensioni esterne del pavimento sono: | **As medidas externas do chão são:**

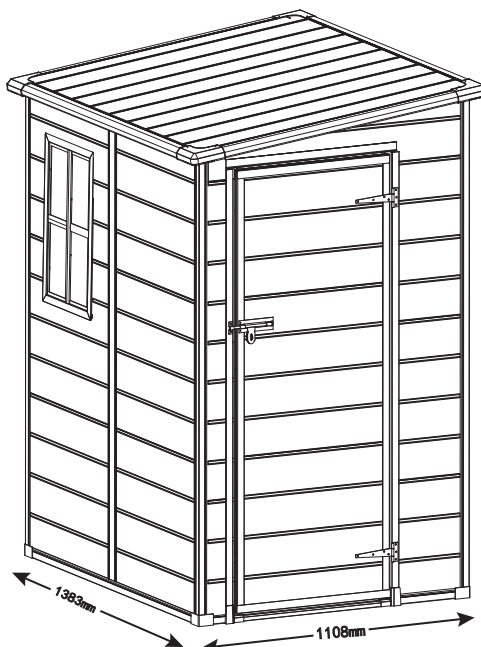

BEFORE STARTING ASSEMBLY | AVANT DE COMMENCER LE MONTAGE | **ANTES DE EMPEZAR EL ARMADO** | VOR MONTAGEBEGINN | **VOORDAT U BEGINT TE MONTEREN** | PRIMA DI INIZIARE L'ASSEMBLAGGIO | **ANTES DE INICIAR A MONTAGEM**

Read the care and safety guidelines at the end of this manual | Check to ensure that there are no Parts are missing or damaged parts BEFORE starting or arranging assembly | Remove all parts from the package(s) and spread them out on a clean work surface | Review all assembly instructions | Assemble all the parts according to the directions in this manual. Do not skip any steps.

Lisez les instructions de précaution et de sécurité à la fin de ce manuel | Assurez-vous qu'il n'y a pas de pièces manquantes ou endommagées AVANT de commencer ou d'organiser l'assemblage | Retirez toutes les pièces du/des paquet(s) et étalez-les sur une surface de travail propre | Lisez toutes les instructions de montage | Assemblez toutes les pièces selon les instructions de ce manuel. Ne sautez aucune étape.

Lea las instrucciones de precauciones y seguridad que están al final de este manual | Asegúrese de que no faltan piezas ni están dañadas ANTES de comenzar o disponer el montaje | Saque todas las piezas del paquete o paquetes y póngalas sobre una superficie de trabajo limpia | Revise todas las instrucciones de montaje | Monte todas las piezas según las instrucciones de este manual. No se saltee ningún paso.


Lesen Sie die Sicherheitsrichtlinien am Ende des Benutzerhandbuchs durch | Prüfen Sie bitte VOR dem Zusammenbau, dass keine Teile beschädigt sind oder fehlen | Nehmen Sie alle Teile aus der Verpackung und breiten Sie sie auf einer sauberen Arbeitsfläche aus | Gehen Sie noch einmal die komplette Aufbauanleitung durch | Bauen Sie alle Teile entsprechend der Anleitung in diesem Handbuch zusammen. Lassen Sie dabei keinen Arbeitsschritt aus.

Lees de richtlijnen voor zorg en veiligheid achterin deze handleiding | Controleer dat er geen onderdelen mankeren, of beschadigd zijn, VOORDAT u met de montage begint | Haal alle onderdelen uit het pakket (of uit de pakketten) en leg ze opeen schoon werkoppervlak | Bekijk alle montagehandleidingen | Monteer alle onderdelen volgens de aanwijzingen van deze handleiding. Sla geen stappen over.

Leggere le linee guida di assistenza e sicurezza alla fine di questo manuale | Assicurarsi che non ci siano parti mancanti o danneggiate PRIMA di iniziare l'assemblaggio | Estrarre tutti i componenti dall'imballo e posizionarli su una superficie di lavoro pulita | Consultare tutte le istruzioni di montaggio | Assemblare tutti i componenti secondo le istruzioni contenute nel manuale. Non saltare nessuna fase.


Leia as diretrizes de cuidados e segurança que constam da parte final deste manual | Verifique para se assegurar de que não há peças em falta ou danificadas ANTES de começar a preparar a montagem | Retire todas as peças da embalagem e espalhe-as numa superfície de trabalho limpa | Reveja todas as instruções de montagem | Monte todas as peças de acordo com as instruções do manual. Não salte quaisquer passos.

REQUIRED TOOLS | OUTILS EXIGÉS | **HERRAMIENTAS NECESARIAS** | BENÖTIGTE WERKZEUGE | **BENODIGD GEREEDSCHAP** | ATTREZZATURA OCCORRENTE | **FERRAMENTAS NECESSÁRIAS**



SPATULA | SPATULE | **ESPÁTULA** | SPACHTEL | **SPATEL** | SPATOLA | **ESPÁTULA**

- Use spatula (part “SG8”) for easier insertion of panel into profile.
- Utilisez la spatule (partie “SG8”) pour une meilleure insertion du panneau dans le profil.
- Utilice una espátula (pieza “SG8”) para una mejor inserción del panel en el perfil.
- Benutzen Sie den Spachtel (Bezeichnung “SG8”), um die Platten leichter in die Nut einführen zu können.
- Gebruik spatel (onderdeel SG8) voor het gemakkelijk invoeren van het paneel in het profiel.
- Utilizzare la spatola (parte SG8) per inserire il pannello più facilmente nel profilo.
- Utilize uma espátula (peça “SG8”) para facilitar a inserção do painel no perfil.



SG8x2



ASSEMBLY REQUIRES TWO PEOPLE | LE MONTAGE DOIT ÊTRE EFFECTUÉ PAR DEUX PERSONNES | **SE NECESITAN DOS PERSONAS PARA ARMARLO** | ZWEI PERSONEN ZUR MONTAGE NOTWENDIG | **MONTAGE VEREIST TWEE PERSONEN** | L'ASSEMBLAGGIO RICHIEDE DUE PERSONE | **A MONTAGEM EXIGE DUAS PESSOAS**

PARTS LIST

NO.	PART.	Qty.
BF2-1		1
BF2-2		1
BF2-3		1
BP1		1
BP4		2
BP5		1
BP8		1
BP9		1
SG6		4
SG7-2		1
SG7-1		1
BW1-1		9
BW1-2		1
BW1-3		1
BW1-4		1
BW1-5		2
BW2-1		1
BW3-1		2
BW3-2		1
BW4-1		2
BW4-2		1
BW5-1		2
BW5-2		1
BW6-1		1
BP2		2
BP3		2
BPA2		1
BPA1		1
BA1R		1
BA1L		1
BA3		1
SG12		2

NO.	PART.	Qty.
BR2-1		1
BR2-2		1
BR2-3		1
BP10		2
BP7		2
SG14		4
SG2		4
BD1-1		1
BD1-2		1
BD1-3		1
BA2R		1
BA2L		1
AA4		1
AS1		1
SG9		3
M01		2
M03-6L		1
M03-7		1
M04		1
SG10		1
SG101		1
SG102		1
SG8		2
Drill		1
Z410		52
Z420		98
ZW413		14


● Use spatula  (part"SG8") for easier insertion of panel into profile

● Please ensure the panels are all installed on position before screwing


● Please be mindful of the screw size used during installation;
using screws that are too long may damage the shed.




Floor Assembly

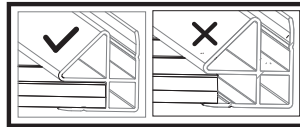

● Fully fit the panel inside the profile

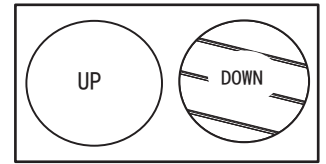

● Note: The crease line of the floor must be underneath

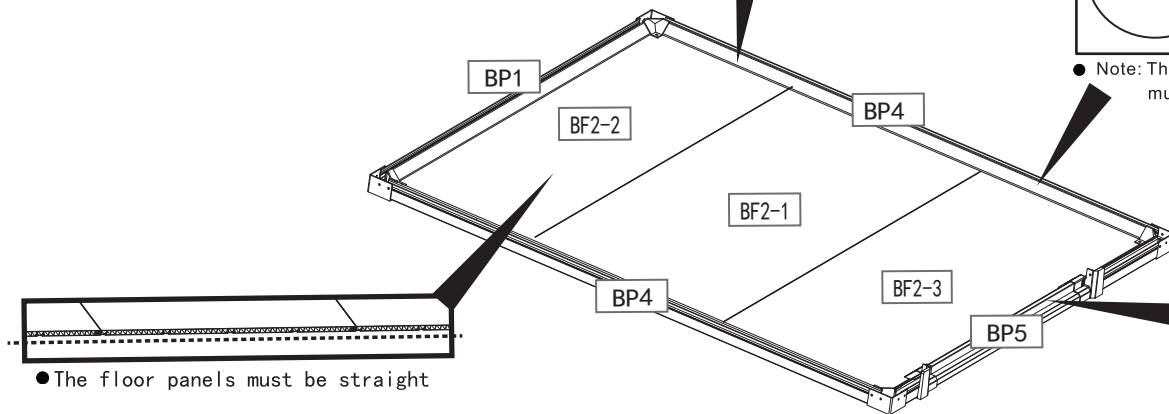


● The floor panels must be straight



● Use spatula (part "SG8") for easier insertion of panel into profile



Step 1

1-1

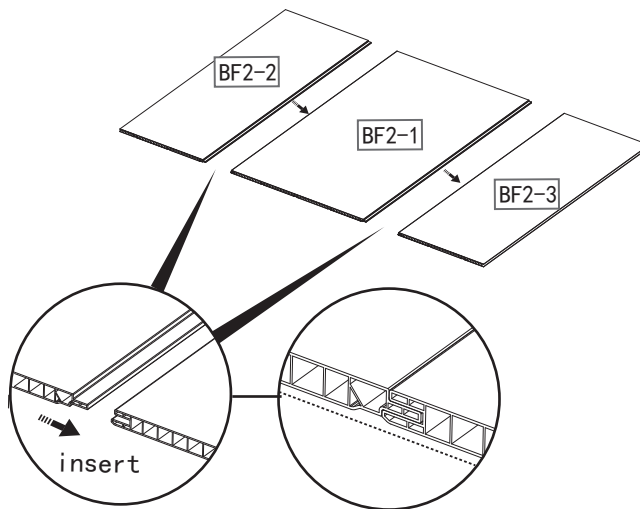


SG6 2 PC	BF2-1 1 PC
BP4 2 PC	BF2-2 1 PC
BP1 1 PC	BF2-3 1 PC

1-2

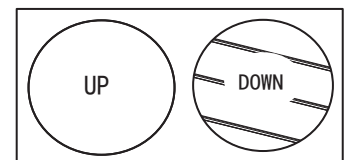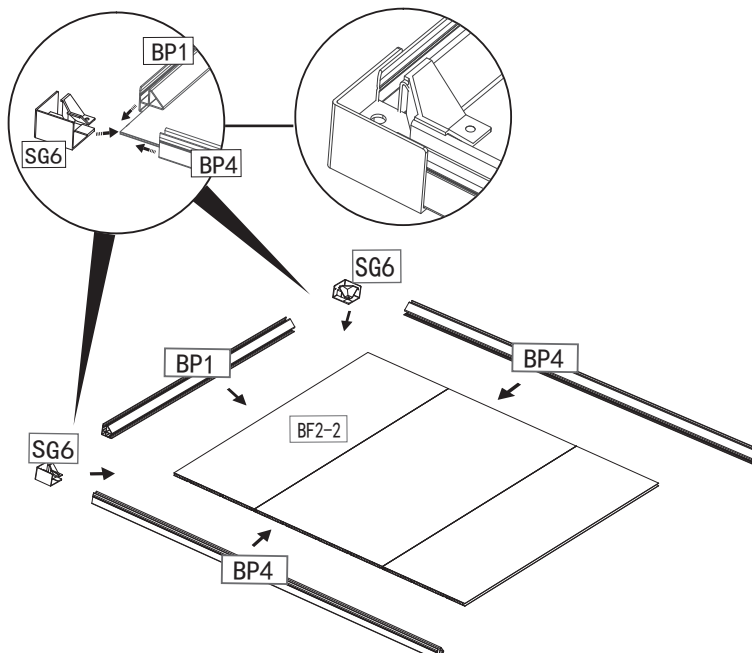

● Grain should be down

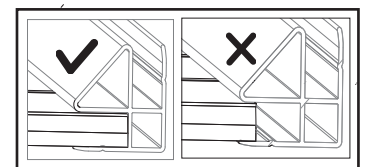


● Fully fit the panel inside the profile




● Panels are in a straight line after installation.

Step 2


2-1

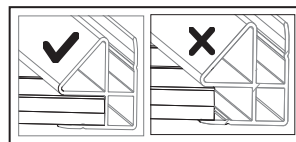


● Fully fit the panel inside the profile

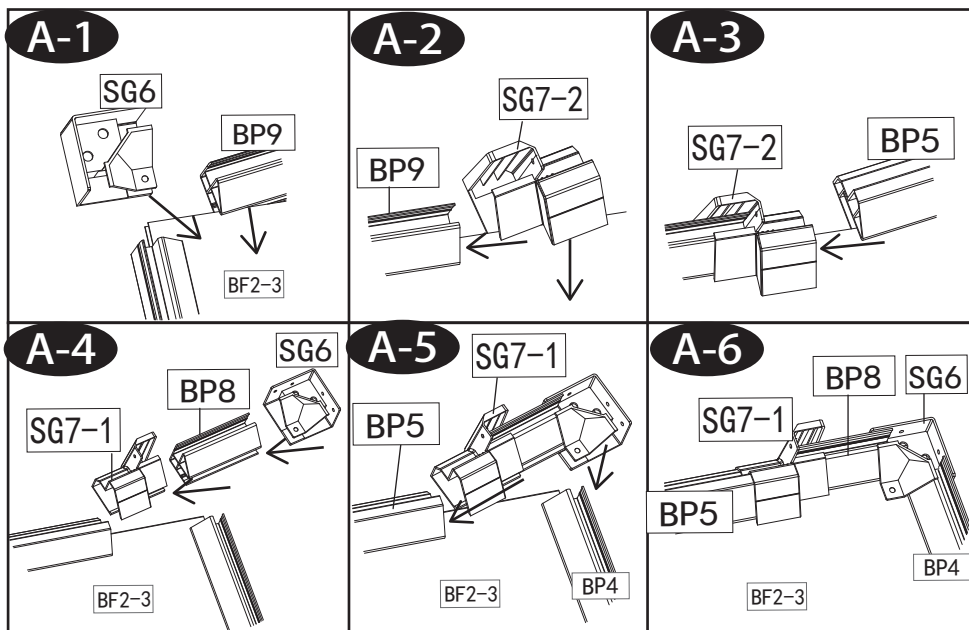

SG6 2 PC	BP9 1 PC
SG7-2 1 PC	BP5 1 PC
	SG7-1 1 PC
	BP8 1 PC

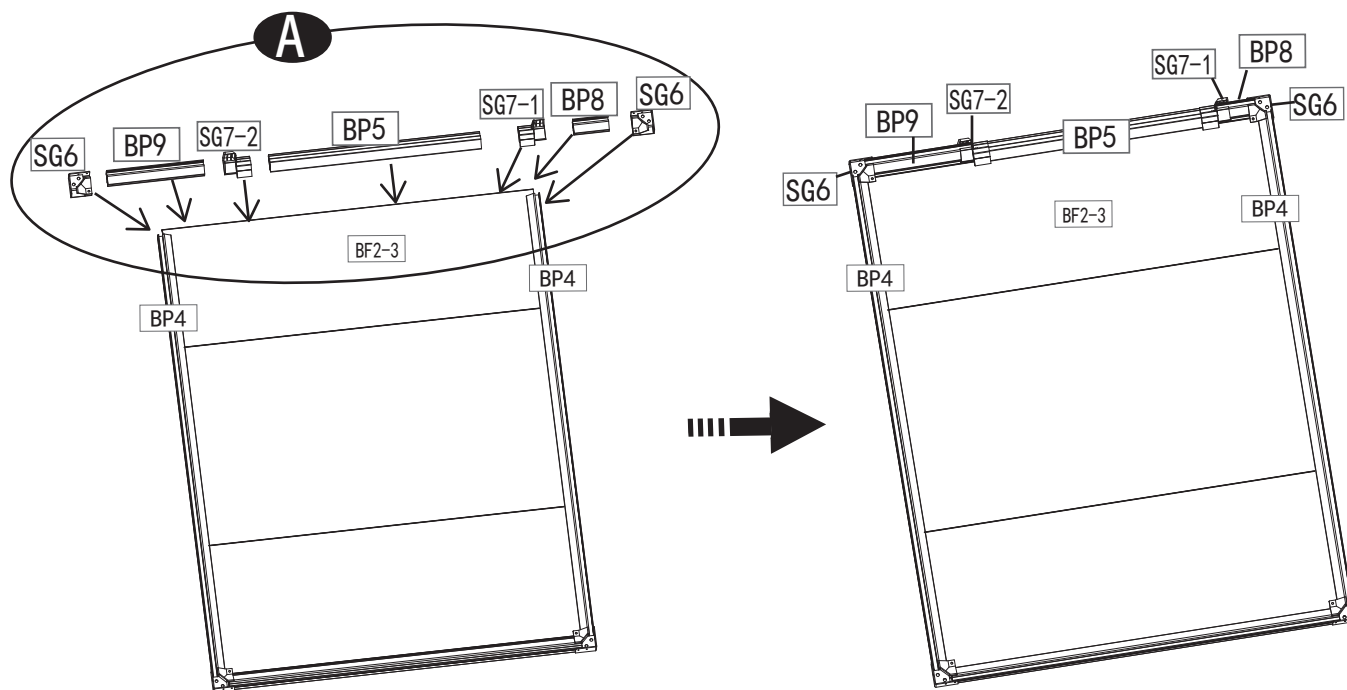


2-2

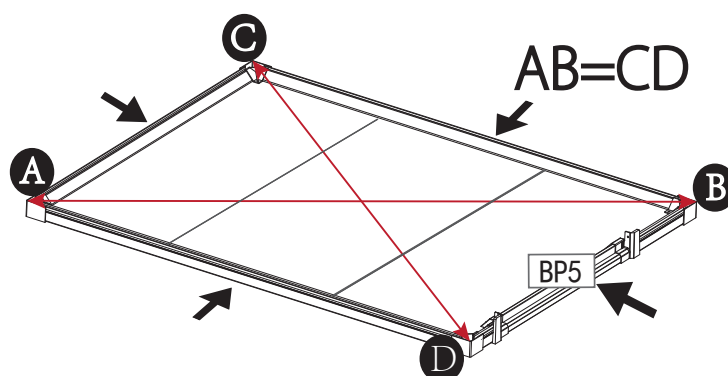

Step 3

3-1

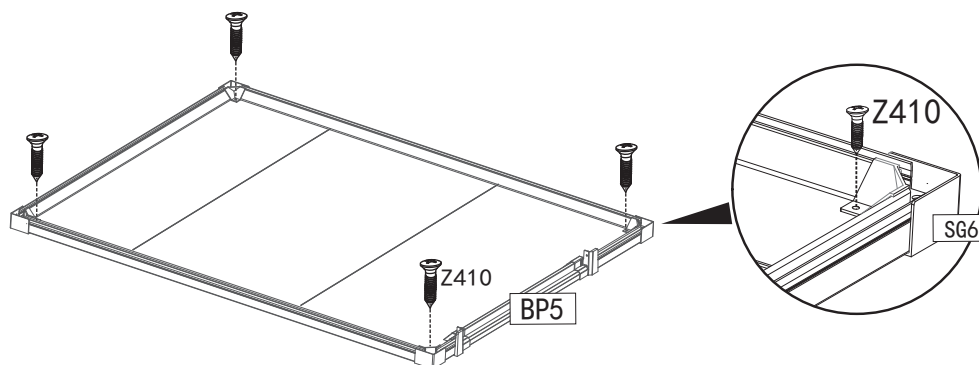

Z410




4 PC

Z420




21 PC


3-2

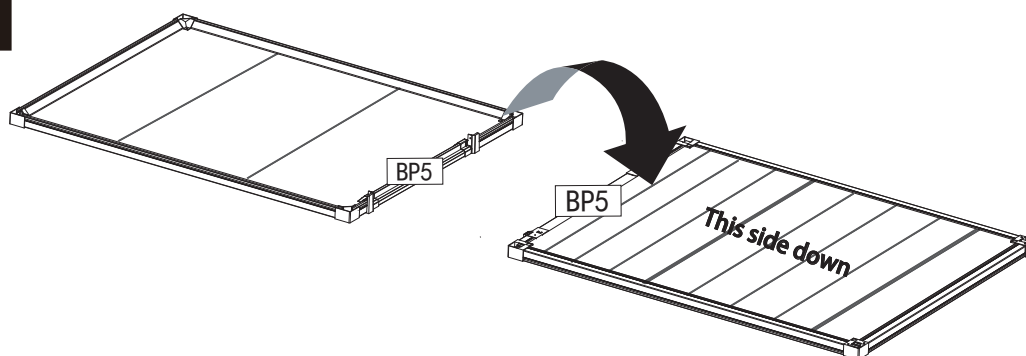




3-3

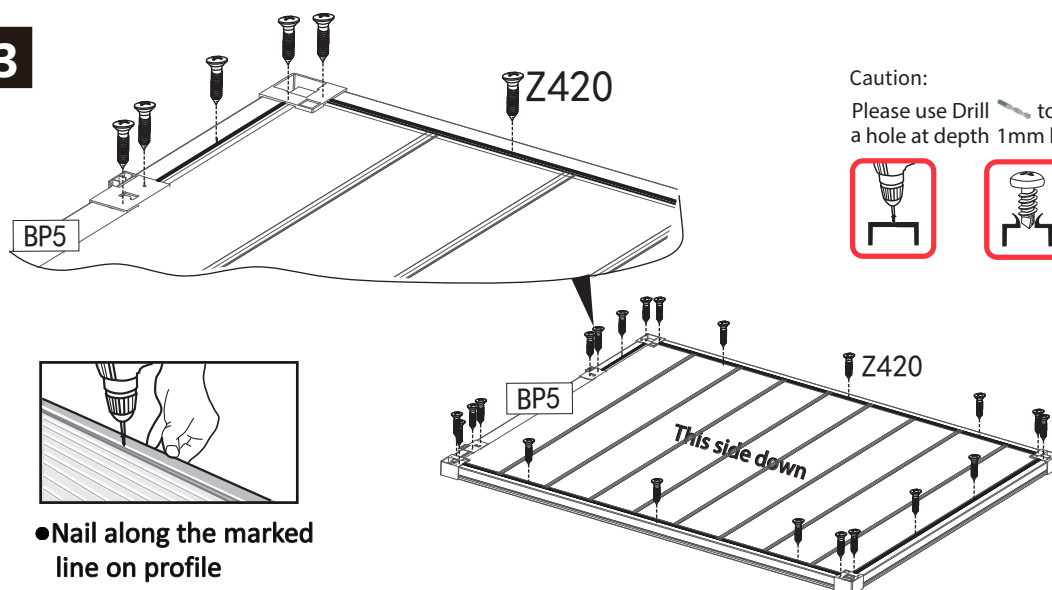

3-4


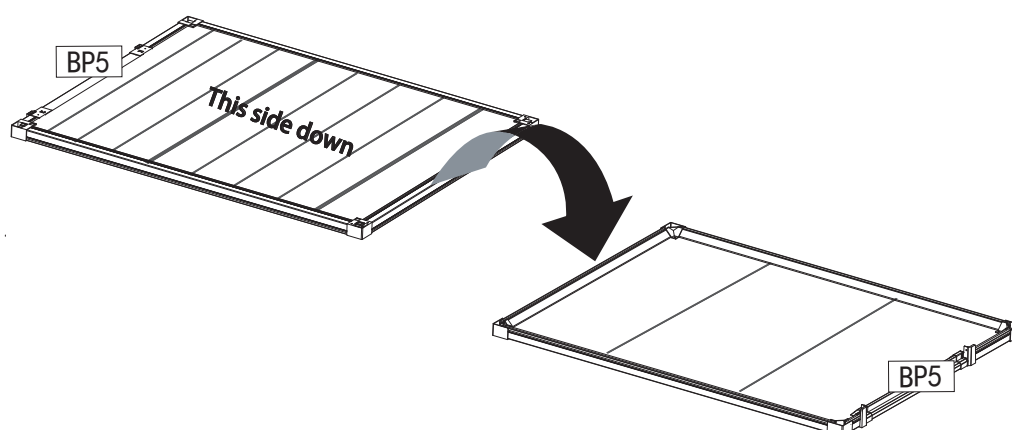


WALL ASSEMBLY

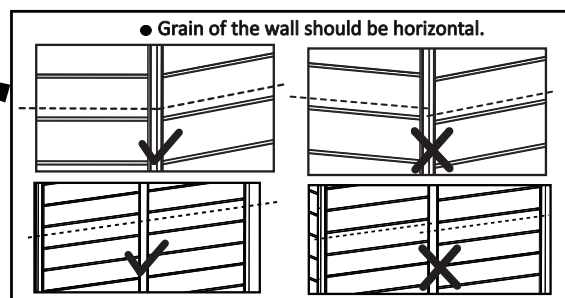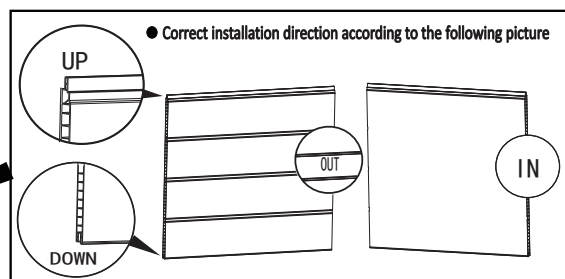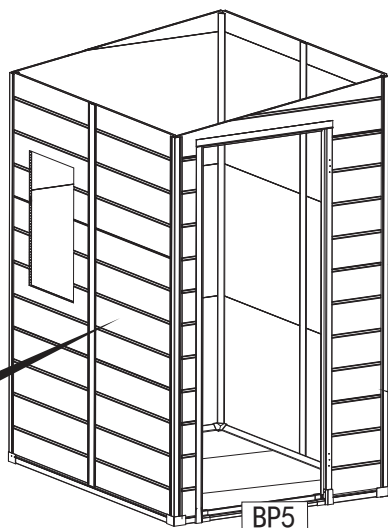


- Use spatula (part "SG8") for easier insertion of panel into profile.

Step 4

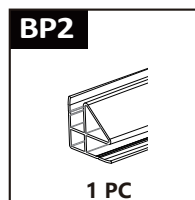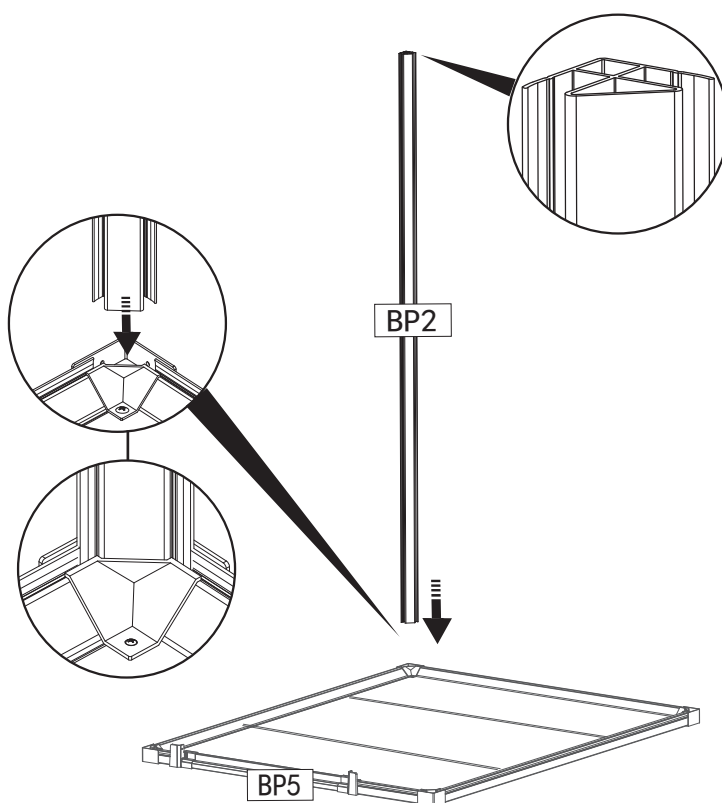


Step 5

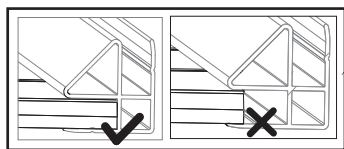


● Fully fit the panel inside the profile

5-1

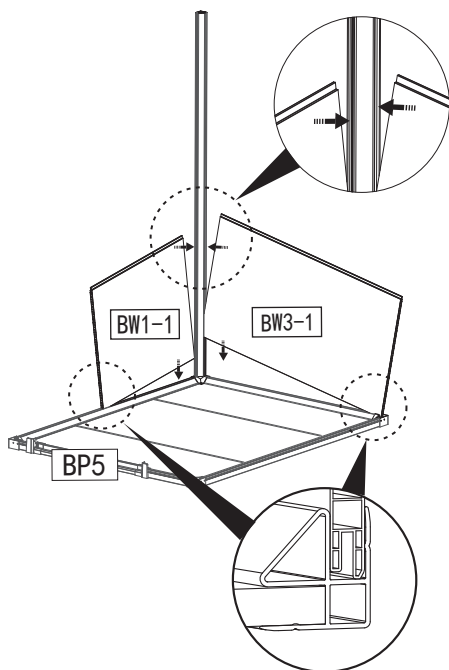

5-2

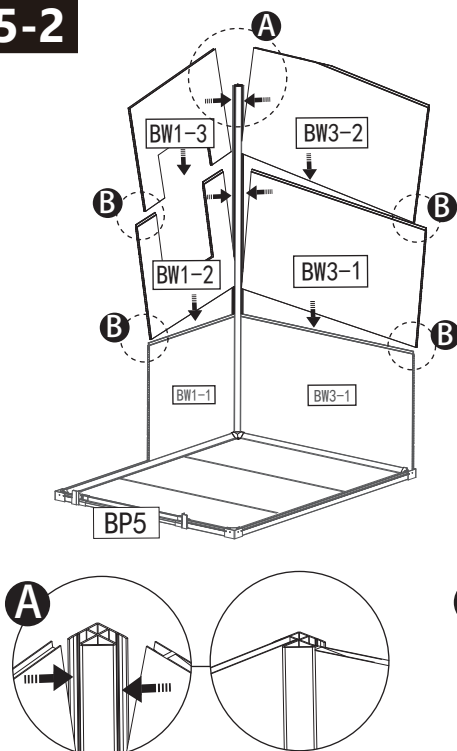


BW3-2



1 PC

BW1-1




1 PC

SG8



BW3-1



2 PC

BW1-2




1 PC

BW1-3




1 PC

Step 6

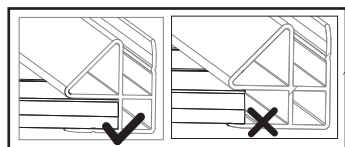


● Fully fit the panel inside the profile


6-1

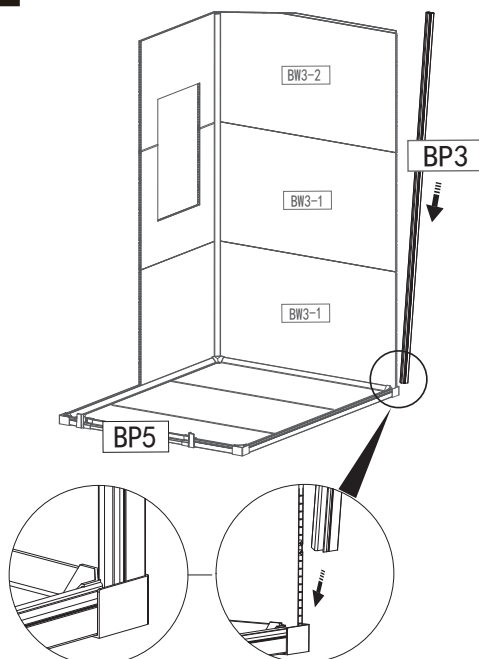

6-2

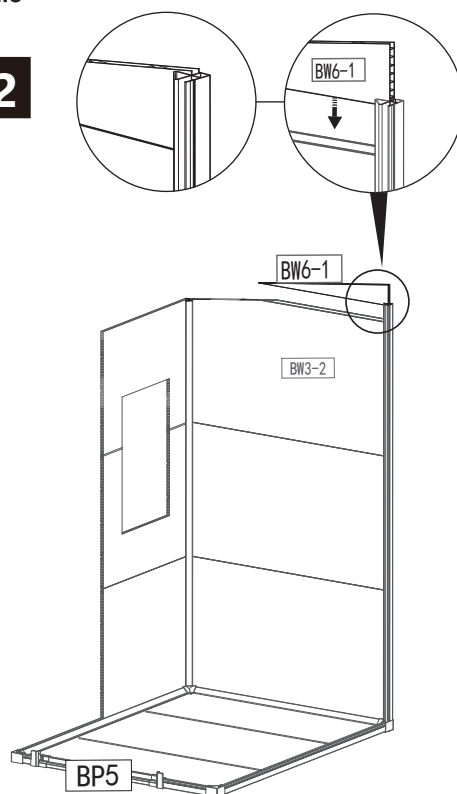

BP3



1 PC

BW6-1




1 PC

SG8




Step 7

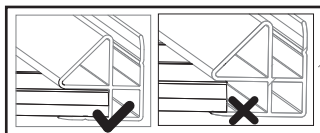


● Fully fit the panel inside the profile

7-1

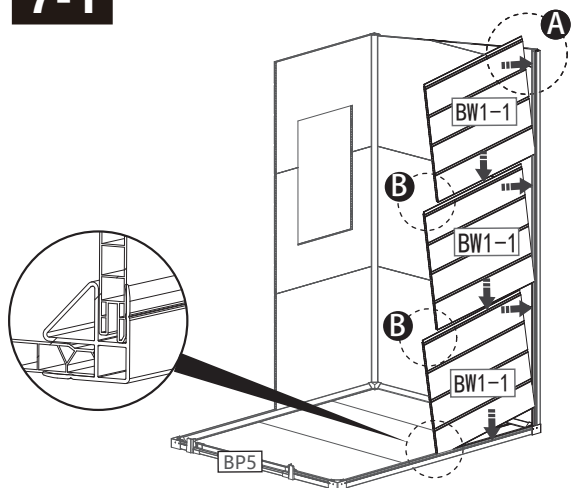

7-2

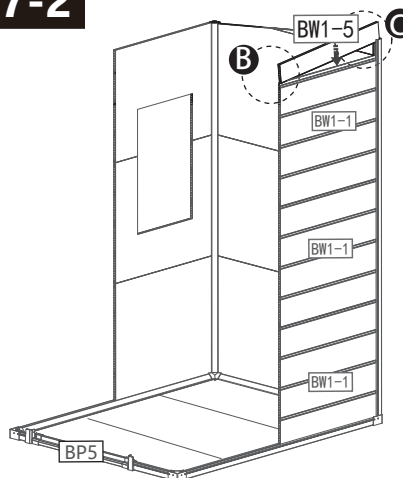

BW1-5









1 PC

BW1-1




3 PC

SG8

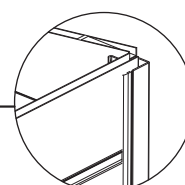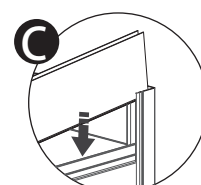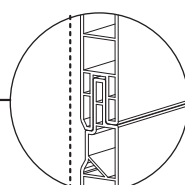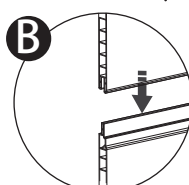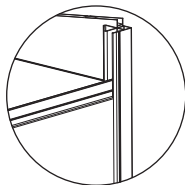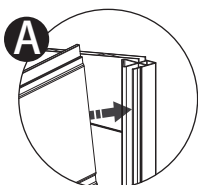


Step 8

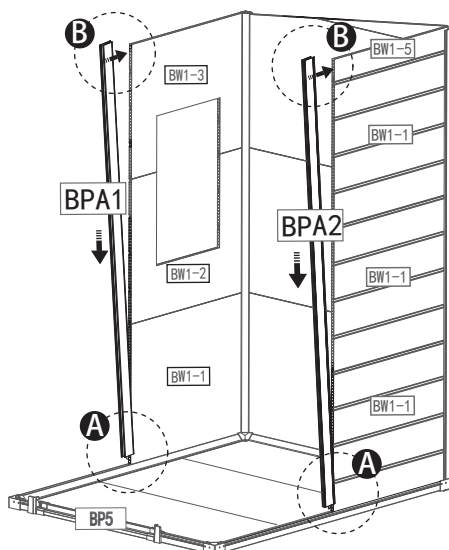

SG8




BPA1








1 PC

BPA2








1 PC

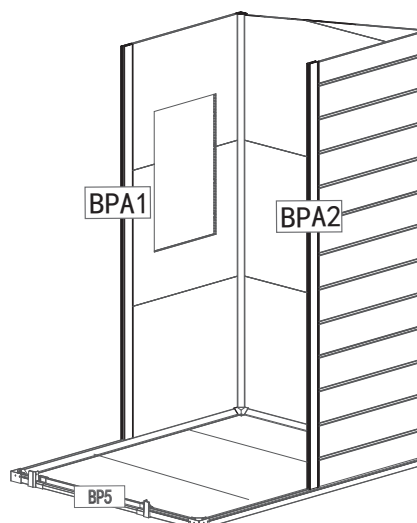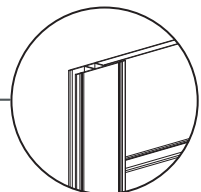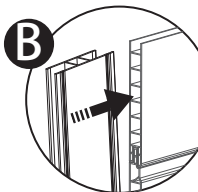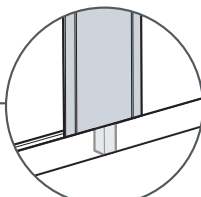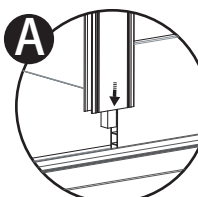


Step 9

9-1

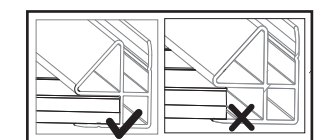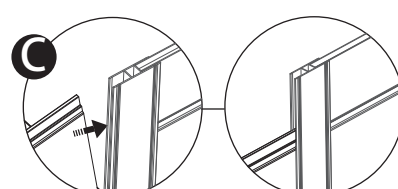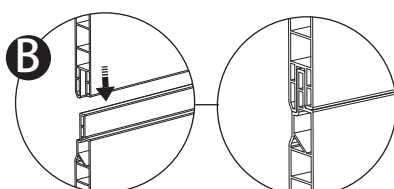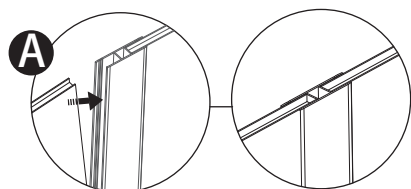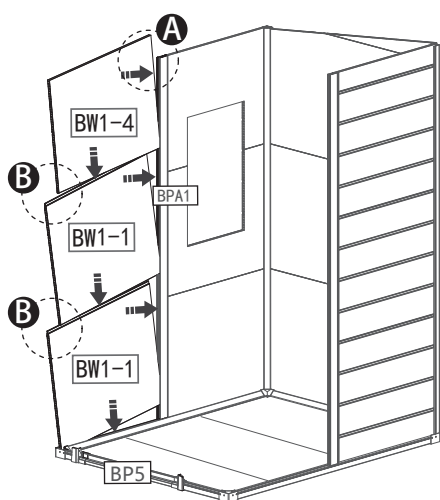

● Fully fit the panel inside the profile

9-2

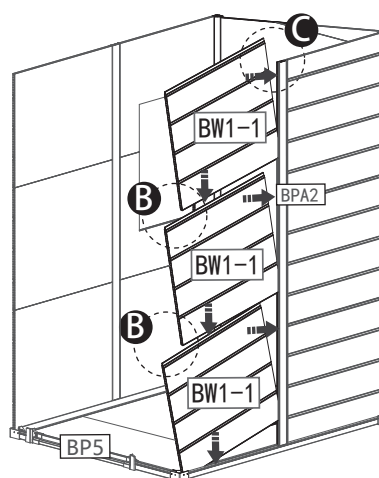

BW1-1



5 PC

BW1-4







1 PC

SG8




Step 10

10-1

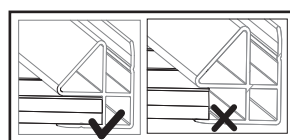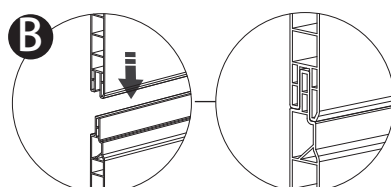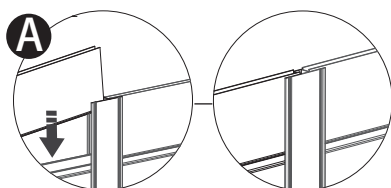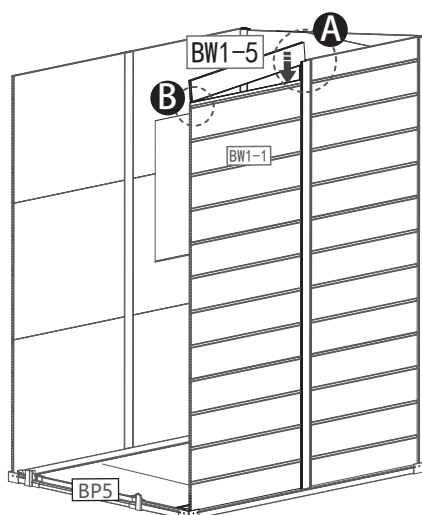

● Fully fit the panel inside the profile

10-2

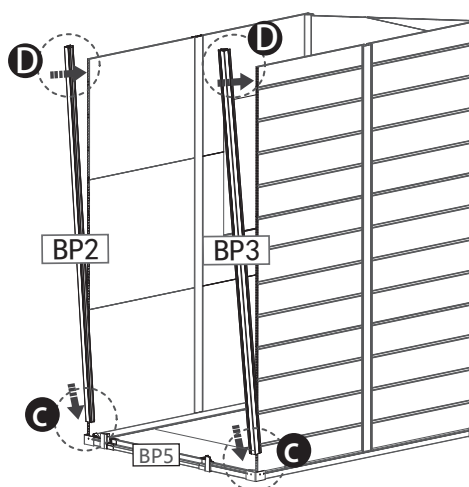

SG8



BW1-5




1 PC

BP2





1 PC


BP3




1 PC

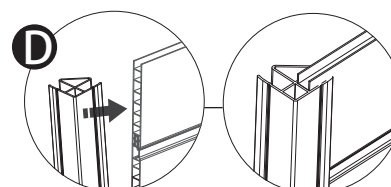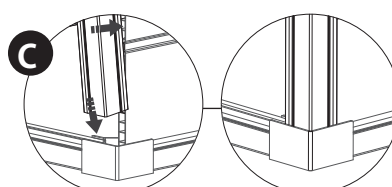





Step 11

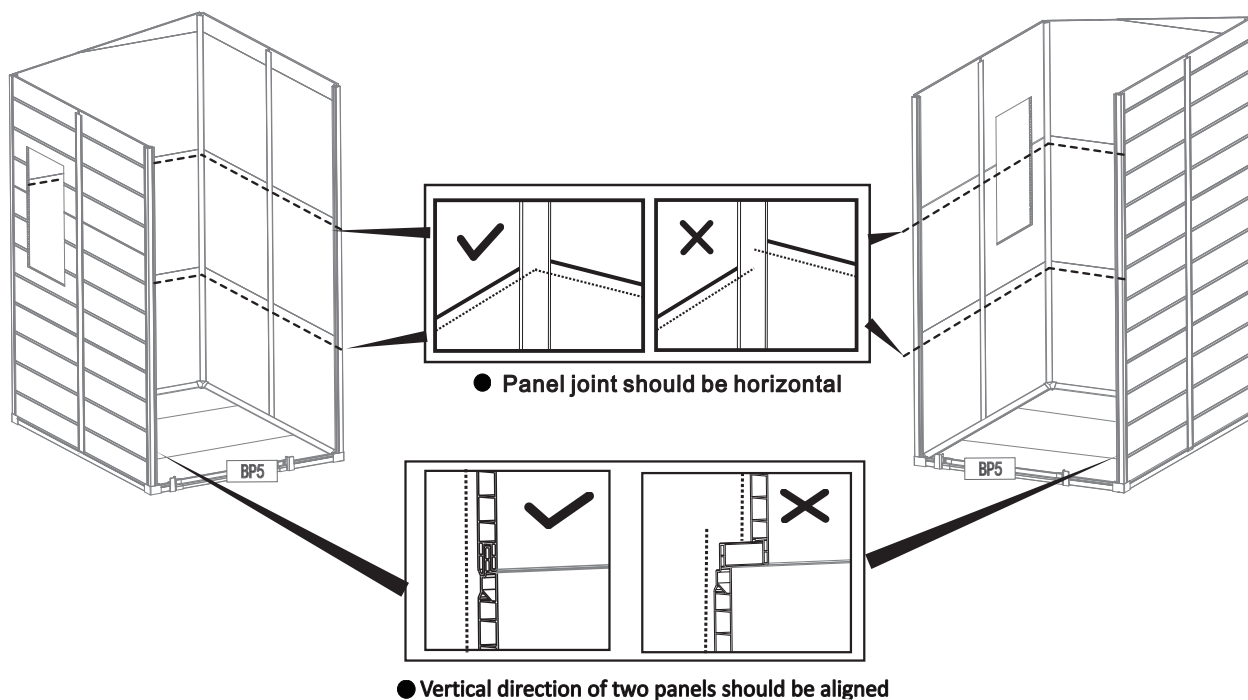


Step 12

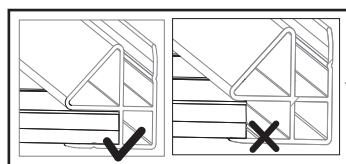


● Fully fit the panel inside the profile

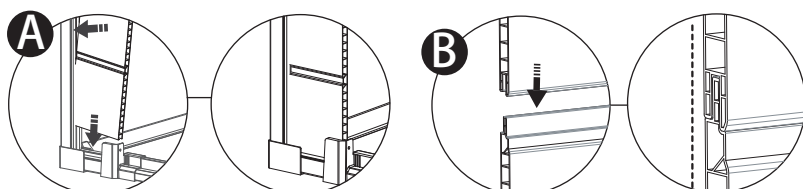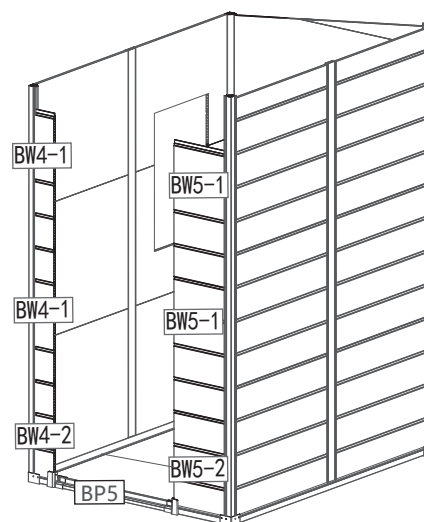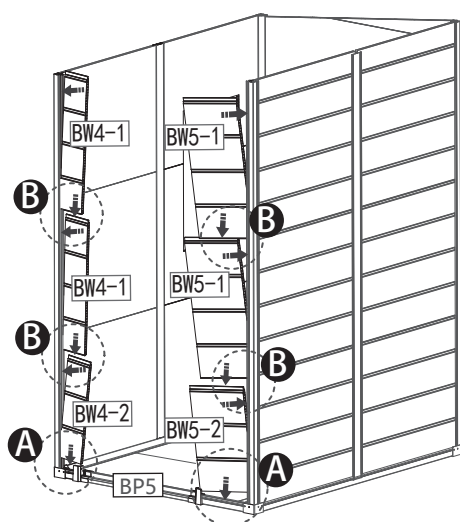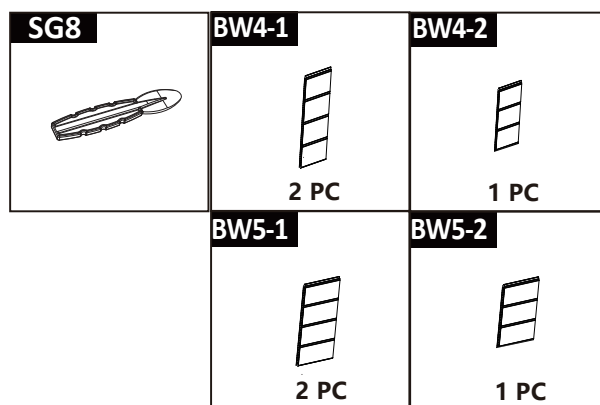

Step 13

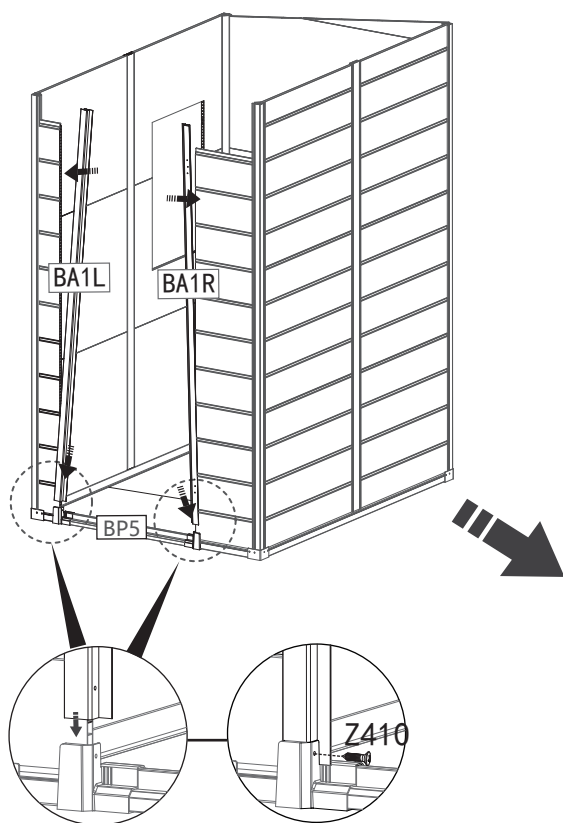


BA1L



1 PC

BA1R



1 PC


Z410



2 PC

Step 14

14-1

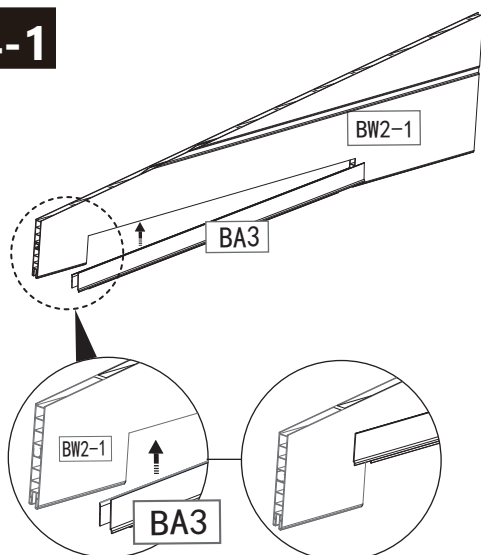

14-2

BA3






1 PC

BW2-1




1 PC

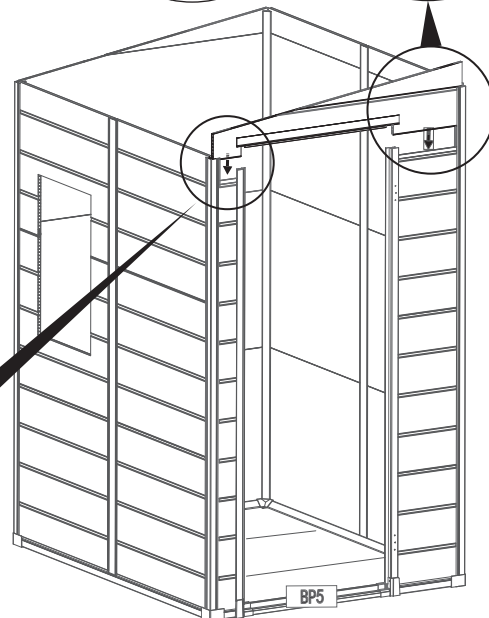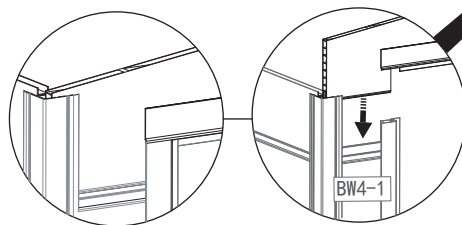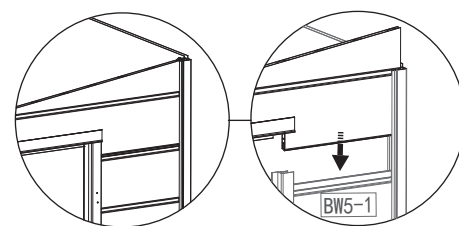


Step 15



Determine seam alignment.

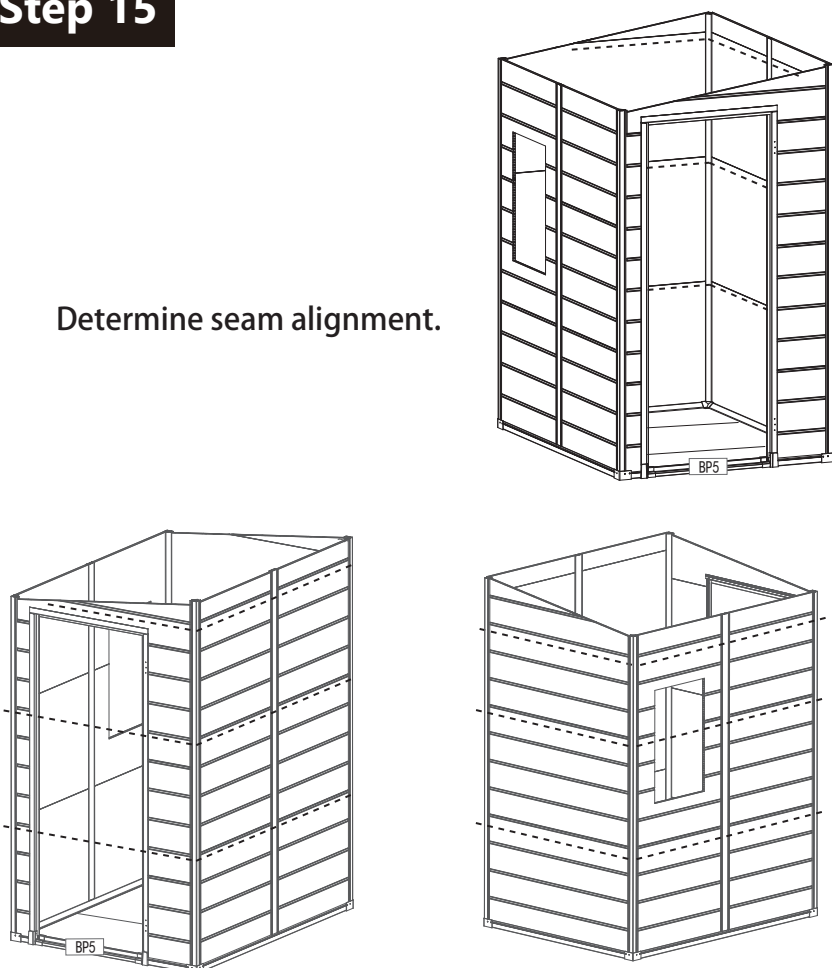

● Make sure $AB=CD$

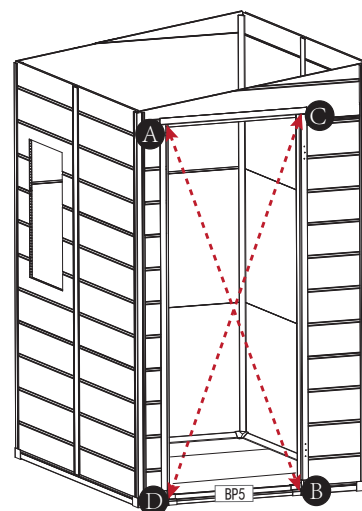

Step 16

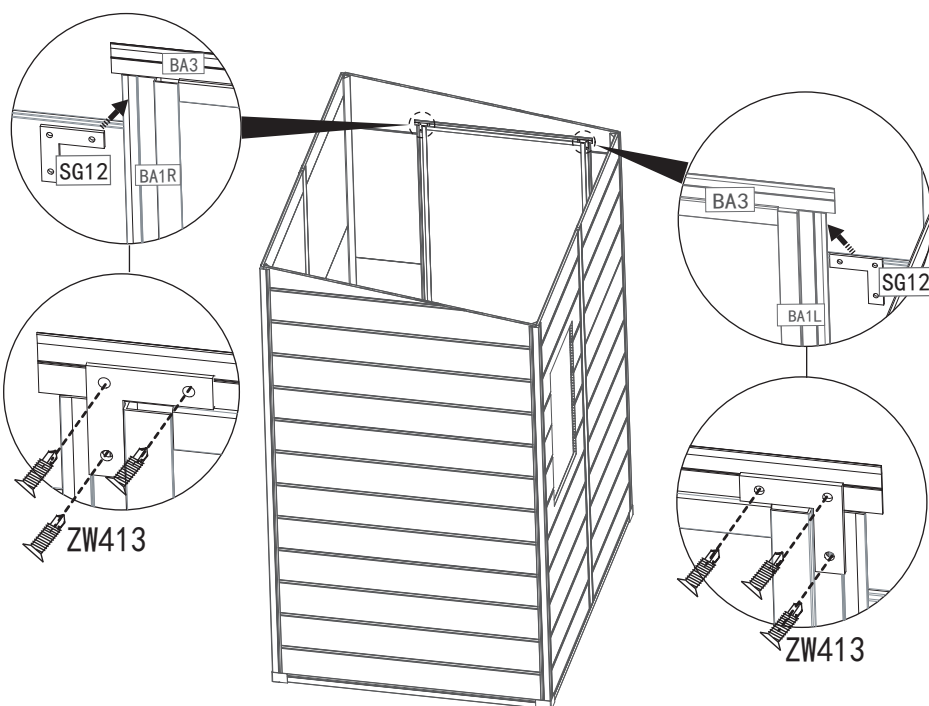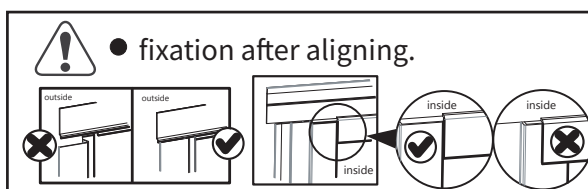

SG12



2 PC

ZW413




6 PC

Step 17

- Fully fit the panel inside the profile
Screw along the marked lines in profiles

Caution:

Please use Drill to predrill a hole at depth 1mm before screw.

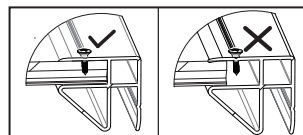


- Nail along the marked line on profile.

Z420



40 PC

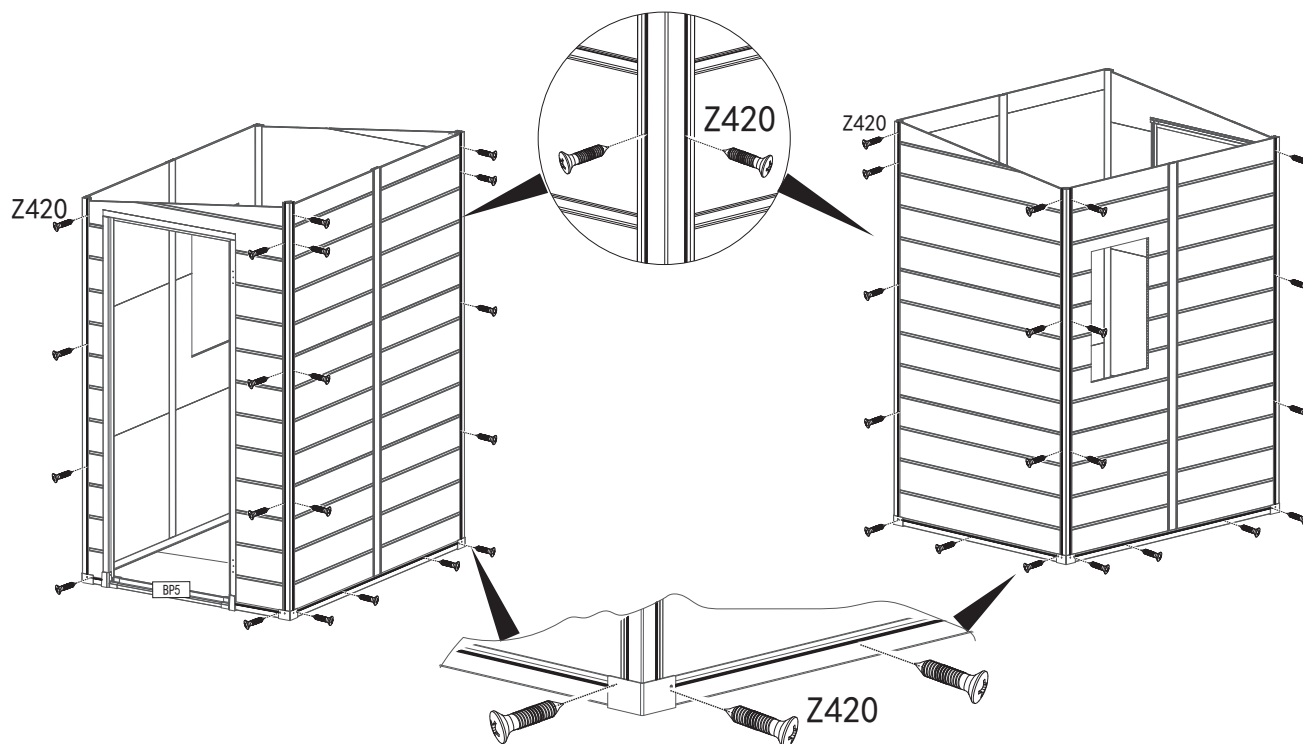


Step 18

Z410





4 PC

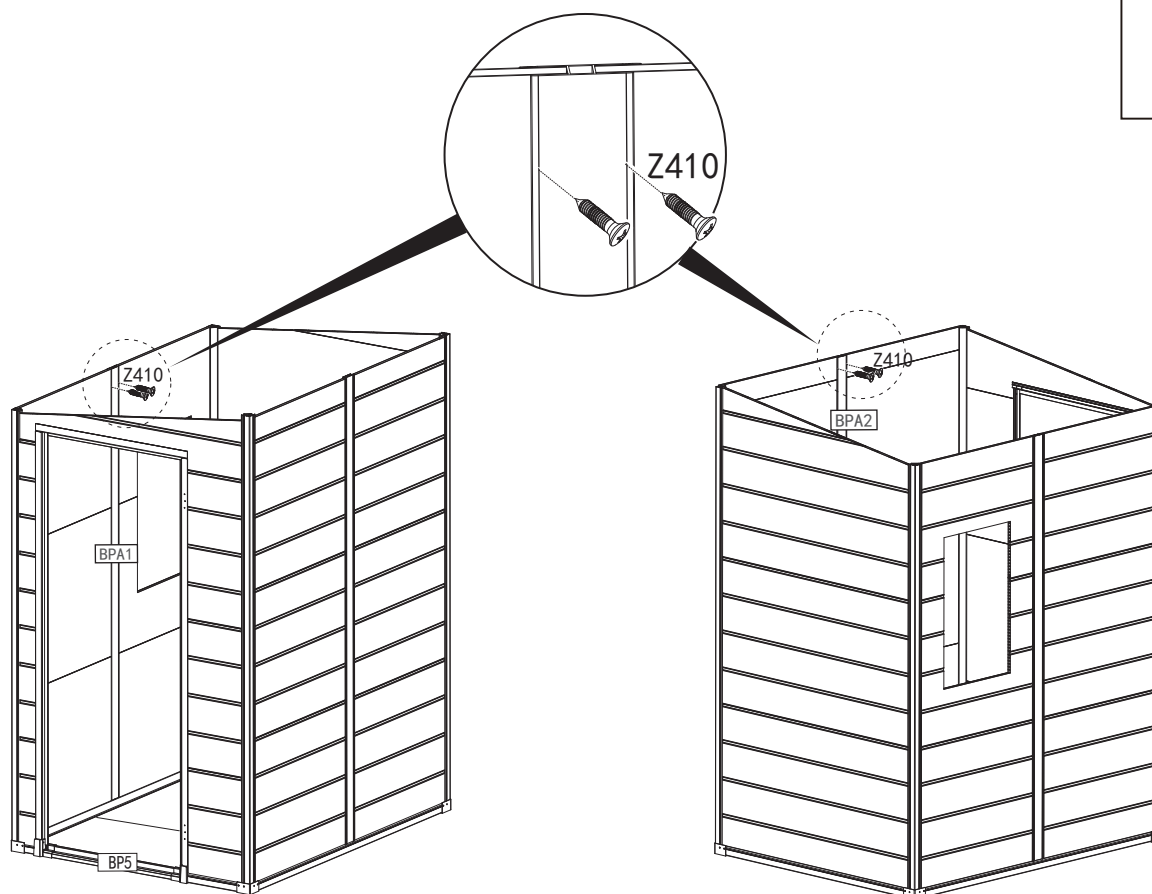


ROOF PARTS



● The floor panels must be straight

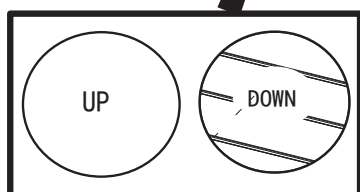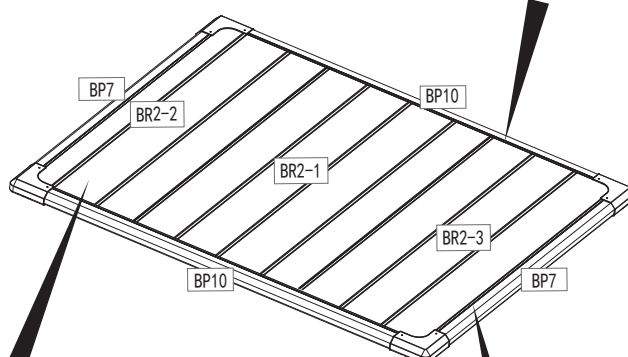


● Note: The crease line of the floor must be underneath

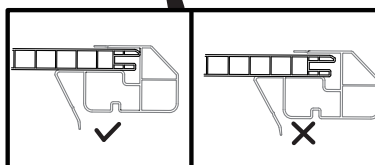


● Fully fit the panel inside the profile

Step 19

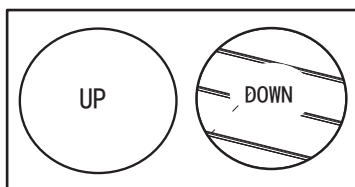

● Note: The crease line of the floor must be underneath

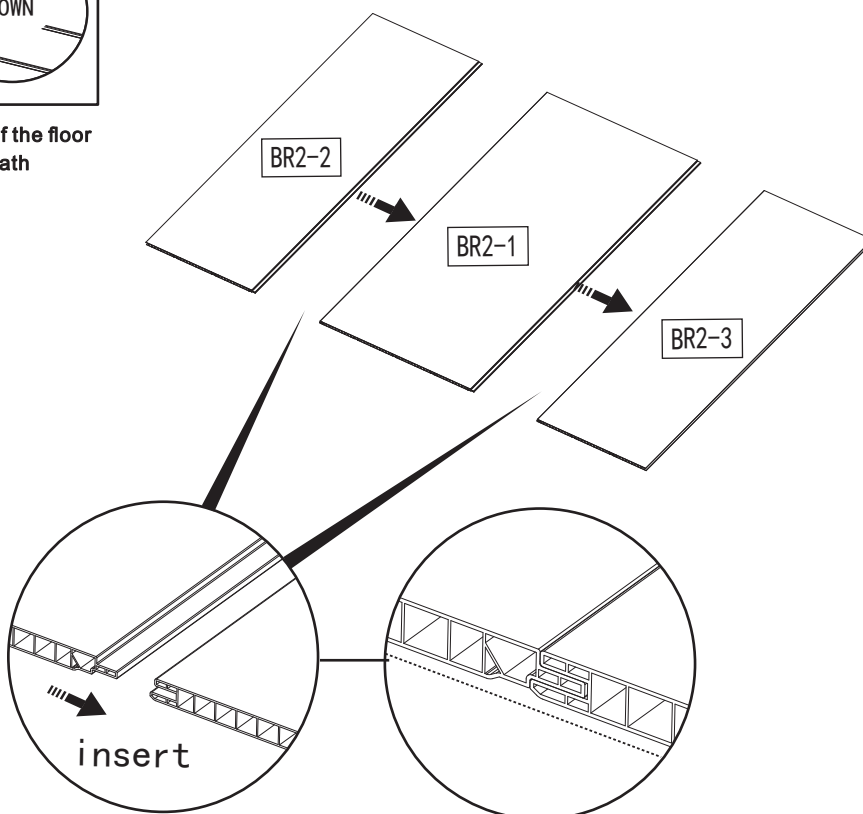


BR2-1



1 PC

BR2-2



1 PC

BR2-3




1 PC

SG8




Step 20

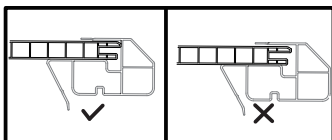

● Fully fit the panel inside the profile

SG8

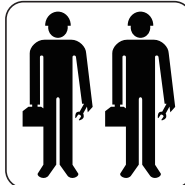

BP10




2 PC

BP7




2 PC

SG2




4 PC

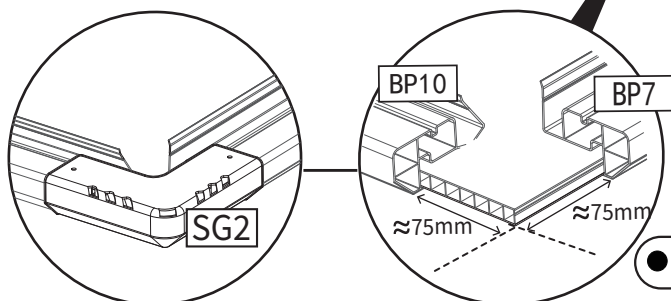

● Please note the measurement dimensions

Step 21



● Ensure AB equal to CD before nailing.

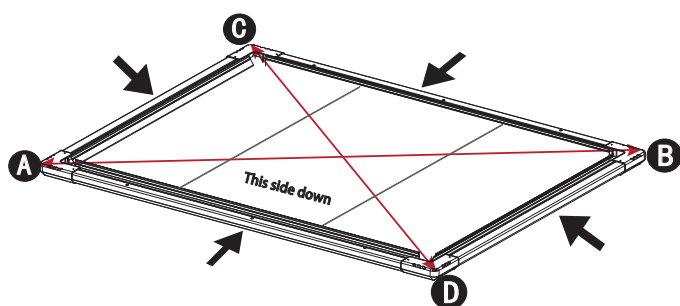


Z410





8 PC

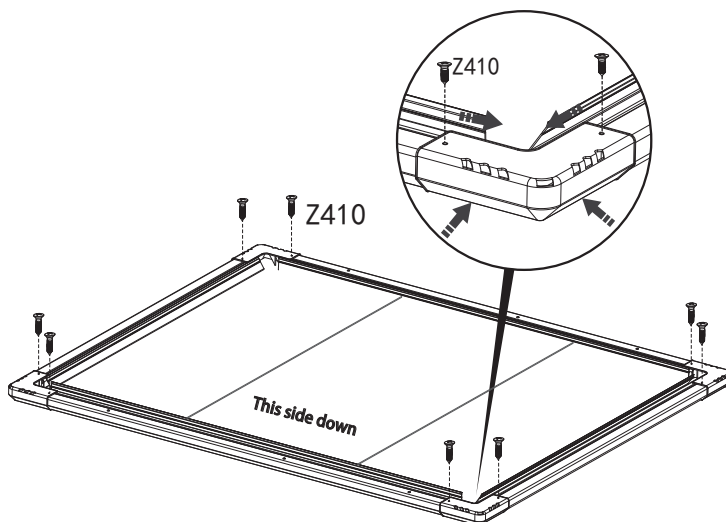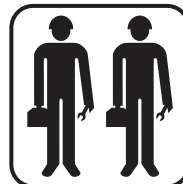

Step 22

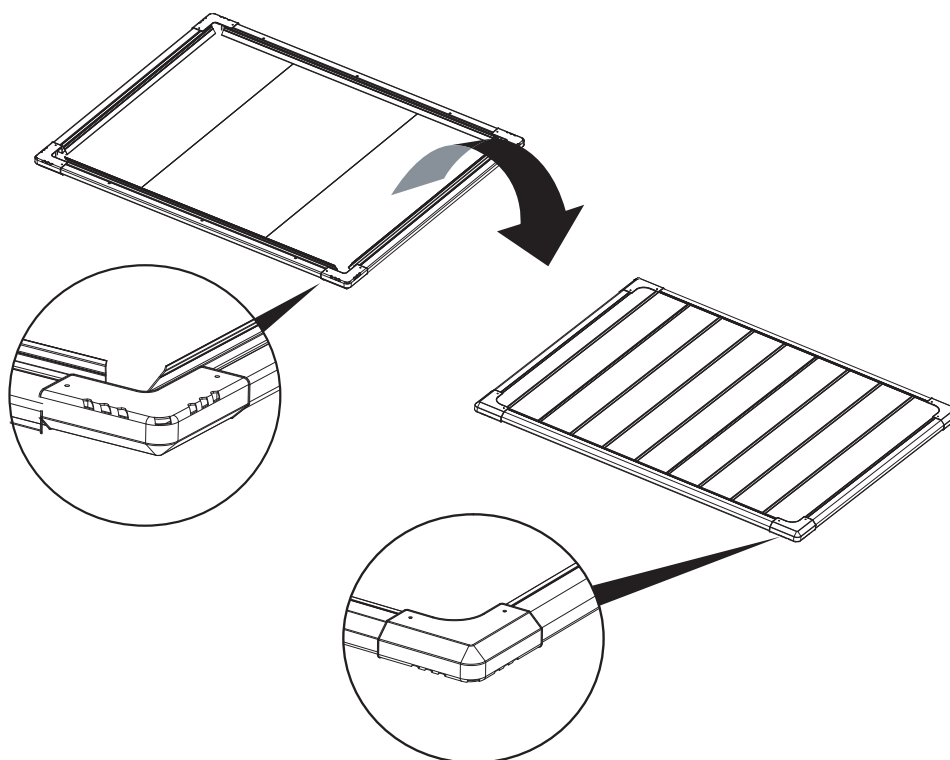

Step 23

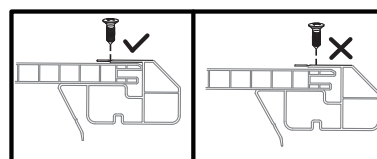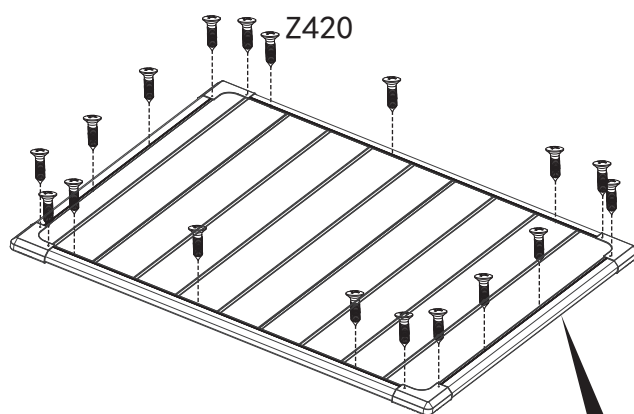


● Nail along the marked line on profile.

Z420



18 PC




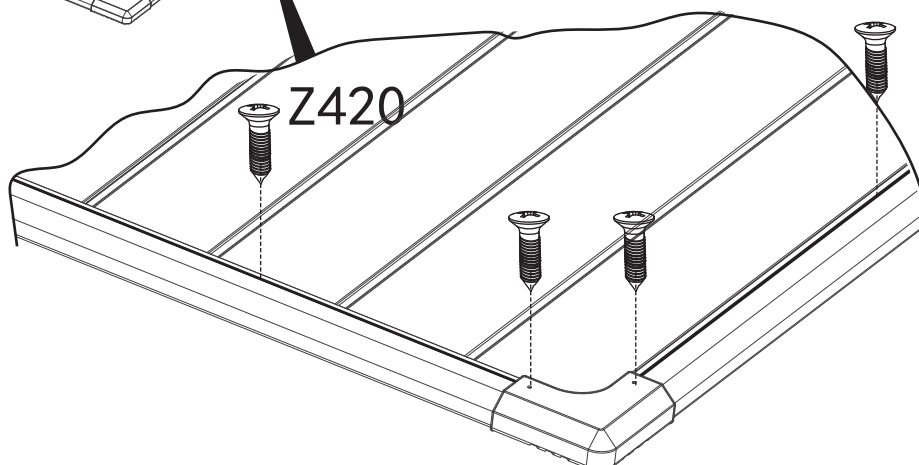


Caution:

Please use Drill  to predrill a hole at depth 1mm before screw.



Step 24

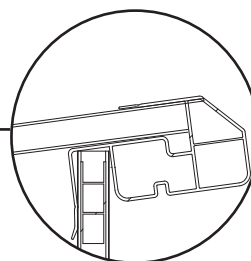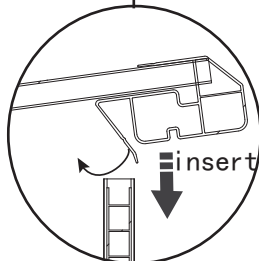
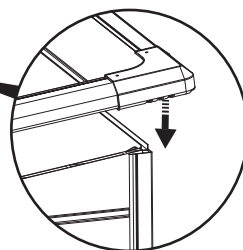
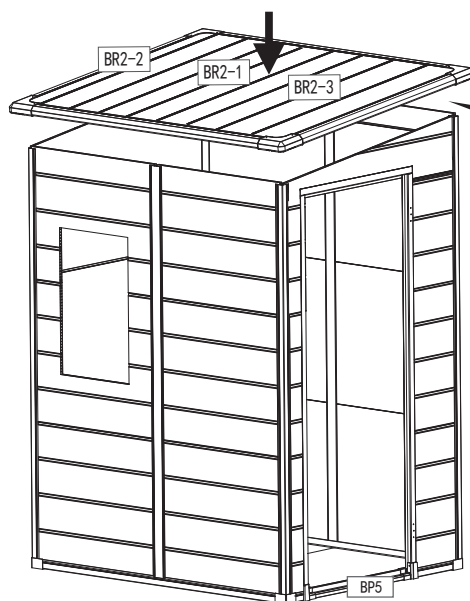


- Fully fit the panel inside the profile


SG8



- Ensure fully fit the panels inside the profiles of the roof, using the spatula according to the following picture.

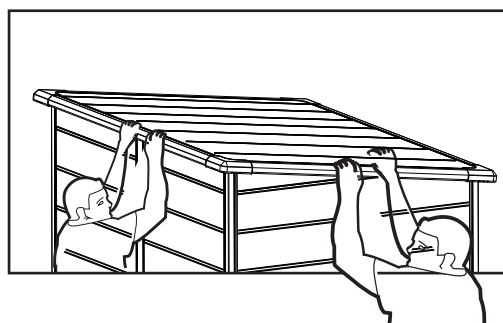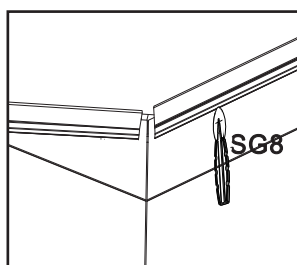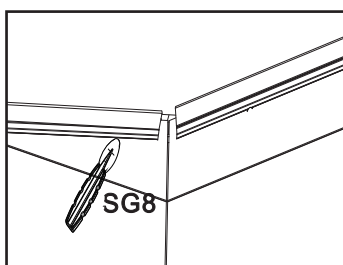


- Please note the nailing direction.

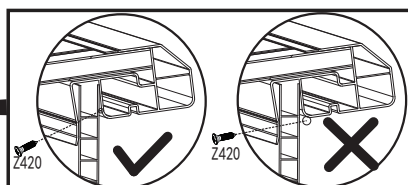

Z420



14 PC

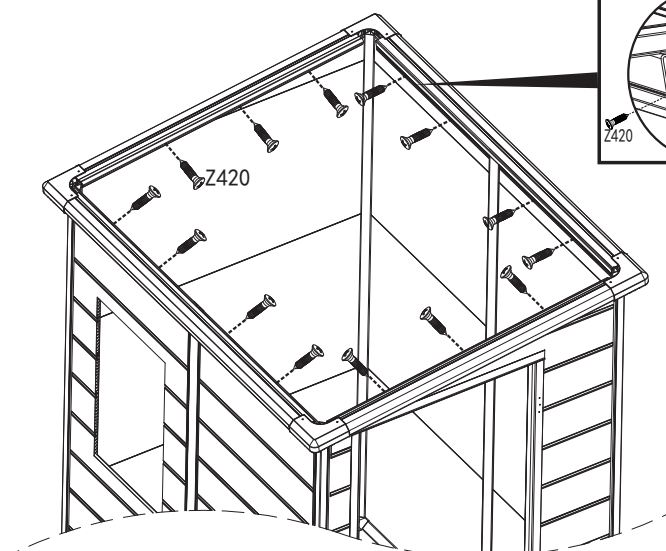

Caution:
Please use Drill to predrill
a hole at depth 1mm before screw.




Step 25

Window section



SG10




1 PC

SG101



1 PC

SG102





1 PC

Z410




16 PC

How the Windows look when they are installed

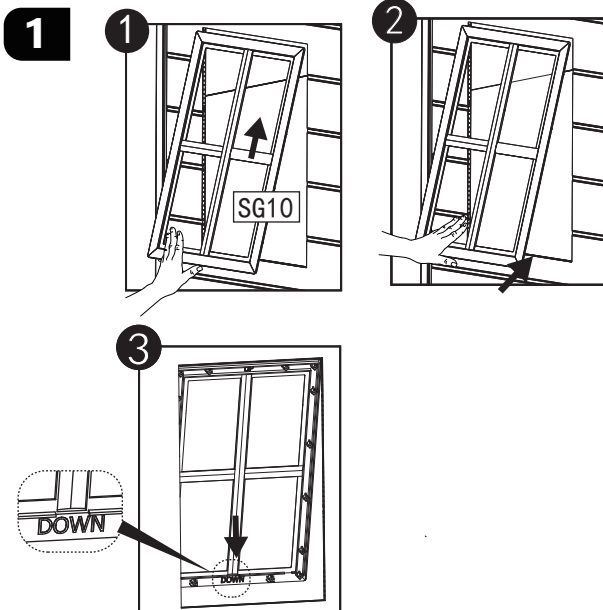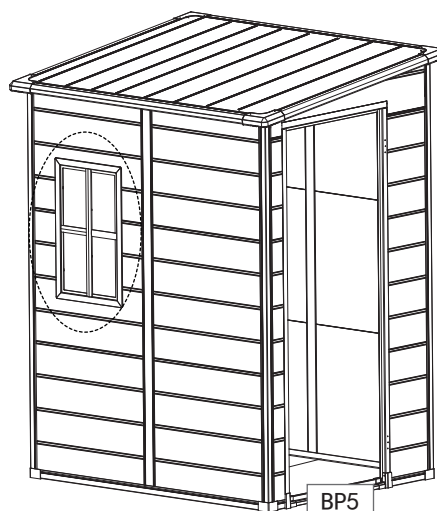


2



- Remove the film before fixing SG101

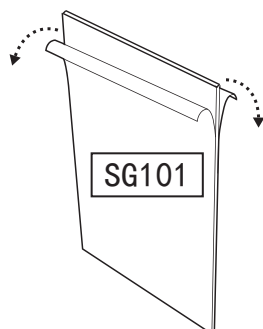


- Two persons are needed for this step, to press SG10 from outside and inside.

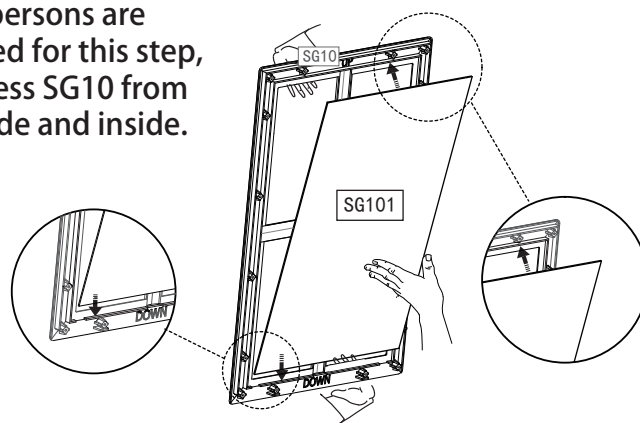


3

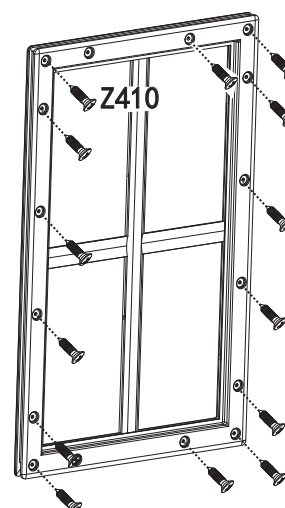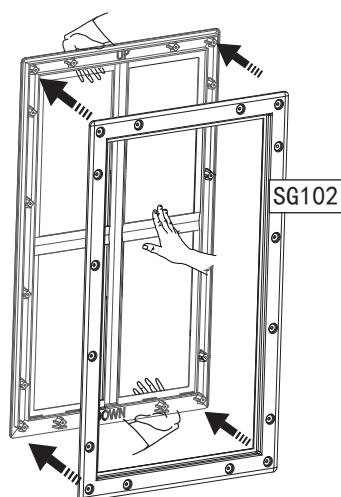

DOOR SECTION

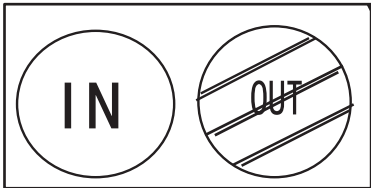


The stripes should be outside




The boards must be straight

Door mount this is above

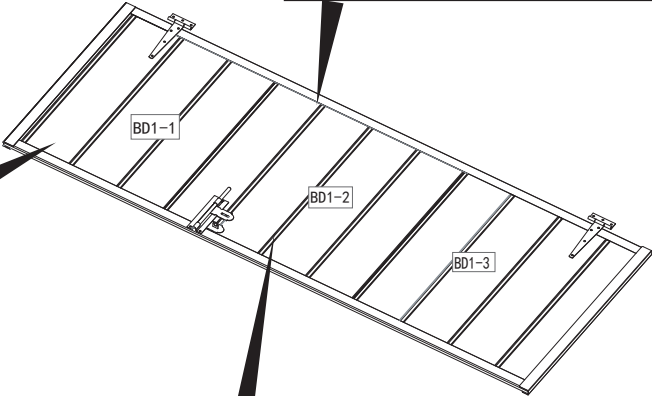



Step 26

26-1

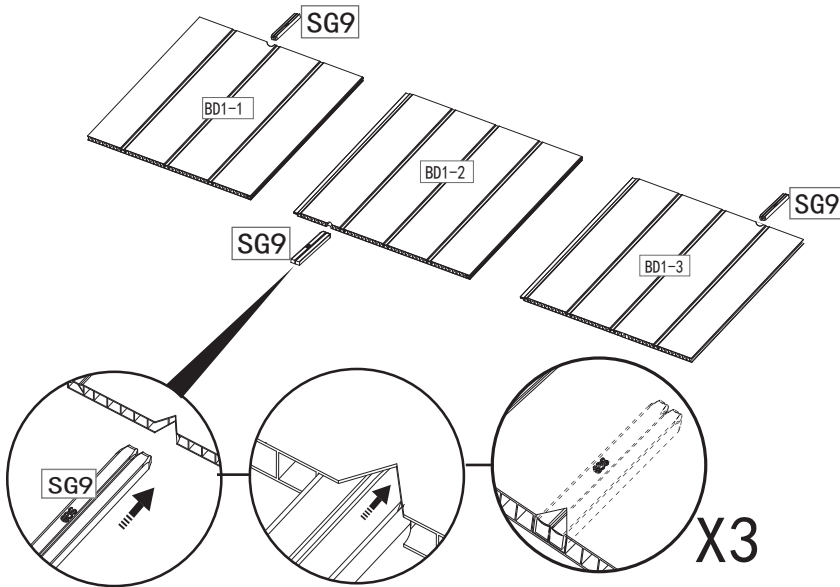


BD1-1		1 PC
BD1-2		1 PC
BD1-3		1 PC
SG9		3 PC

26-2

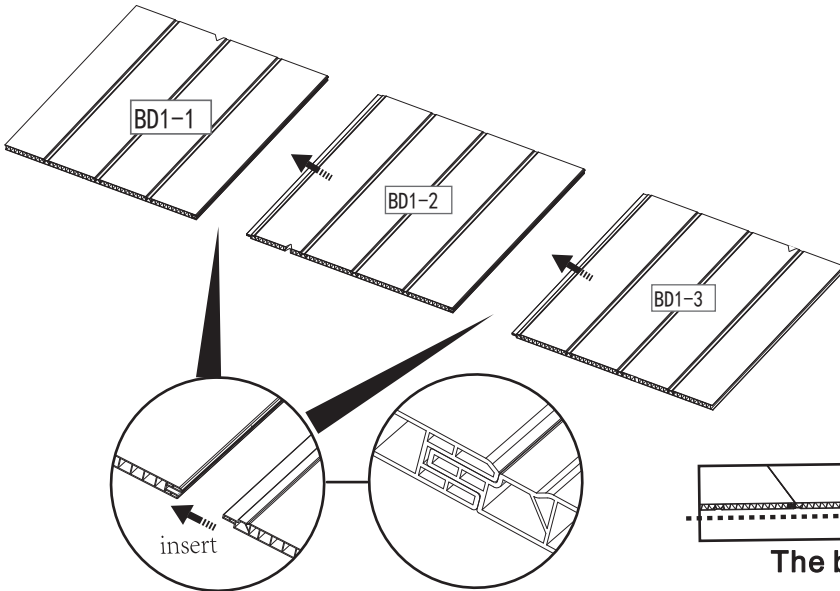


The boards must be straight

Step 27

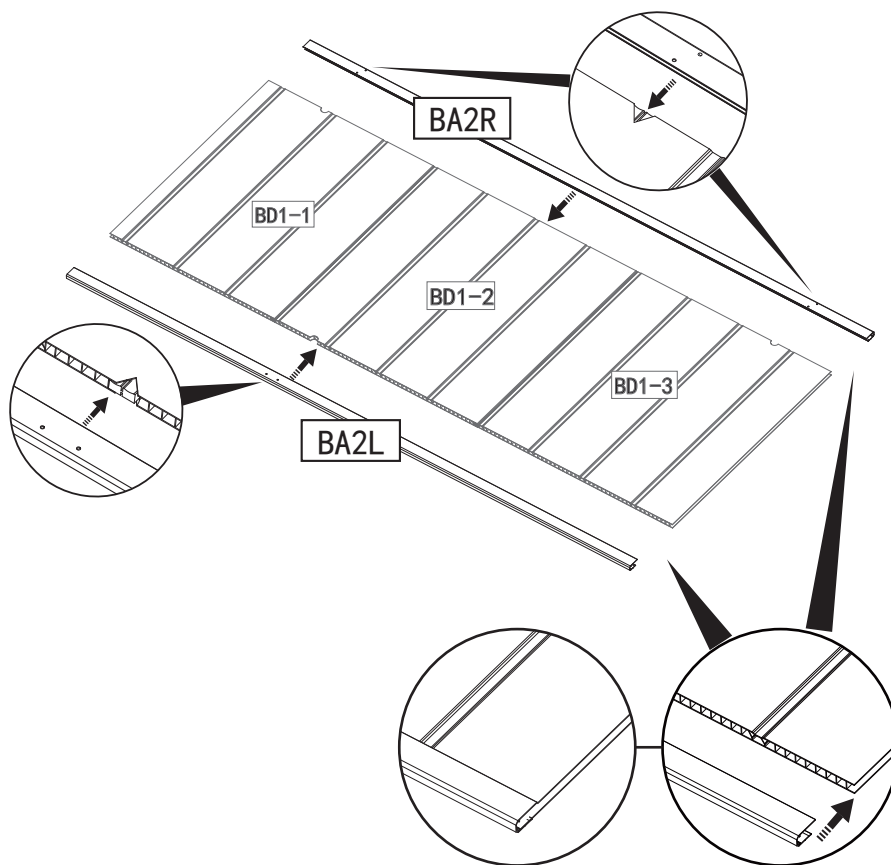


BA2R



1 PC


BA2L




1 PC




SG8



Step 28

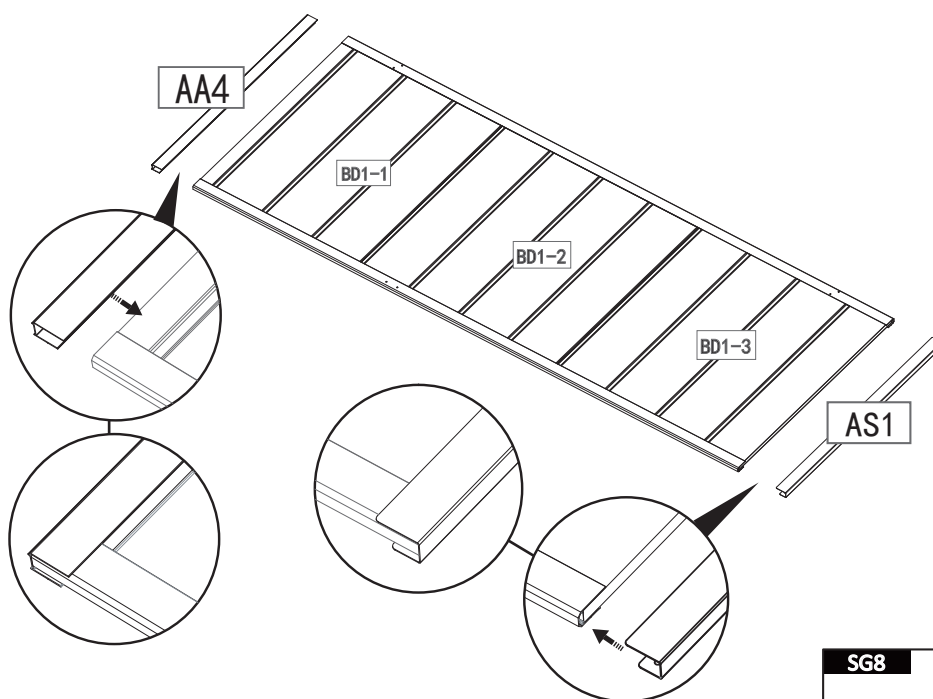


AA4

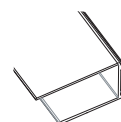

1 PC

AS1




1 PC

SG8



Step 29

29-1

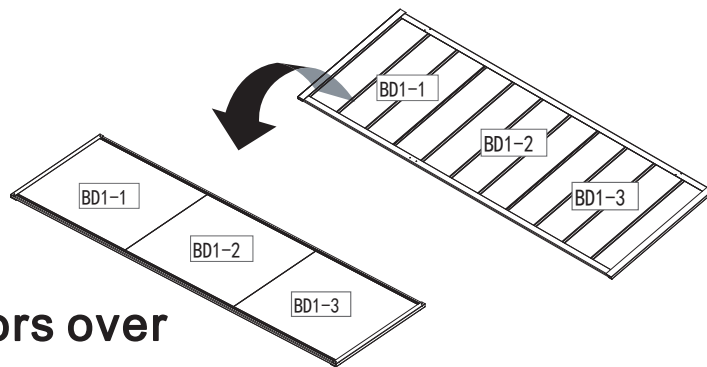


ZW413




6 PC

Turn the doors over


29-2

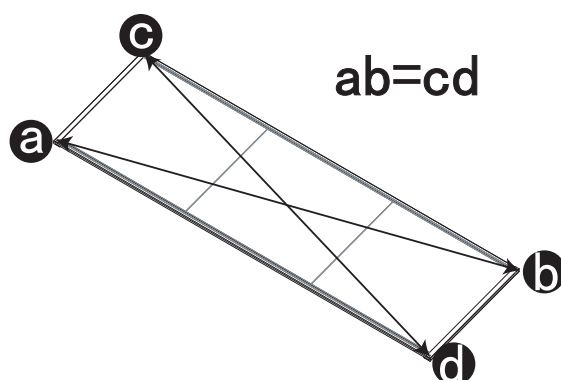

29-3


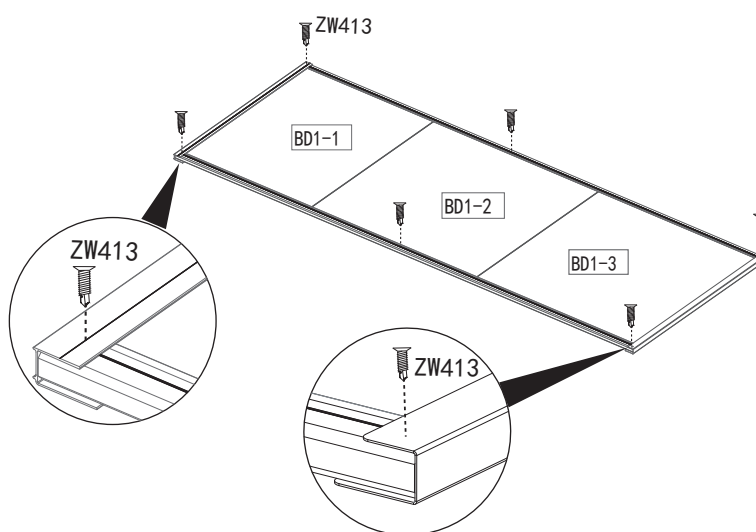


29-4

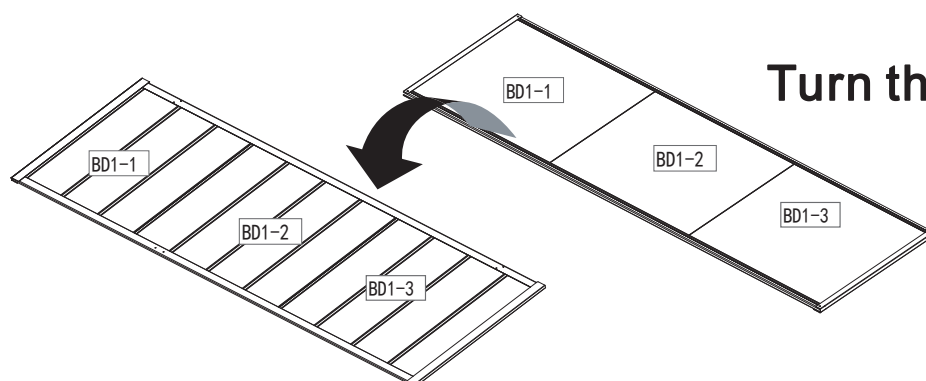



Turn the doors over

Step 30

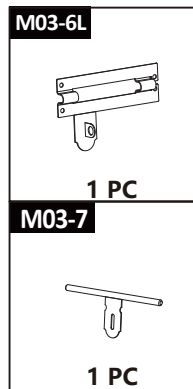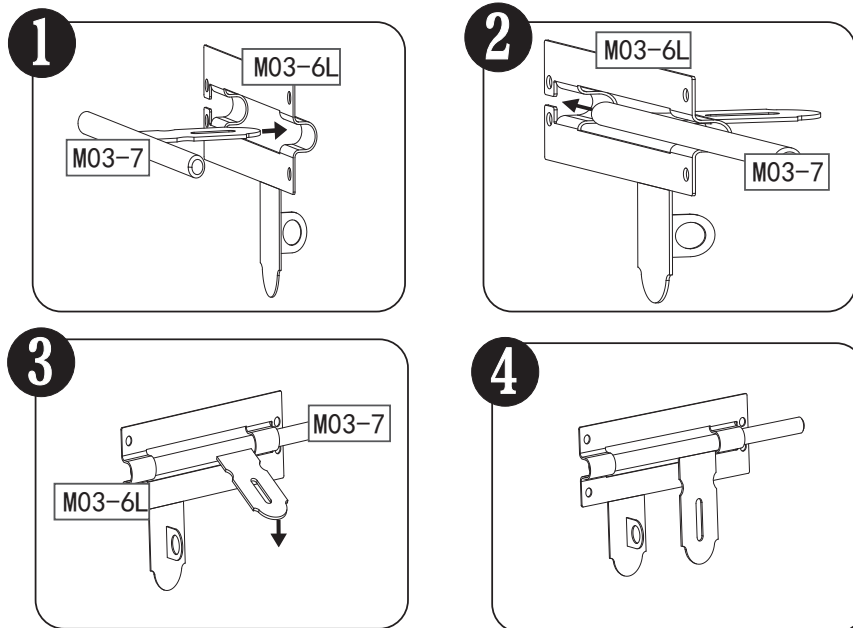

Step 31

Don't fasten the screws in this step, to adjust the positions of doors

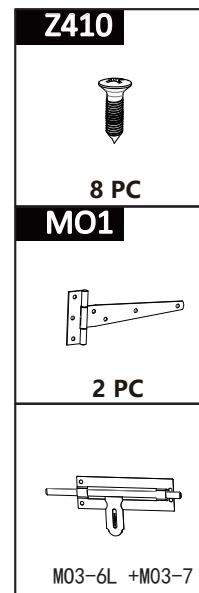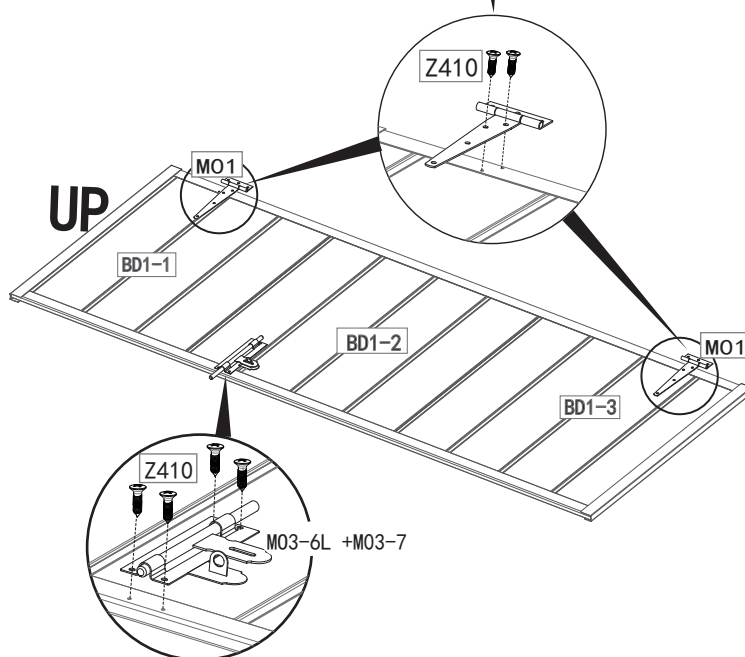


Step 32




Z410



10PC

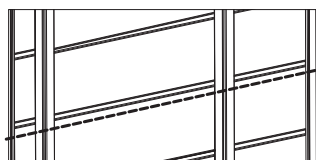

- Grain of the door panels should align with that of the wall panels.

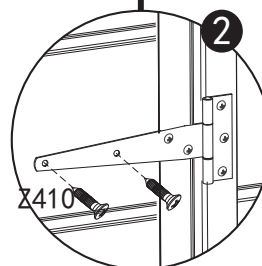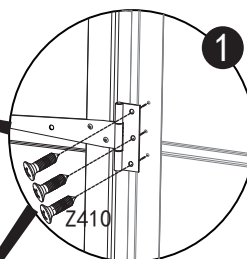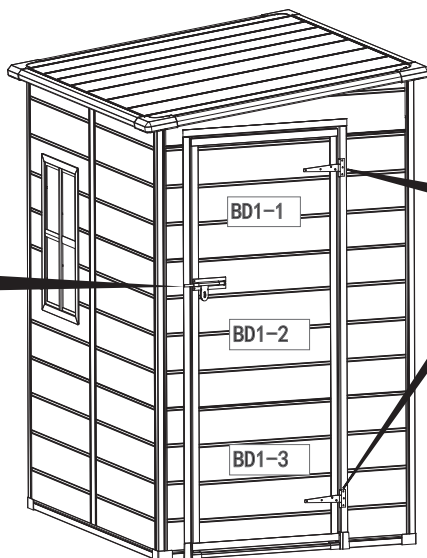

Nail the door after place adjustment and fasten all the screws.

Step 33

ZW413





2 PC


MO4



1 PC

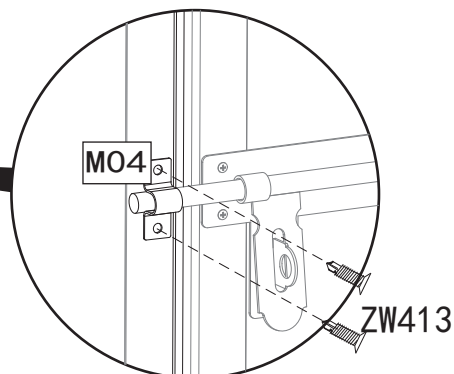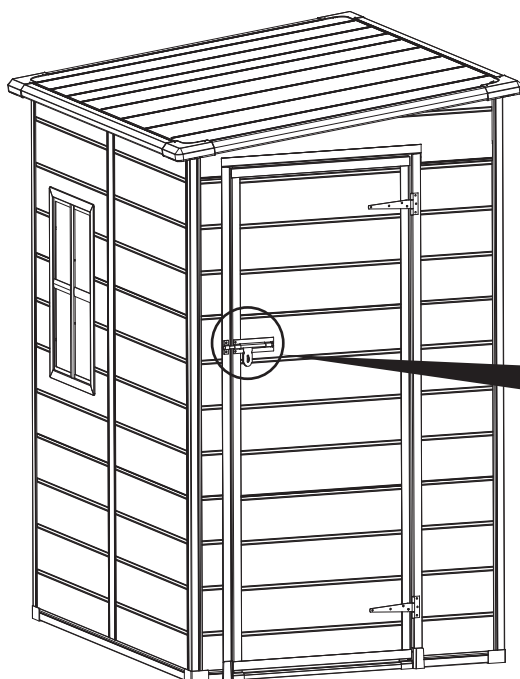

Step 34

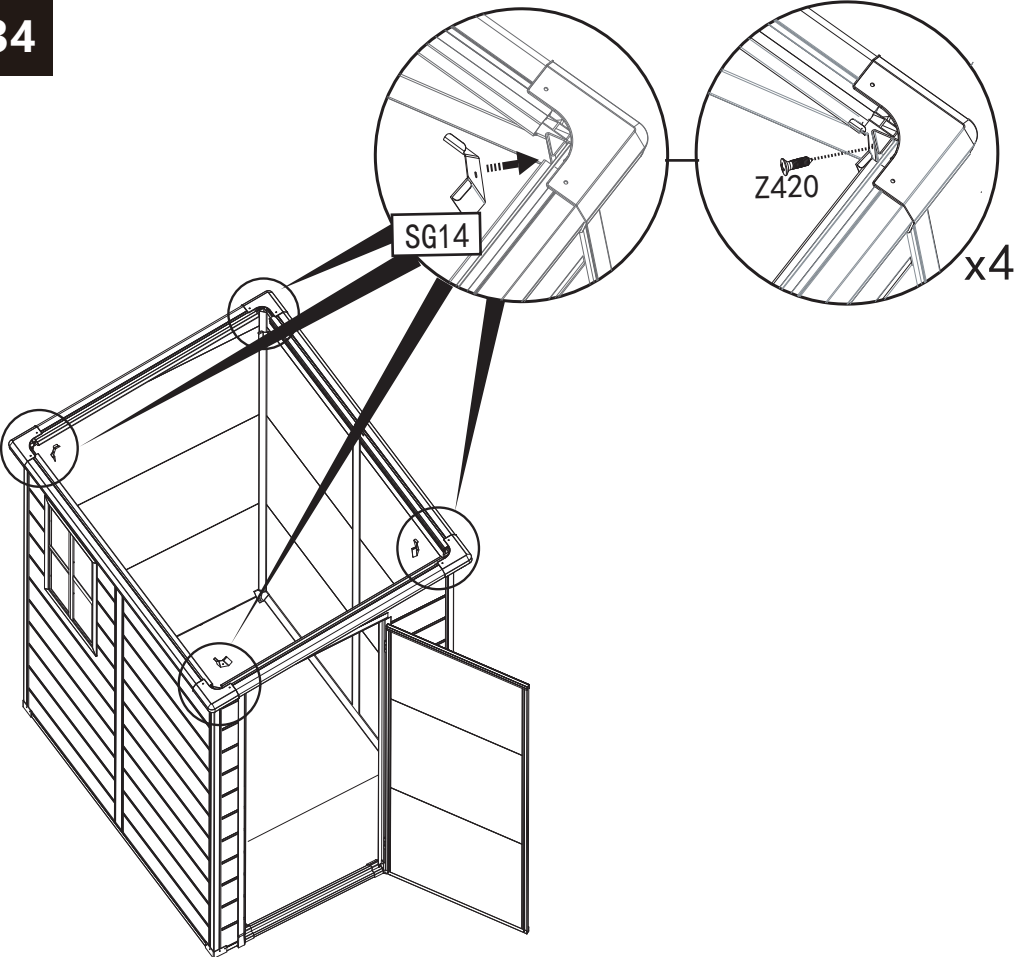

SG14




4 PC

Z420




4 PC

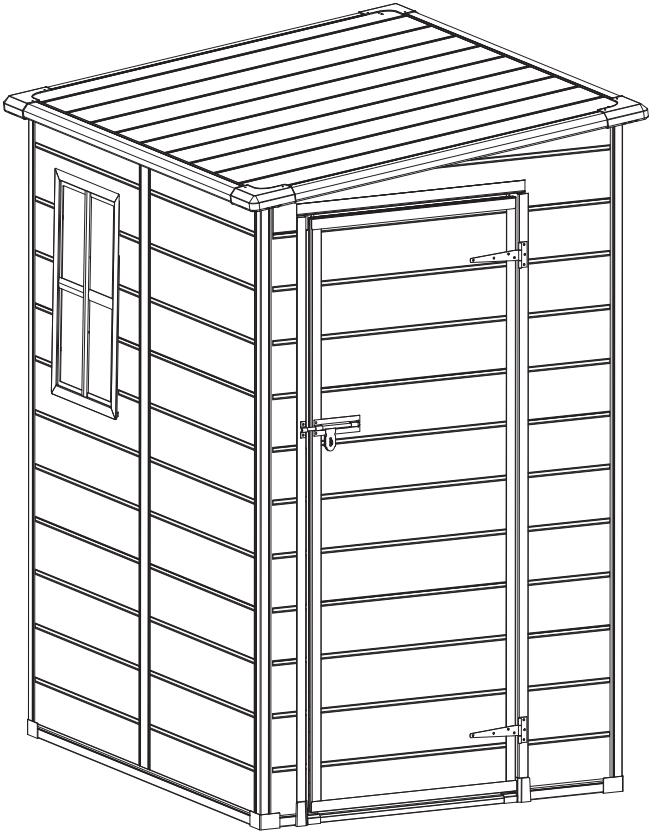


PARTS SCHEMATIC


ROOF PARTS

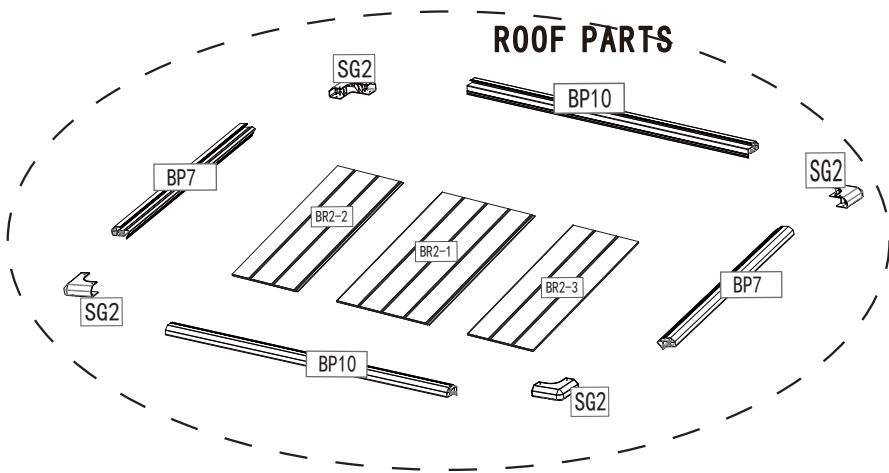


Rear side

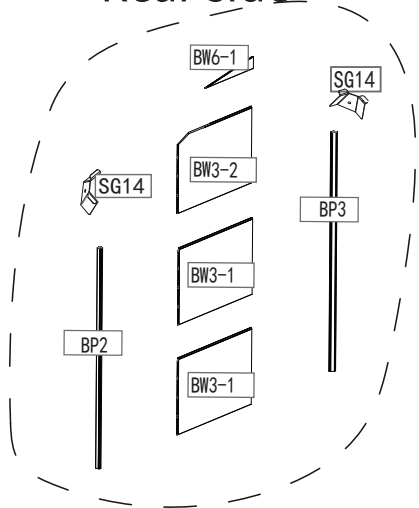


Right

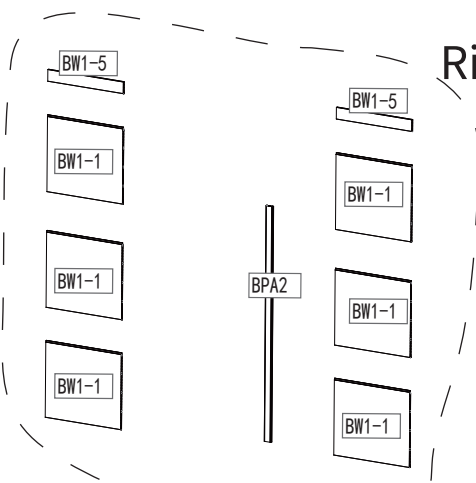


Left

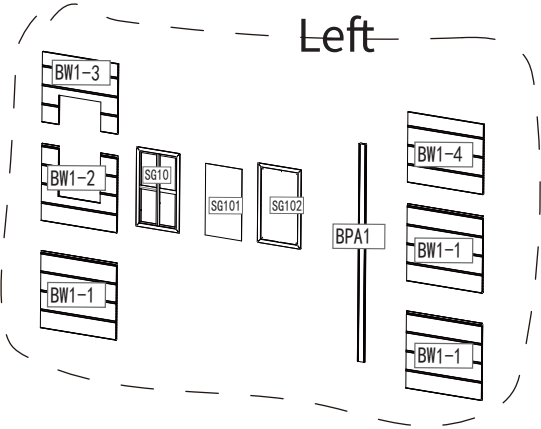

Front

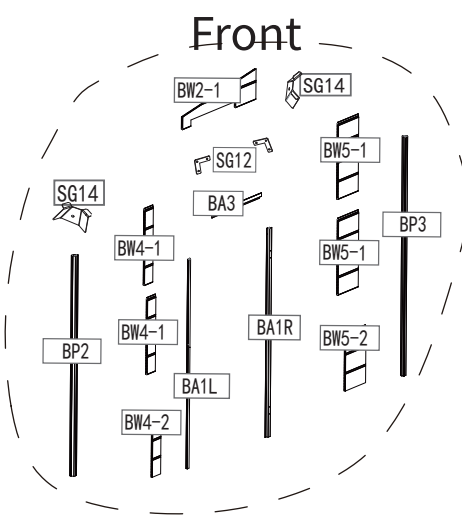

DOOR PARTS

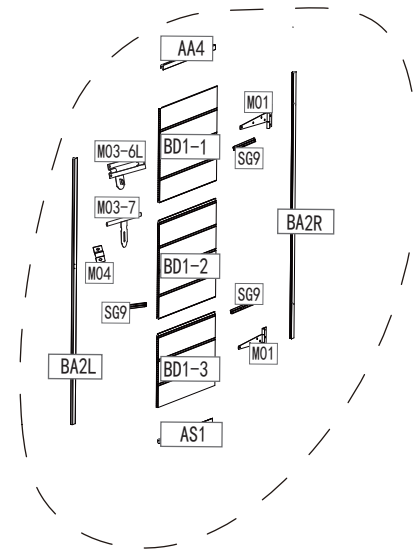

FLOOR PARTS

