




B01OD-001NSM







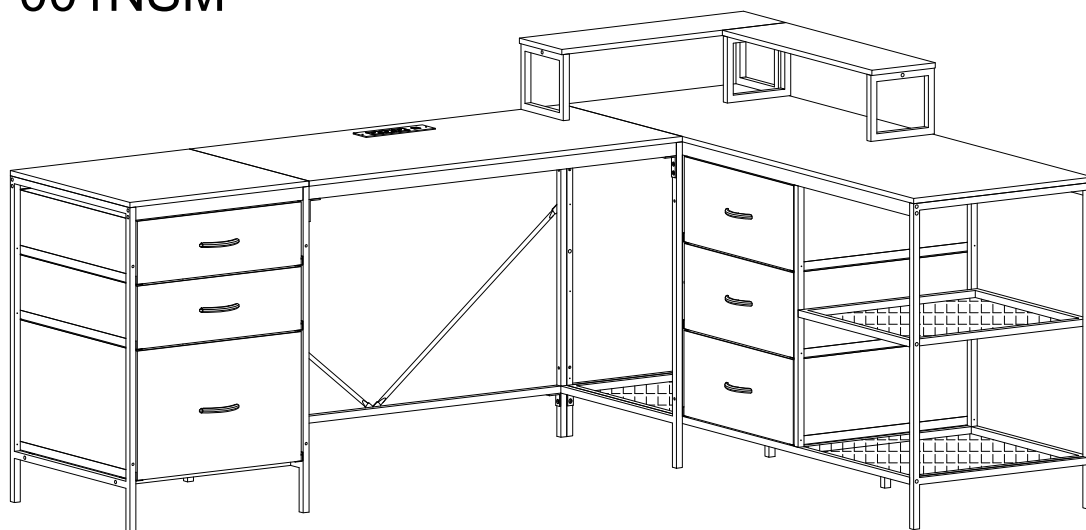










OR







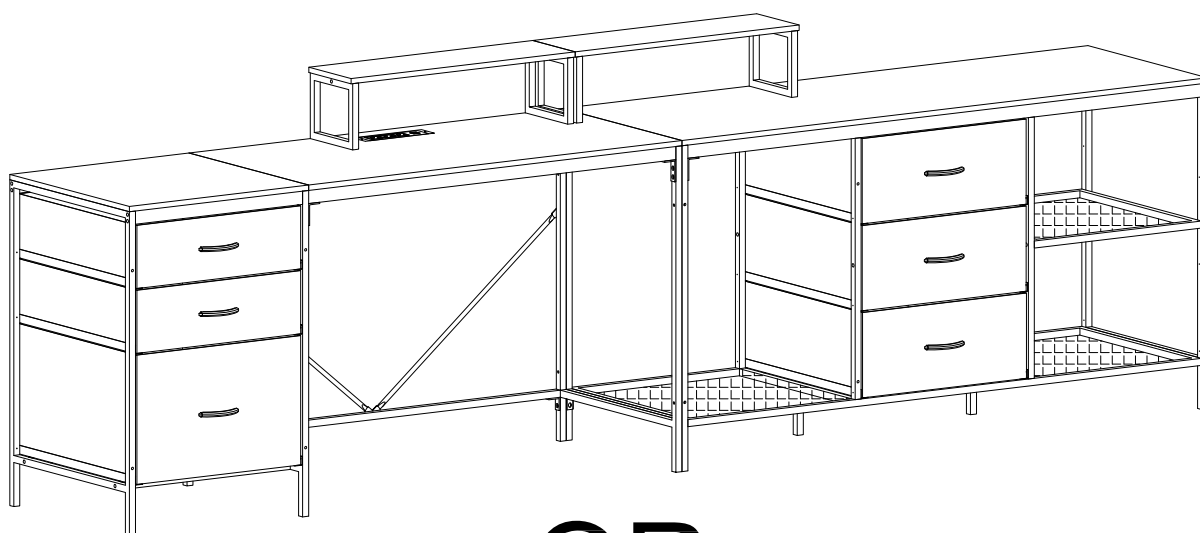






OR


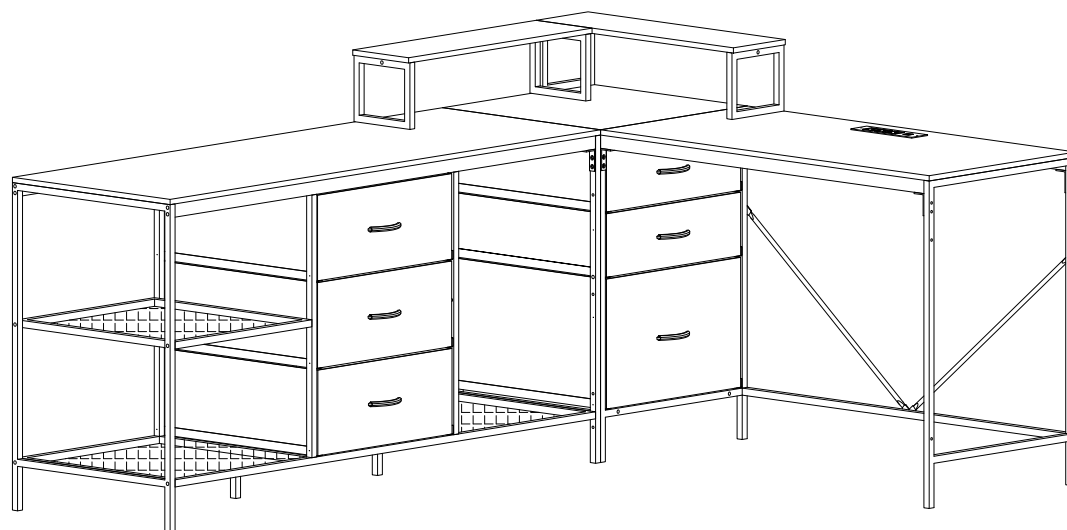


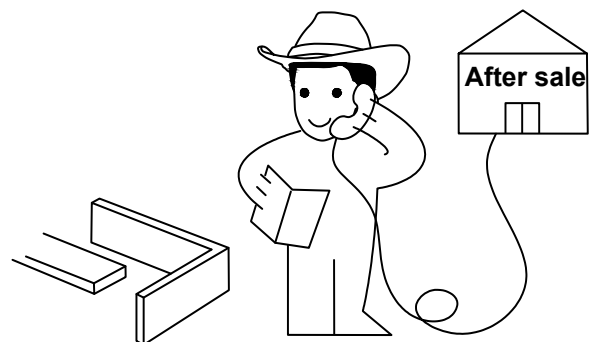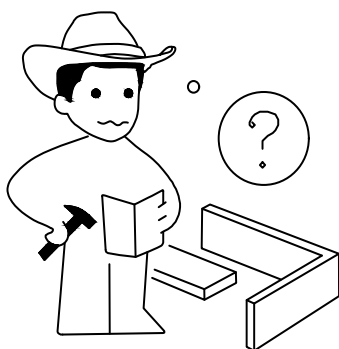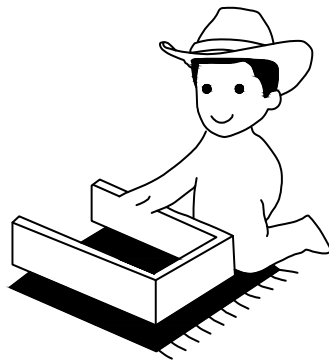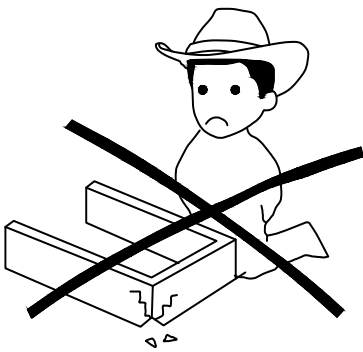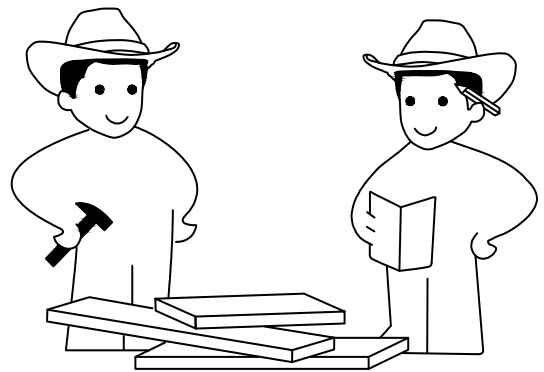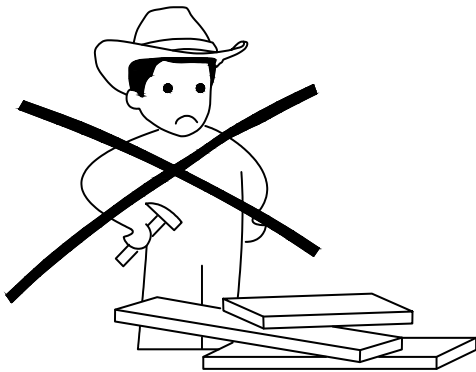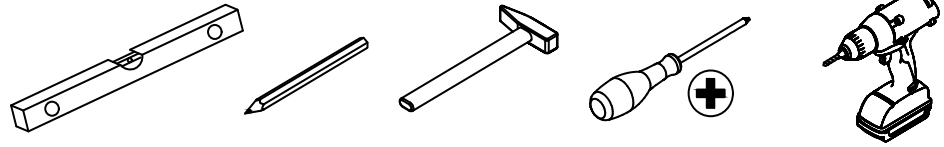

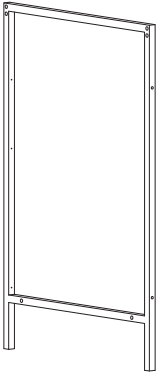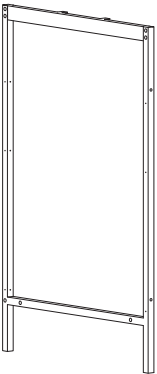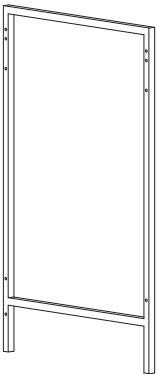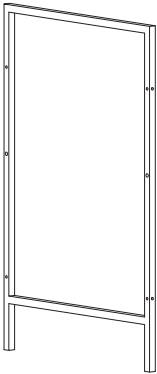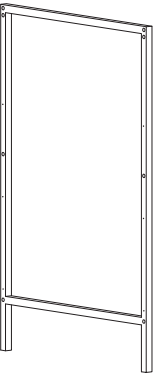1x1*pc 	2x1*pc 	3x1*pc 
4x1*pc 	5x1*pc 	6x2*pcs 
7x2*pcs 	8x2*pcs 	9x1*pc 
10x2*pcs 	11x1*pc 	12x1*pc 
13x2*pcs 	14x2*pcs 	15x1*pc 

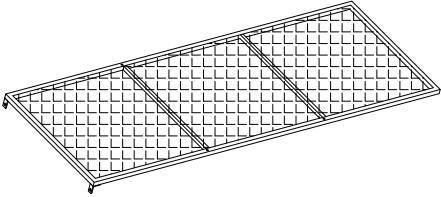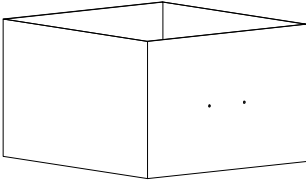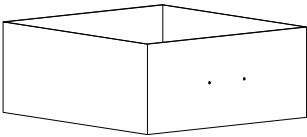
16x1*pc 	17x4*pcs 	18x2*pcs 
19x6*pcs 	20x6*pcs 	21x1*pc 
22x2*pcs 	23x1*pc 	24x1*pc 
25x2*pcs 	26x1*pc 	27x3*pcs 
28x6*pcs 	29x2*pcs 	

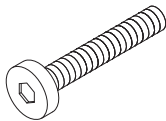Ax23*pcs 	Bx16*pcs 	Cx23*pcs 	Dx4*pcs 	Ex24*pcs 	Fx6*pcs 	Gx12*pcs 
Hx2*pcs 	Ix8*pcs 	Jx8*pcs 	PCx1*pc 	Kx2*pcs 	Lx15*pcs 	Nx12*pcs 
O x1*pc 						

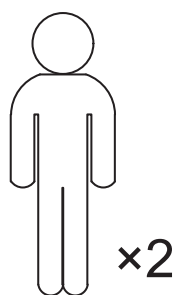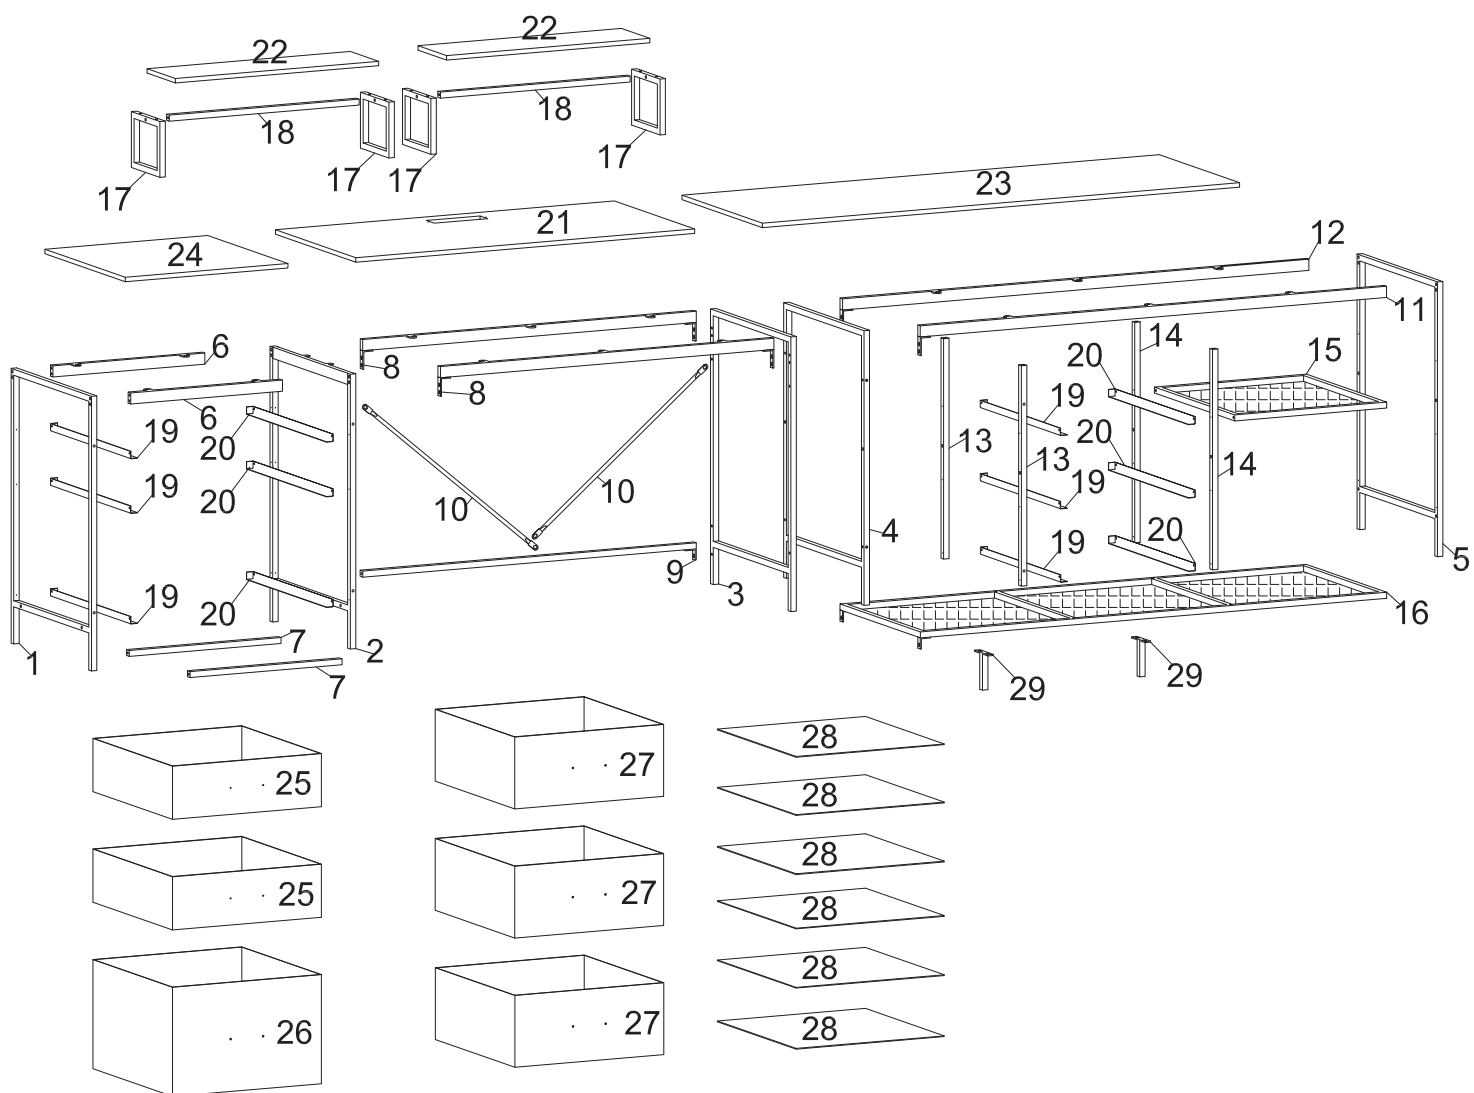


1

Put these iron frames and pipes together and secure them with twelve nuts.

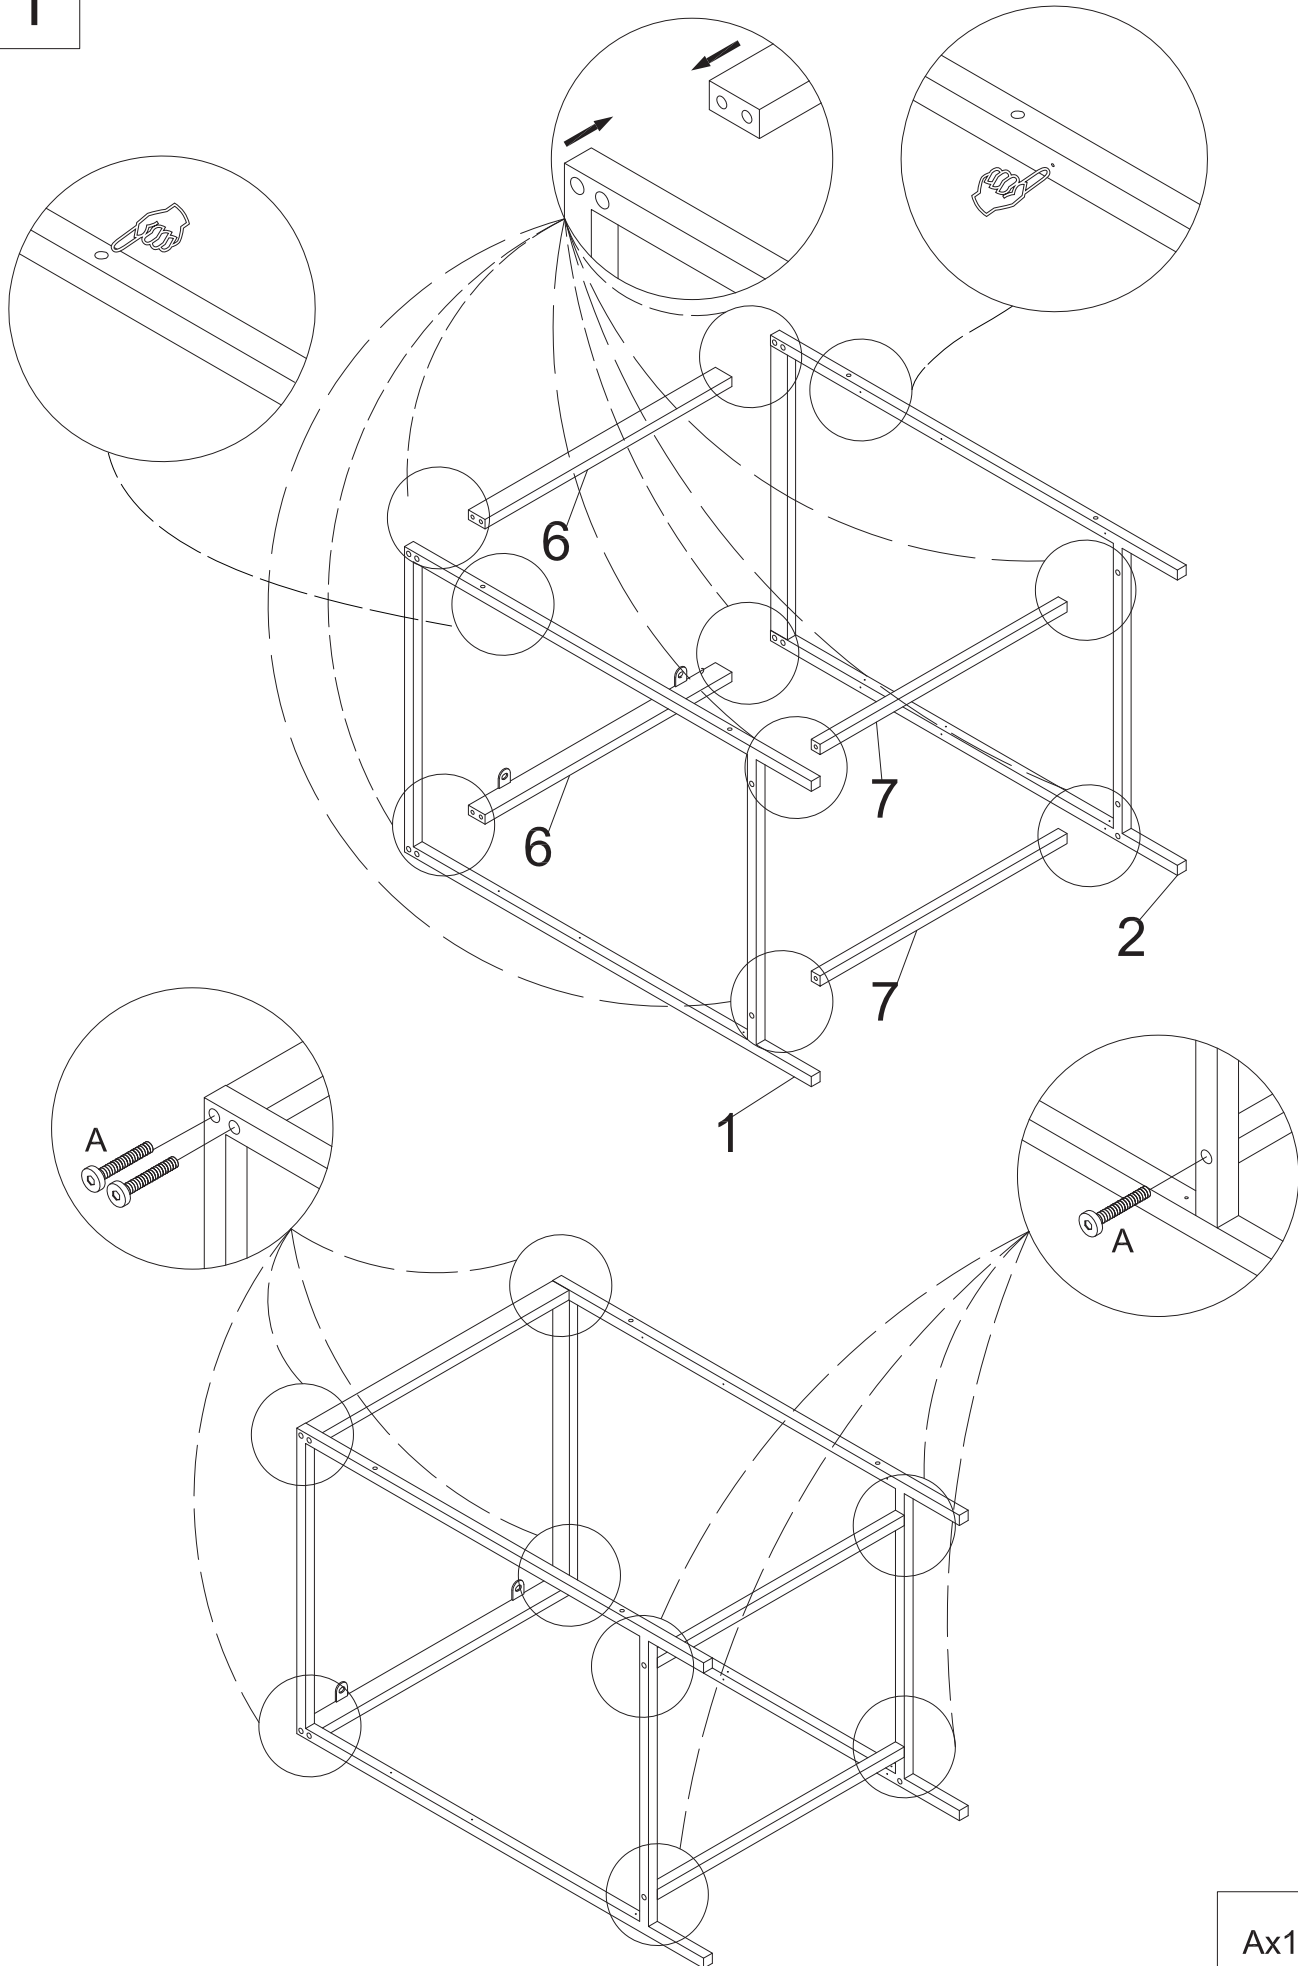


Ax12



2

Put these iron pipes together and secure them with ten nuts.

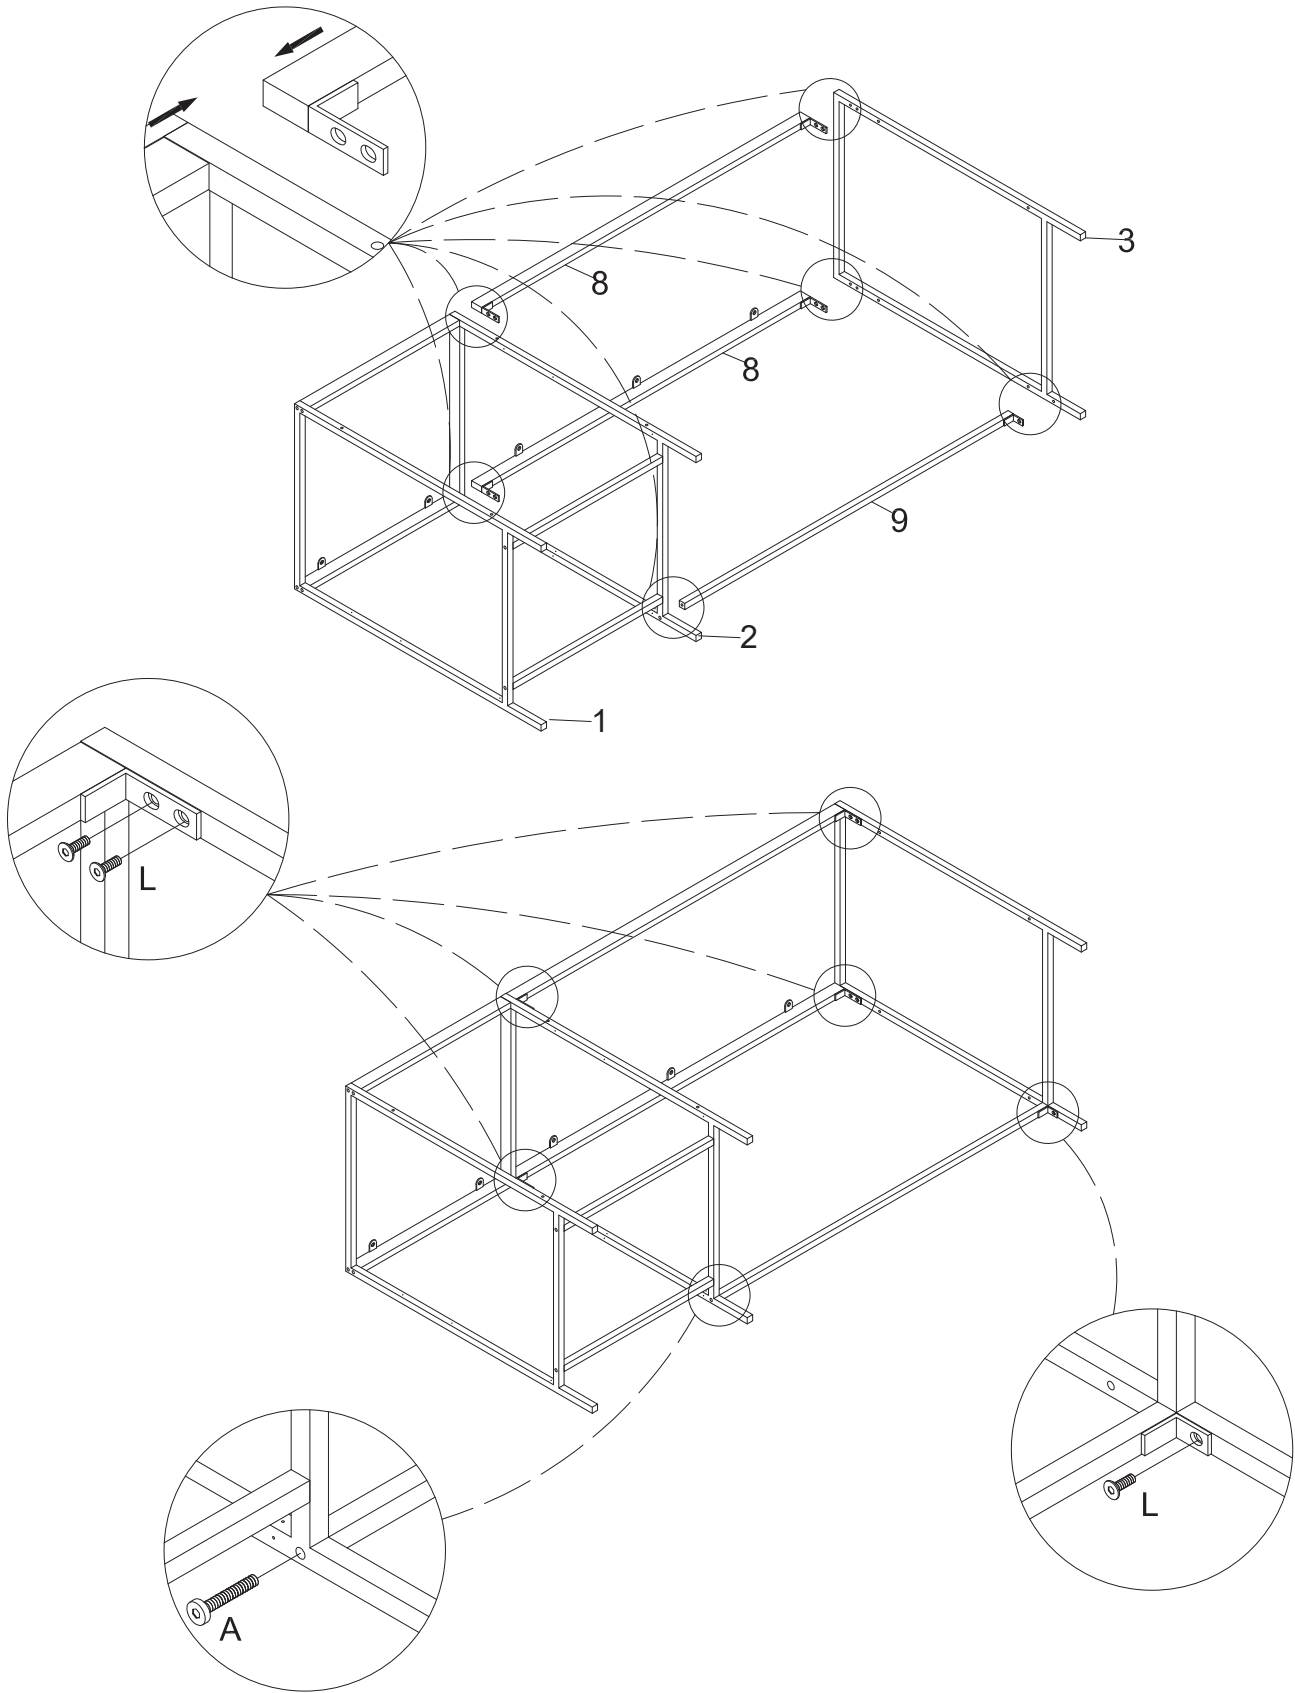

Ax1





Lx9



3

Put these two iron pipes and iron frames together and fix them with three nuts.

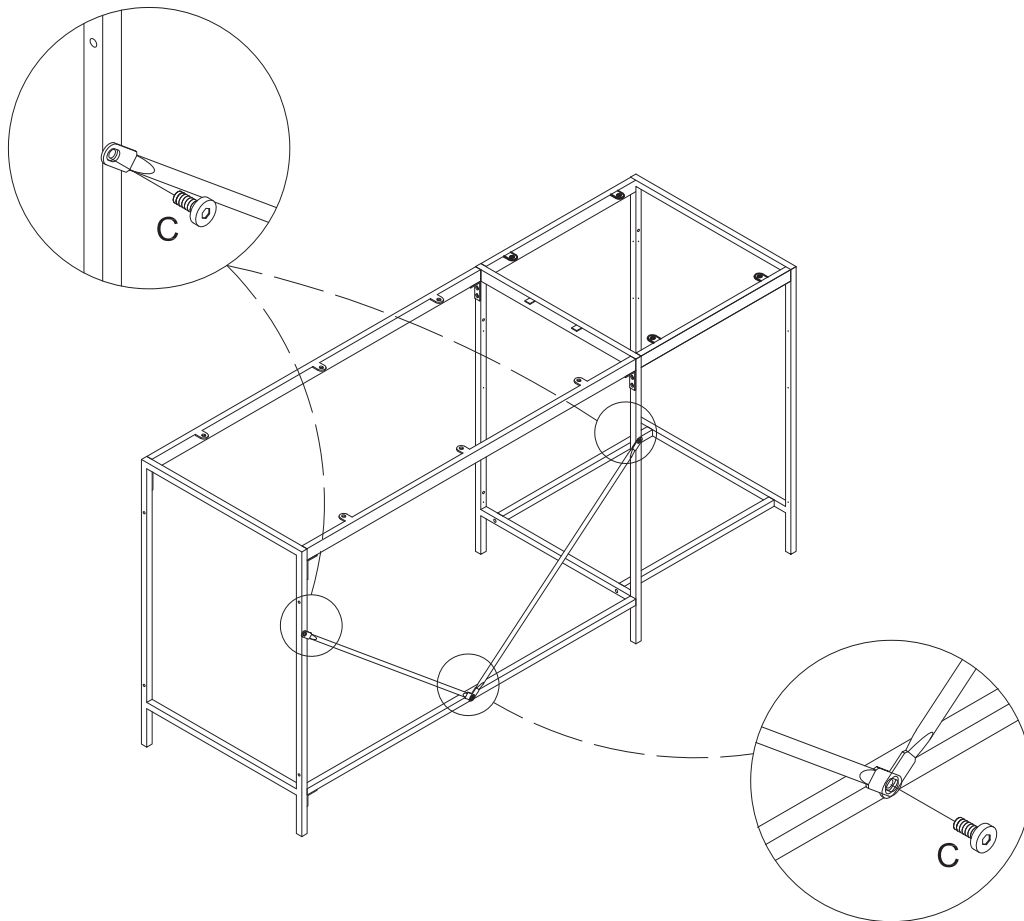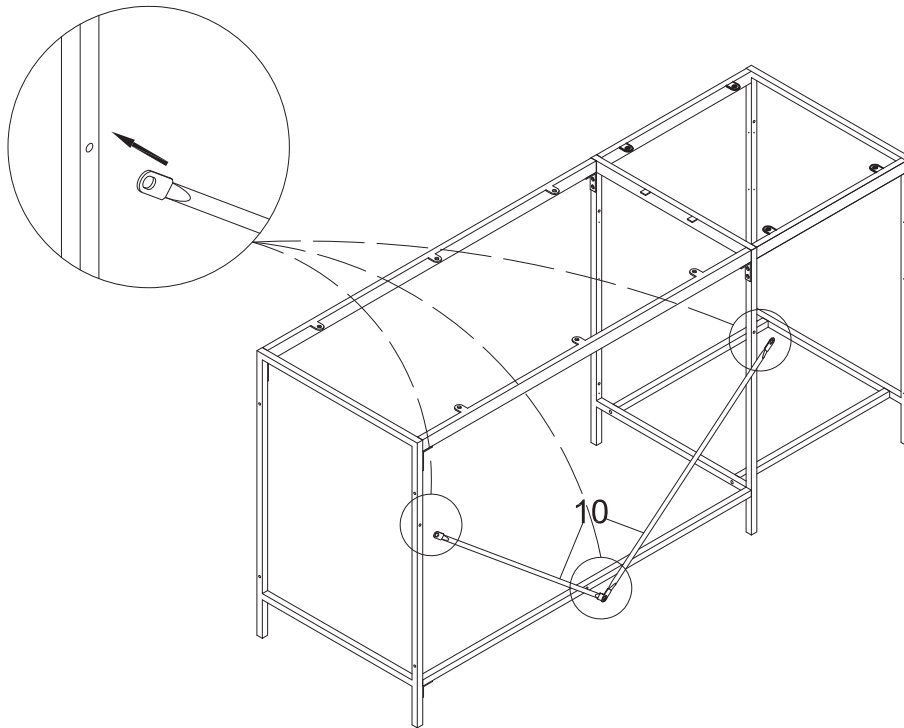


Cx3



4


Put this panel and iron frame together and secure them with ten nuts.

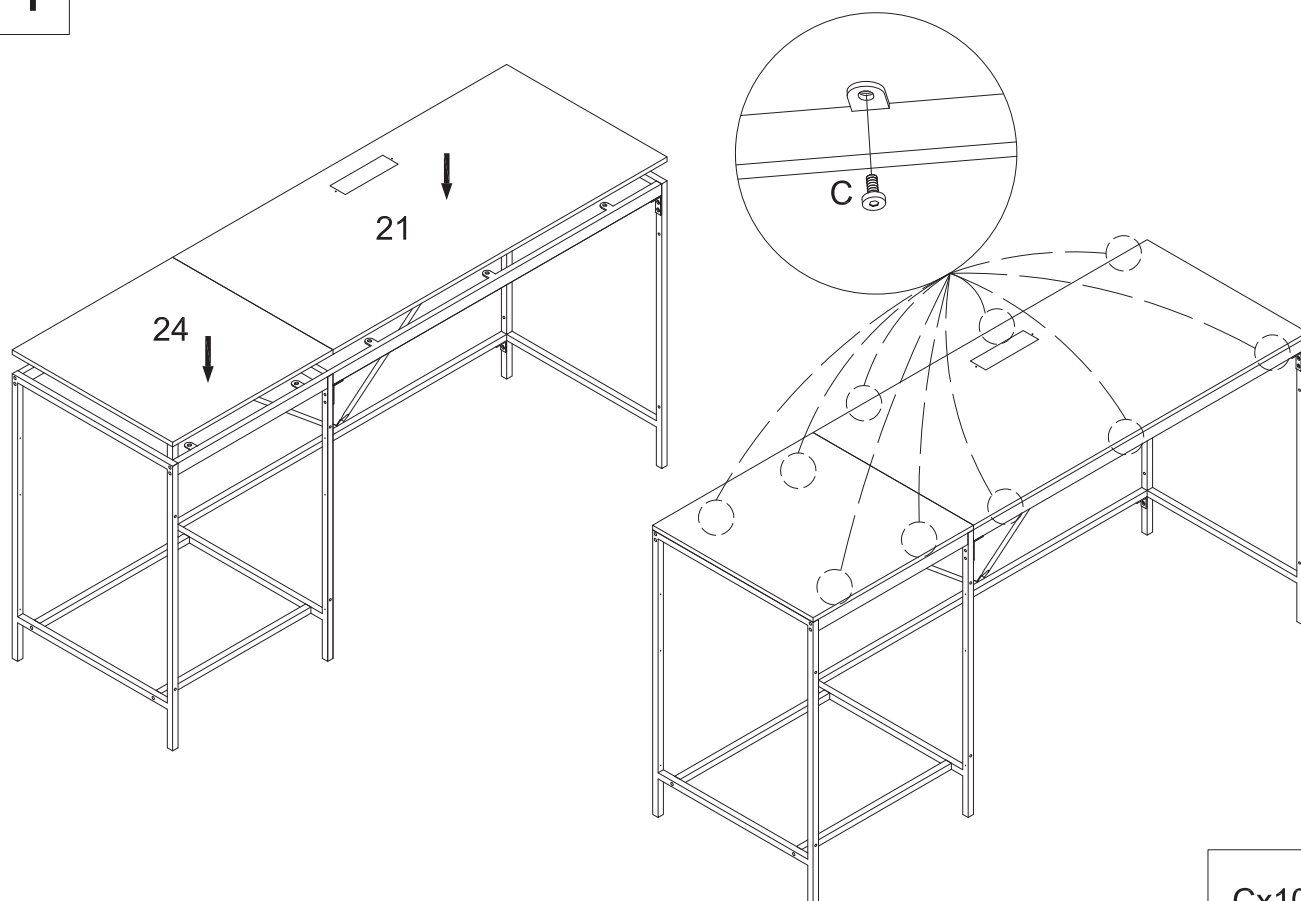

Cx10 

5

Place the sockets on this panel and secure them with two screws.

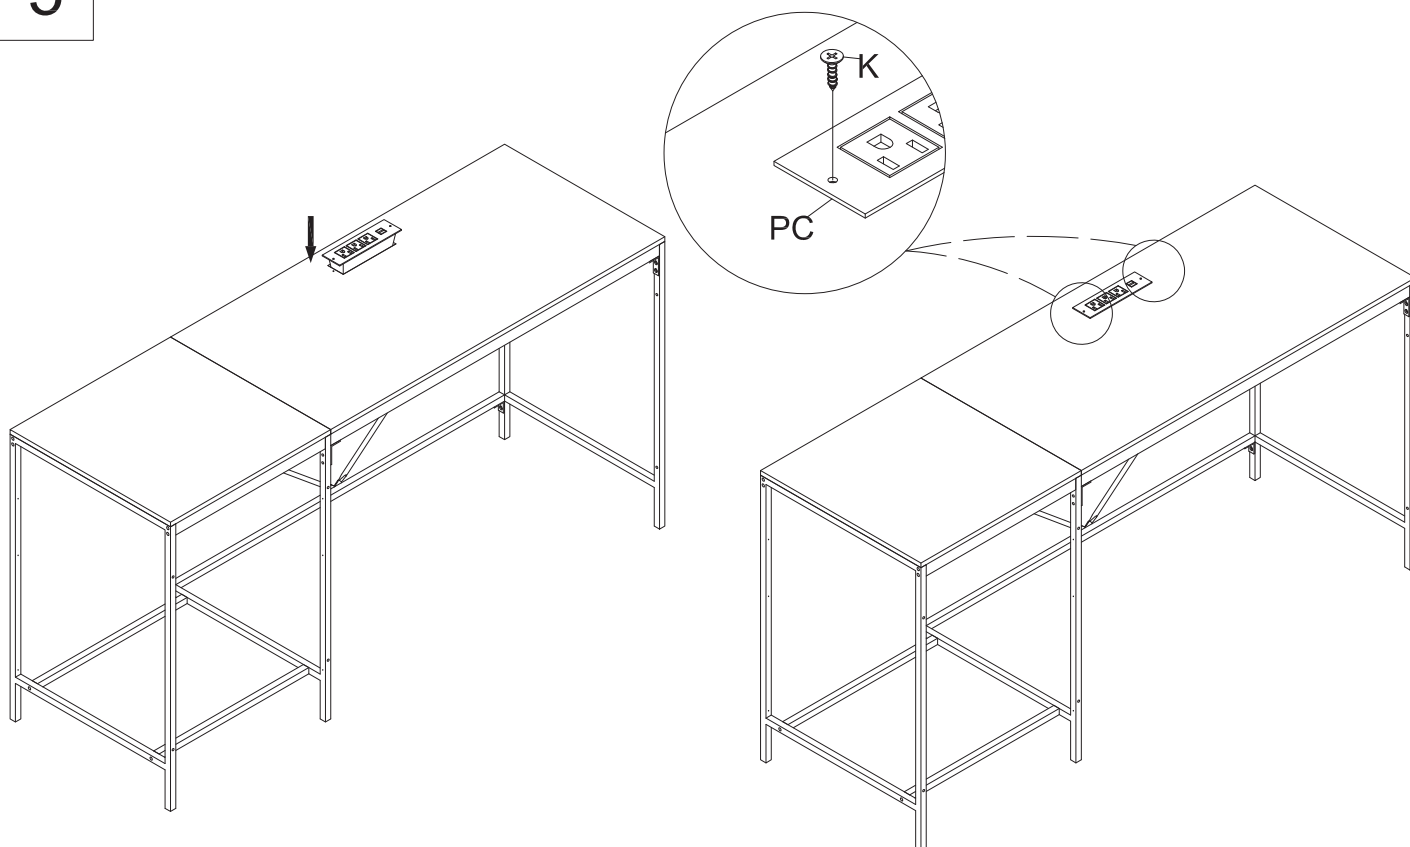


PCx1 

Kx2 

6

Put the mesh frame and iron pipe together and connect them with eight nuts.

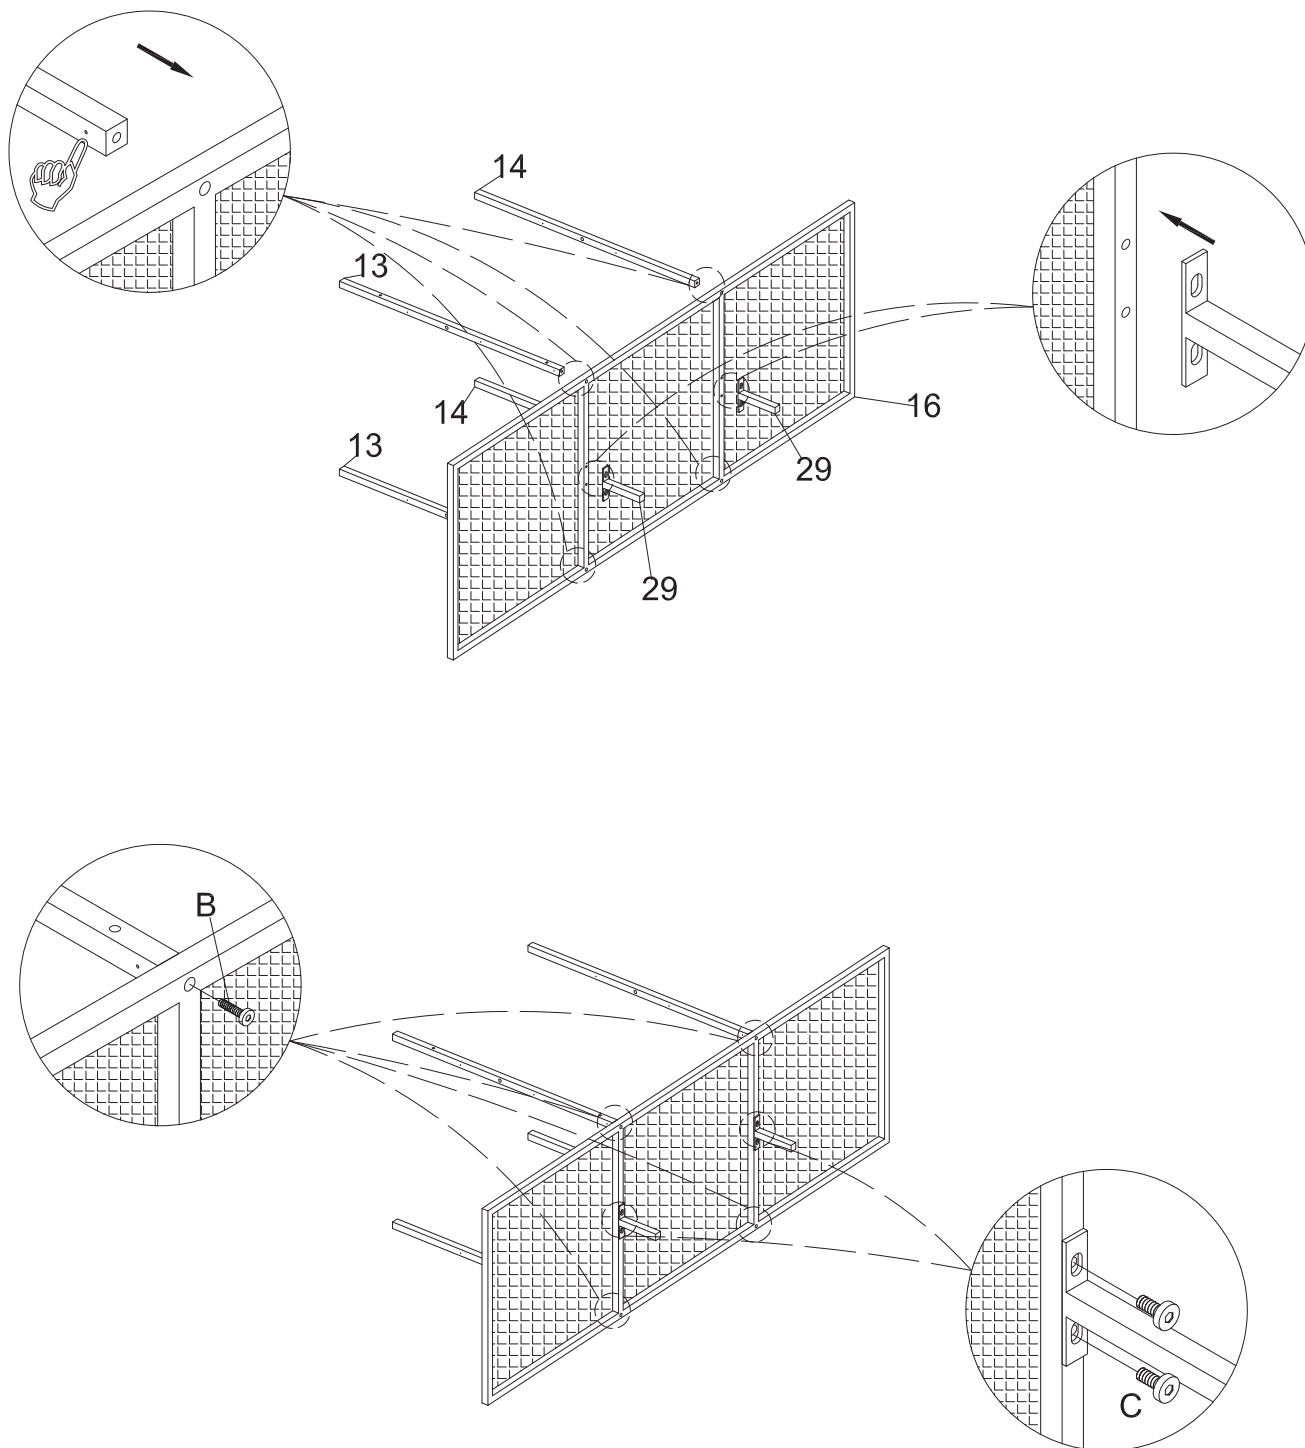

Bx4




Cx4



7

Put these iron pipes together and connect them with eight nuts.

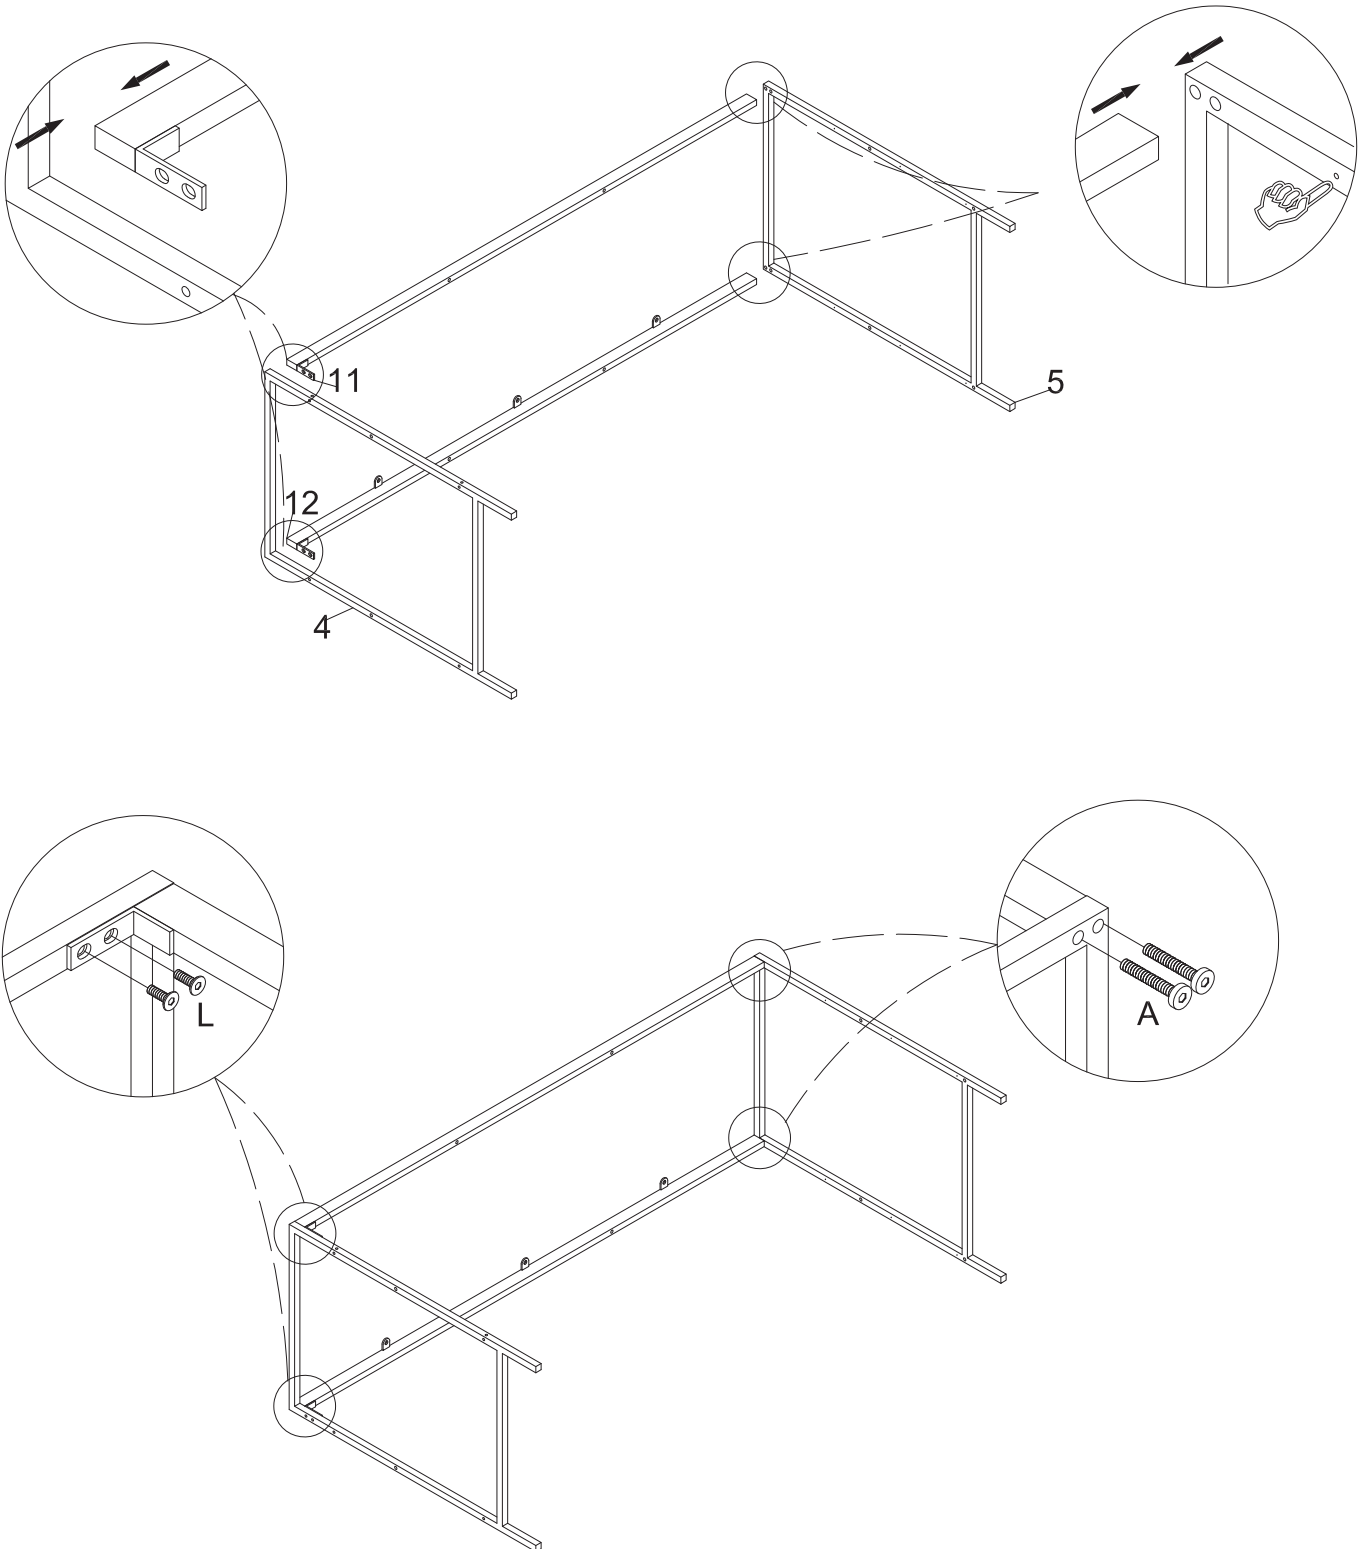

Ax4





Lx4




8

Put these iron pipes together and connect them with eight nuts.

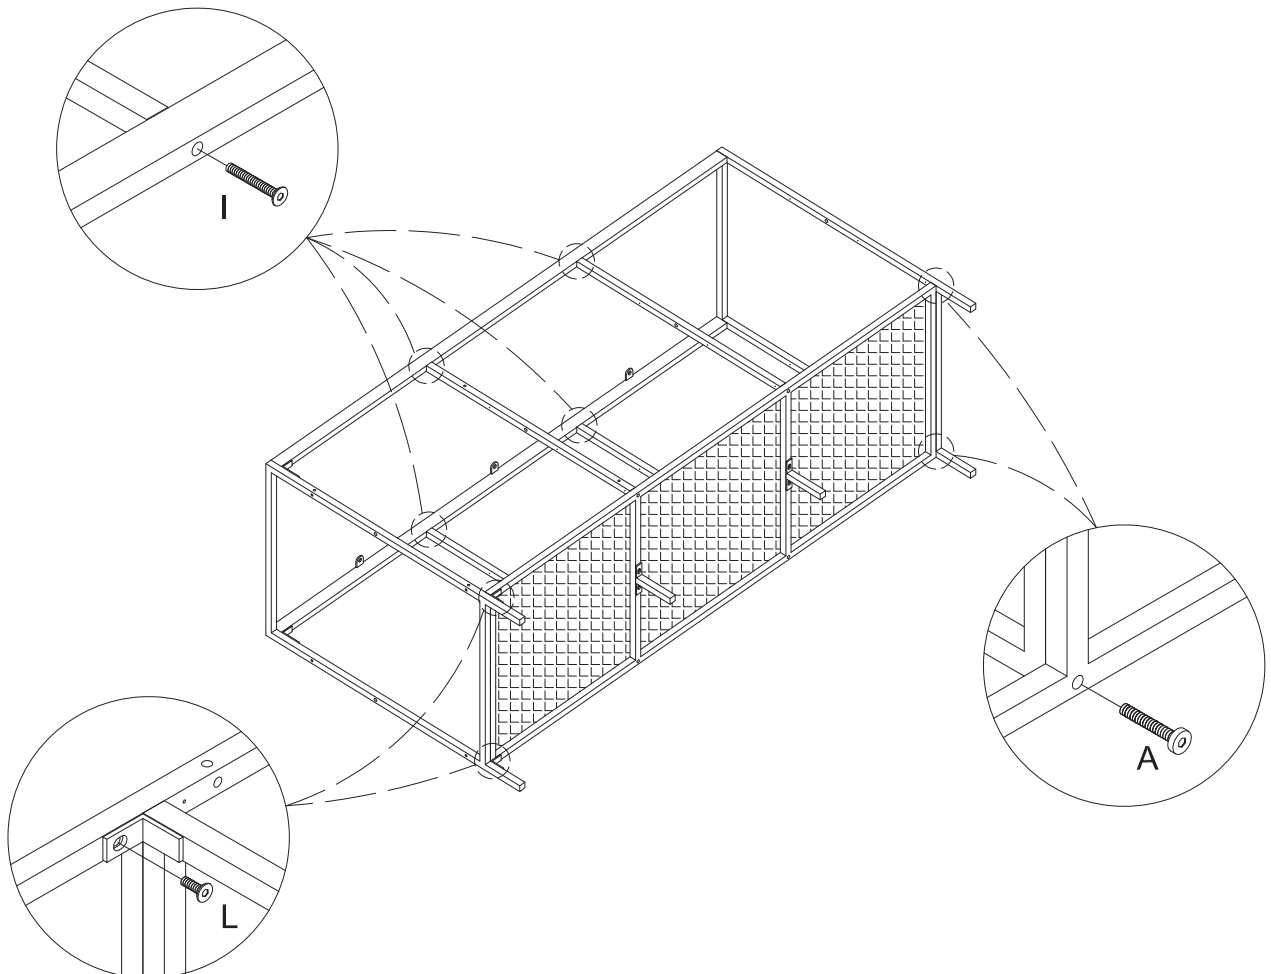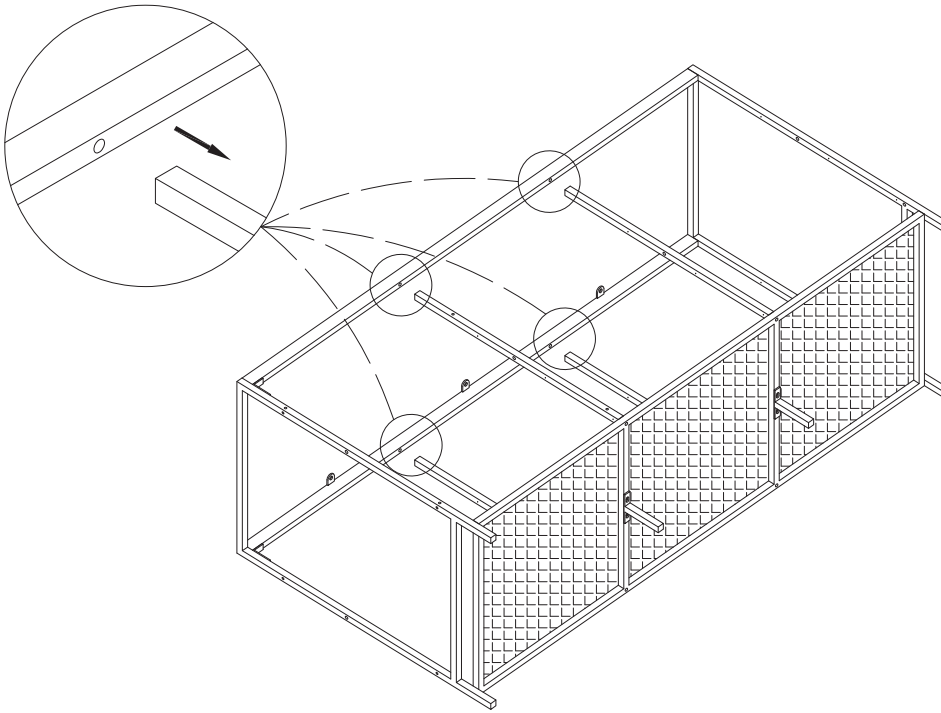

Ix4



Ax2





Lx2



9

Put this panel and iron frame together and secure them with six nuts.

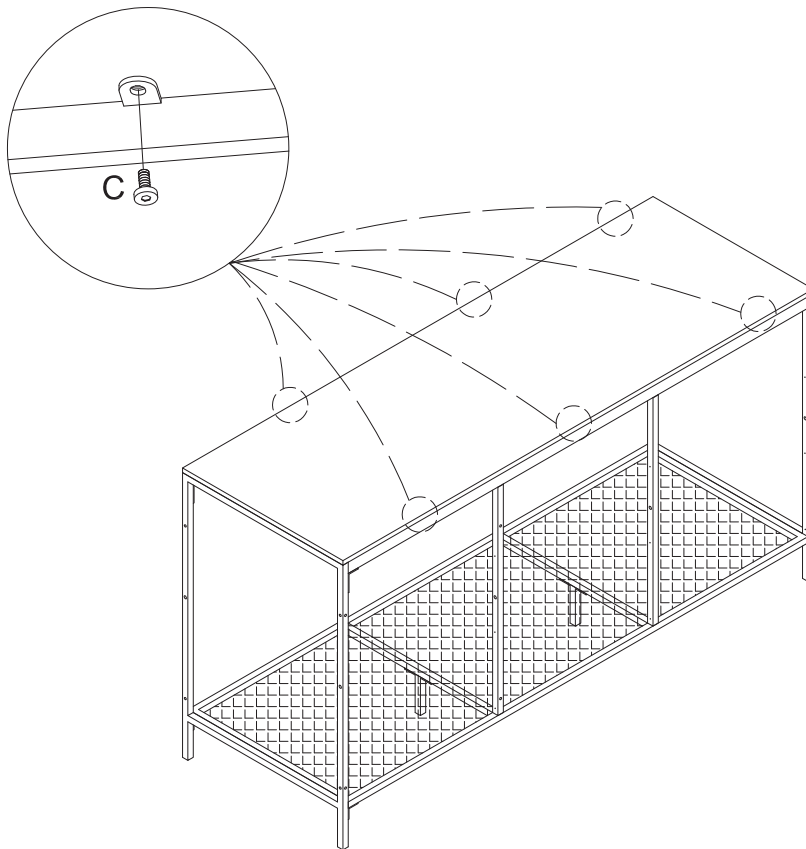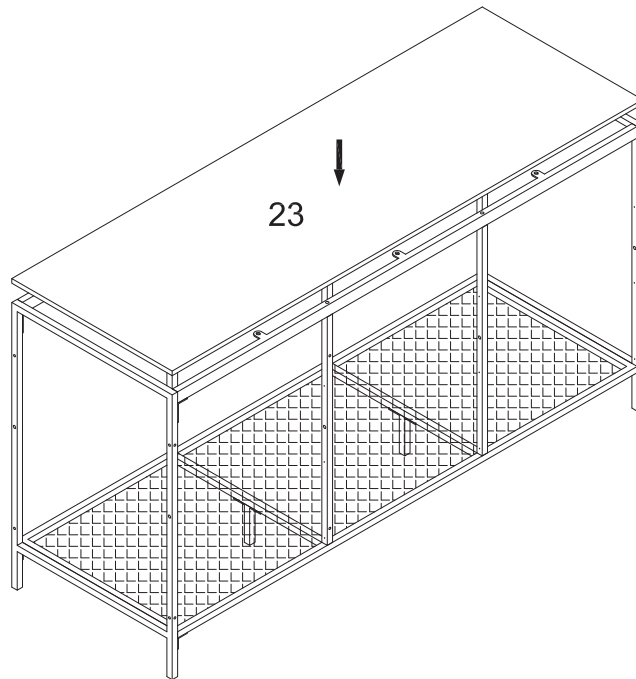


Cx6




10


According to your own needs and preferences, place the 15th iron mesh in one of the following three positions and secure it with four nuts.

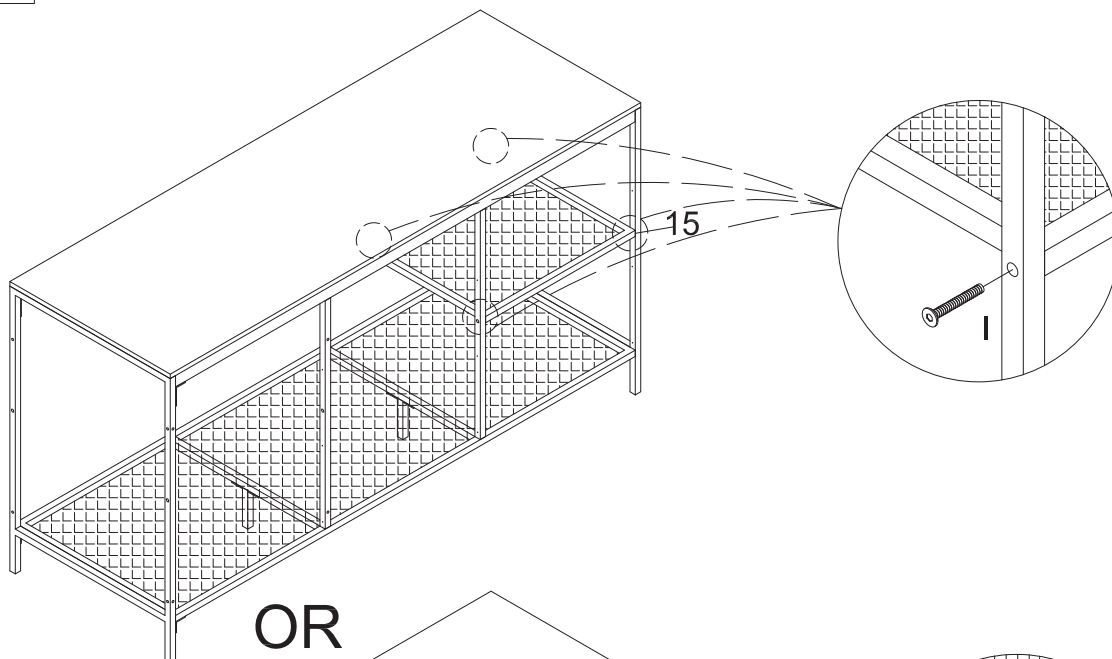

OR

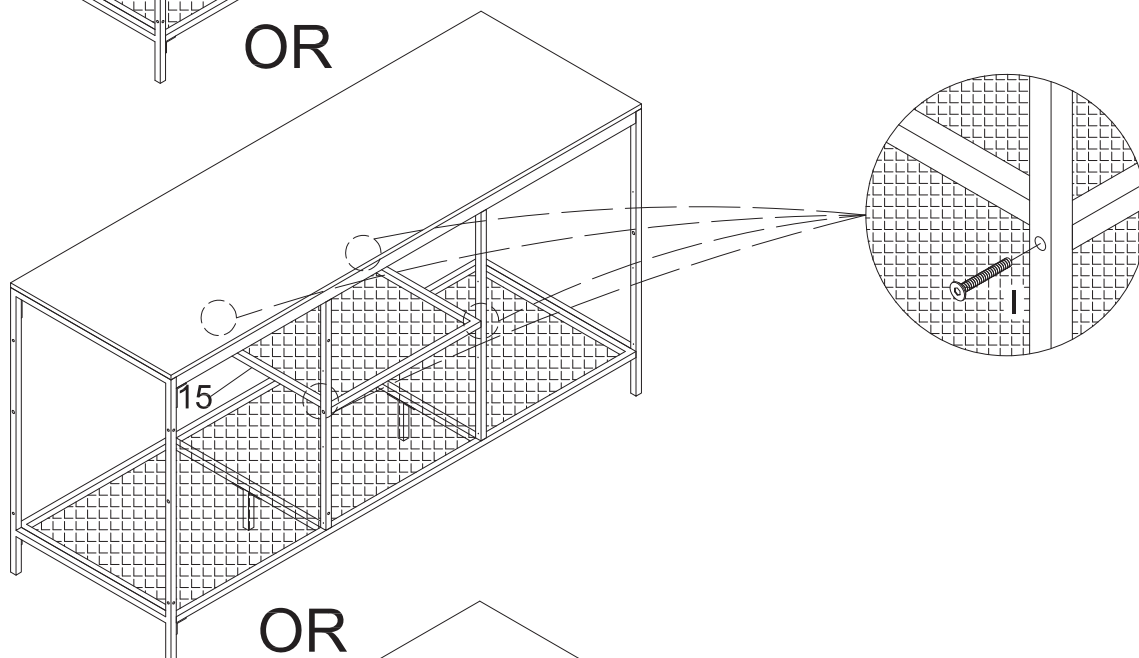

OR

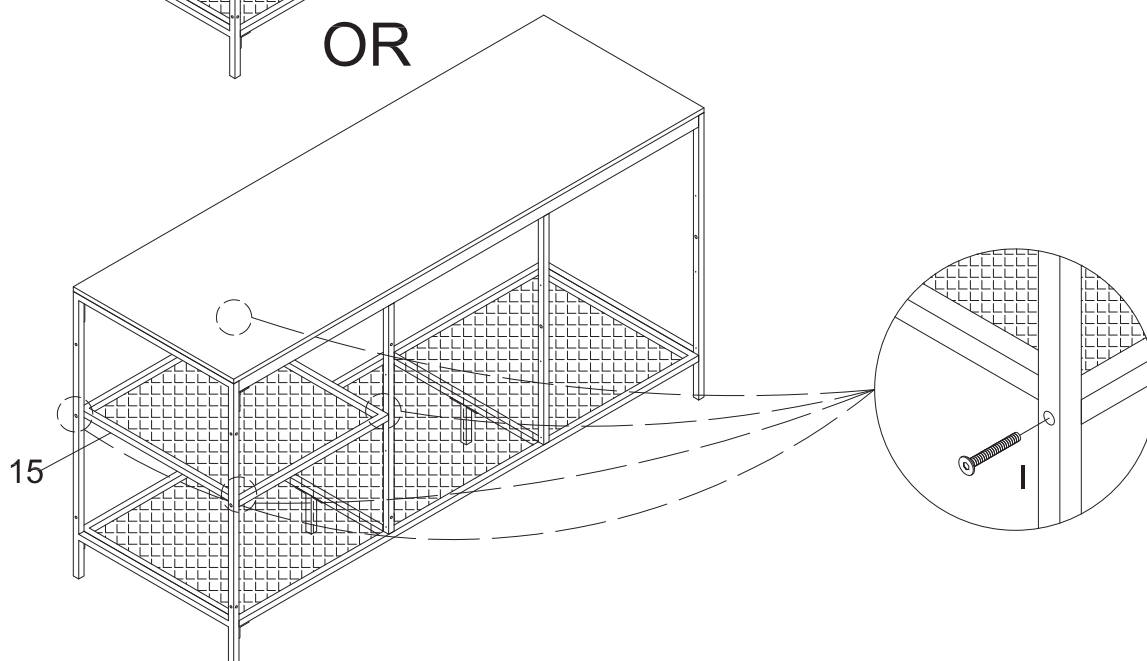


1x4



11

Put these iron pipes together and connect them with four nuts then stick pad on the bottom.

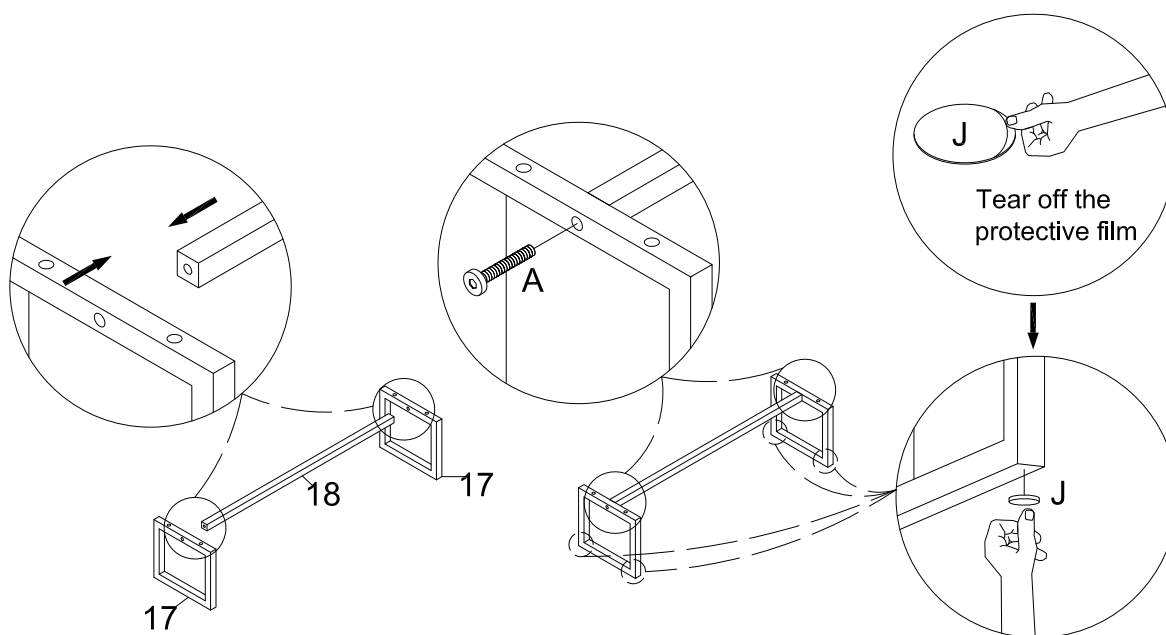

Ax4




Jx8



12

Put this panel and iron frame together and secure them with eight nuts.

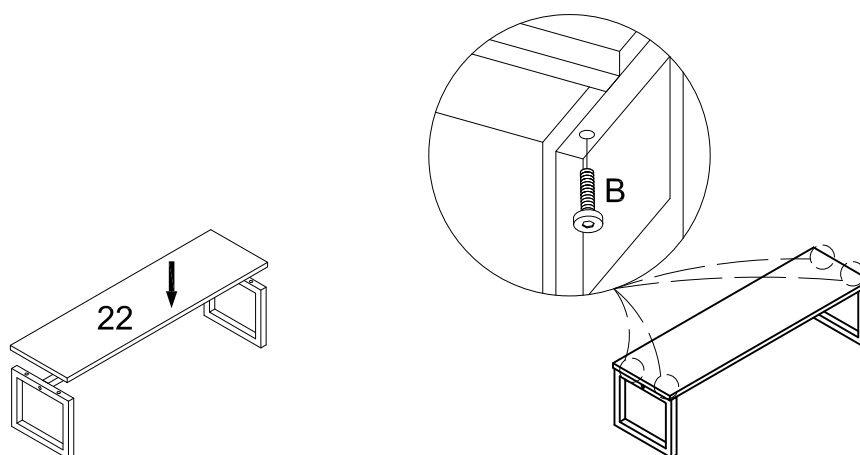



x2

Bx8



13

Pull six cloths together, place the padding inside and lock the handle with twelve nuts and padding.

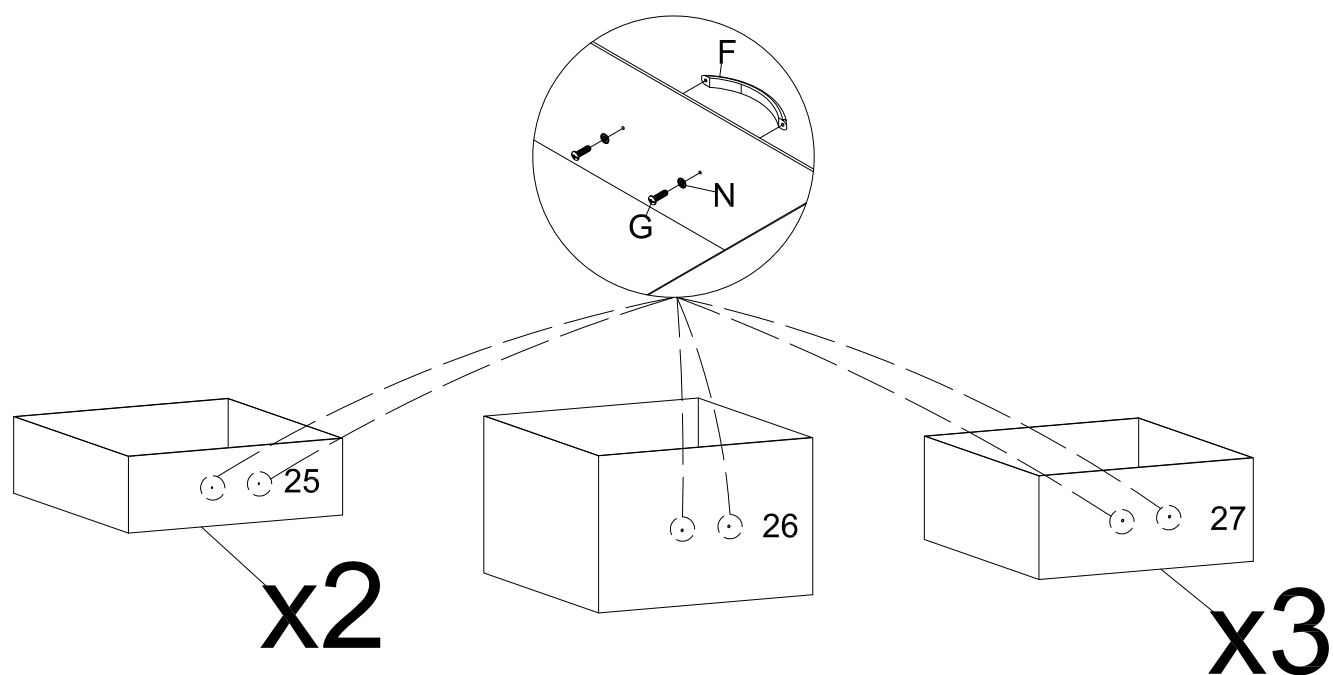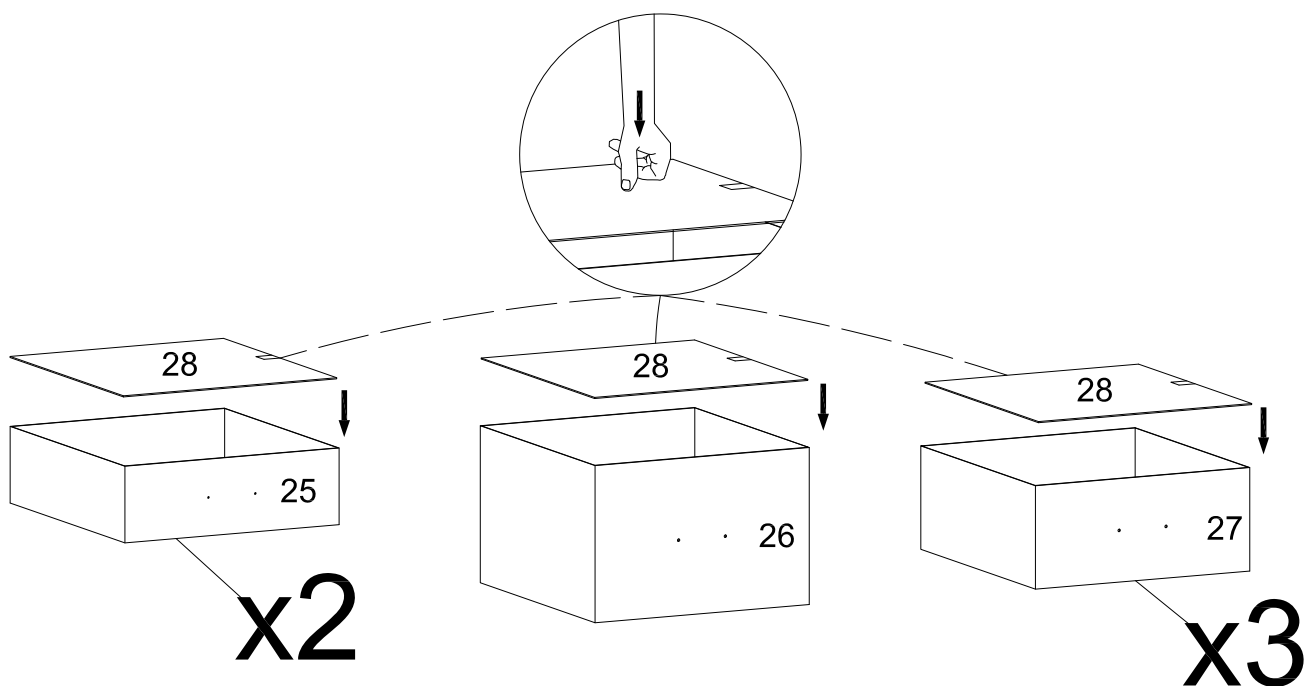

Fx6



Gx12



Nx12




14

There are three assembly methods below, choose one according to your needs and preferences to assemble them together.

1

Lock the guide rail iron plates onto the iron frame and secure them with twelve screws.

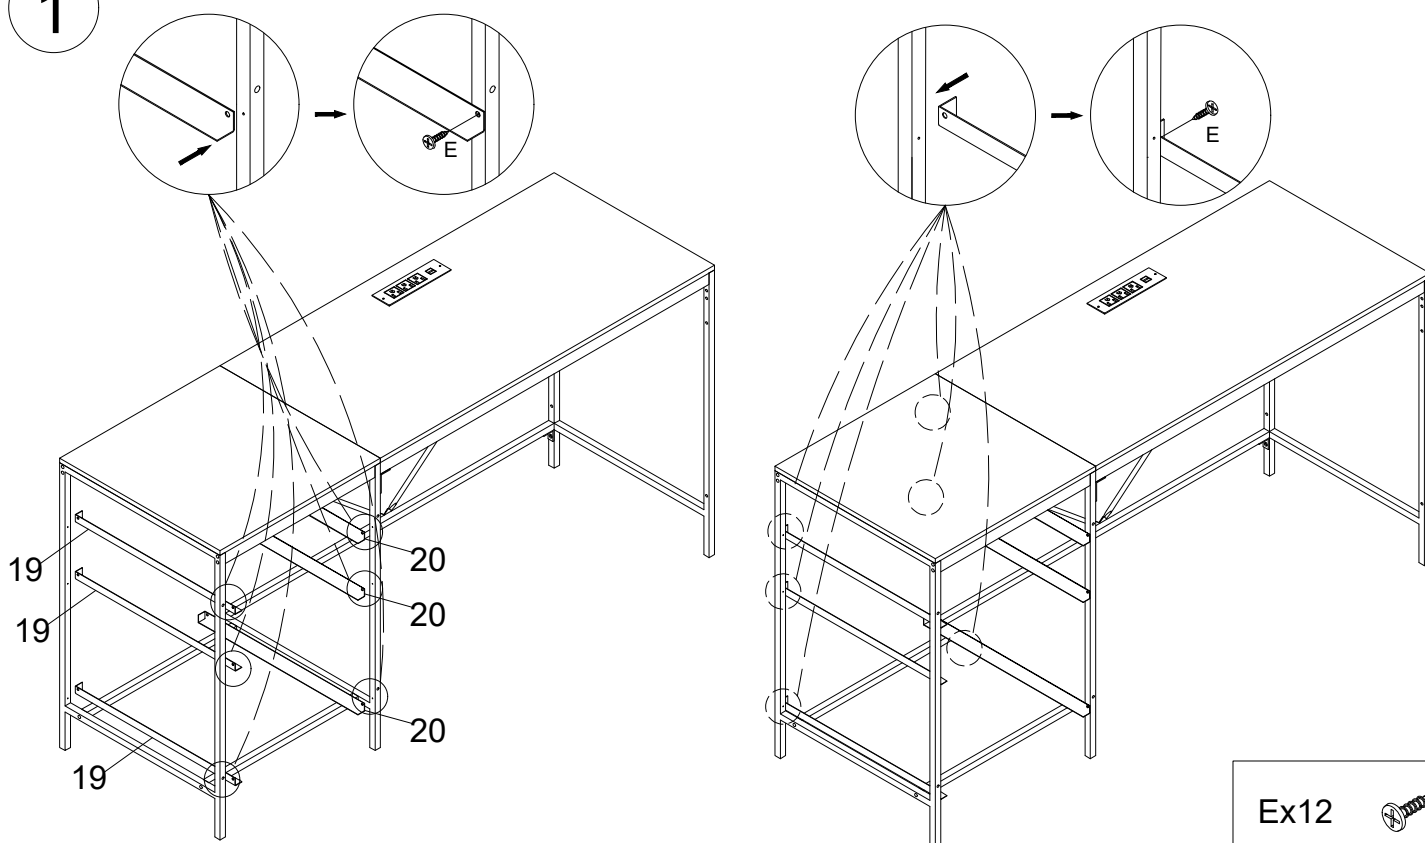


Ex12



15

Lock the guide rail iron plates onto the iron frame and secure them with twelve screws.

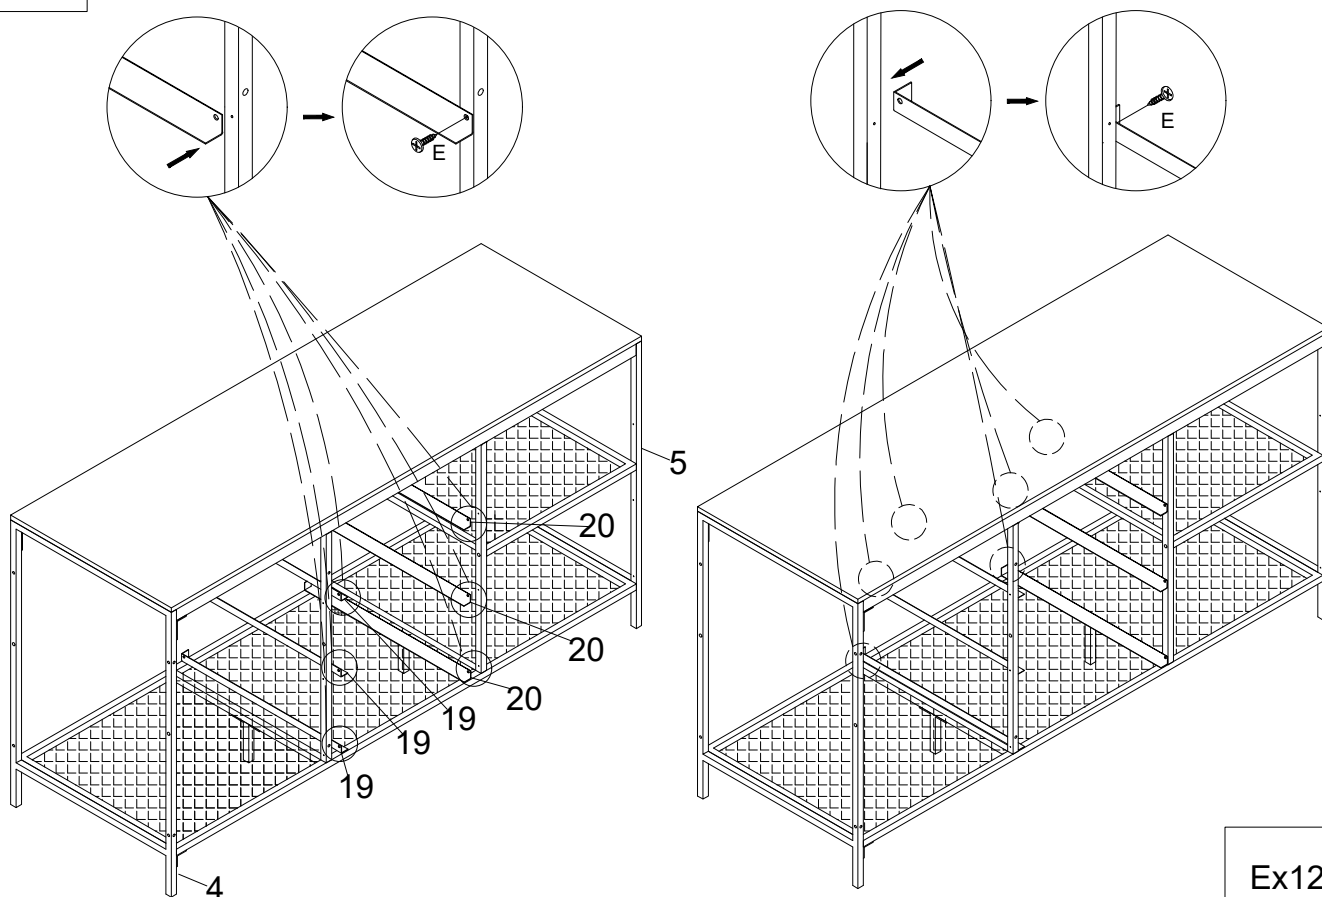


Ex12



16

Put them together and secure them with four bolts and nuts.

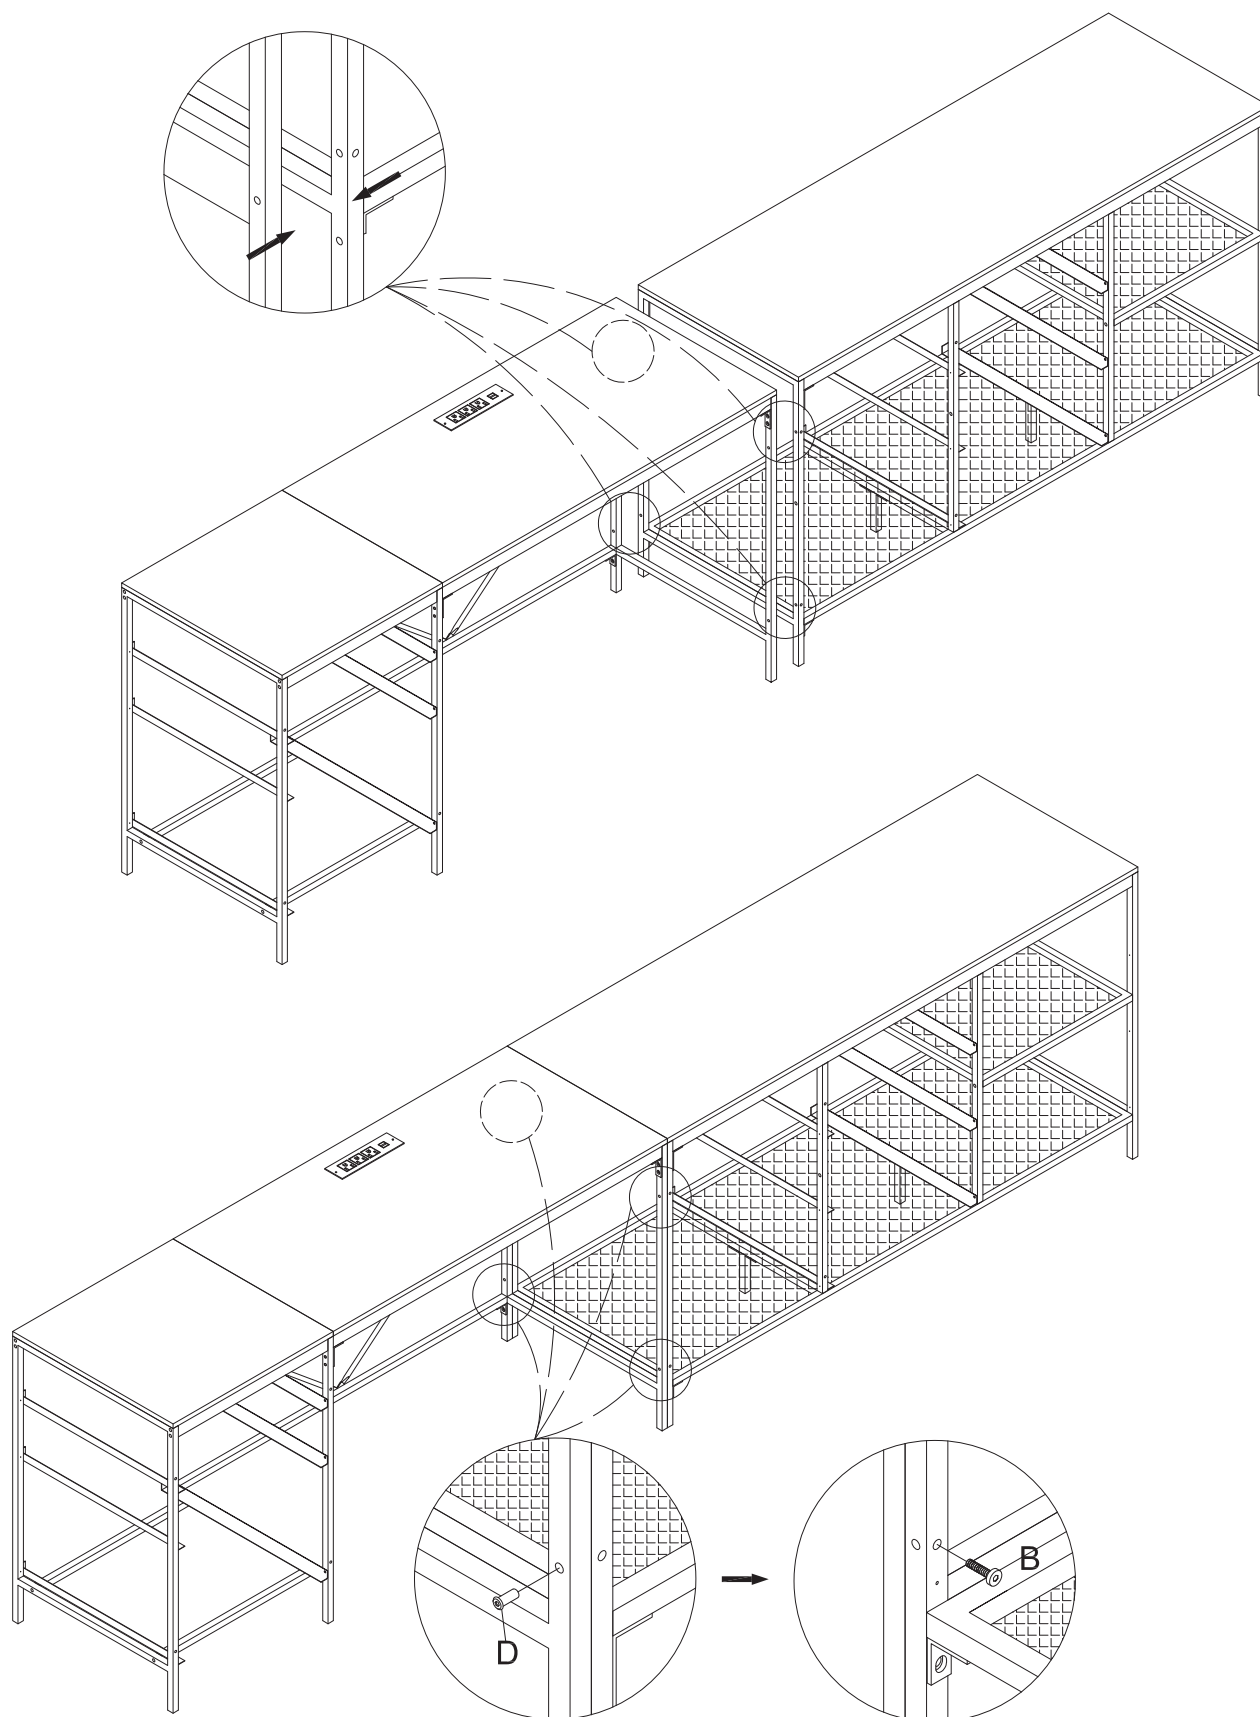

Dx4




Bx4




17

Pull these cloths onto the guide rail iron sheet.

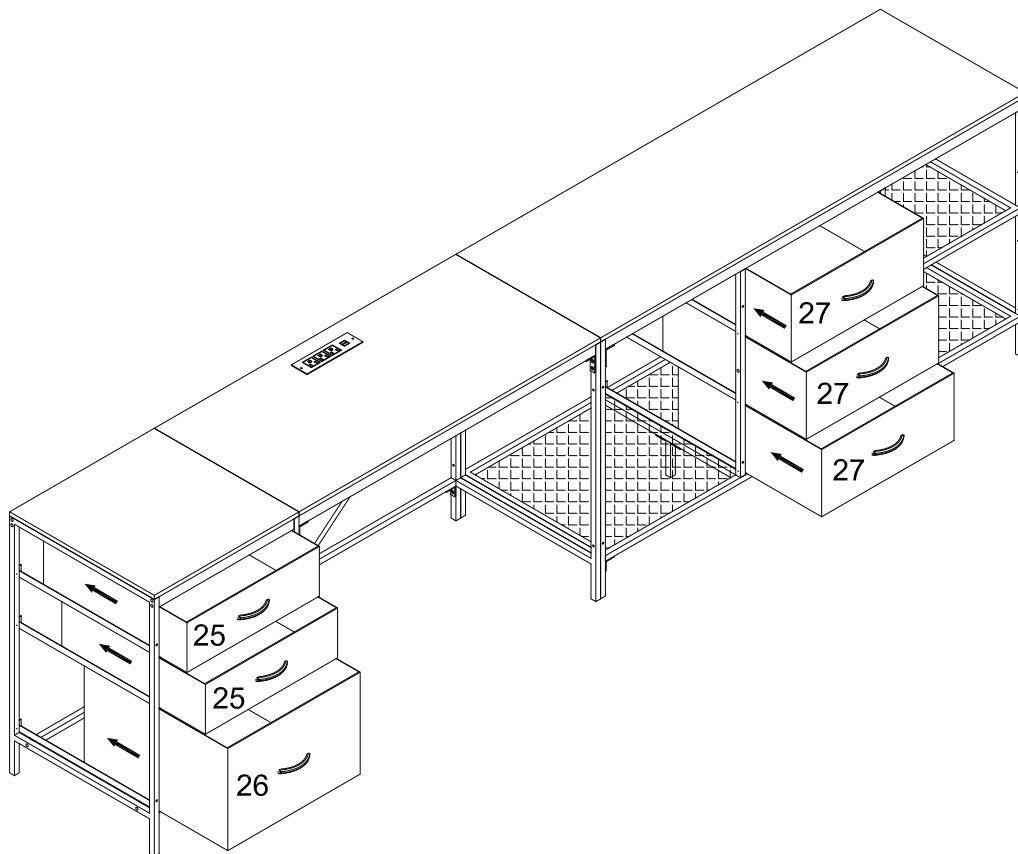

18

Place two shelves on the desktop at any position according to your own needs and preferences.

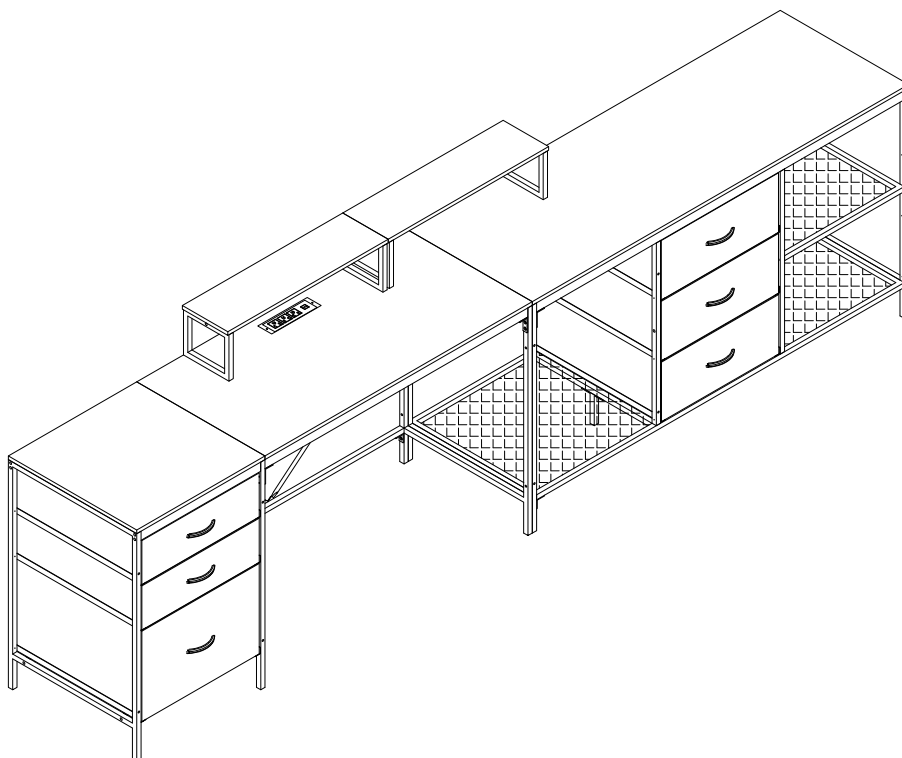


This installation method has been completed.

19

There are three assembly methods below, choose one according to your needs and preferences to assemble them together.


2

Lock the guide rail iron plates onto the iron frame and secure them with twelve screws.

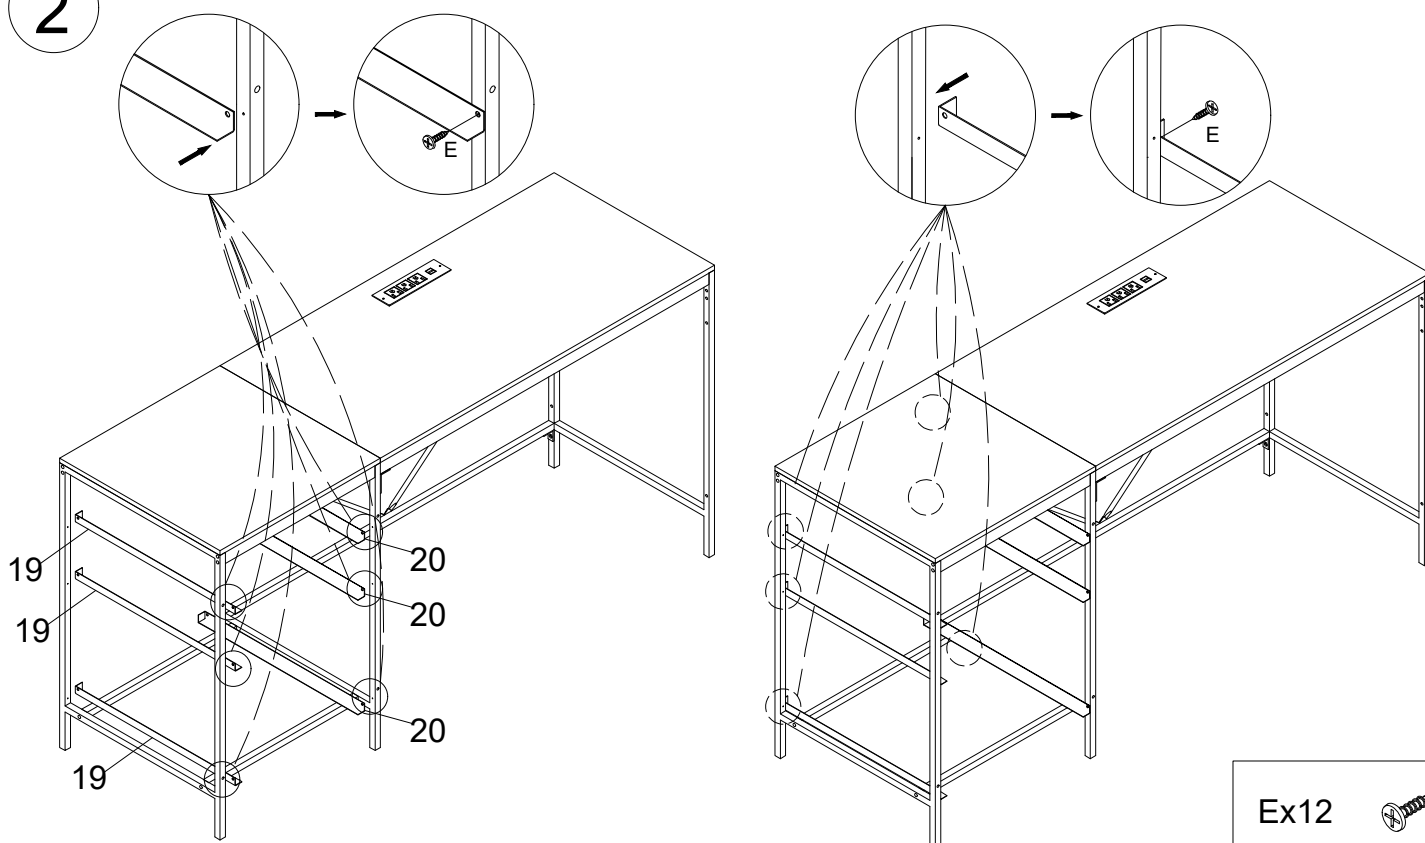


20

Lock the guide rail iron plates onto the iron frame and secure them with twelve screws.

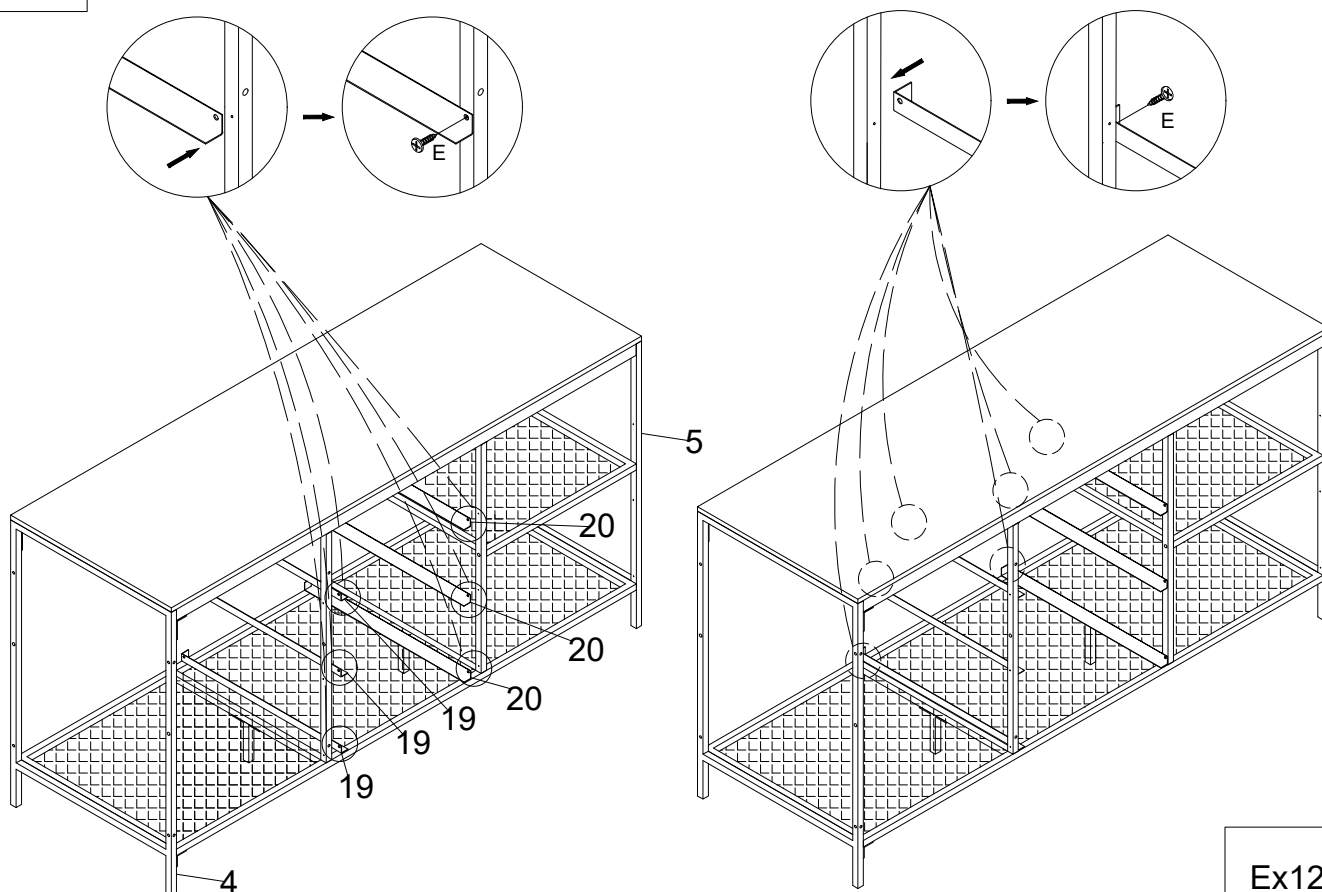

21

Put them together and secure them with four bolts and nuts.

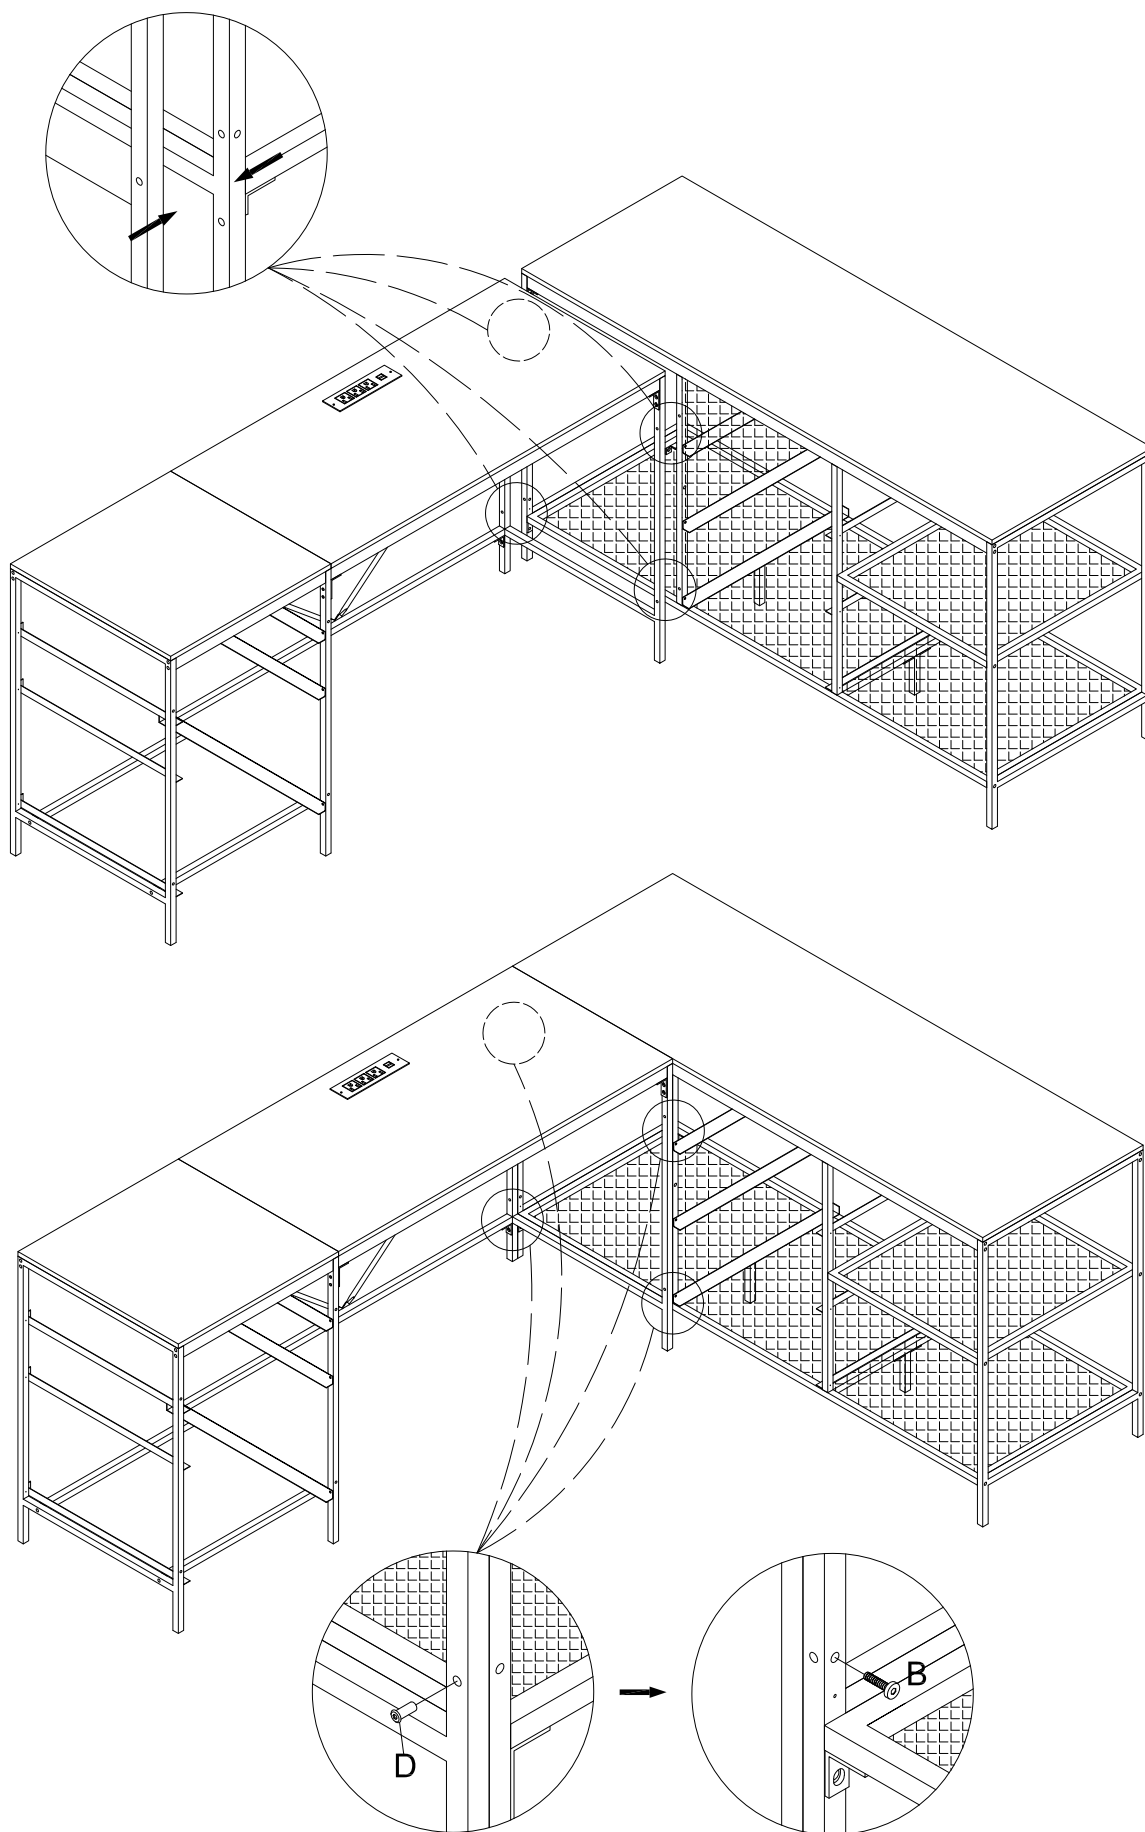

Dx4




Bx4




22

Pull these cloths onto the guide rail iron sheet.

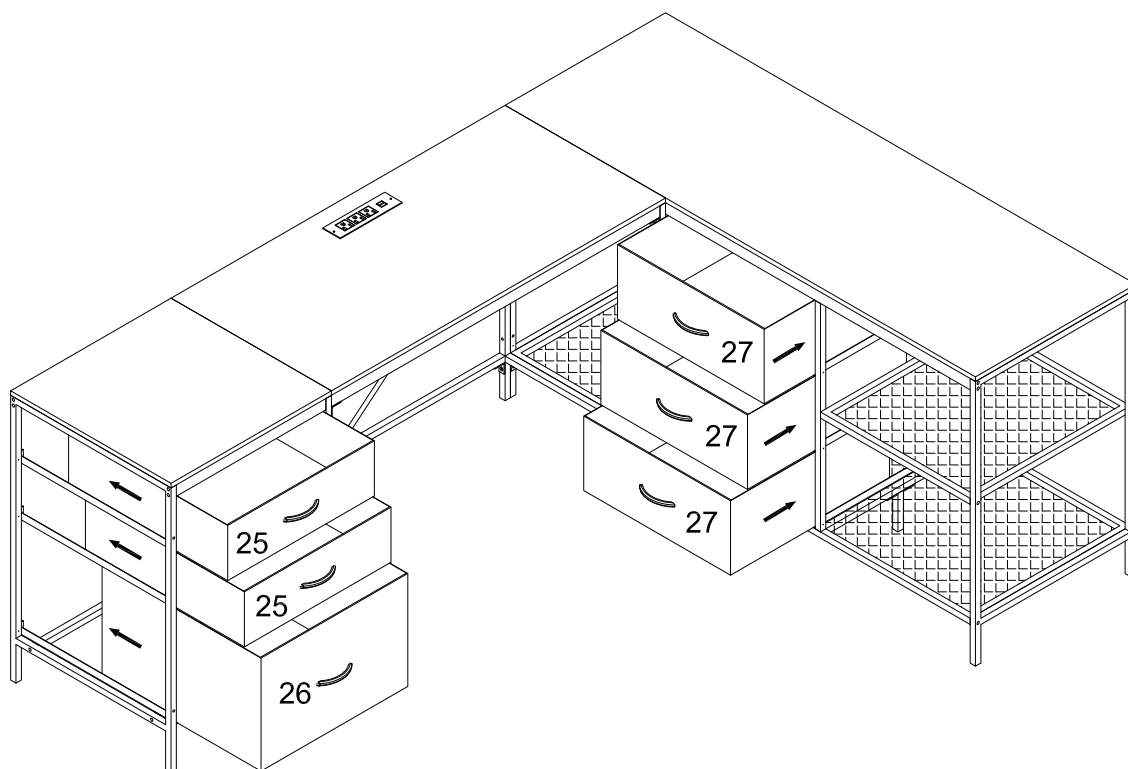

23

Place two shelves on the desktop at any position according to your own needs and preferences.

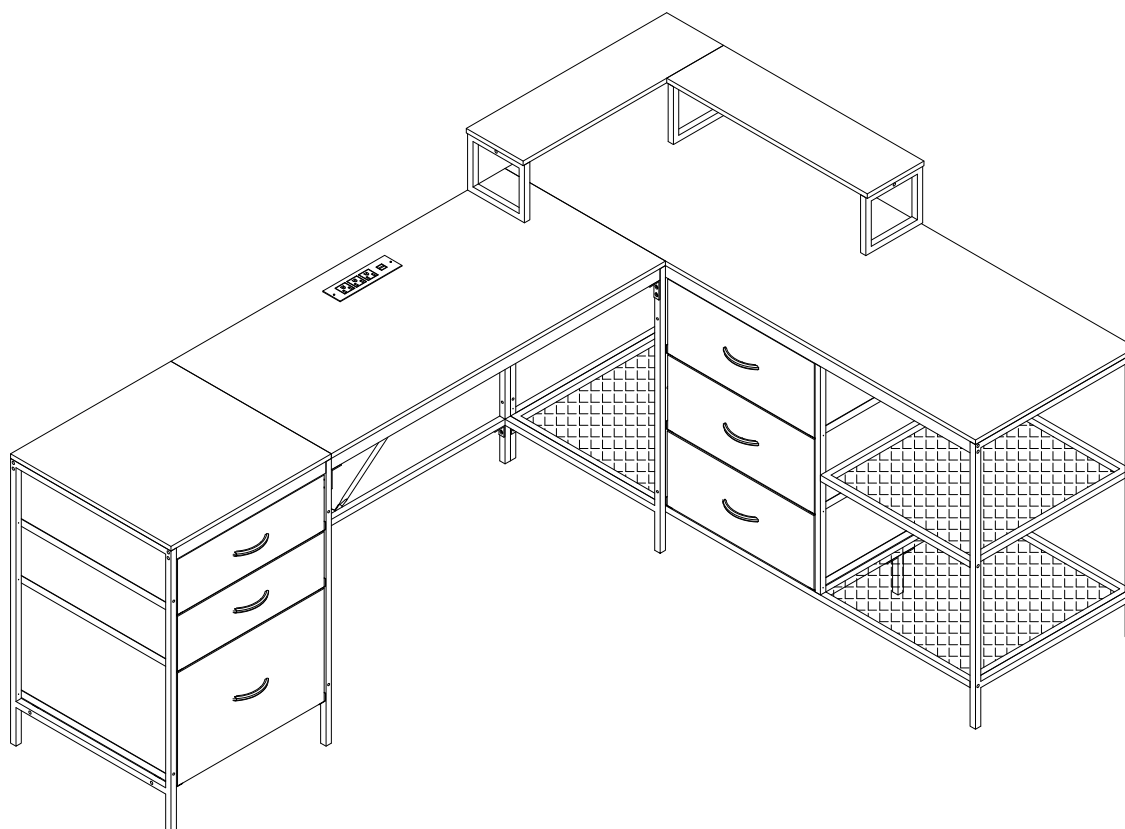


This installation method has been completed.

24

Lock the guide rail iron plates onto the iron frame and secure them with twelve screws.

3

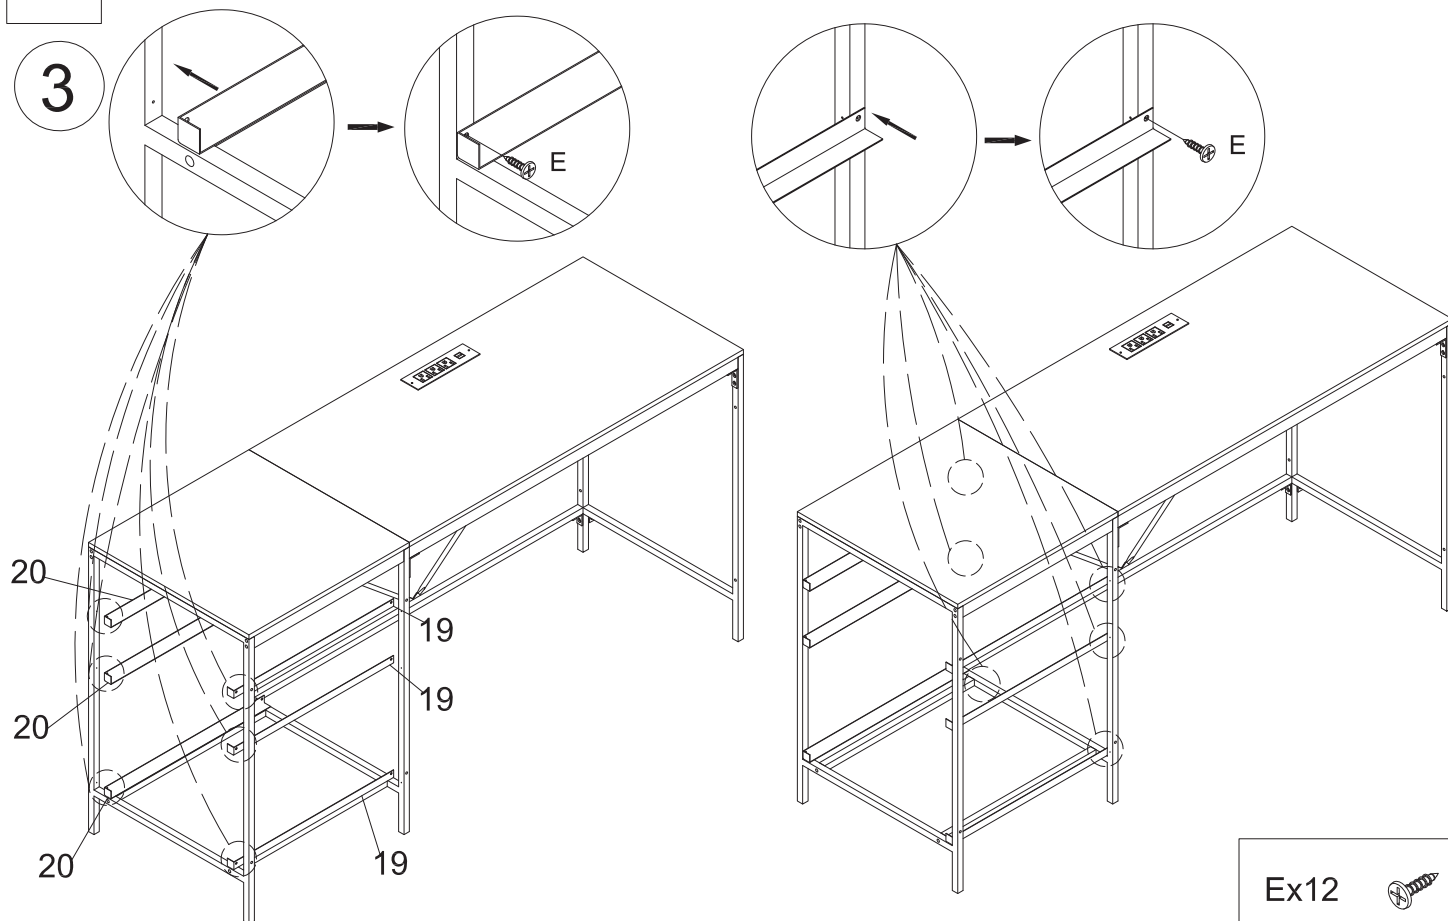


Ex12



25

Lock the guide rail iron plates onto the iron frame and secure them with twelve screws.

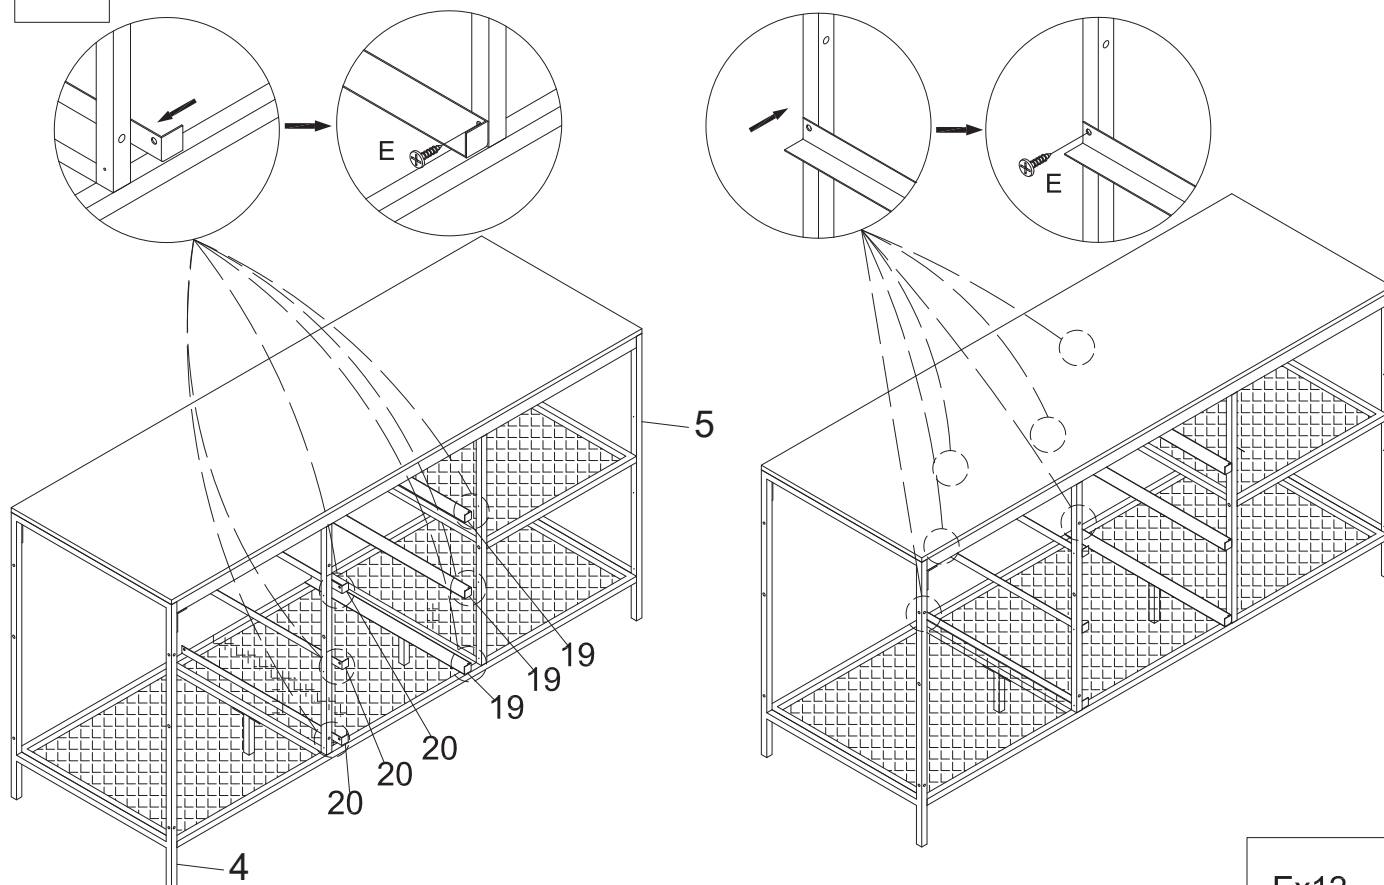


Ex12



26

Put them together and secure them with four bolts and nuts.

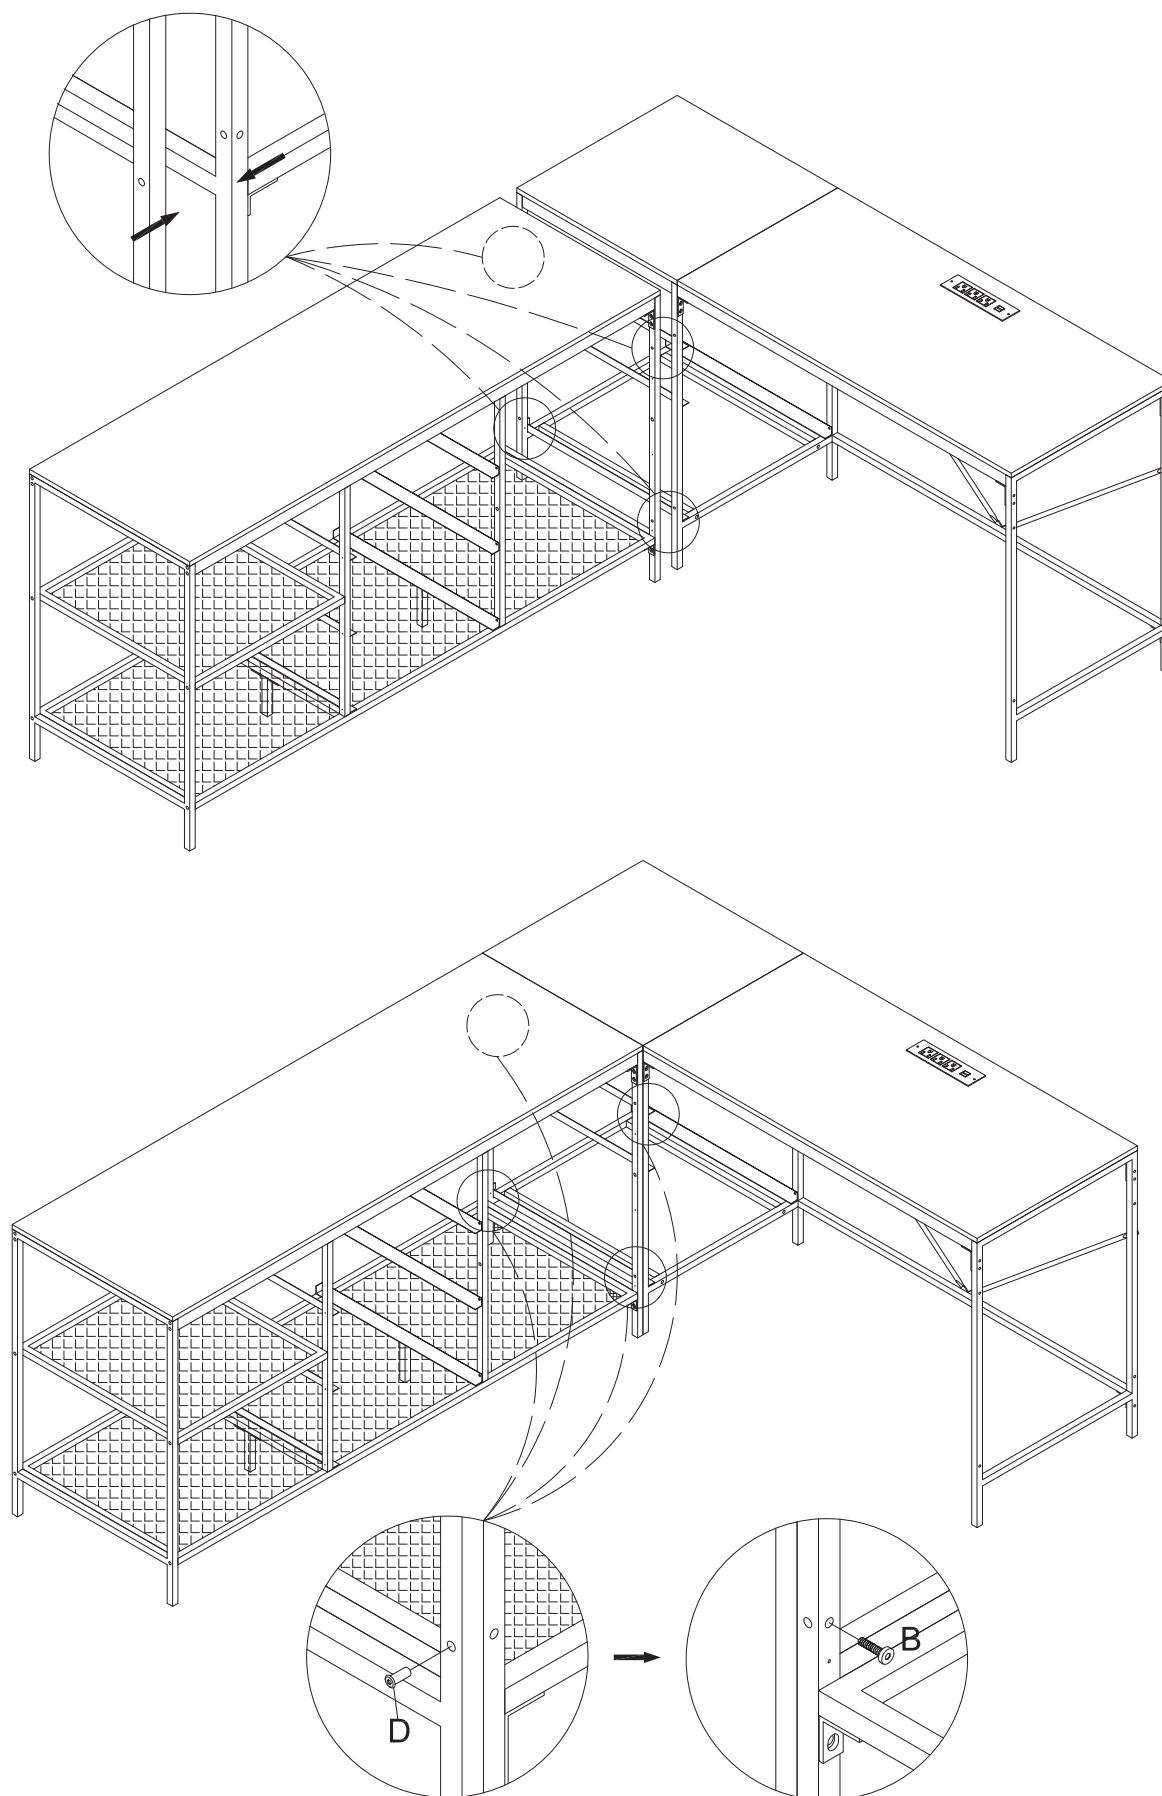

Dx4




Bx4




27

Pull these cloths onto the guide rail iron sheet.

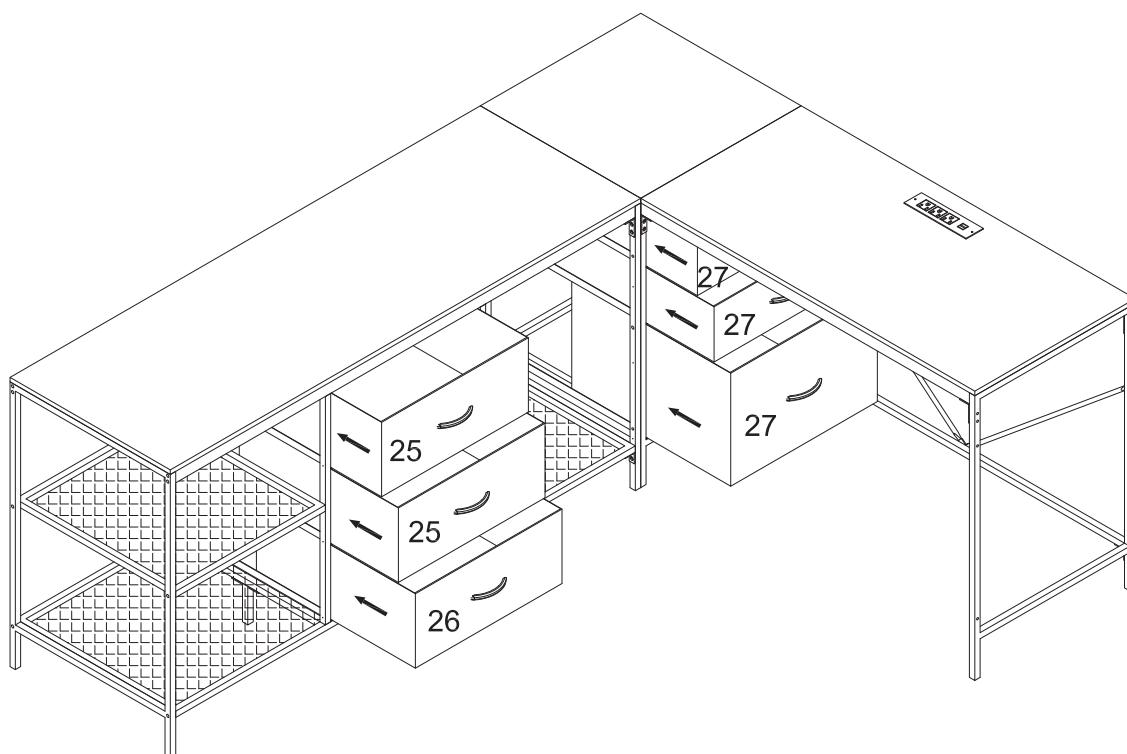

28

Place two shelves on the desktop at any position according to your own needs and preferences.

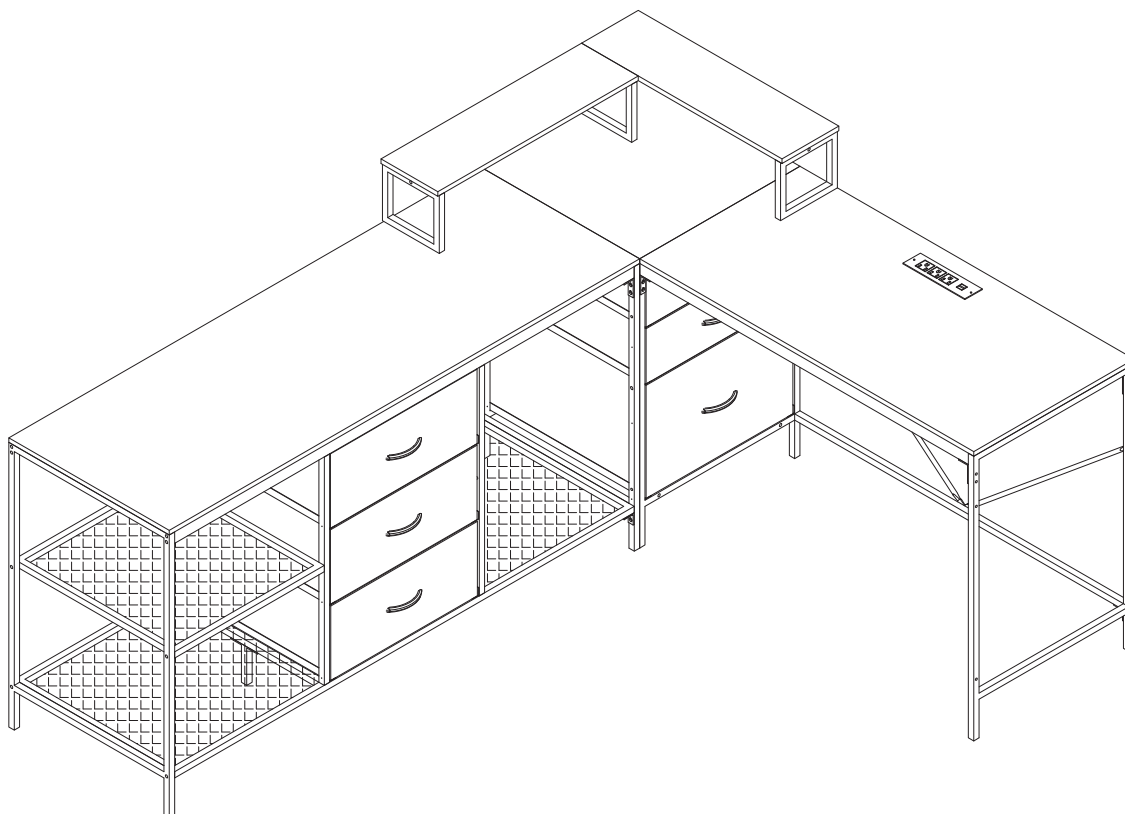

This installation method has been completed.