



ASSEMBLY INSTRUCTIONS

Dining chair

EEI-7893,EEI-7894/V0.03.07.26

modway



Questions?Contact us!
609.256.9000
cs@modway.com

Welcome. Let's get started.

Before you begin,here are some things to keep in mind:

Assembly will take most people **about 30 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools.Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting.Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat,carpeted area, with plenty of space to work.This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware?Need assistance?
Contact us before returning your item.
We're here to help!





Provided hardware:

A  Bolt M8x30mm x12

B  Flat Washer x12

C  Allen Wrench M8 x1

D  Non-woven fabric x4

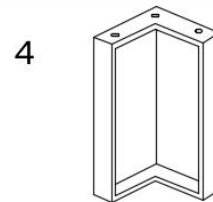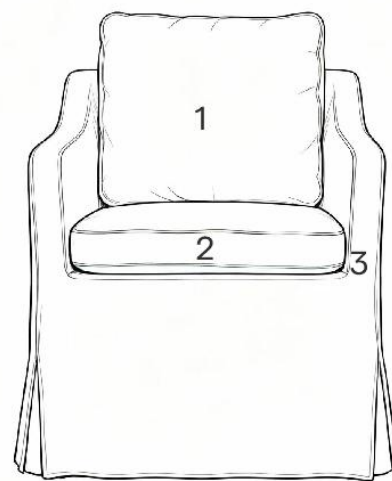


Furniture components:

1	Back cushion	x1
2	Seat Cushion	X1
3	Chair Body	x1
4	Corner Leg	x4


STEP 01

COMPONENTS

- | | | |
|----------|------------|-----------|
| 3 | Chair Body | x1 |
| 4 | Corner Leg | x4 |

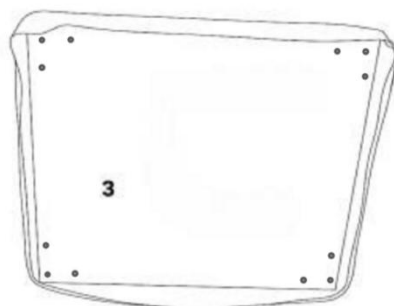

Corner legs and hardware inside

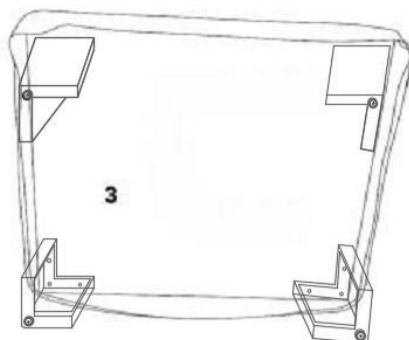


STEP 02

HARDWARE




- | | | |
|----------|------------------|------------|
| A | Bolt M8x30mm | x12 |
| B | Flat Washers | x12 |
| C | Allen Wrench M8 | x1 |
| D | Non-woven fabric | x4 |

COMPONENTS

- | | | |
|----------|------------|-----------|
| 4 | Corner Leg | x4 |
|----------|------------|-----------|

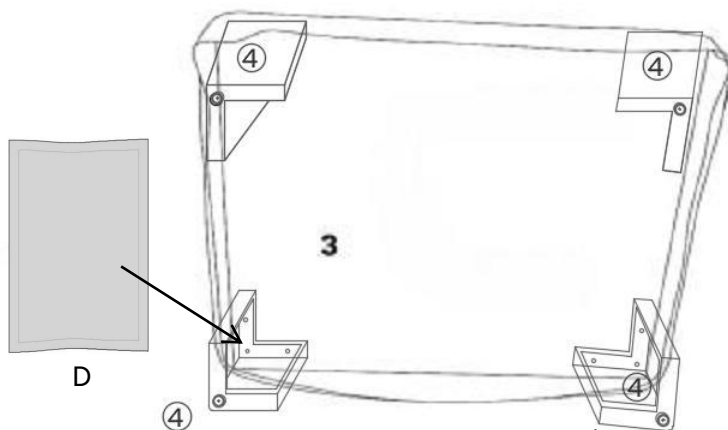


After installing the screws, cover the foot area with a non-woven material to conceal the internal screws.

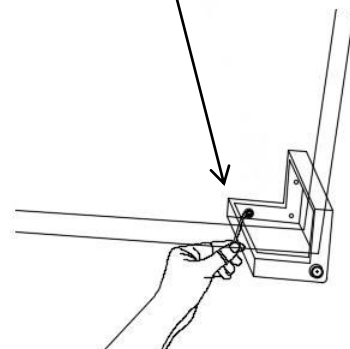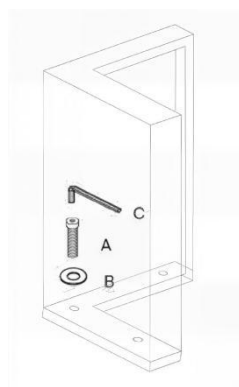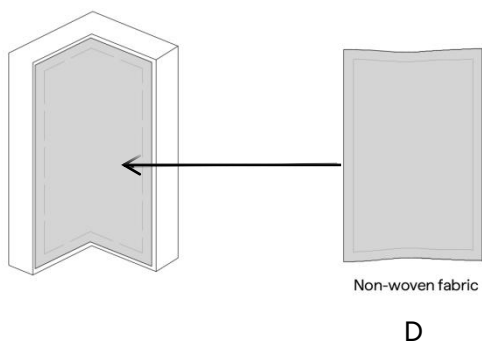

STEP 03

COMPONENTS

- | | | |
|---|--------------|----|
| 1 | Back Cushion | x1 |
| 2 | Seat Cushion | x1 |
| 3 | Chair Body | x1 |

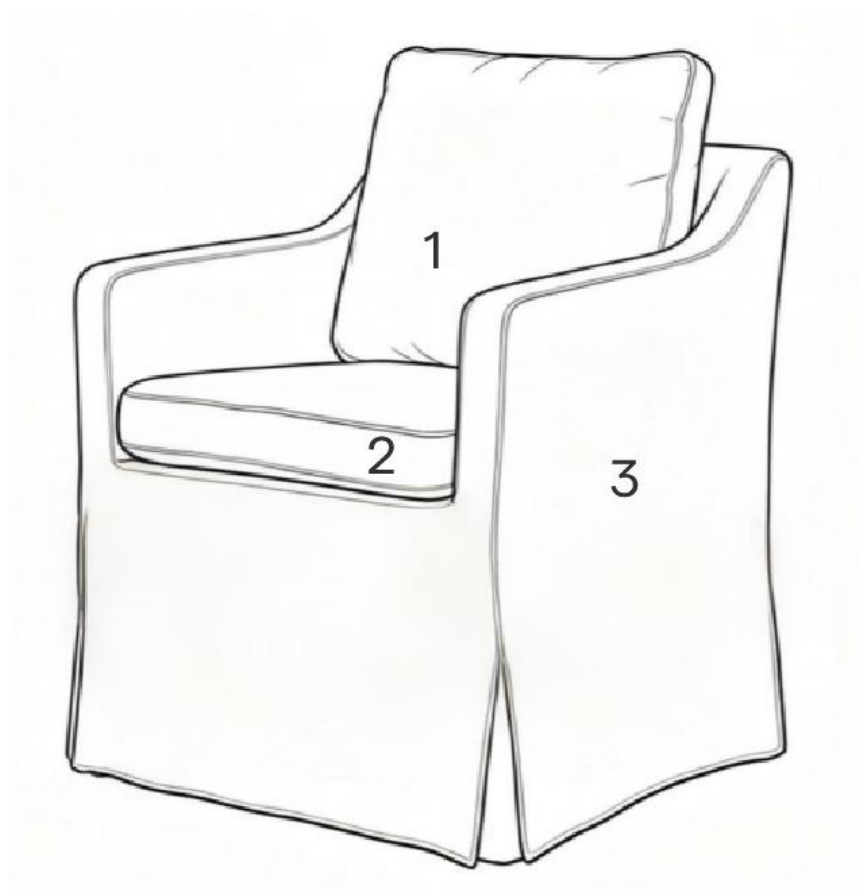

Great job!

Your new armchair is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.



CONNECT WITH US!

Tag us **@modway.furniture** and **#MyModwayHome** for a chance to be featured.

modway



Questions? Contact us!

609.256.9000

cs@modway.com