


4

STEP

Place one steel washer onto each of the four screws provided. Attach the correct Socket bit for the screw onto a hand driver or an electric drill. Carefully tighten the screw all the way into the wall.

Don't over tighten the screws or you may break off the screws or strip out the holes.

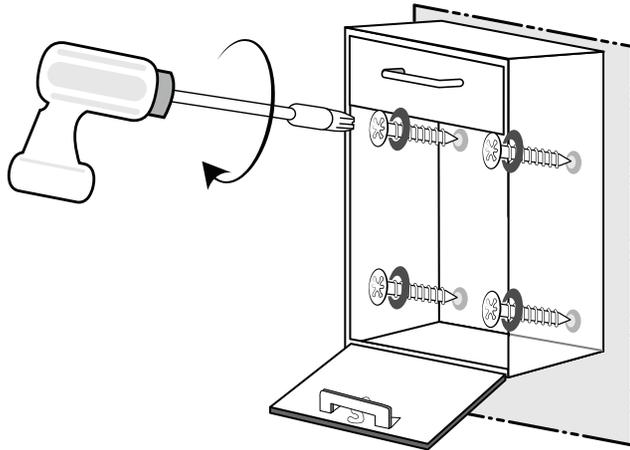

# ULTIMATE DROP BOX INSTALLATION GUIDE



**ADIRoffice**

An Adir Corp Company

[www.adircorp.com](http://www.adircorp.com)  
[customersupport@adircorp.com](mailto:customersupport@adircorp.com)



**ADIRoffice**

An Adir Corp Company




Please read and comply with these instructions prior to the initial operation of the installation. Keep the Installation guide for future reference or for subsequent possessors.


Item#631-04/05

# Parts and Hardware List

**1** Wall Mount Secure MailBox

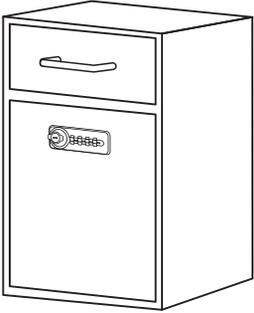

**2** Secure Key

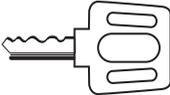

**3** Mounting Screws



**4** Steel Washers  
Used With Mounting Screws



**5** Rubber Gaskets



**6** 6.4mm Drill Bit





**7** Drive Bit




# Installation

**1** **STEP** Use a Screwdriver to remove handle from inside of the bin door and use provided screws to attach handle to outside of the bin door.

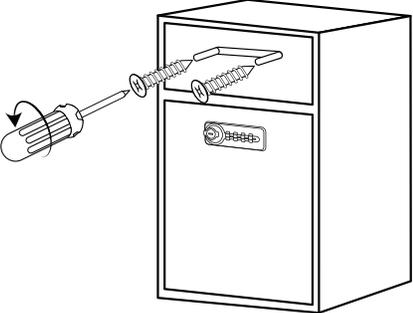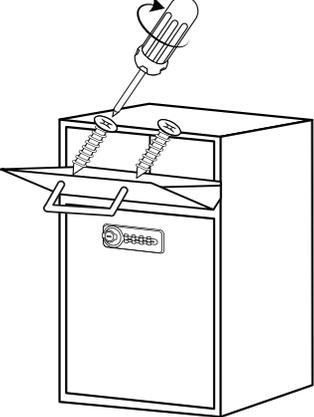**2** **STEP** Use the Drilling Template provided, Mark the 2 top holes levelly and about 51" to 64" above the floor, or according to your desired height, then mark the bottom holes.

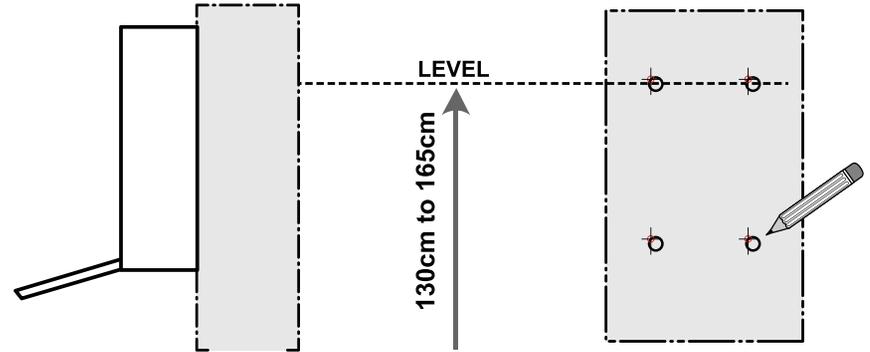

**3** **STEP** Use the 4mm Drill bit provided, create four Holes at least 10mm deeper than screws provided, or about 40mm deep, if the material is unusually hard you may need to use a rotary impact drill rather than a standard drill to make the holes.

Call a expert if needed. Put a small amount of caulk or silicone into each hole.

