
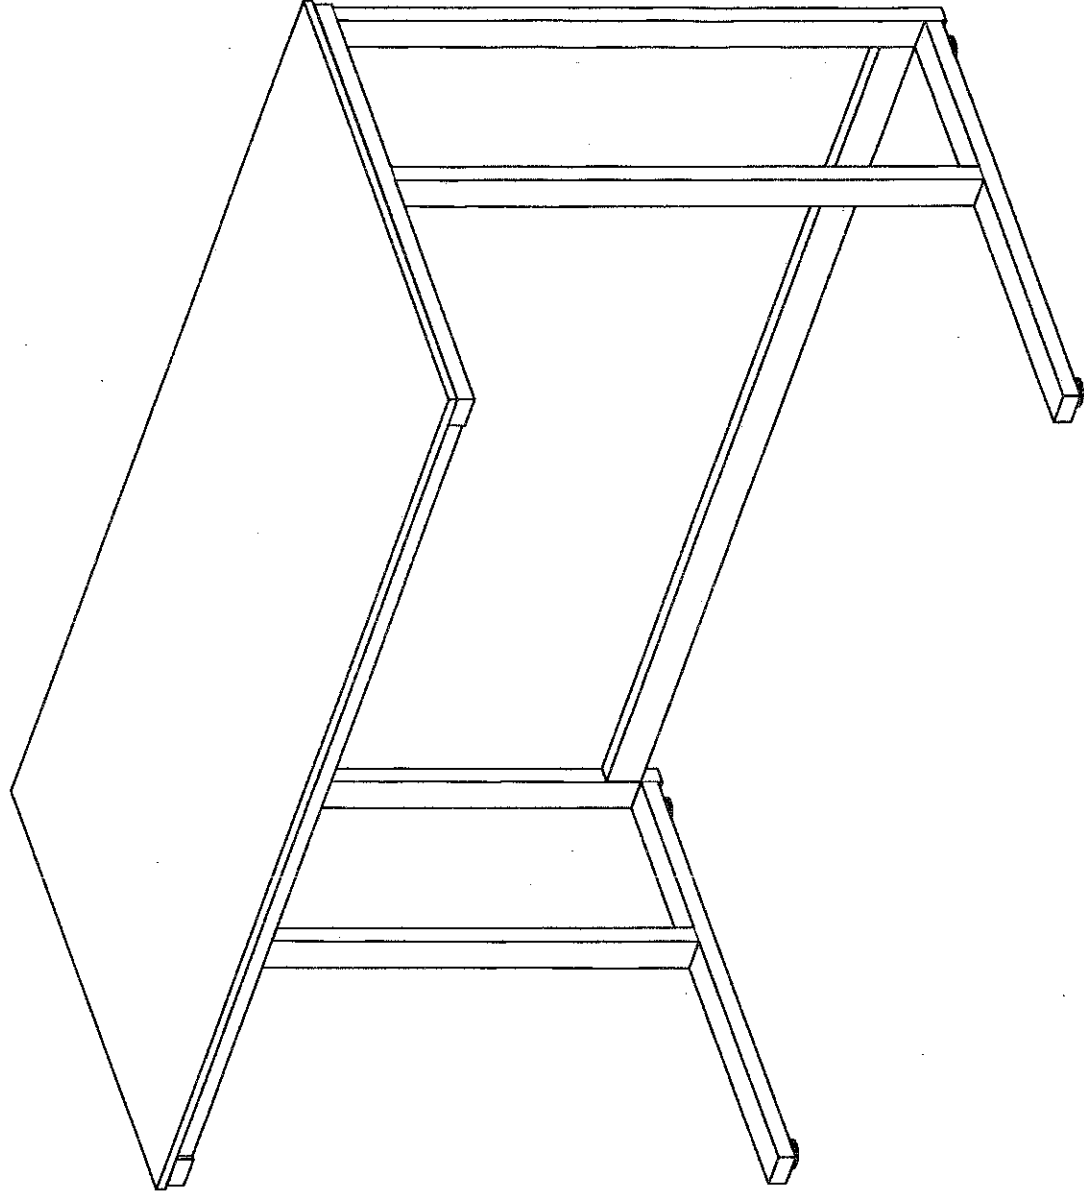
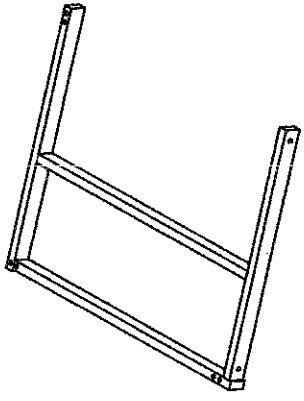
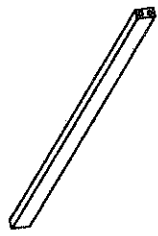
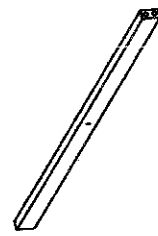
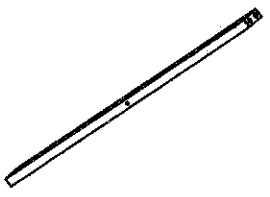


NAN--WK--055--GG

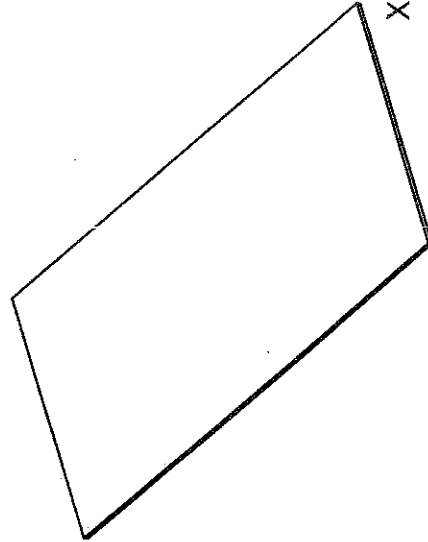


IMPORTANT: DON'T FASTEN BOLTS UNTIL ALL PARTS IN POSITION.

①	 M6X55MM X 12
②	 X6
③	 X4


A	 x2	B	 x1
C	 x1	D	 x1
E	 x1		

1

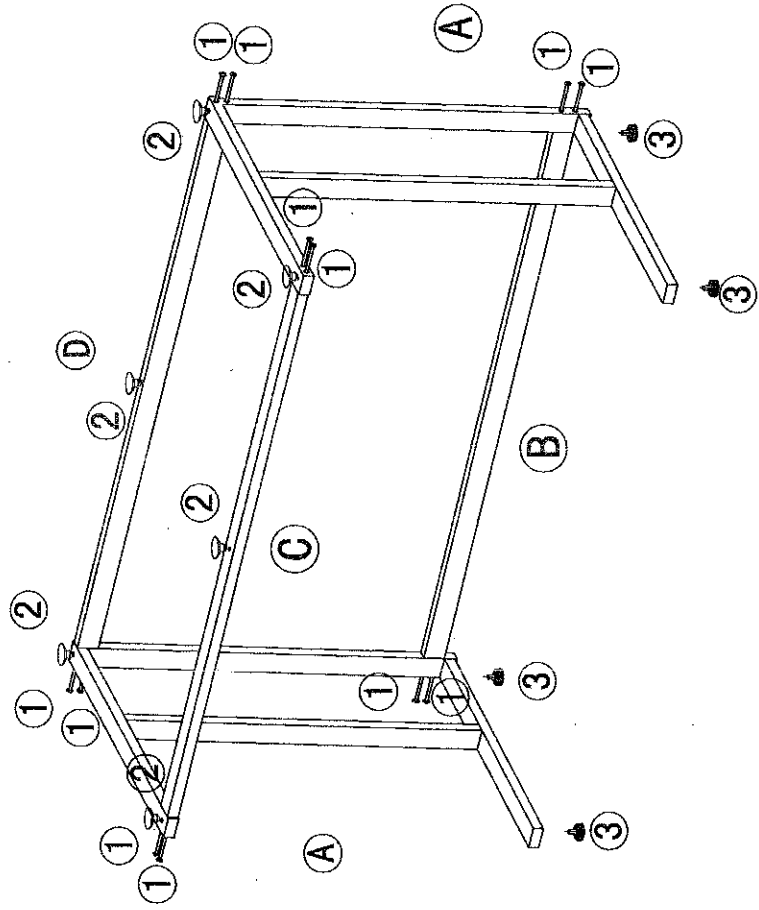

- ① x12
- ② x6
- ③ x4

2

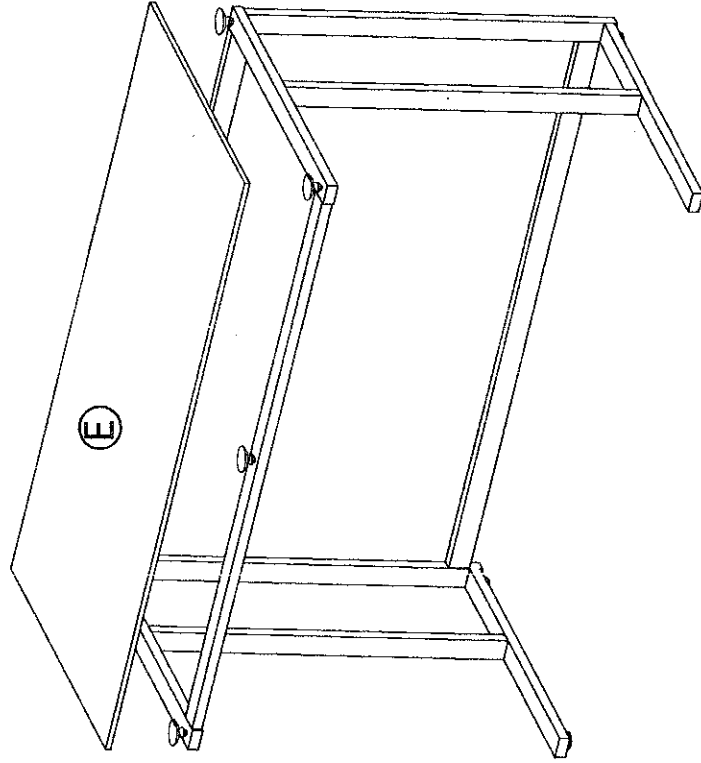

100

100

100

100

100

100

100

100