


A160S



A*6	B*6	C*30	D*2	E*10	F*1	G*1	H*10	I*1

Reminder: Tighten the screws by seven minutes during installation, and then tighten them after all is completed!










Installation principle of eccentric parts:

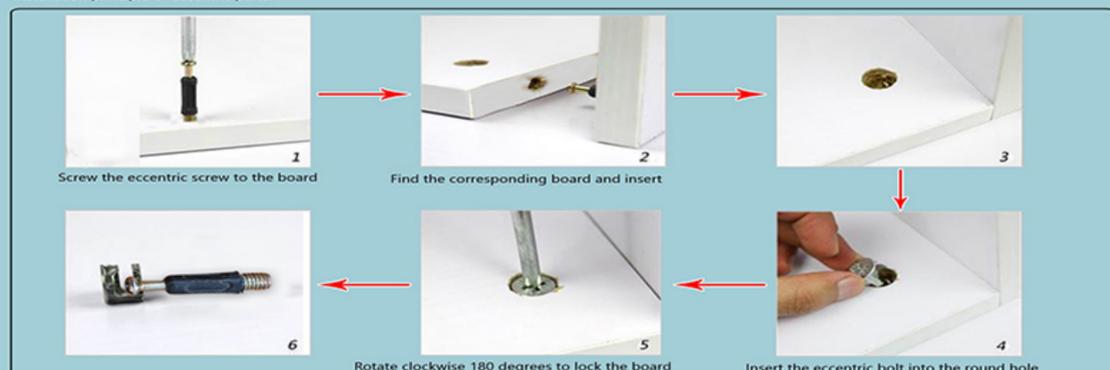

Installation steps:

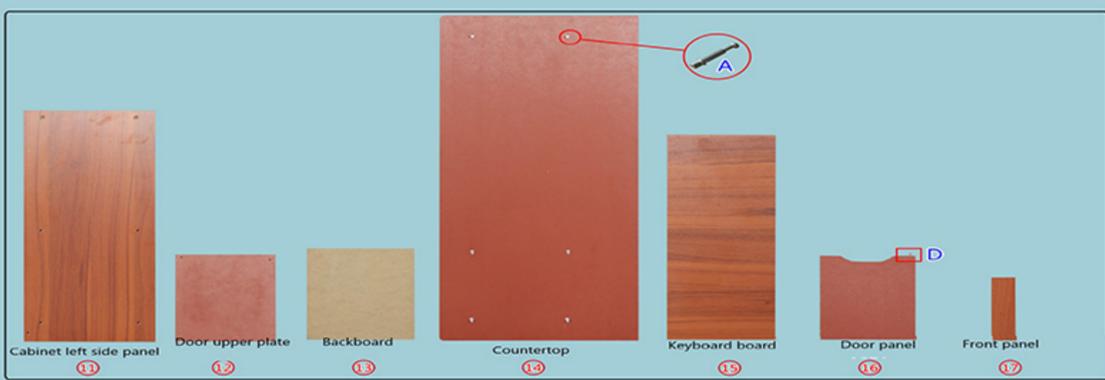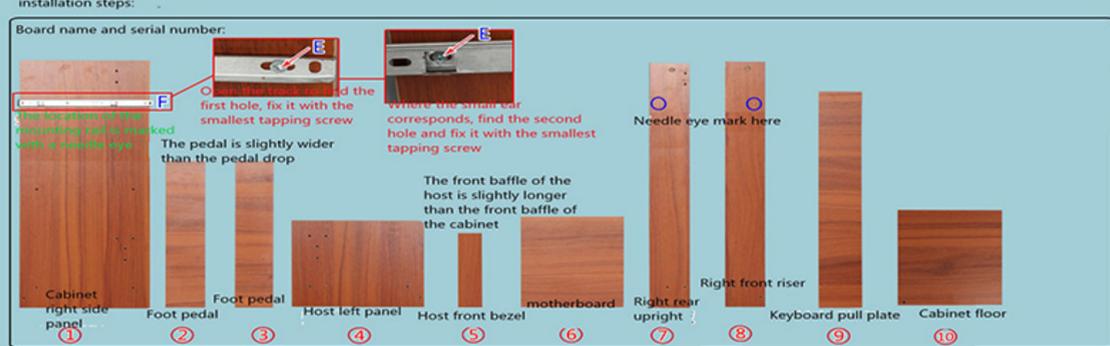

Step 1: Whole part installation

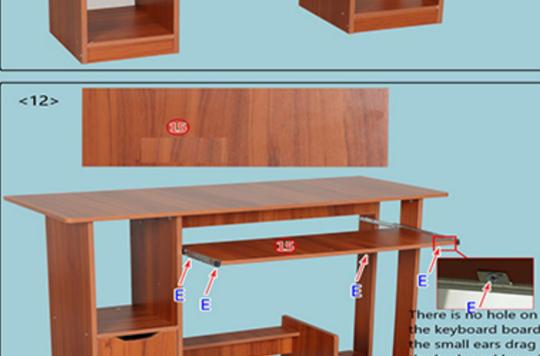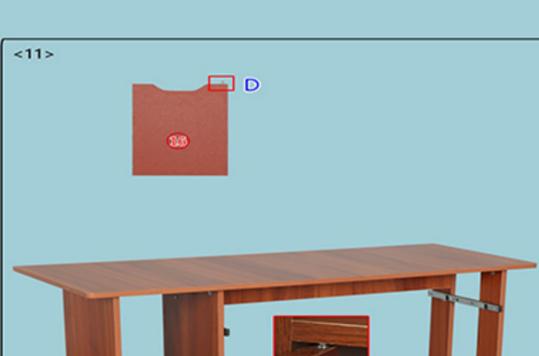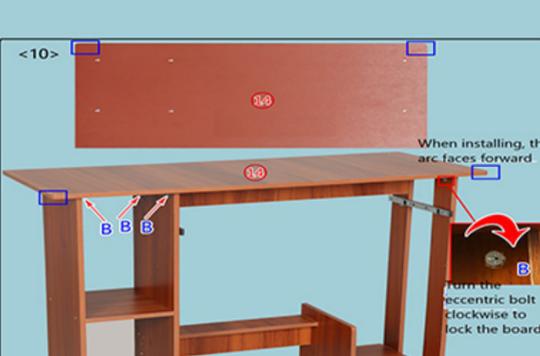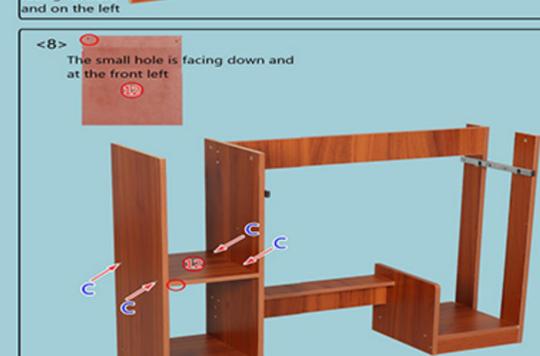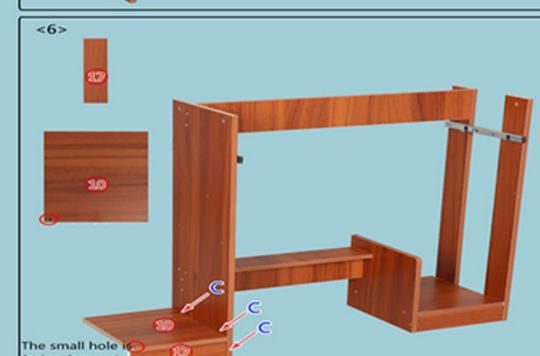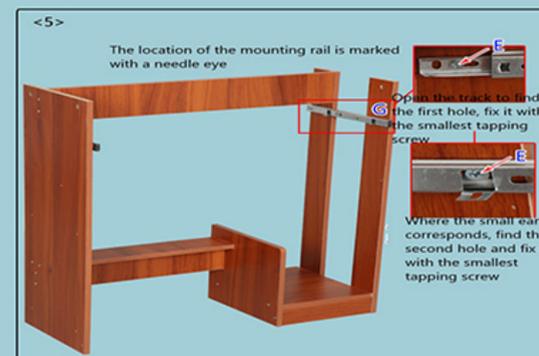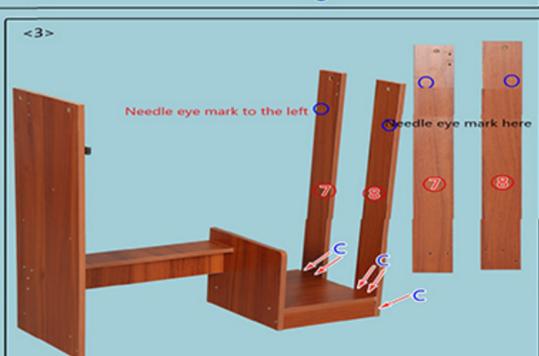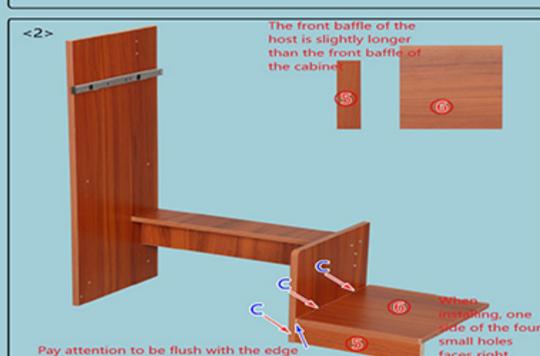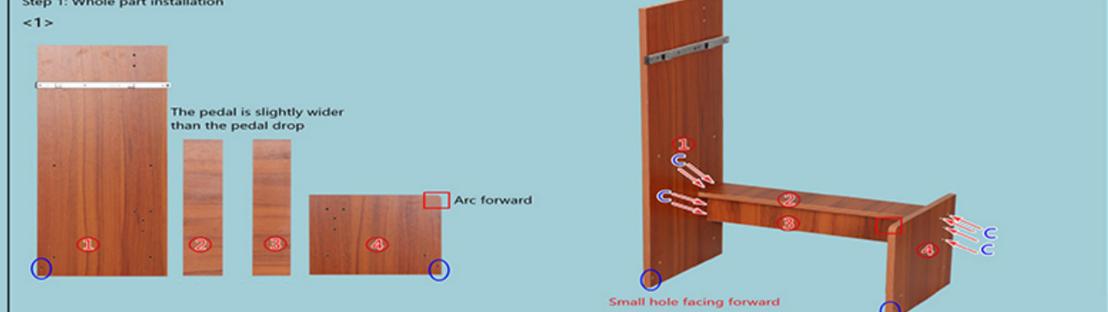

Step 2: Installation is complete



Complete the picture!