

Kit Contains:

- (2) 2" Aluminum H-Posts
- (2) Top/Bottom U-Channels (Rails)
- (2) Mid H-Channels (Rails)
- (2) Plastic Inserts for Outside of Posts
- Surface Mount Kit
- Caps
- Hardware (Screw Kit)







Sold Separately:

- Decorative Screen Panels
- $\frac{3}{8}$ " Bolts/Screws for Mounting Base Plates

Tools Needed:

- Drill
- Pencil
- $\frac{1}{8}$ " Drill Bit
- Tape Measure
- Rubber Mallet

1. Determine where you would like to install the frame kit. Then, lay posts down flush on a flat surface or table.
2. Install base plates to bottom of posts. Using #2 square drive drill bit provided in surface mount kit, screw base plate to bottom of post through the 4 screw bosses (Fig. 1). #2 Square drive bit should fit within center portion of Phillips screw head (Fig. 2).
3. Set first post in desired location. Using appropriate $\frac{3}{8}$ " bolts/screws (sold separately), mark and drill base plate into surface, locking it into place.
4. Place two 3" spacer blocks to support bottom rail. Take bottom rail and insert into channel of first post, resting on the 3" spacer blocks. (Fig. 3). **NOTE:** This step is to set distance in-between posts.
5. Take second post and insert opposite side of bottom rail into the channel of this post. Be sure rail is fully inserted into the post. Lock second post into position by repeating Step #3.
6. Next, secure bottom rail into place. Using a $\frac{1}{8}$ " drill bit, pre-drill a hole through the post and rail, taking care not to drill through other side (Fig. 4). Screw should be installed directly on the small groove of the post (Fig. 5). Be sure not to drill all the way through the post. Using the #2 Square drive bit provided in surface mount kit, secure screw into both posts.
7. Once screws are secure in both posts, slide Decorative Screen Panel in-between posts in grooves from top until it rests in the bottom U-Channel. **TIP:** Be sure panels are all facing the desired direction before assembling.
8. Slide H-Channel in the groove from the top, resting it on the top of the Decorative Screen Panel. Lift H-Channel up $\frac{1}{8}$ " (to allow for expansion and contraction), then pre-drill a hole through the posts and rail, taking care not to drill through other side. Screw should be installed directly on the small groove of the post, connecting with the H-Channel (Fig. 6).
9. Repeat steps 7 & 8 for the middle and top panel. **NOTE:** Always use a tape measure to verify rails are equal space from each other and that they are level.
10. Place post caps on top of posts (lining up the tabs underneath to the holes in the post). Using a rubber mallet, fully seat the cap onto the post (Fig. 7).
11. If not adding another set of panels, take plastic strip and push into outer groove of posts.
12. Assemble trim ring over plate. Take one side of trim ring and push plugs through holes underneath. Take second half of the trim ring and push together (Fig. 8). Slide over plate for a finished look.

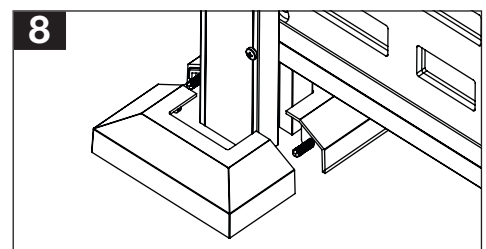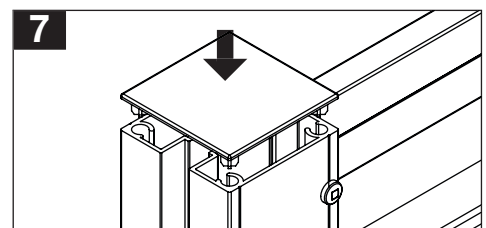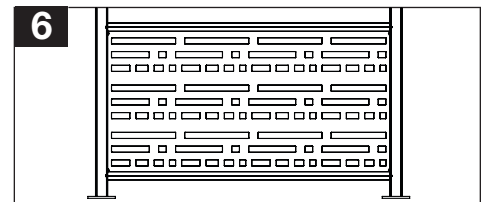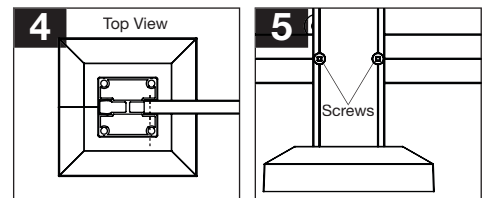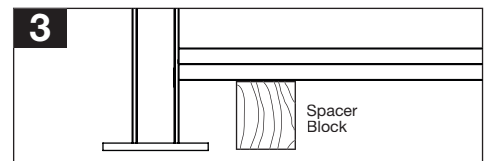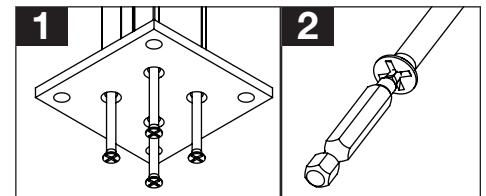

To register your product, please visit:
FreedomProduct.com

To obtain and review a copy of the warranty please go to: Freedomproduct.com/warranty.
You can also contact 1.888.418.4400 or write to Freedom Outdoor Living,
7830 Freeway Circle, Middleburg Heights, Ohio 44130 to obtain a copy of the warranty.