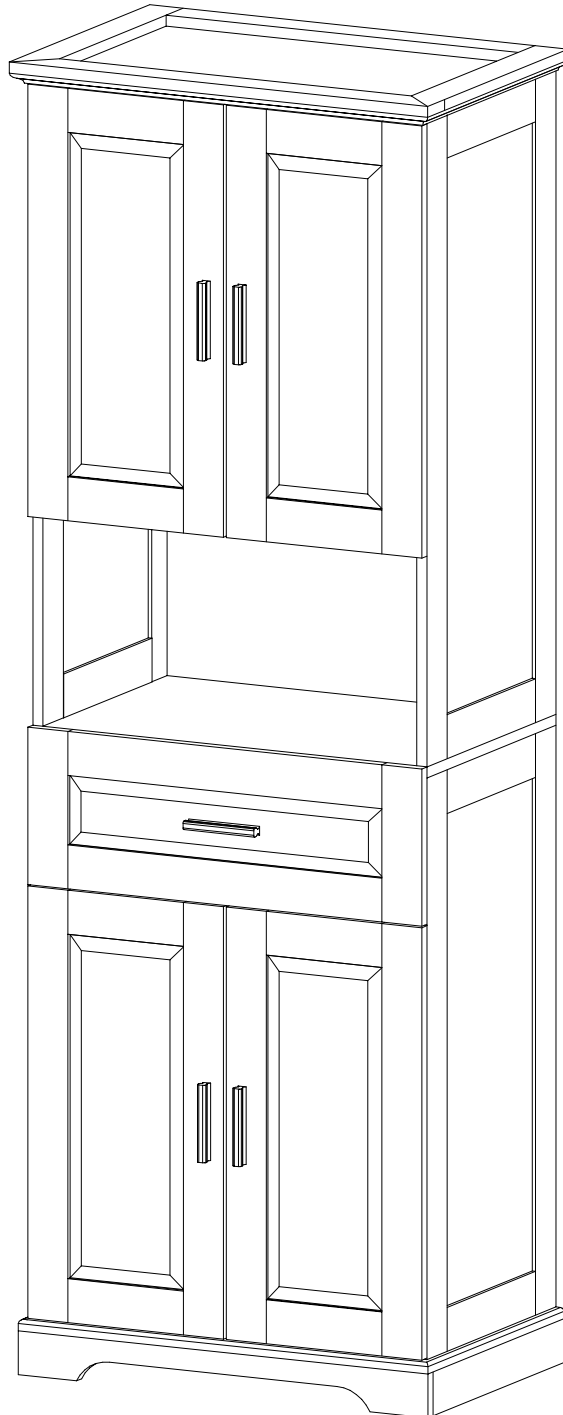
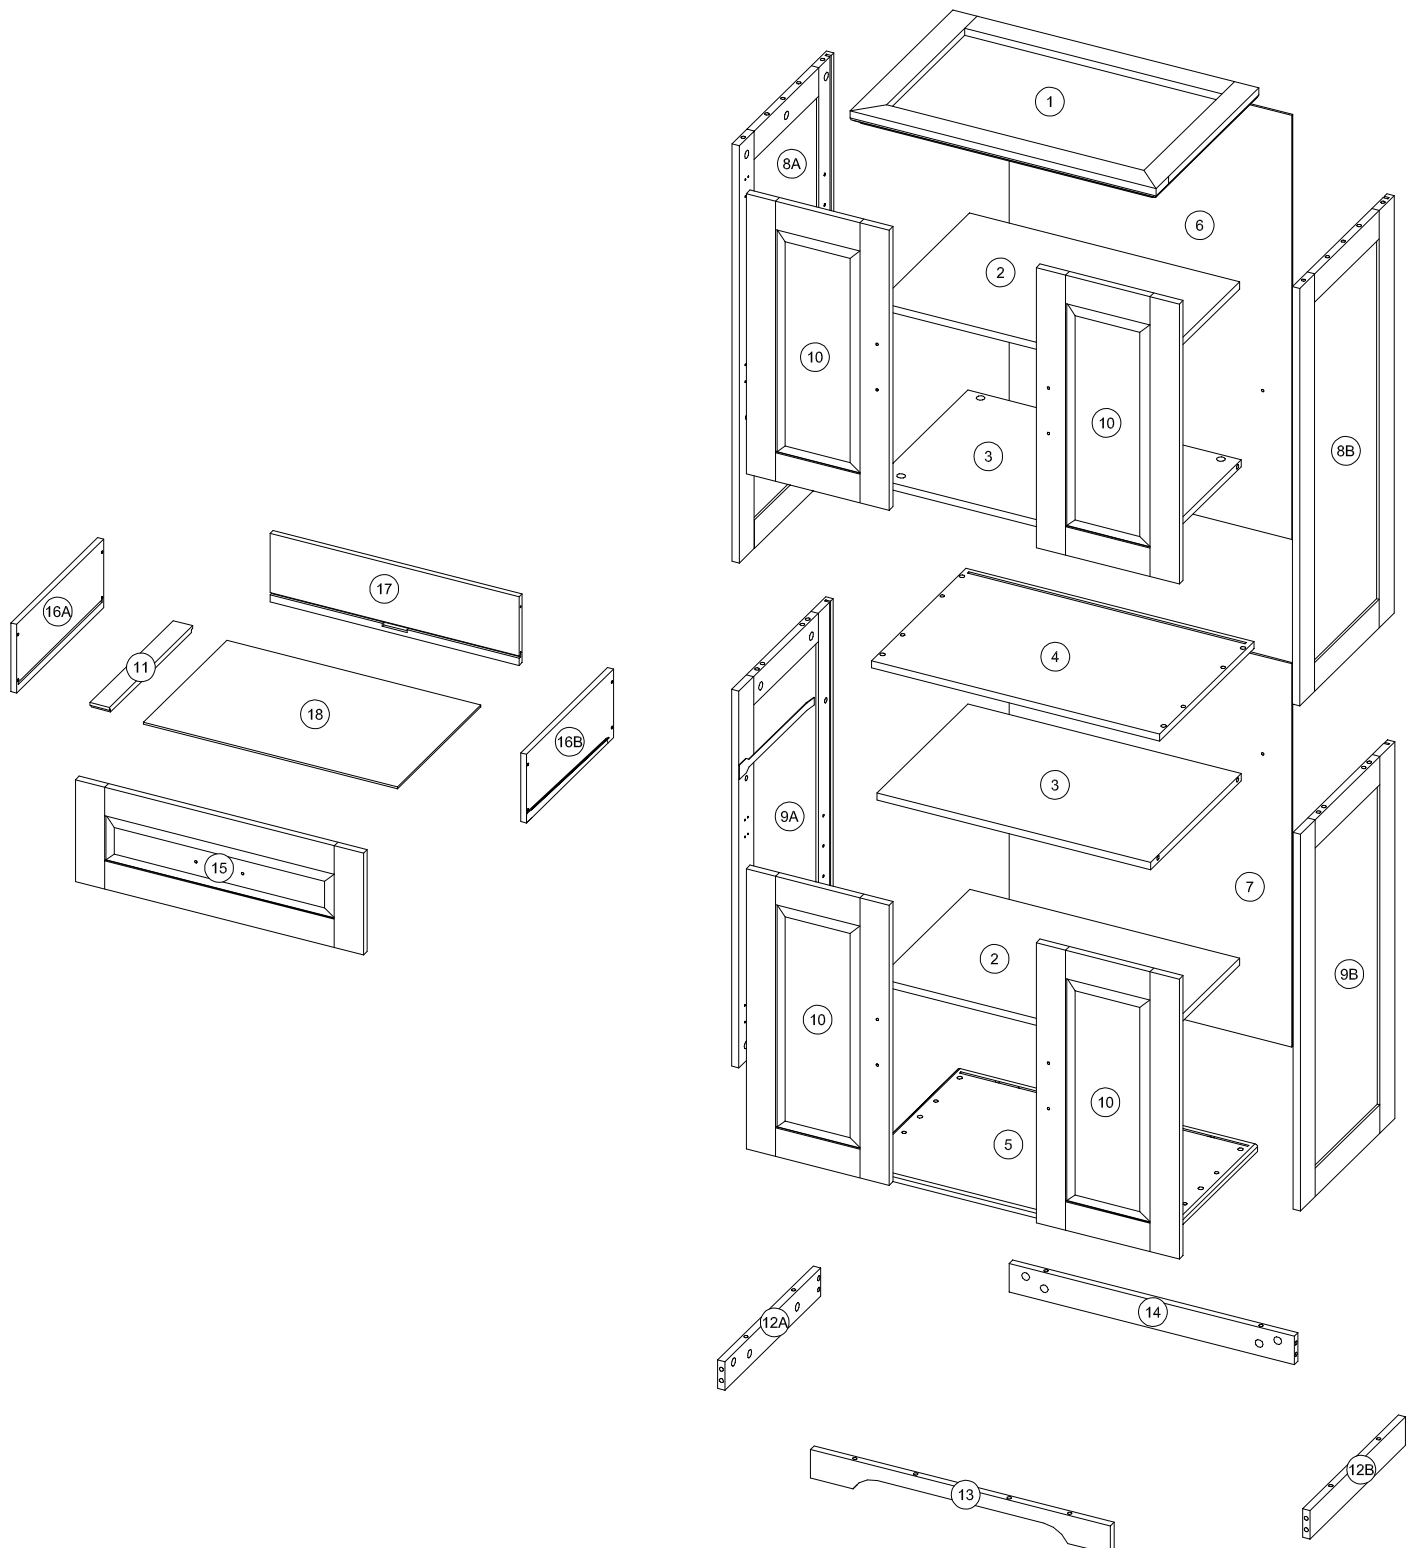


ASSEMBLY INSTRUCTION

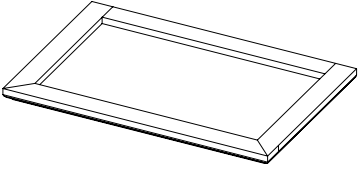
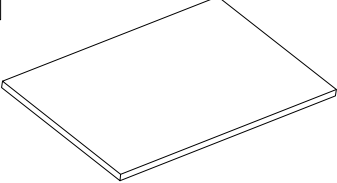
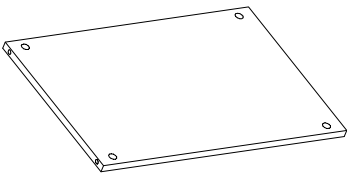
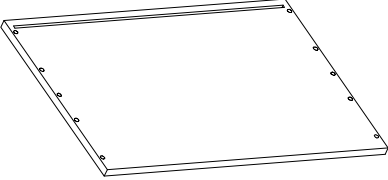
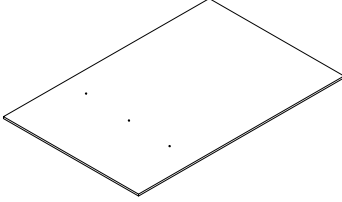
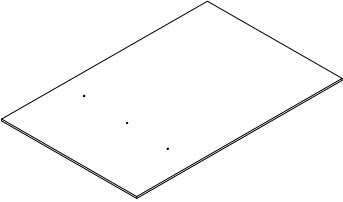
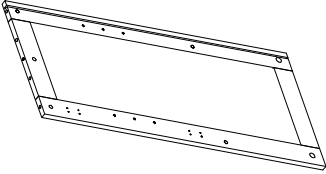
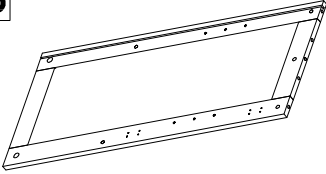
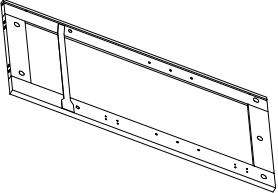
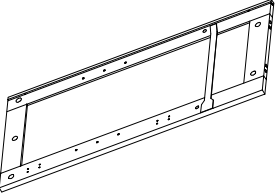
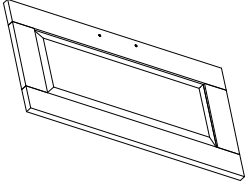
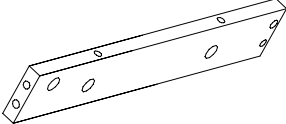
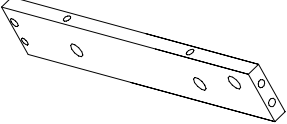


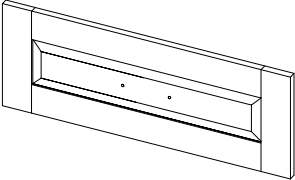
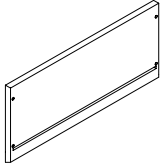
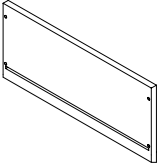
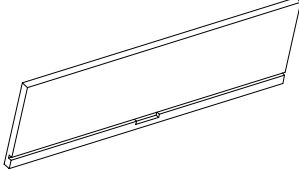
SKU CODE: (N725P192478)



ASSEMBLY INSTRUCTION

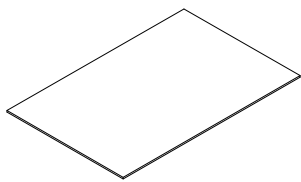


Part List (N725P192478)

1		2		3	
The top of the cabinet-1pcs		Moving Shelves - 2pcs		Fixed Shelf - 2pcs	
4		5		6	
Cabinet Compartment Panels - 1pcs		Cabiner Bottom - 1pcs		Cabinet Back - 1pcs	
7		8A		8B	
Cabinet Back - 1pcs		Side Edge of Cabinet - 1pc		Side Edge of Cabinet - 1pc	
9A		9B		10	
Side Edge of Cabinet - 1pc		Side Edge of Cabinet - 1pc		Cabinet Wings - 4pcs	
11		12A		12B	
Drawers-Support Bottom - 1pcs		Short bar - 1pc		Short bar - 1pc	
13		14		15	
Short bar - 1pc		Short bar - 1pc		Drawer Front Panels - 1pc	
16A		16B		17	
Drawer Side Panels - 1pc		Drawer Side Panels - 1pc		Drawer Back Panels - 1pc	






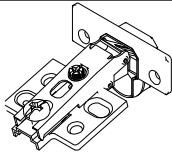

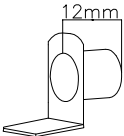


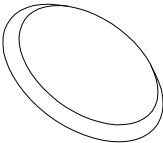
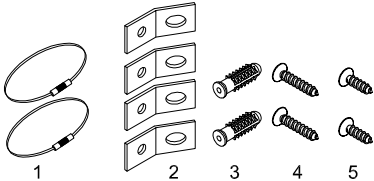
Part List (N725P192478)


18



Drawer Bottpm Panels - 1pc


Hardware List (N725P192478)

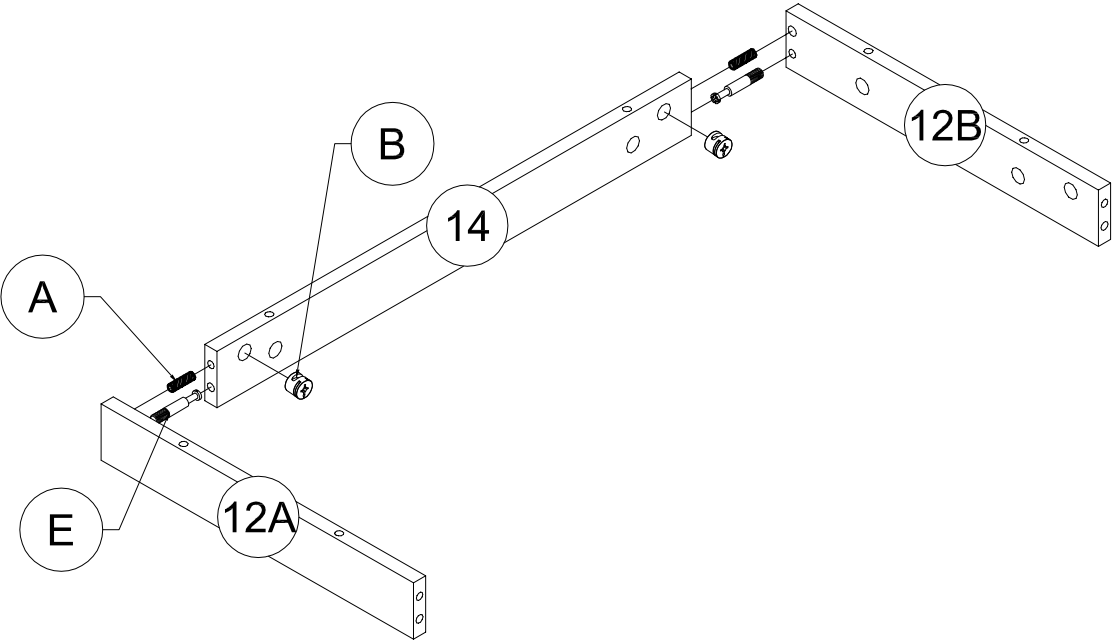
A  Link 1 - 40pcs	B  Link 2- 12mm - 40pcs	Q  Allen Key 1pcs
O  M4 x 30mm Wood Screws 18pcs	E  Ø8 x 30 mm Wood dowel 16pcs	F  #4 x 15 mm Wood Screws 54pcs
G  Ø8 x 60 mm Wood dowel 4pcs	H  Hinge - 8pcs	R  Handle Steel 5pcs
J  Support Pin 8pcs	K  M4 x 20mm Hex-Head bolts 8pcs	L  M4 x 30mm Hex-Head bolts 2pcs
M  #4 x 30 mm Wood Screws 8pcs	N  Plastic button 16pcs	P  Wall brackets 1set




Assembly Tools Required (Not Included)

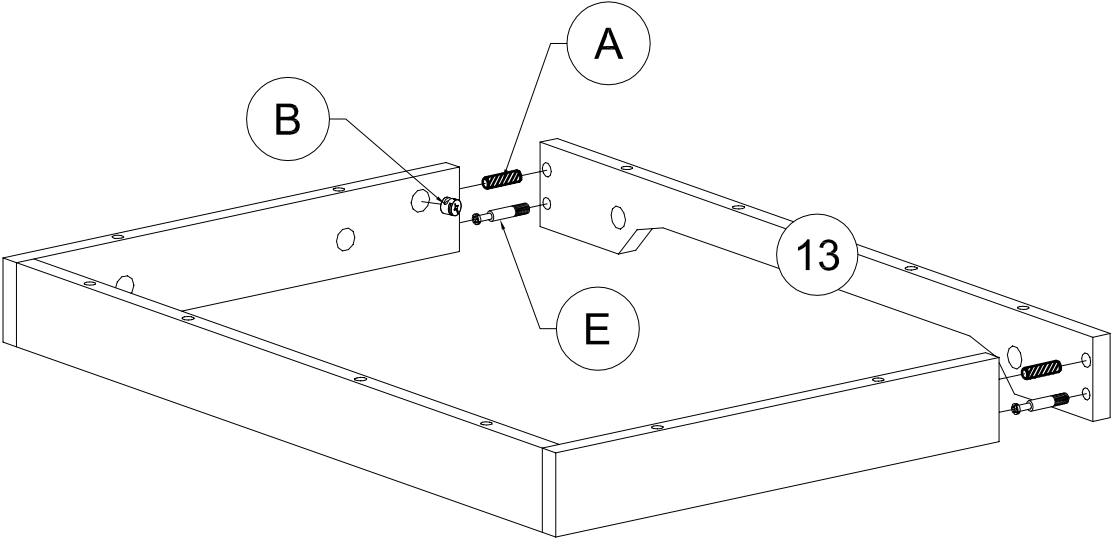
STEP 1.1: Following below illustration:

E	A	B
		
2pcs	2pcs	2pcs




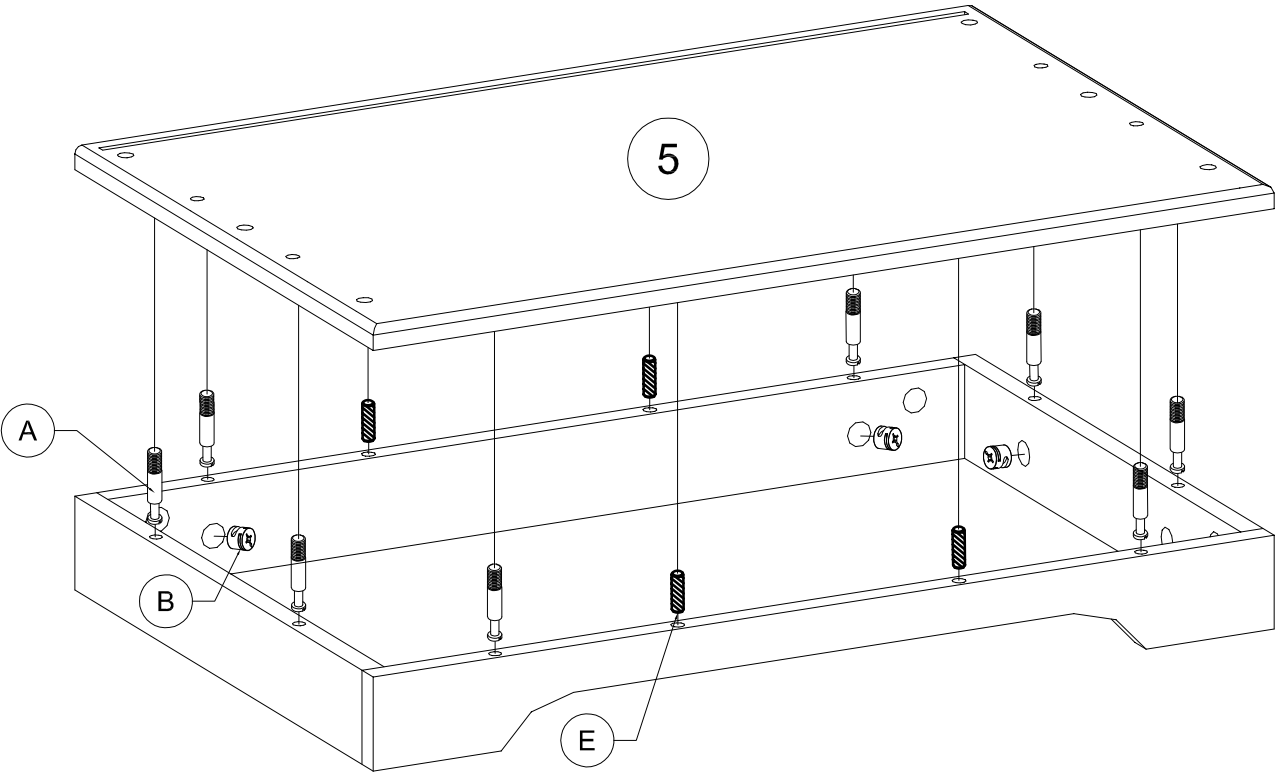
STEP 1.2: Following below illustration:

E	A	B
		
2pcs	2pcs	2pcs




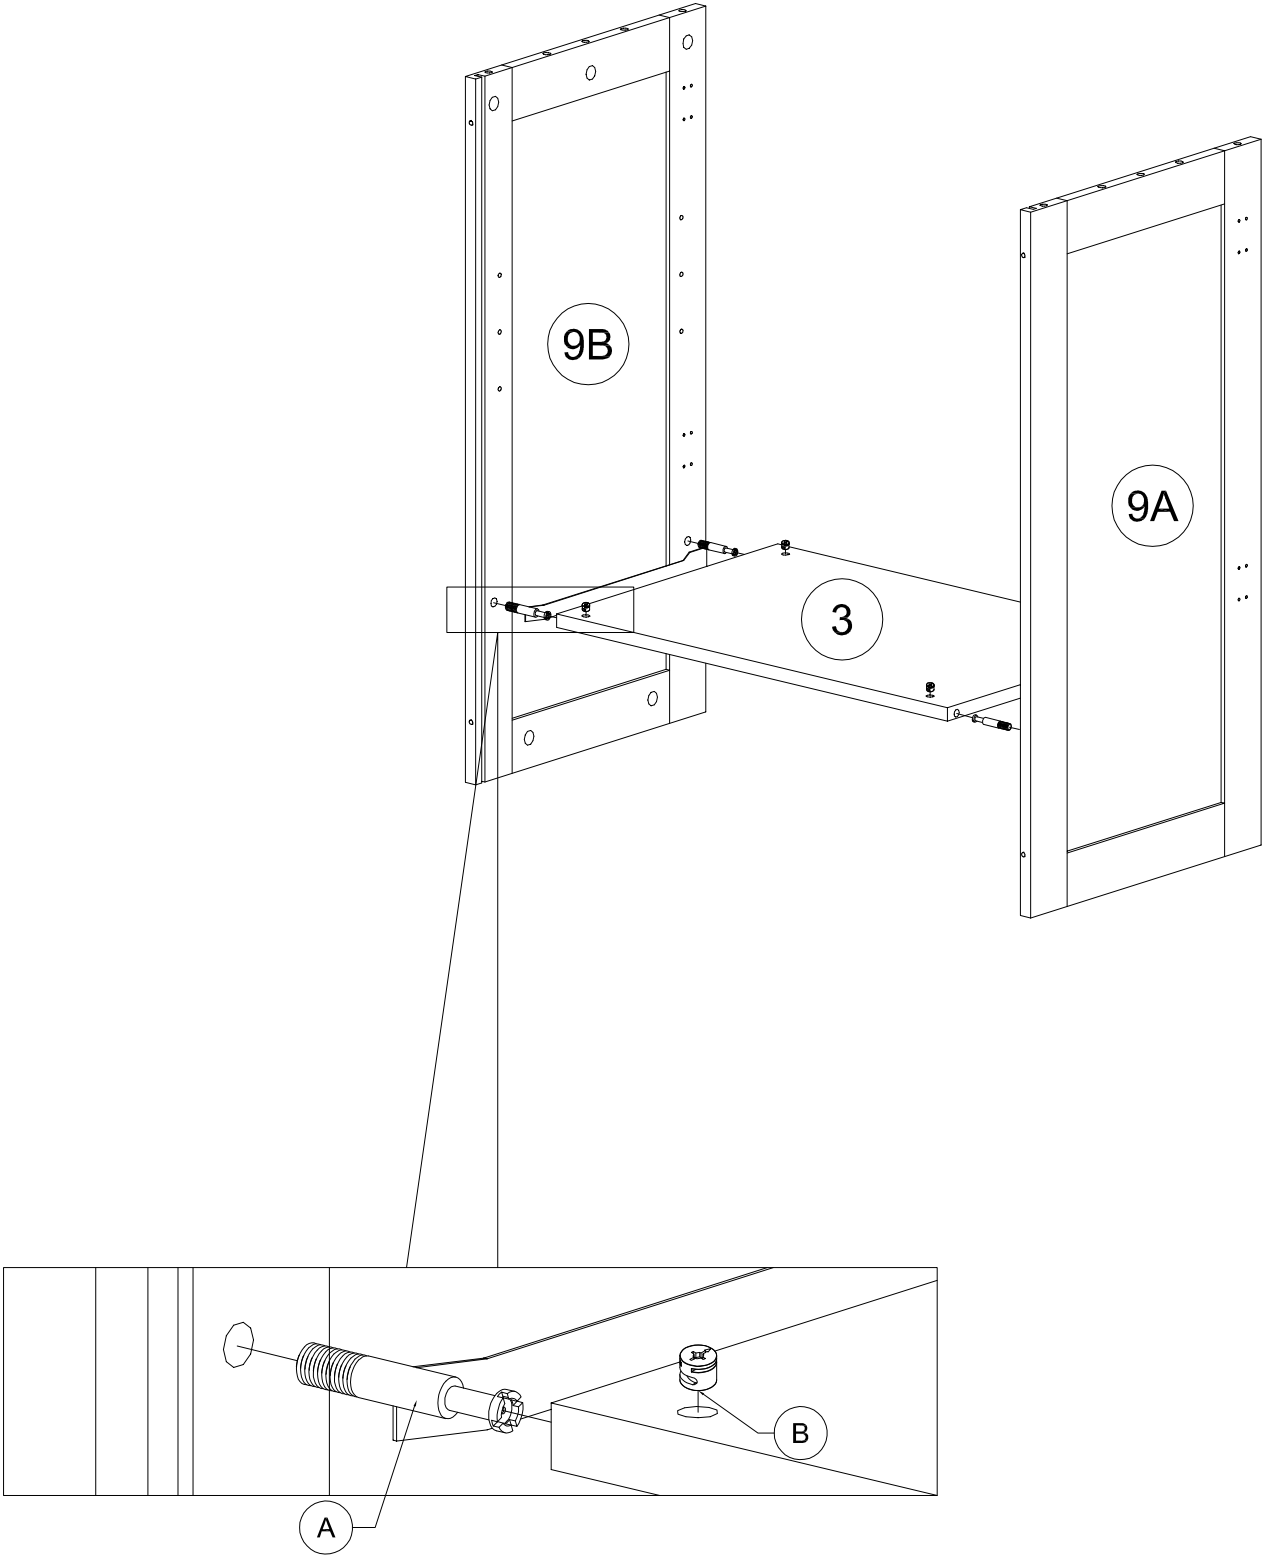
STEP 2: Following below illustration:

E	A	B
		
4pcs	8pcs	8pcs




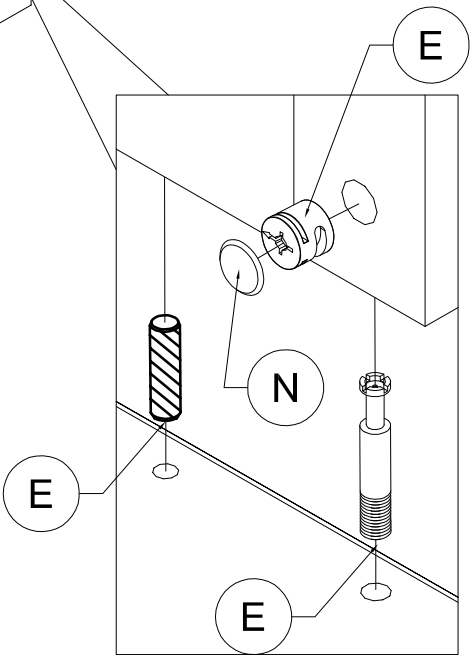
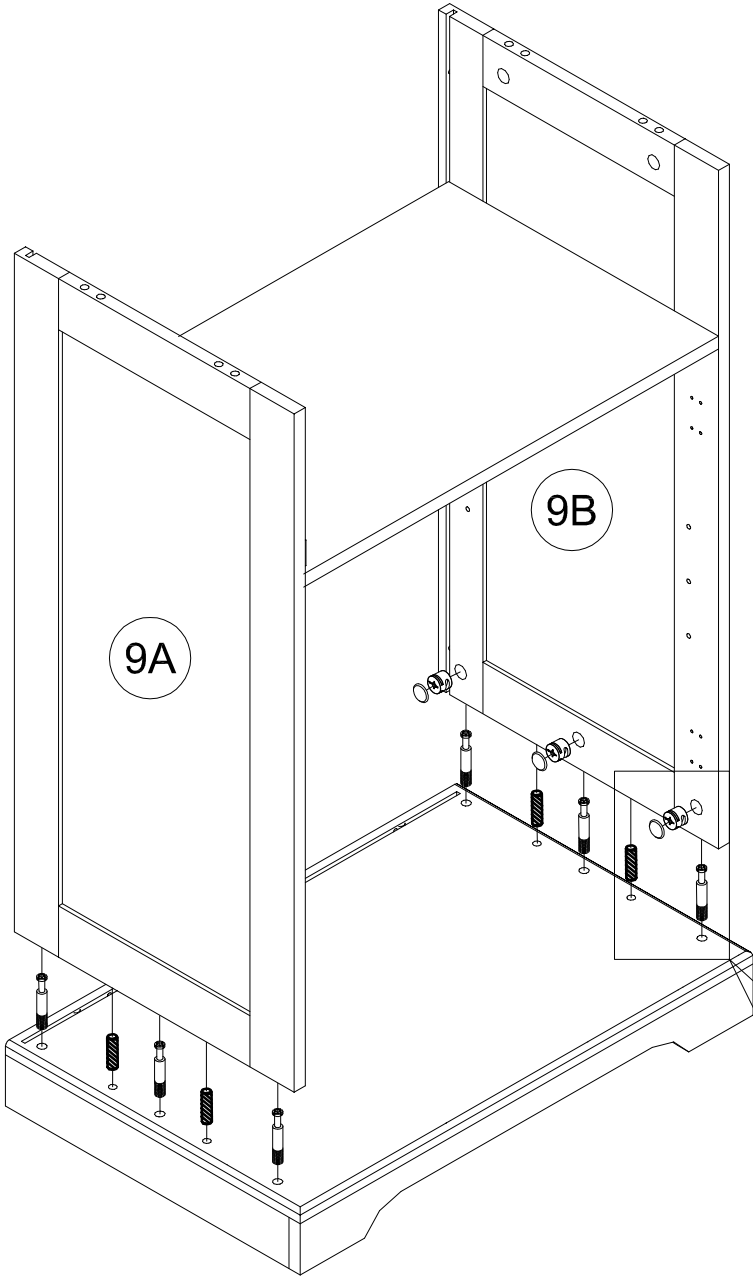
STEP 3: Following below illustration:

A	B
	
4pcs	4pcs

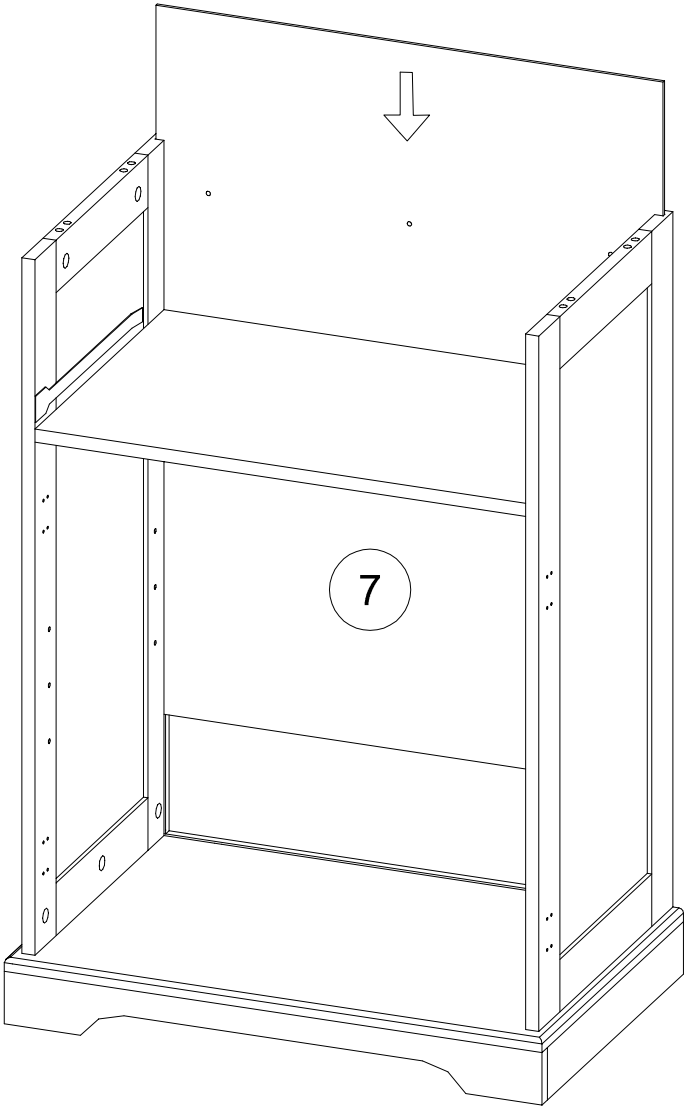


STEP 4: Following below illustration:


E	N	A	B
			
4pcs	6pcs	6pcs	6pcs

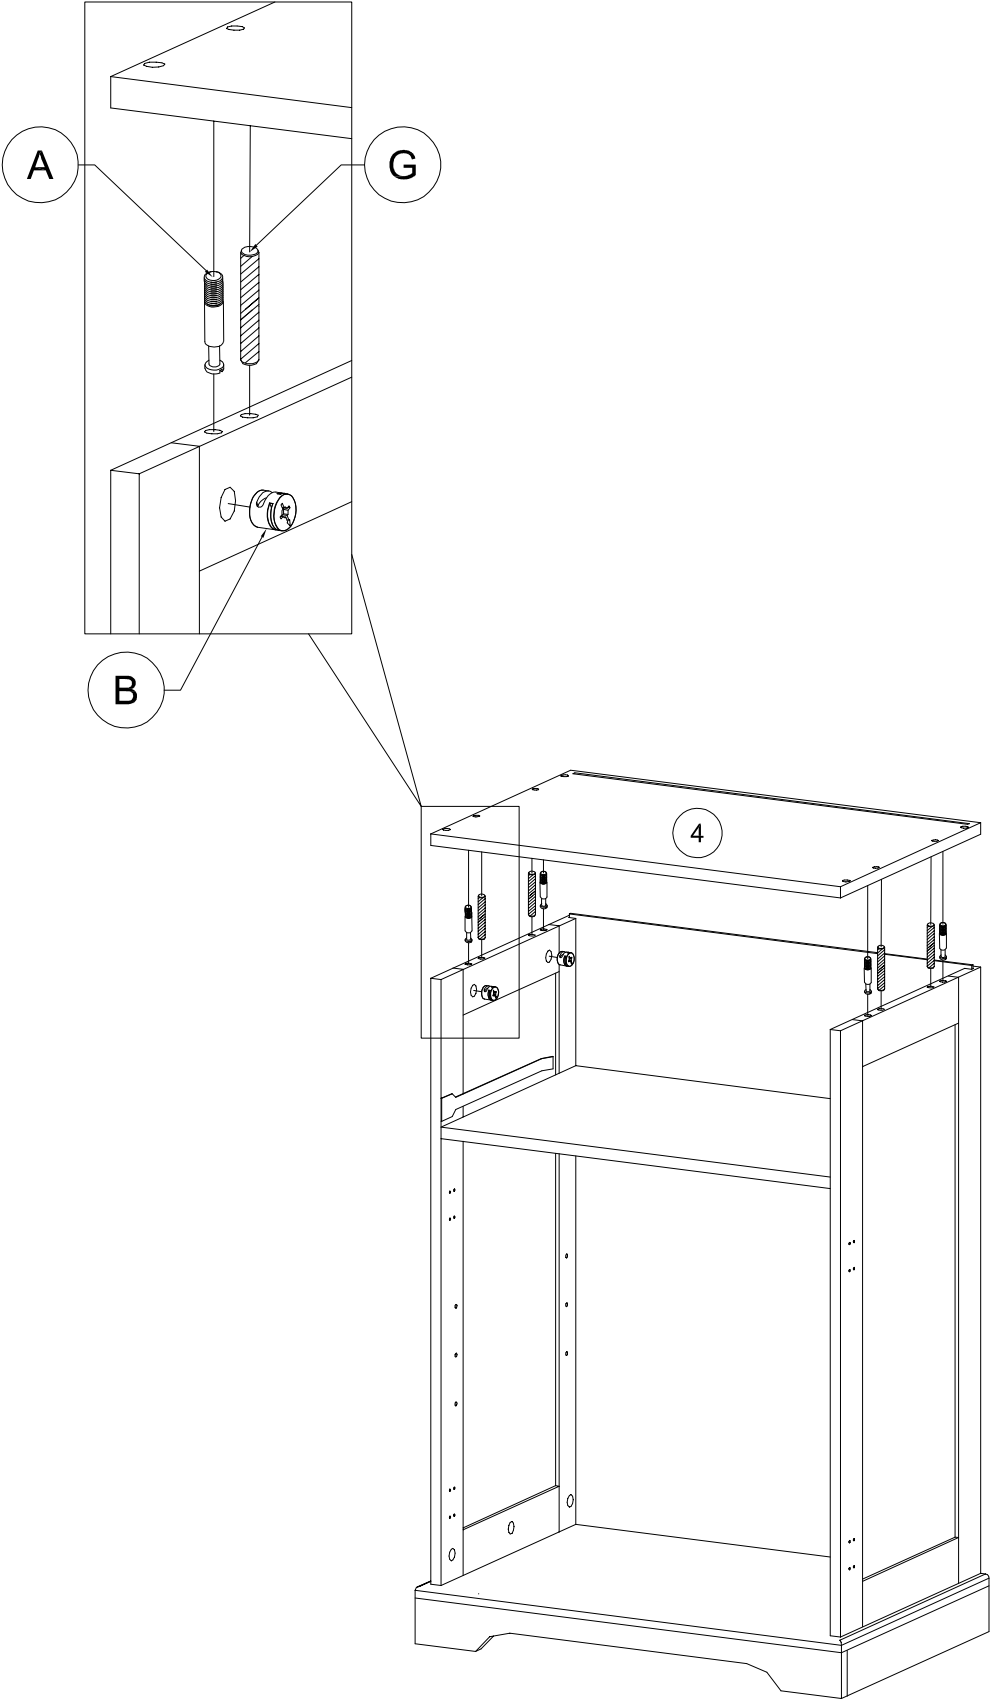


STEP 5: Following below illustration:




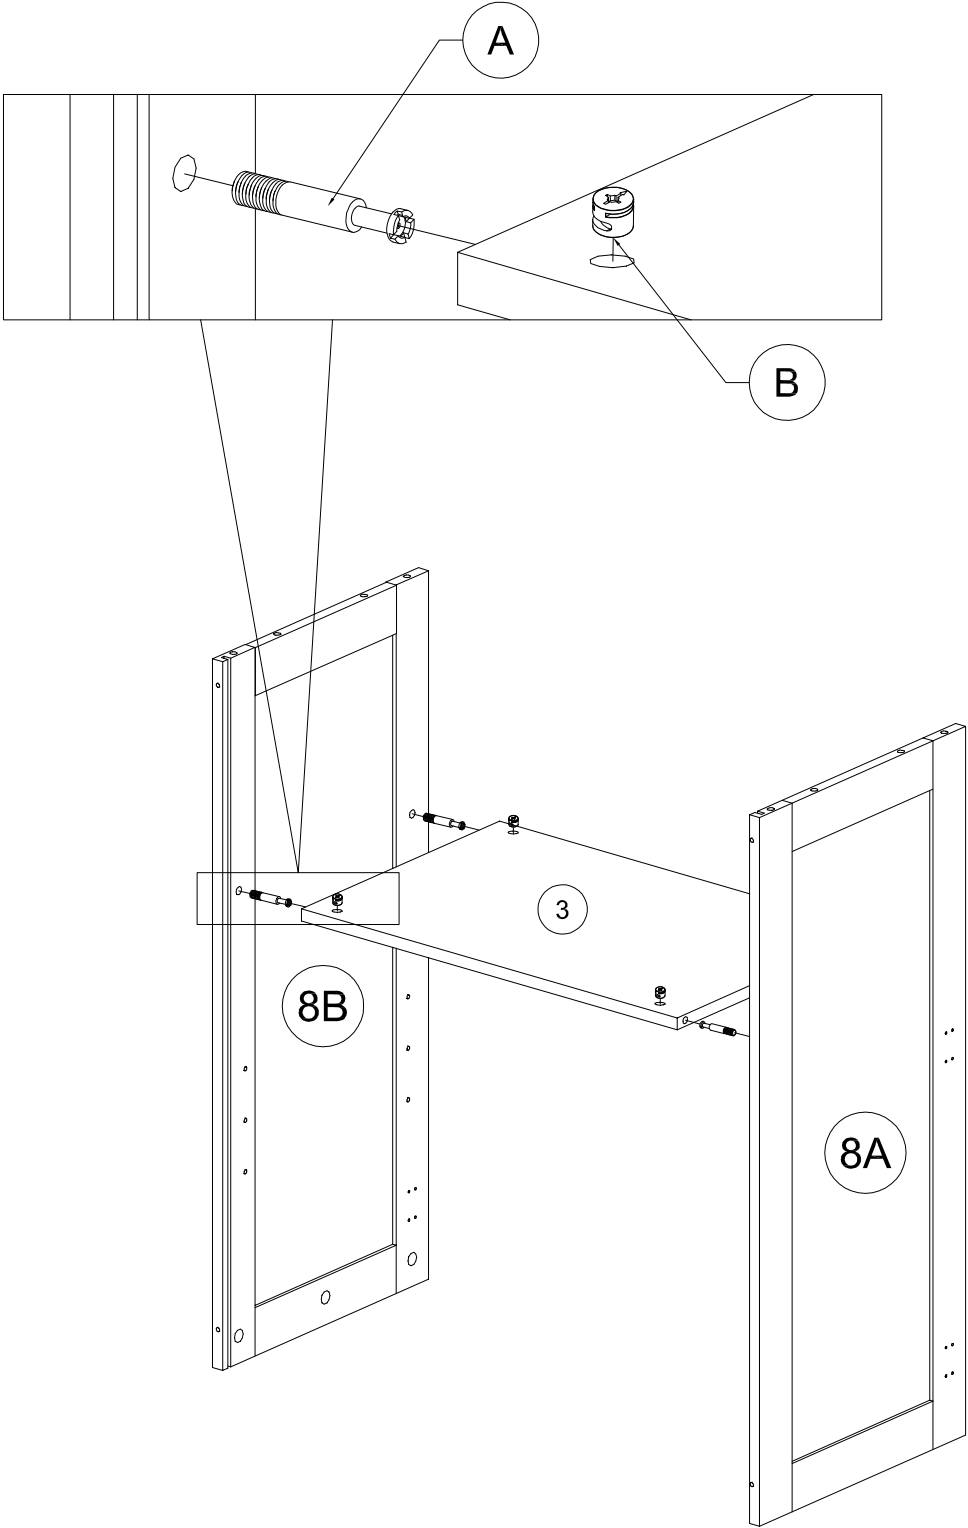
STEP 6: Following below illustration:

G	A	B
		
4pcs	4pcs	4pcs




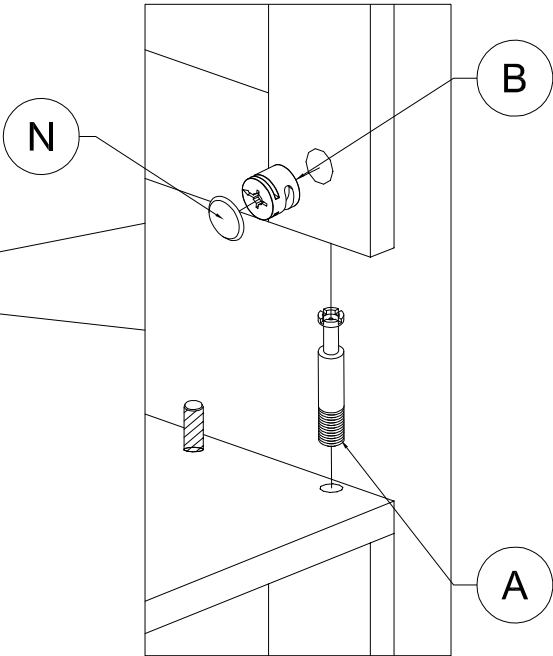
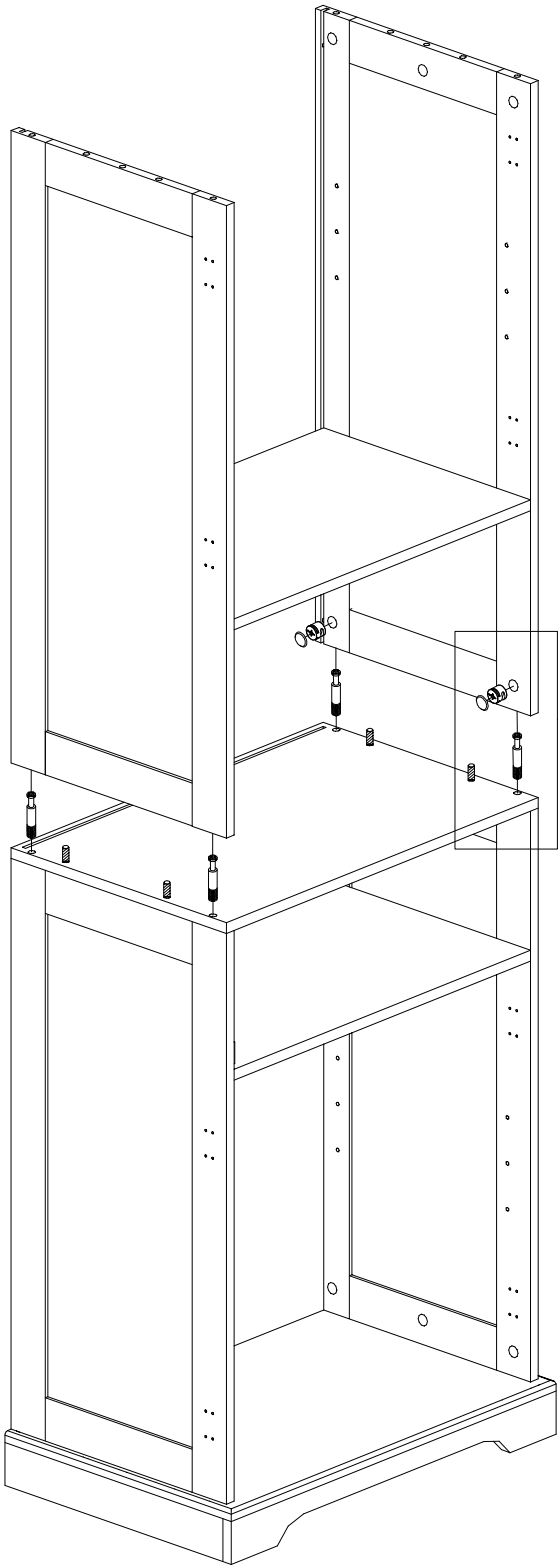
STEP 7: Following below illustration:

A	B
	
4pcs	4pcs

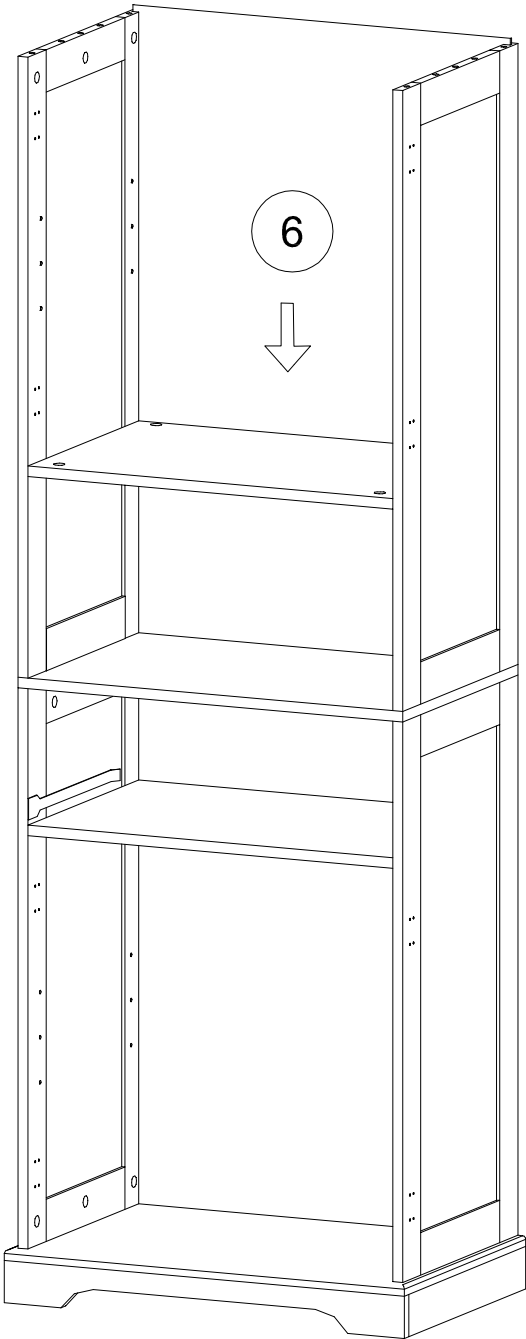


STEP 8: Following below illustration:


N	A	B
		
4pcs	4pcs	4pcs

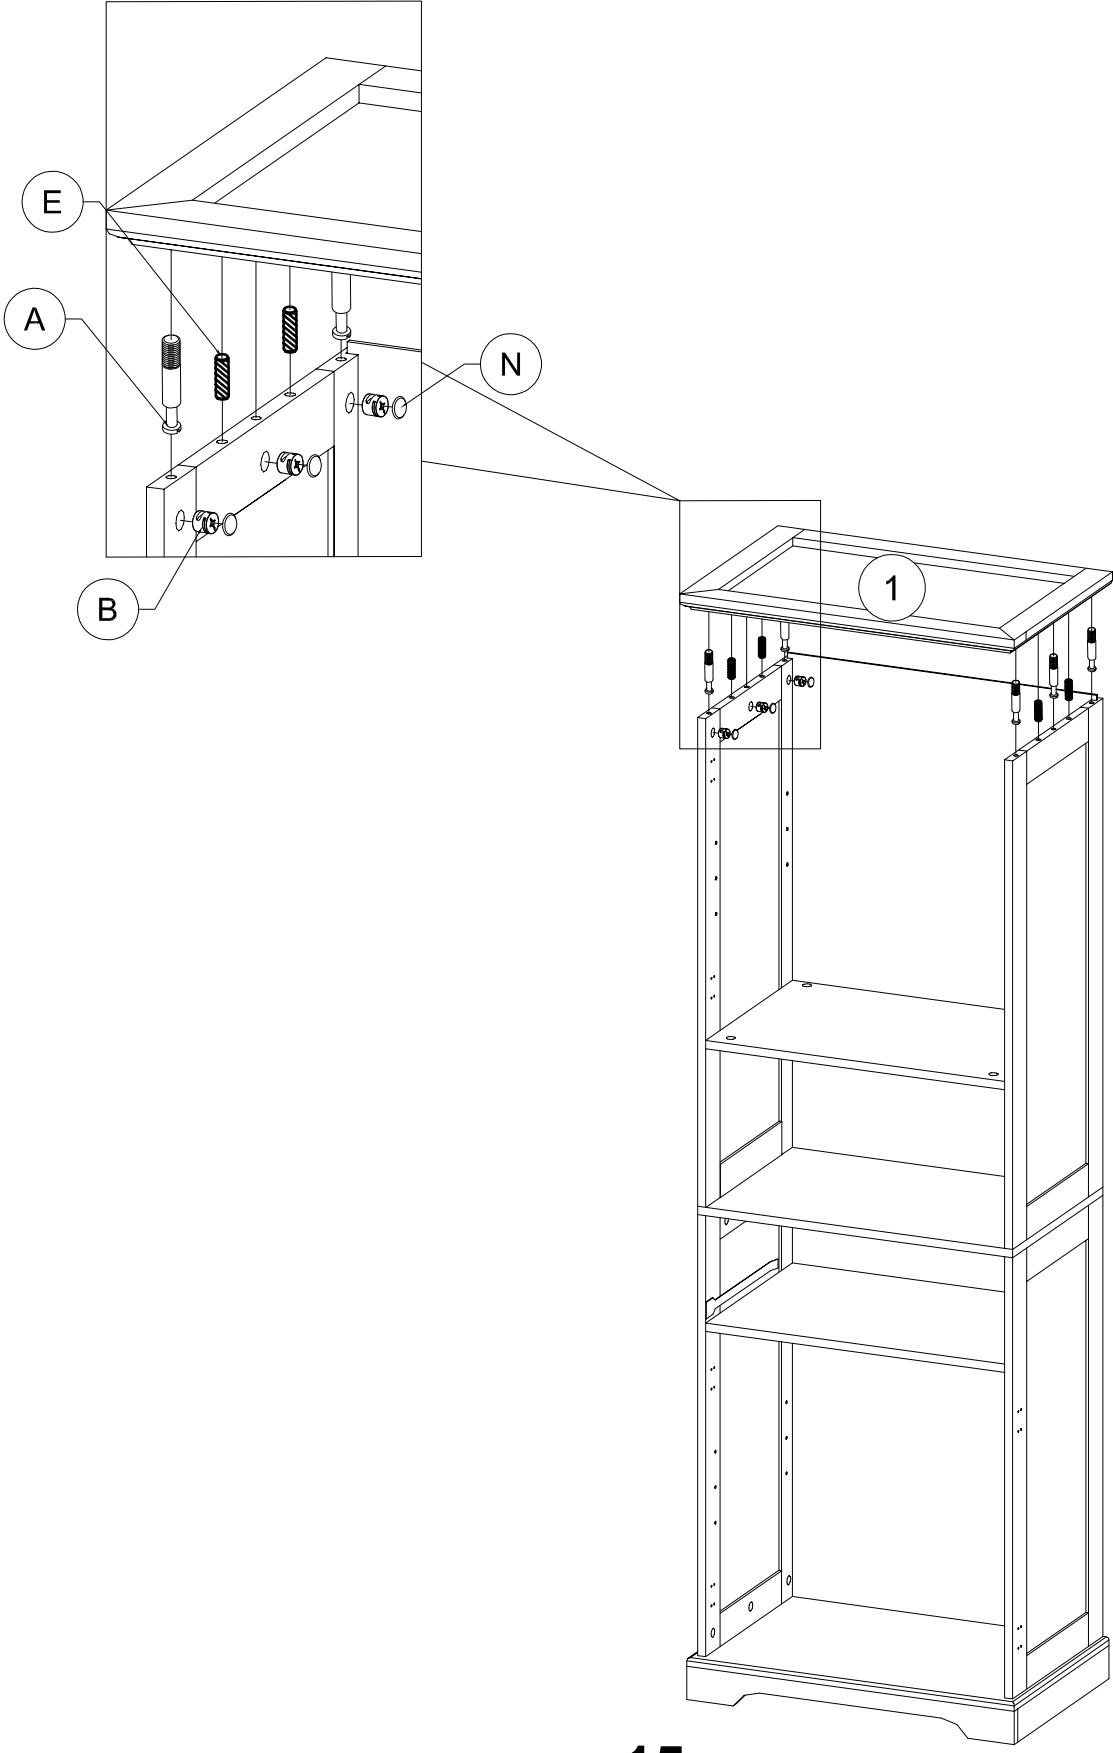


STEP 9: Following below illustration:



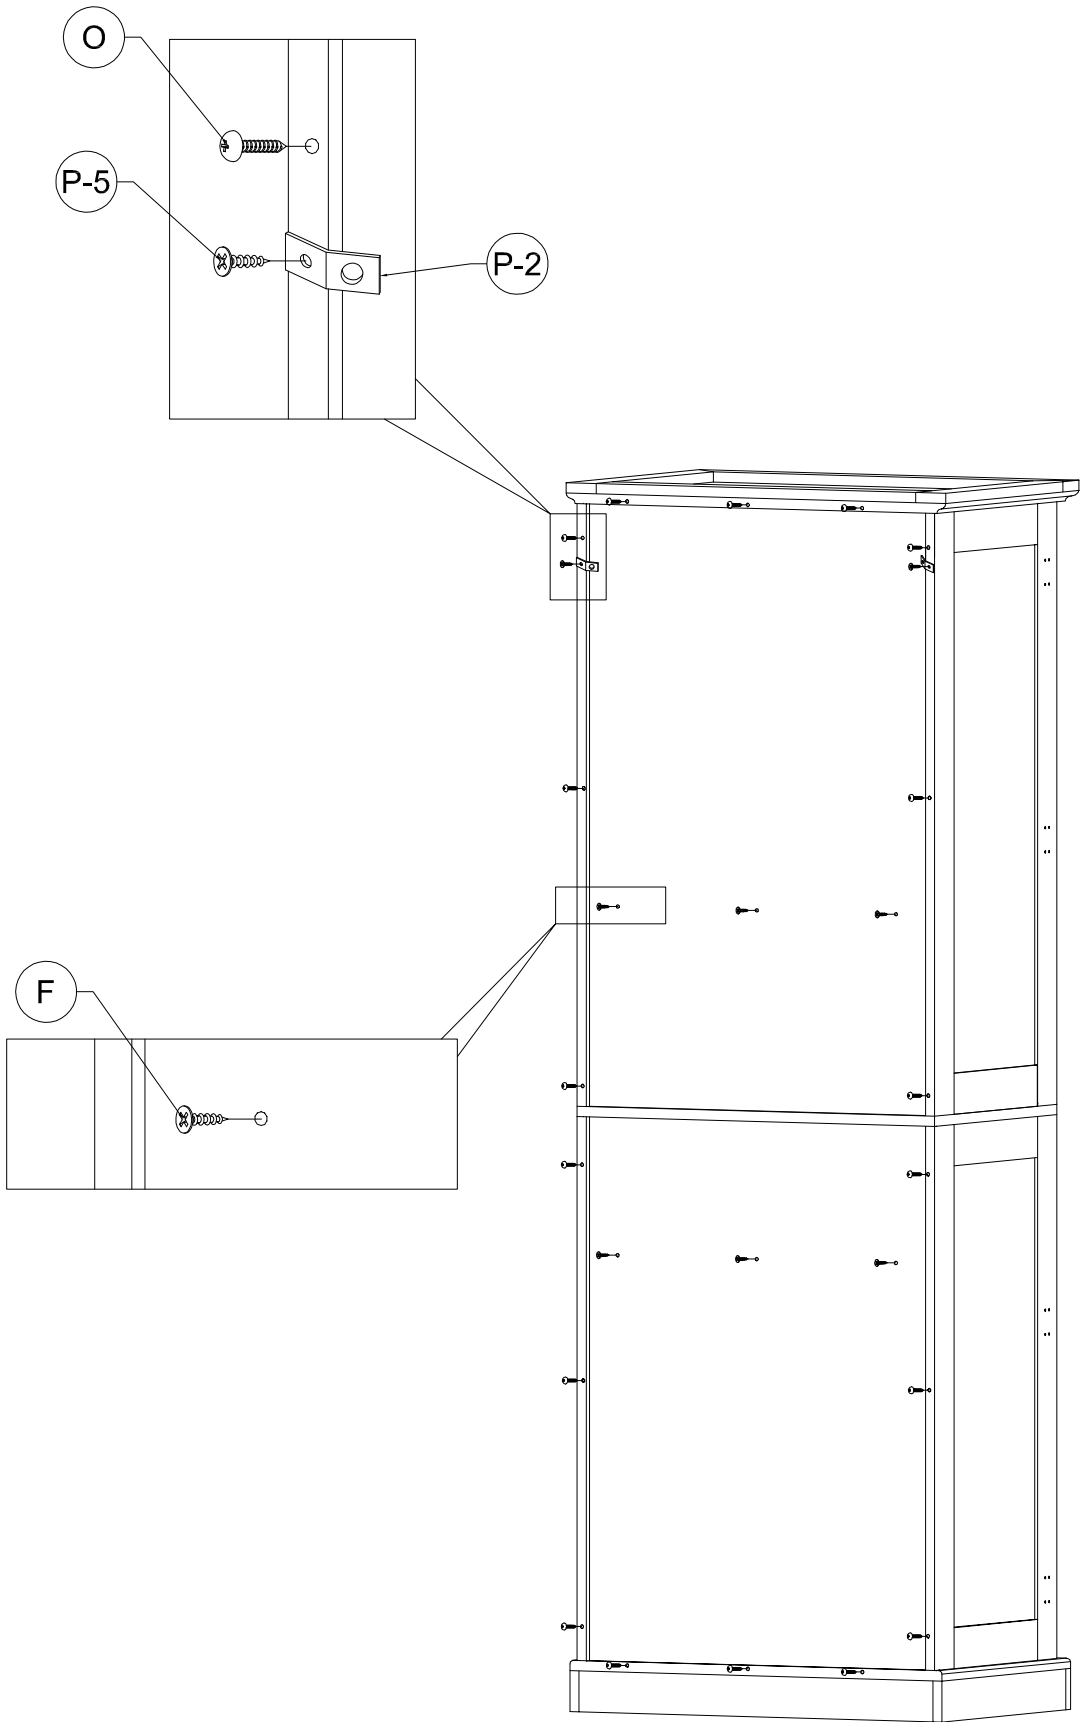
STEP 10: Following below illustration:

N	A	B	E
			
6pcs	6pcs	6pcs	4pcs



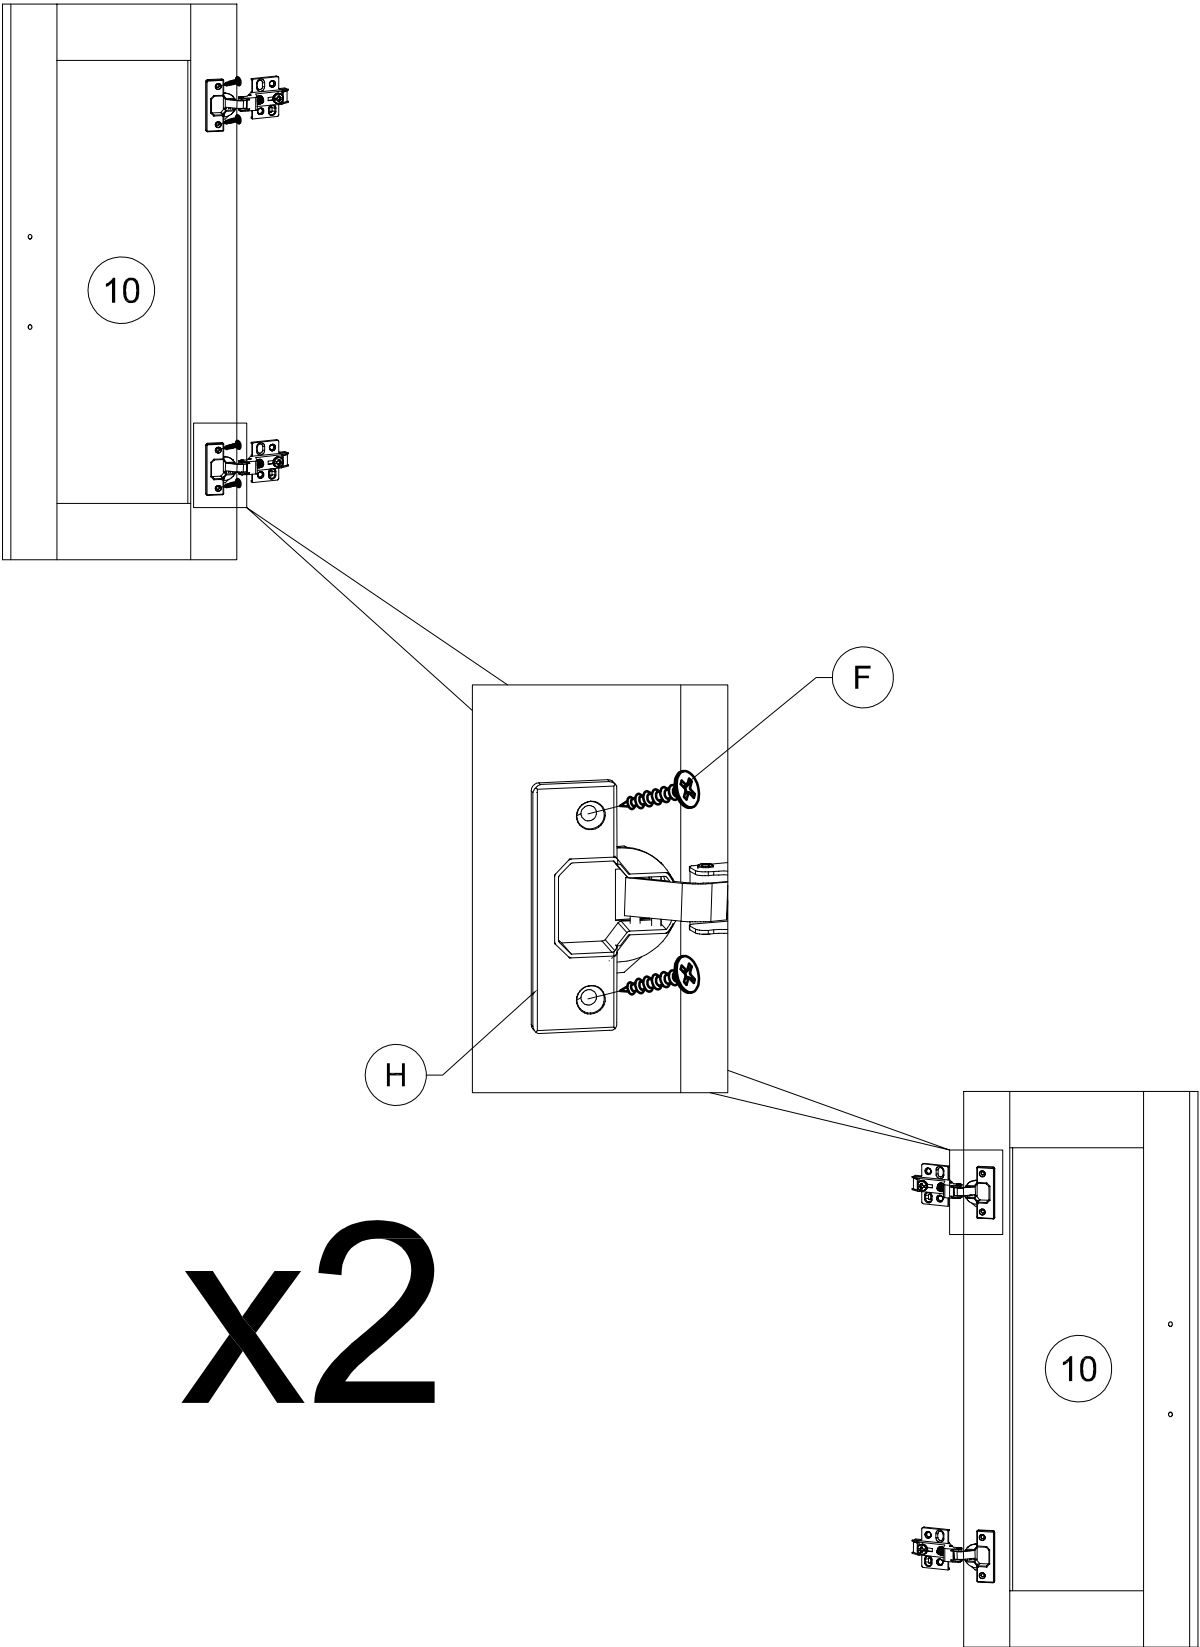
STEP 11: Following below illustration:

F	P-2	P-5	O
			
6pcs	2pcs	2pcs	18pcs



STEP 12: Following below illustration:

H	F
	
8pcs	16pcs

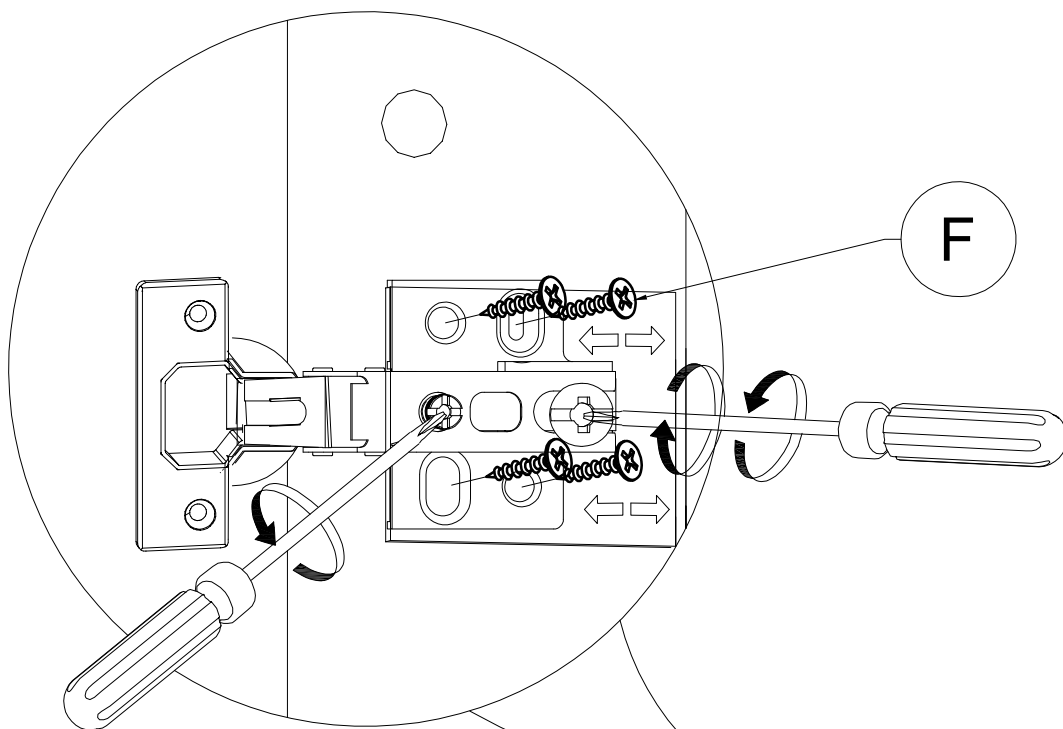


STEP 13: Following below illustration:

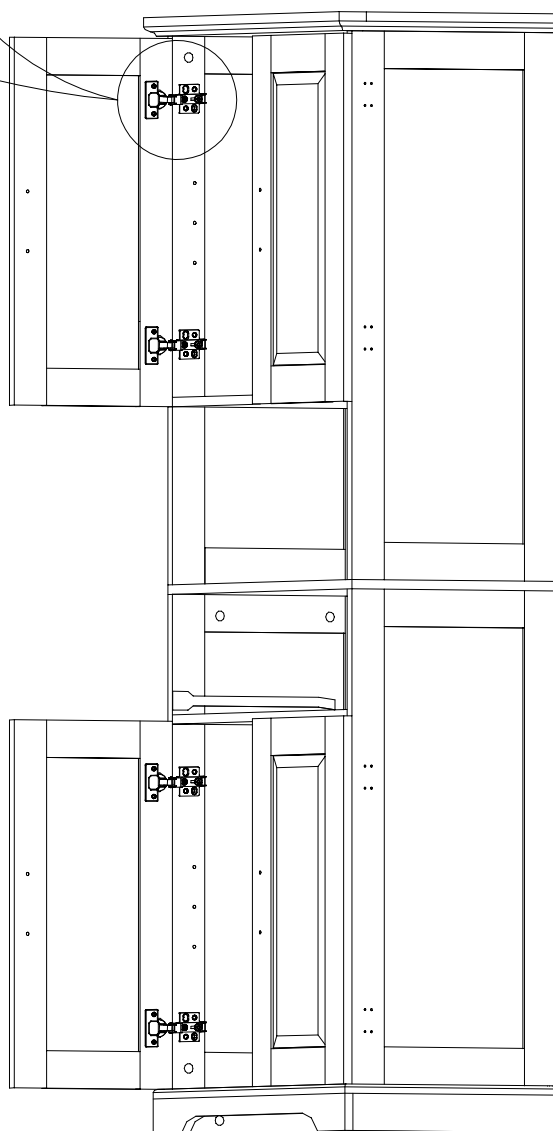
F



32pcs

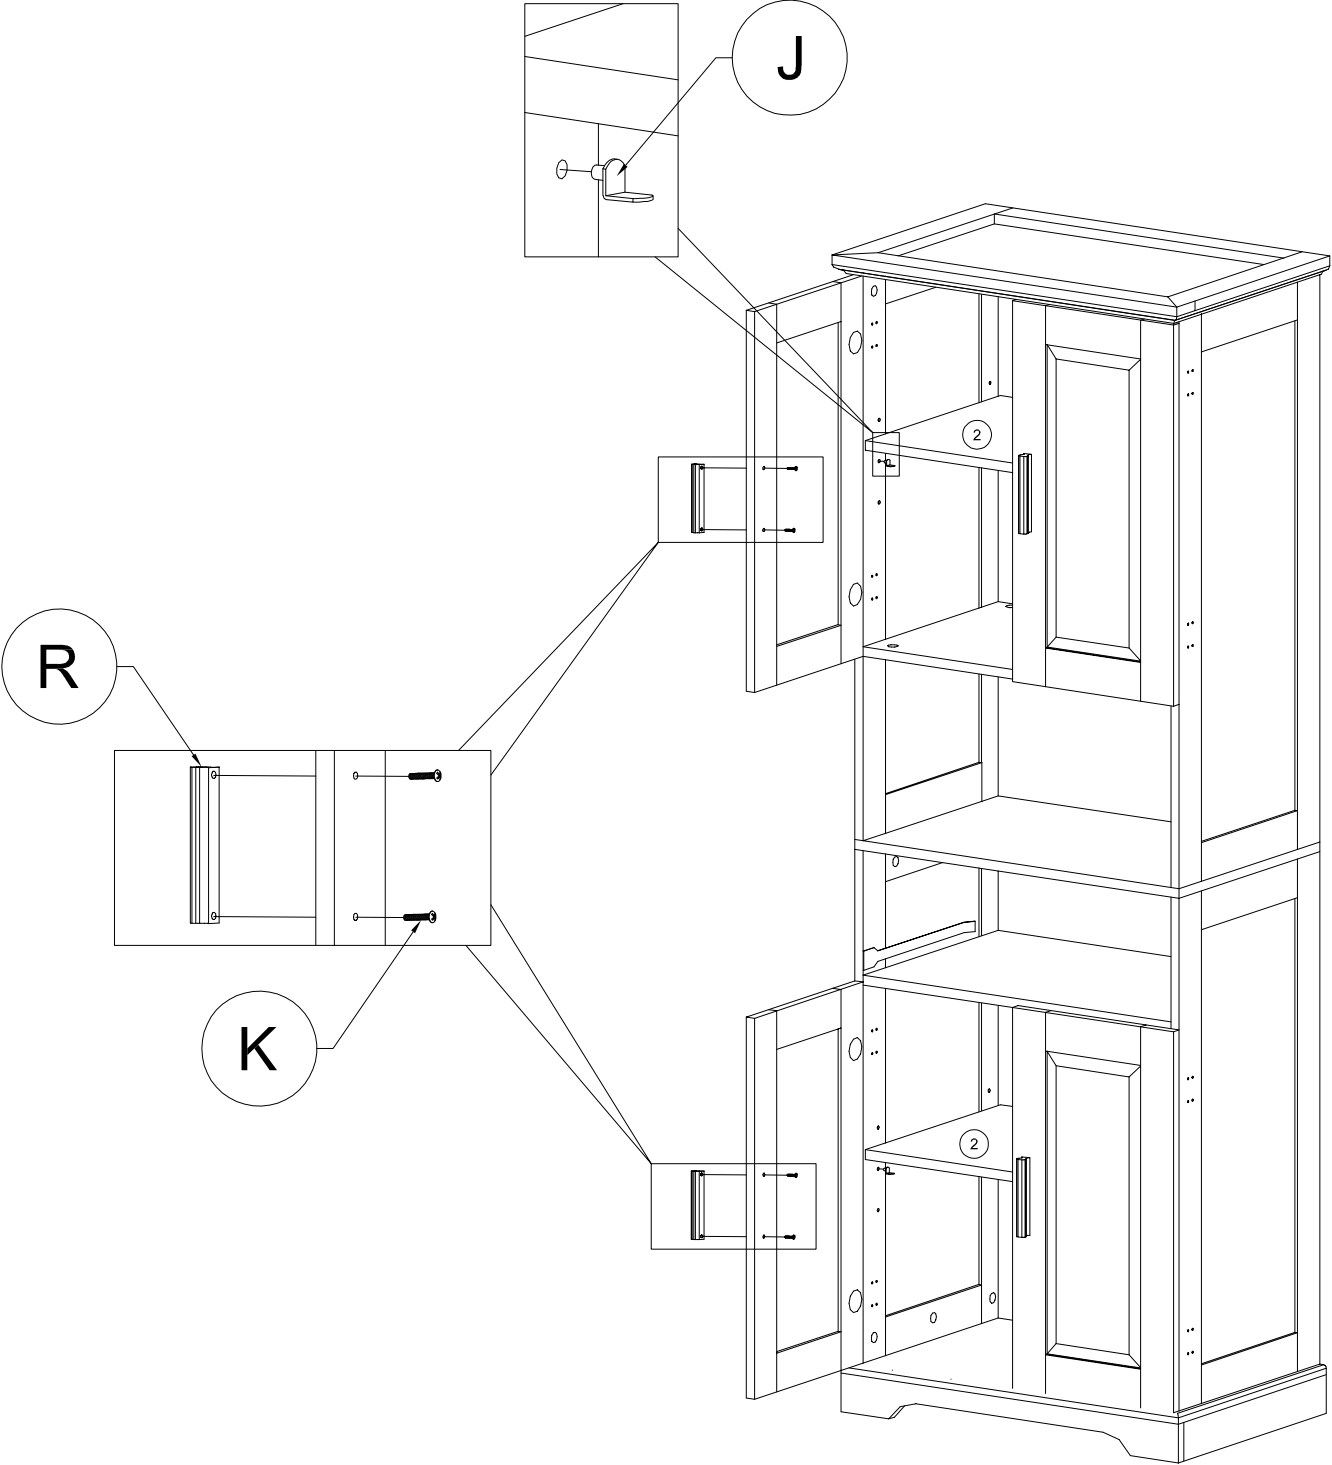


Scan the QR code to
adjust the cabinet
door clearance as
desired.



STEP 14: Following below illustration:

K	R	J
		
8pcs	4pcs	8pcs

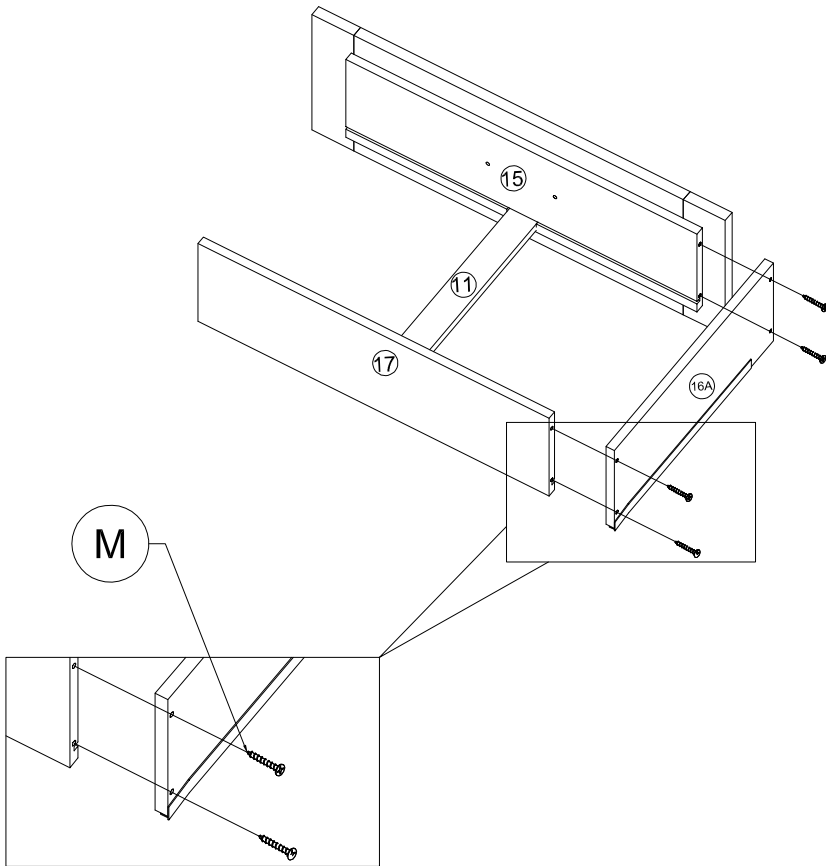


STEP 15.1: Following below illustration:

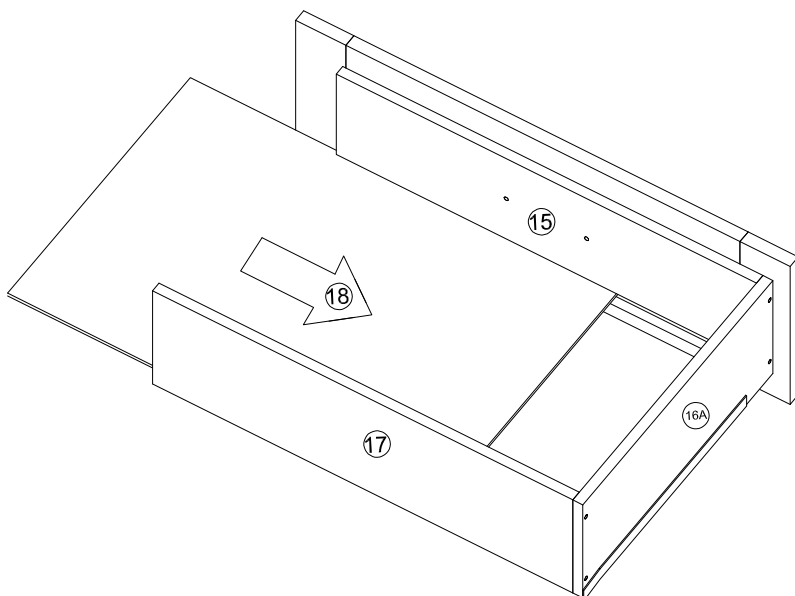
M





4pcs

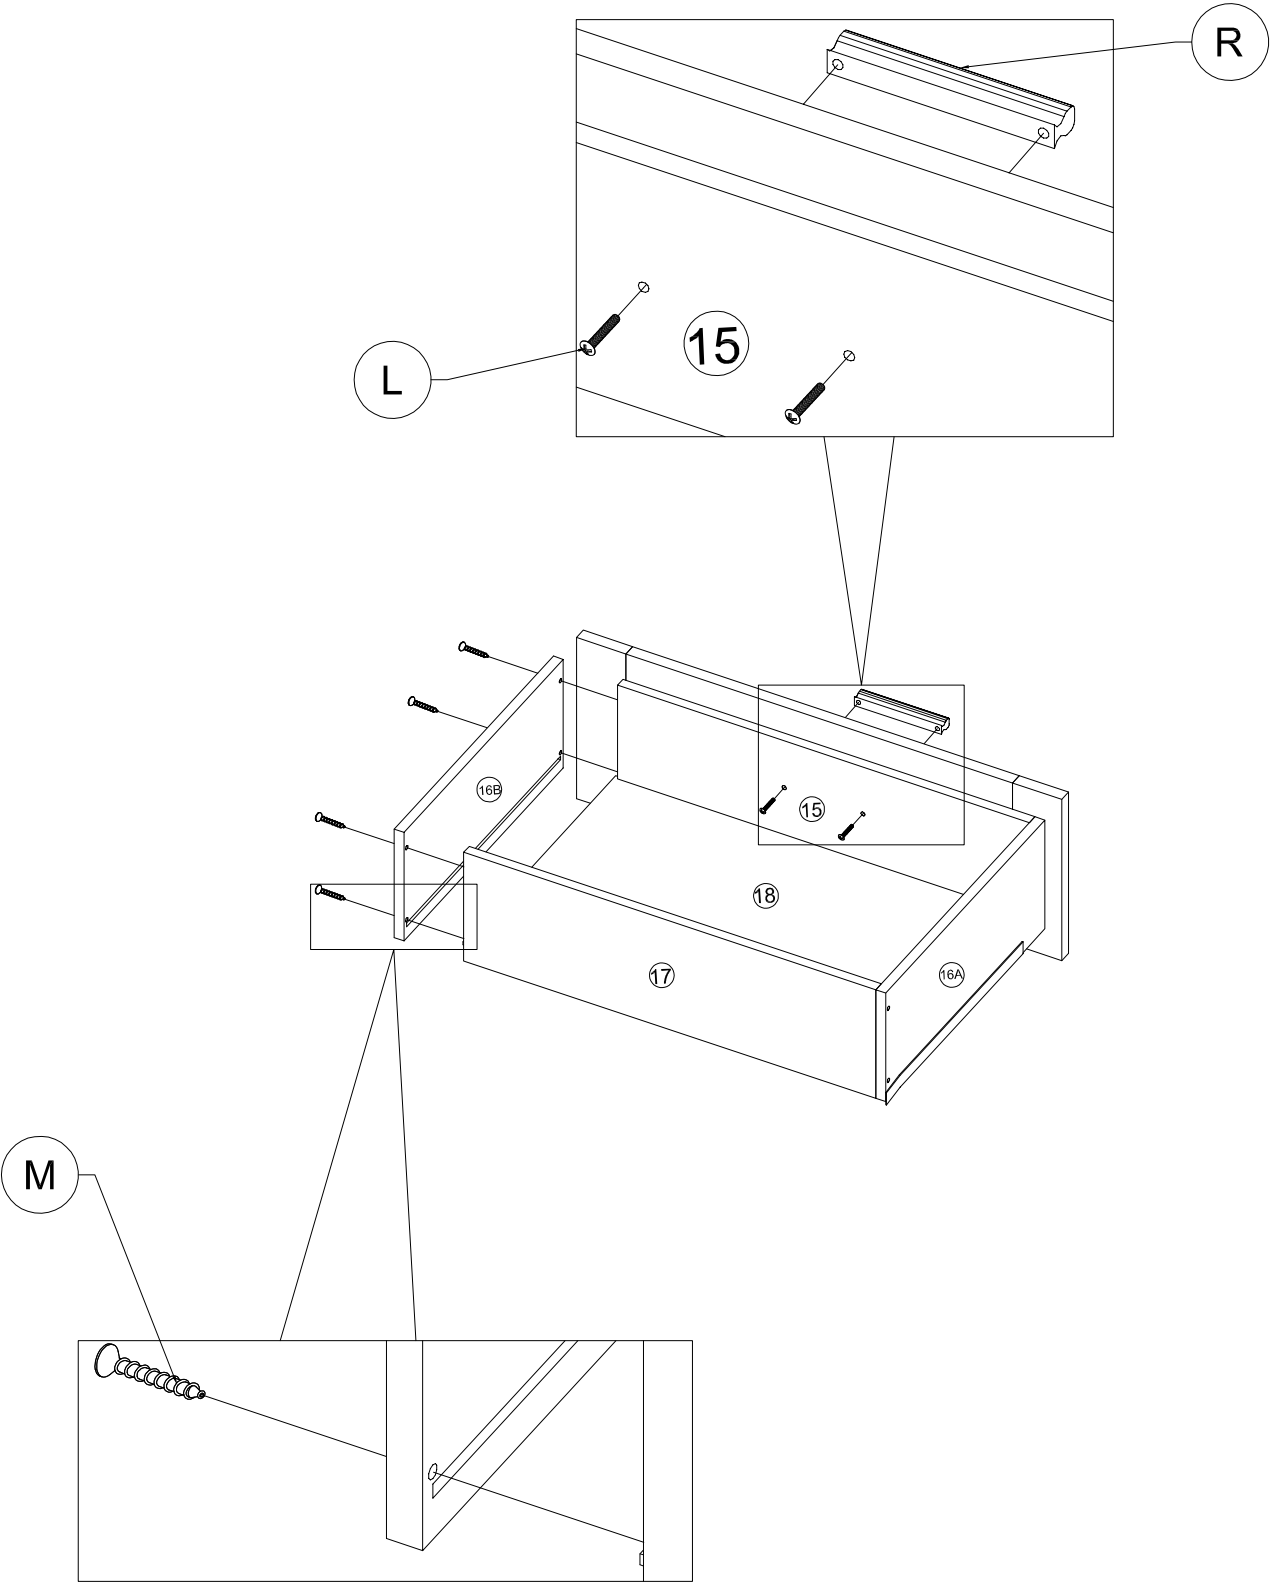


STEP 15.2: Following below illustration:

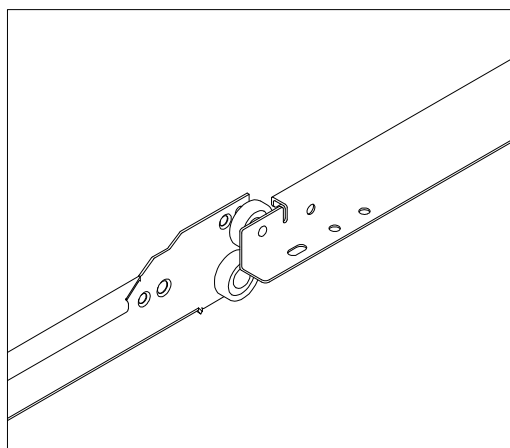
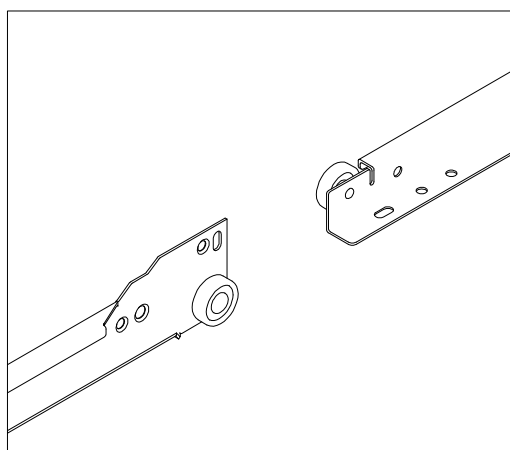
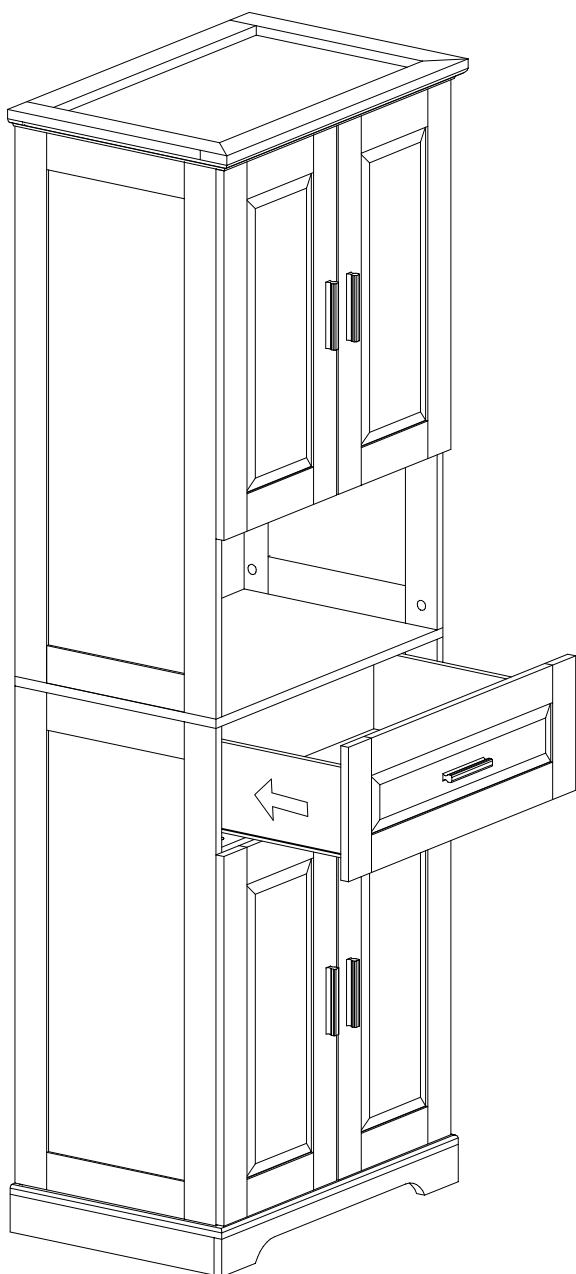


STEP 16: Following below illustration:



L	R	M
		
2pcs	1pc	4pcs

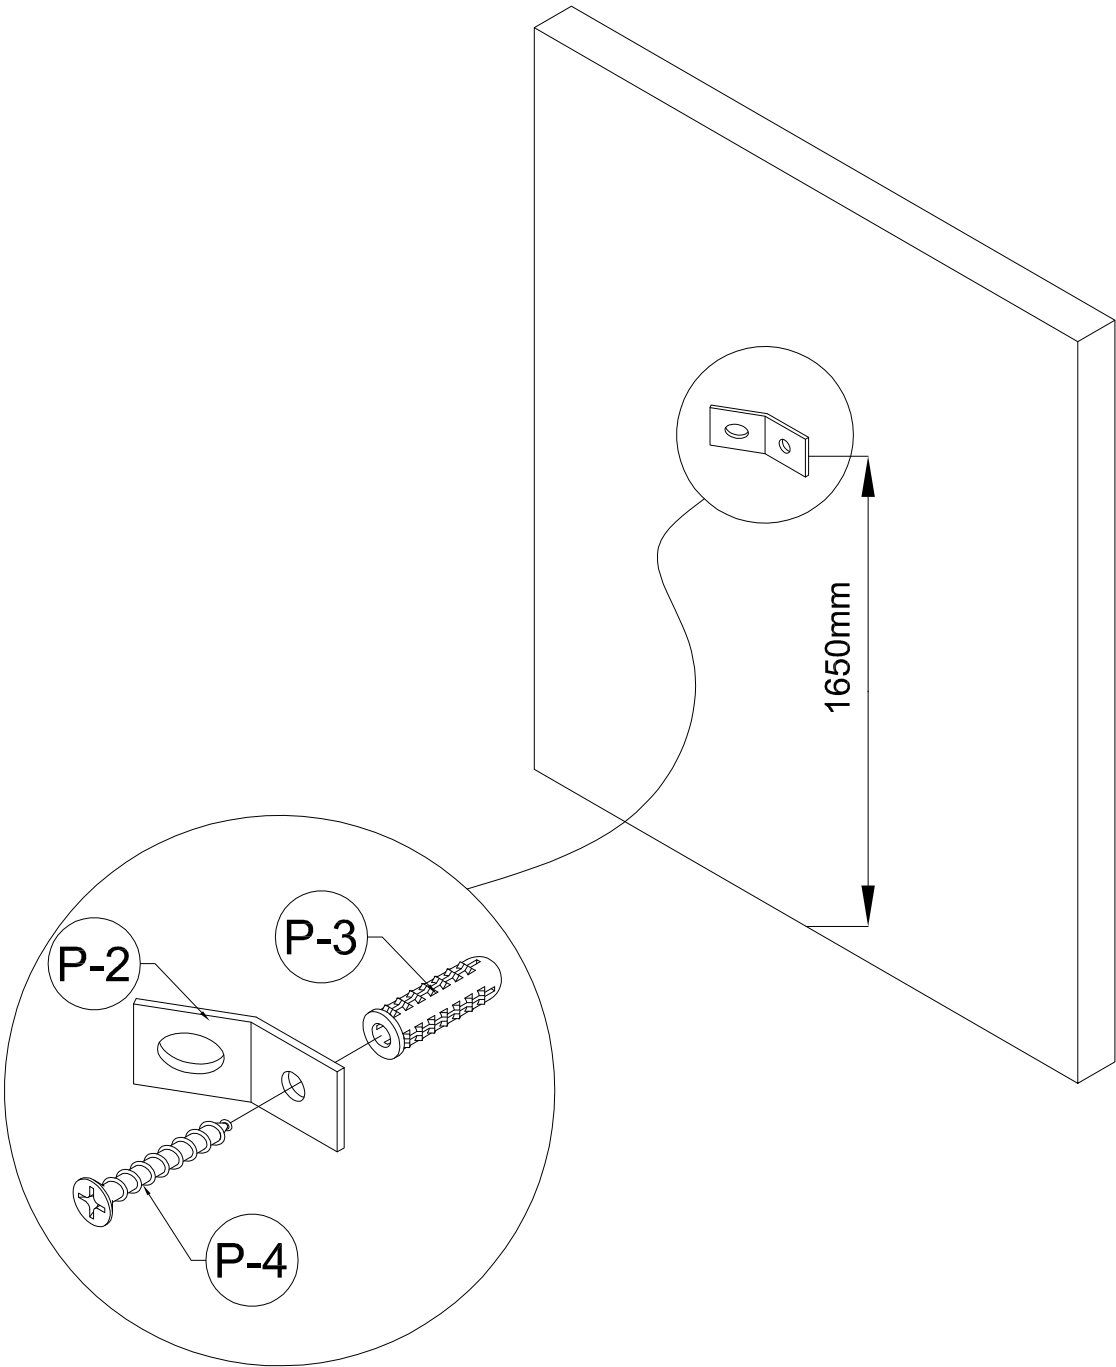


STEP 17: Following below illustration:



STEP 18: Following below illustration:

P-2	P-4	P-3
		
2pcs	2pcs	2pcs



STEP 19: Following below illustration:

P-1



2pcs



FINISH

