



Post & Frame Installation System

How It Works


Basic Installation Steps

**5½" WPC T&G Fence Slats
installed with 72" Horizontal
Fence Kits* on 75" Posts***

- 1.** Bolt down 1st Post.
- 2.** Loosely screw Slat Channels into pre-drilled Posts. Adjust Channels to Slat thickness and tighten screws.
- 3.** Slide first Slat into channels. Secure with Slat Locking Screws. Continue adding Slats into Channels.
- 4.** Add Topper Slat* and secure with screws and brace strap. *See detailed instructions included.*



**Sold separately. All hardware is included with Slat Fence Kits and Posts.*

Illustrations not to scale.

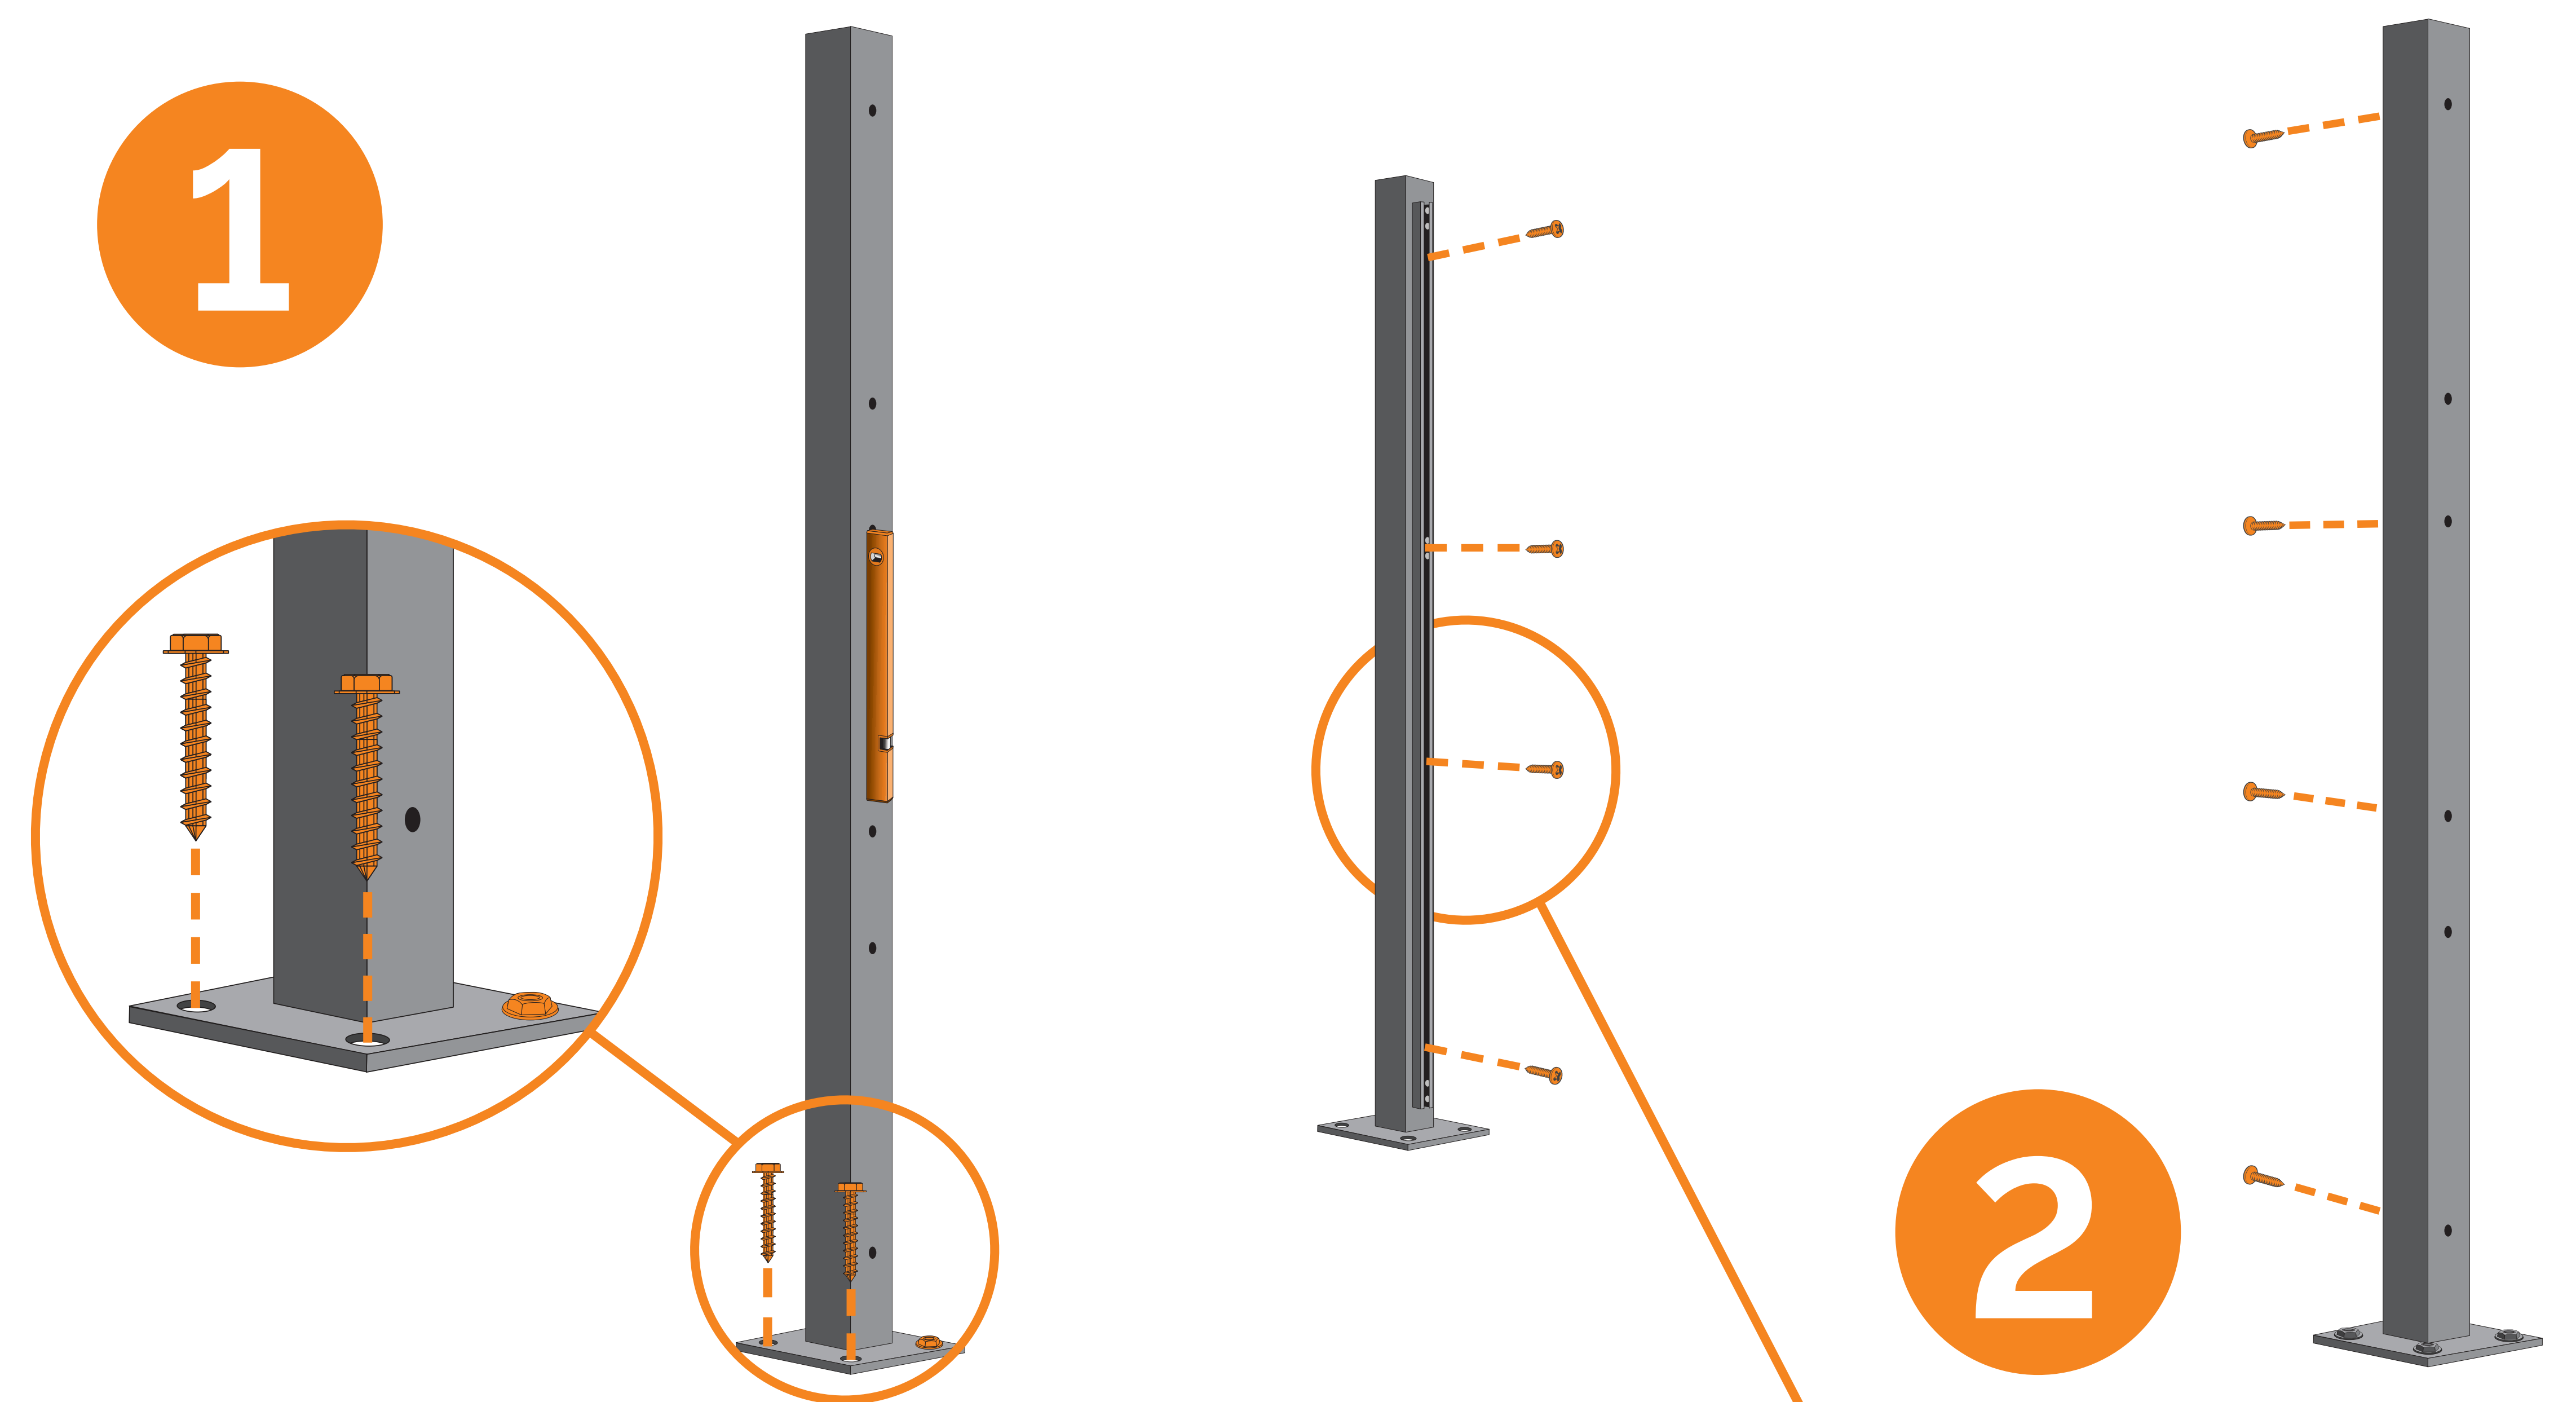

Channel Adjustment

Channel sets adjust to fit Slats ½" to 1" thick.

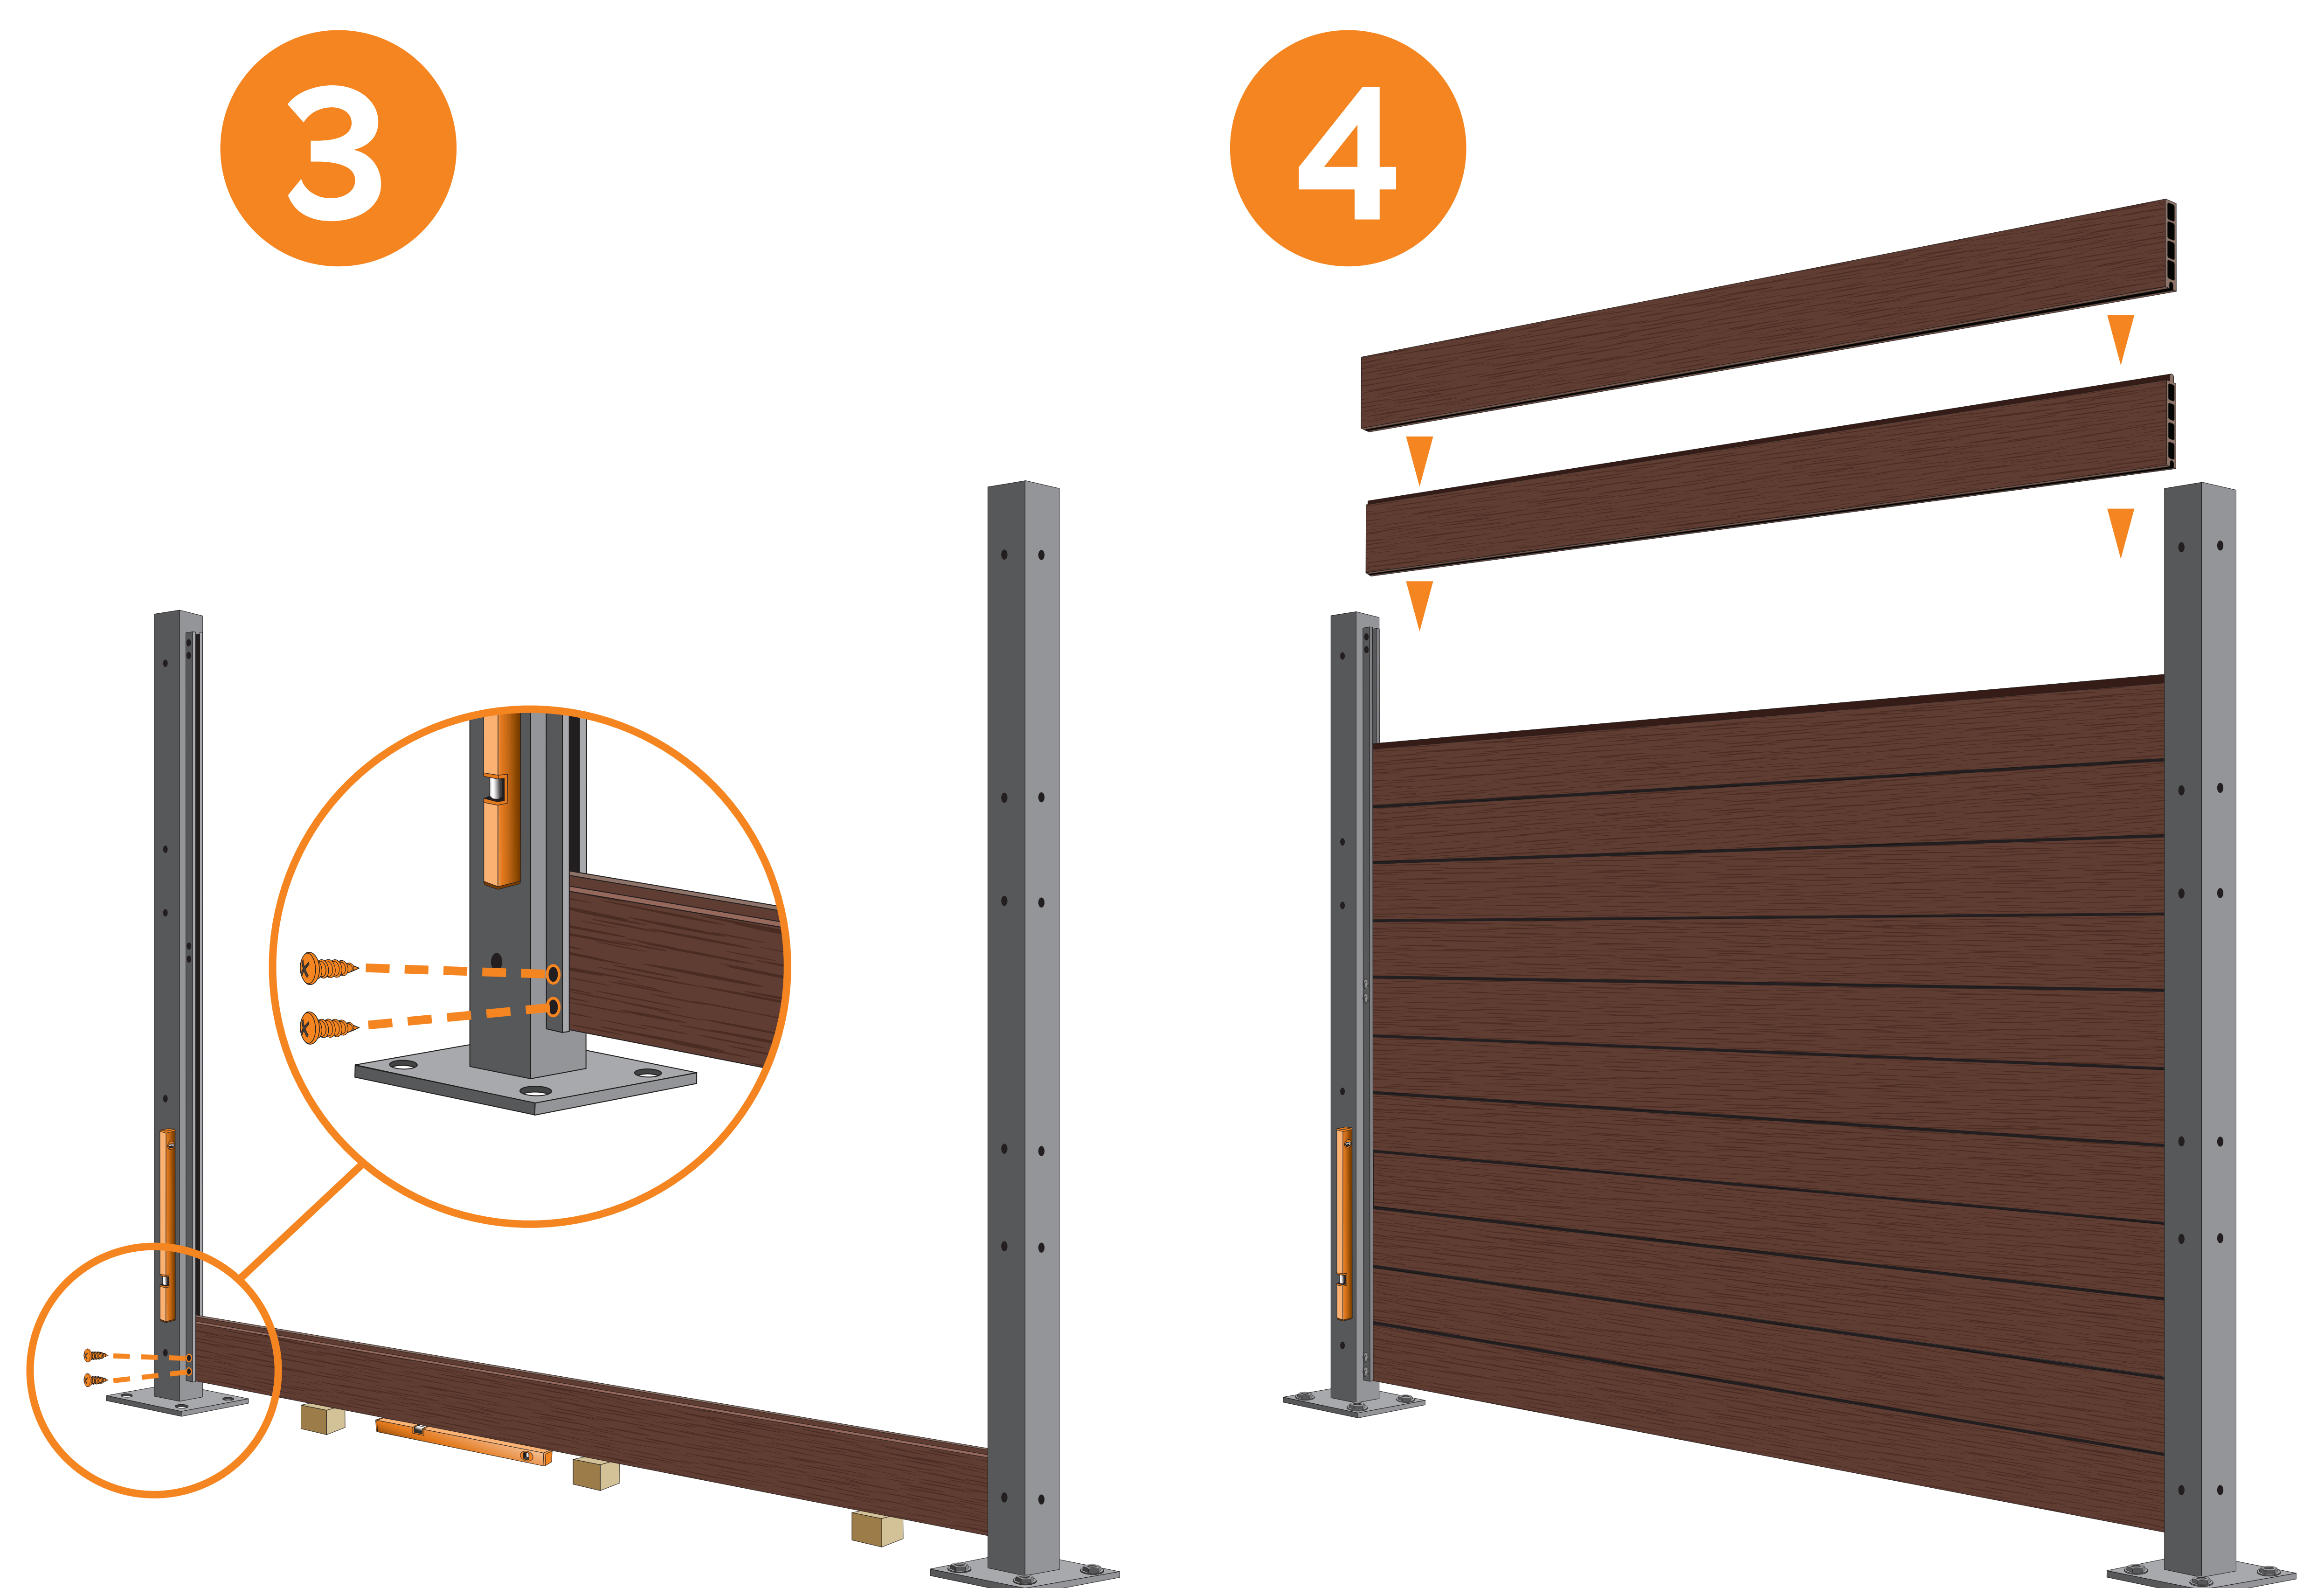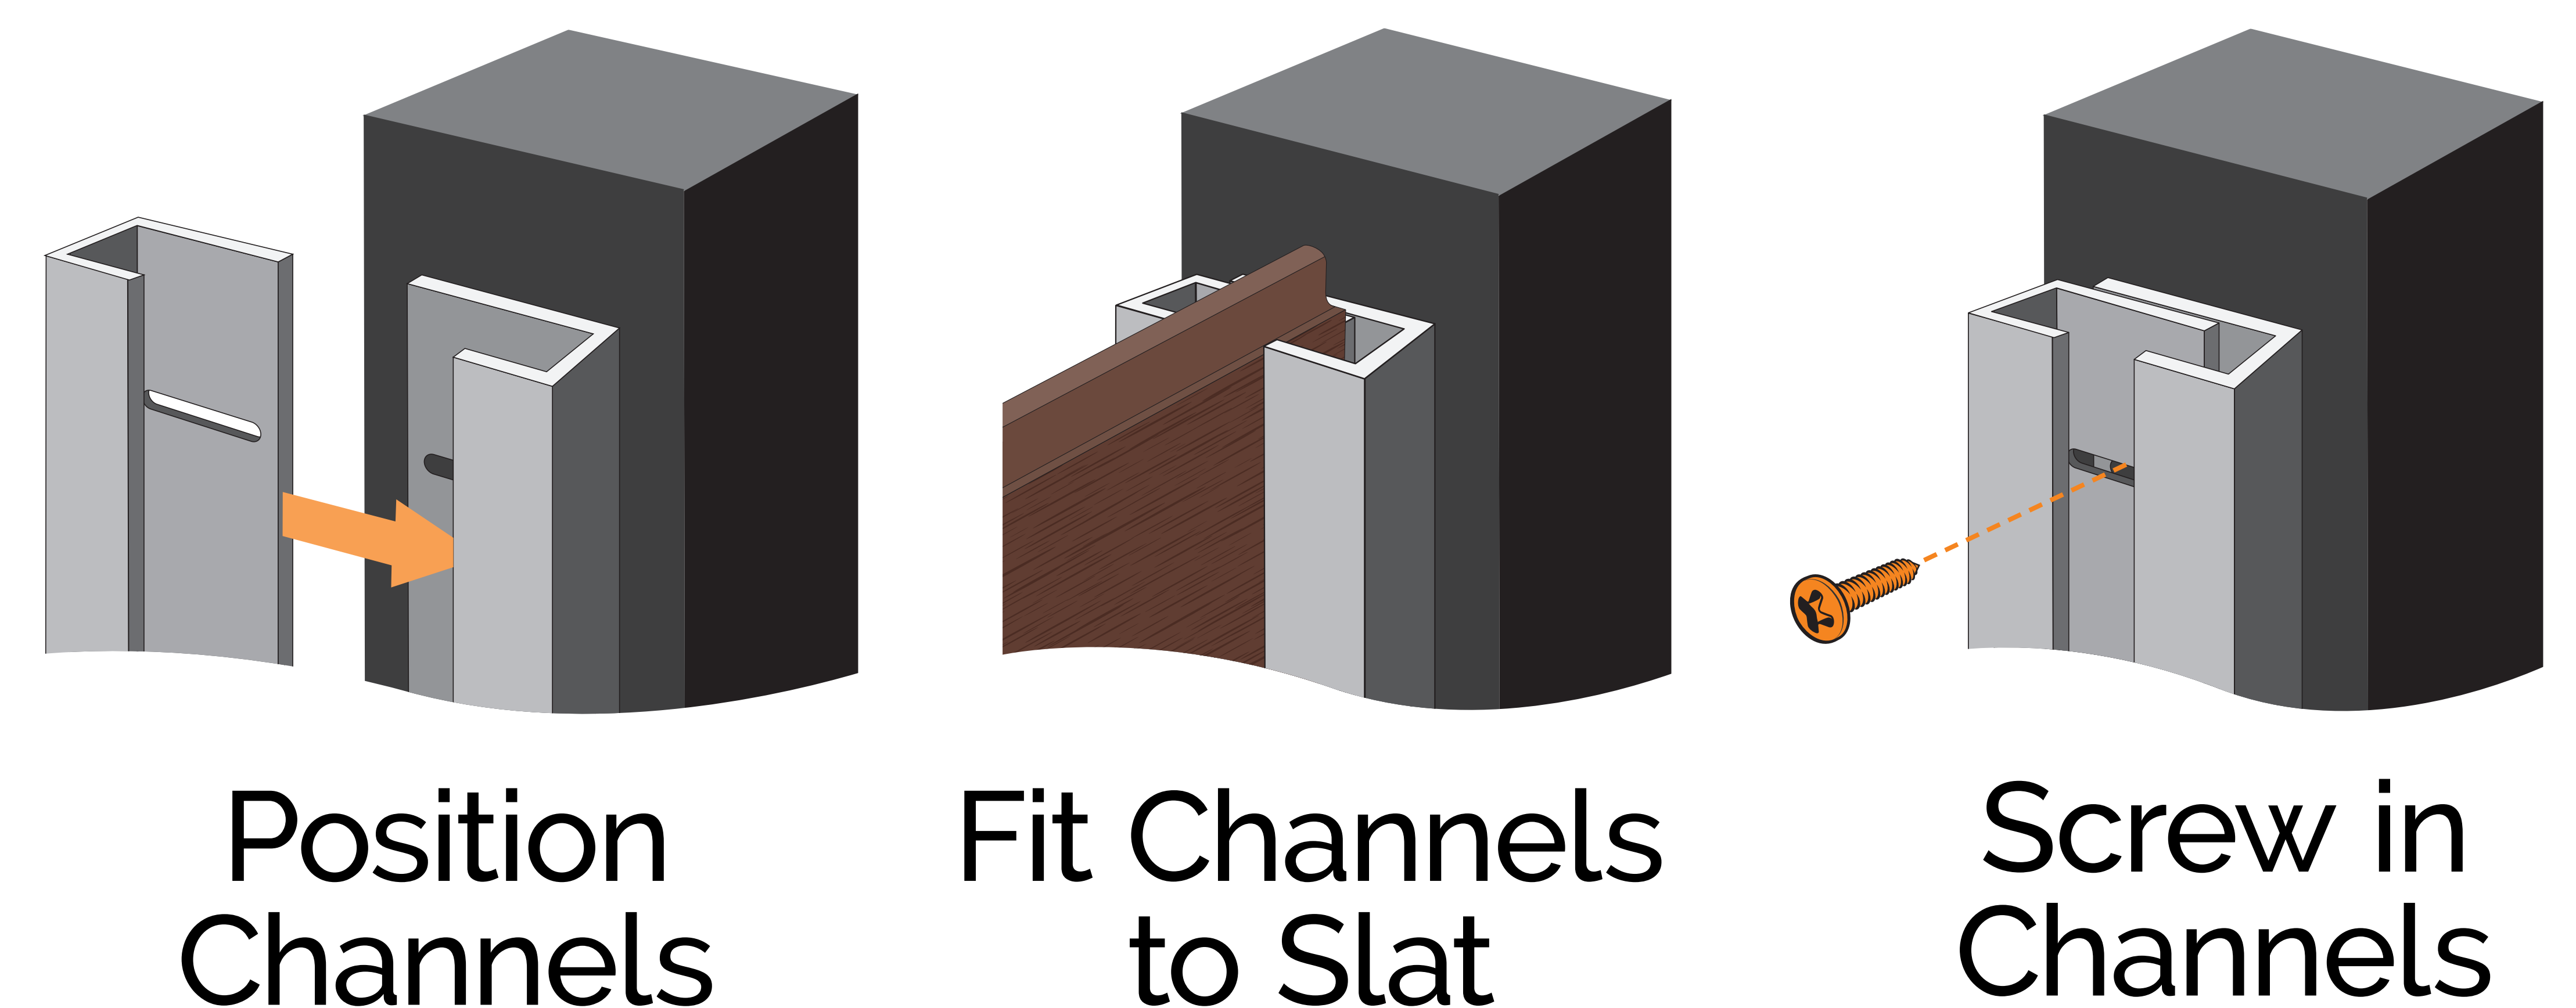

**12 – 5½" T&G Slats
+ 1 Topper Slat***