




15:00

estimated installation time



1 or more

people required

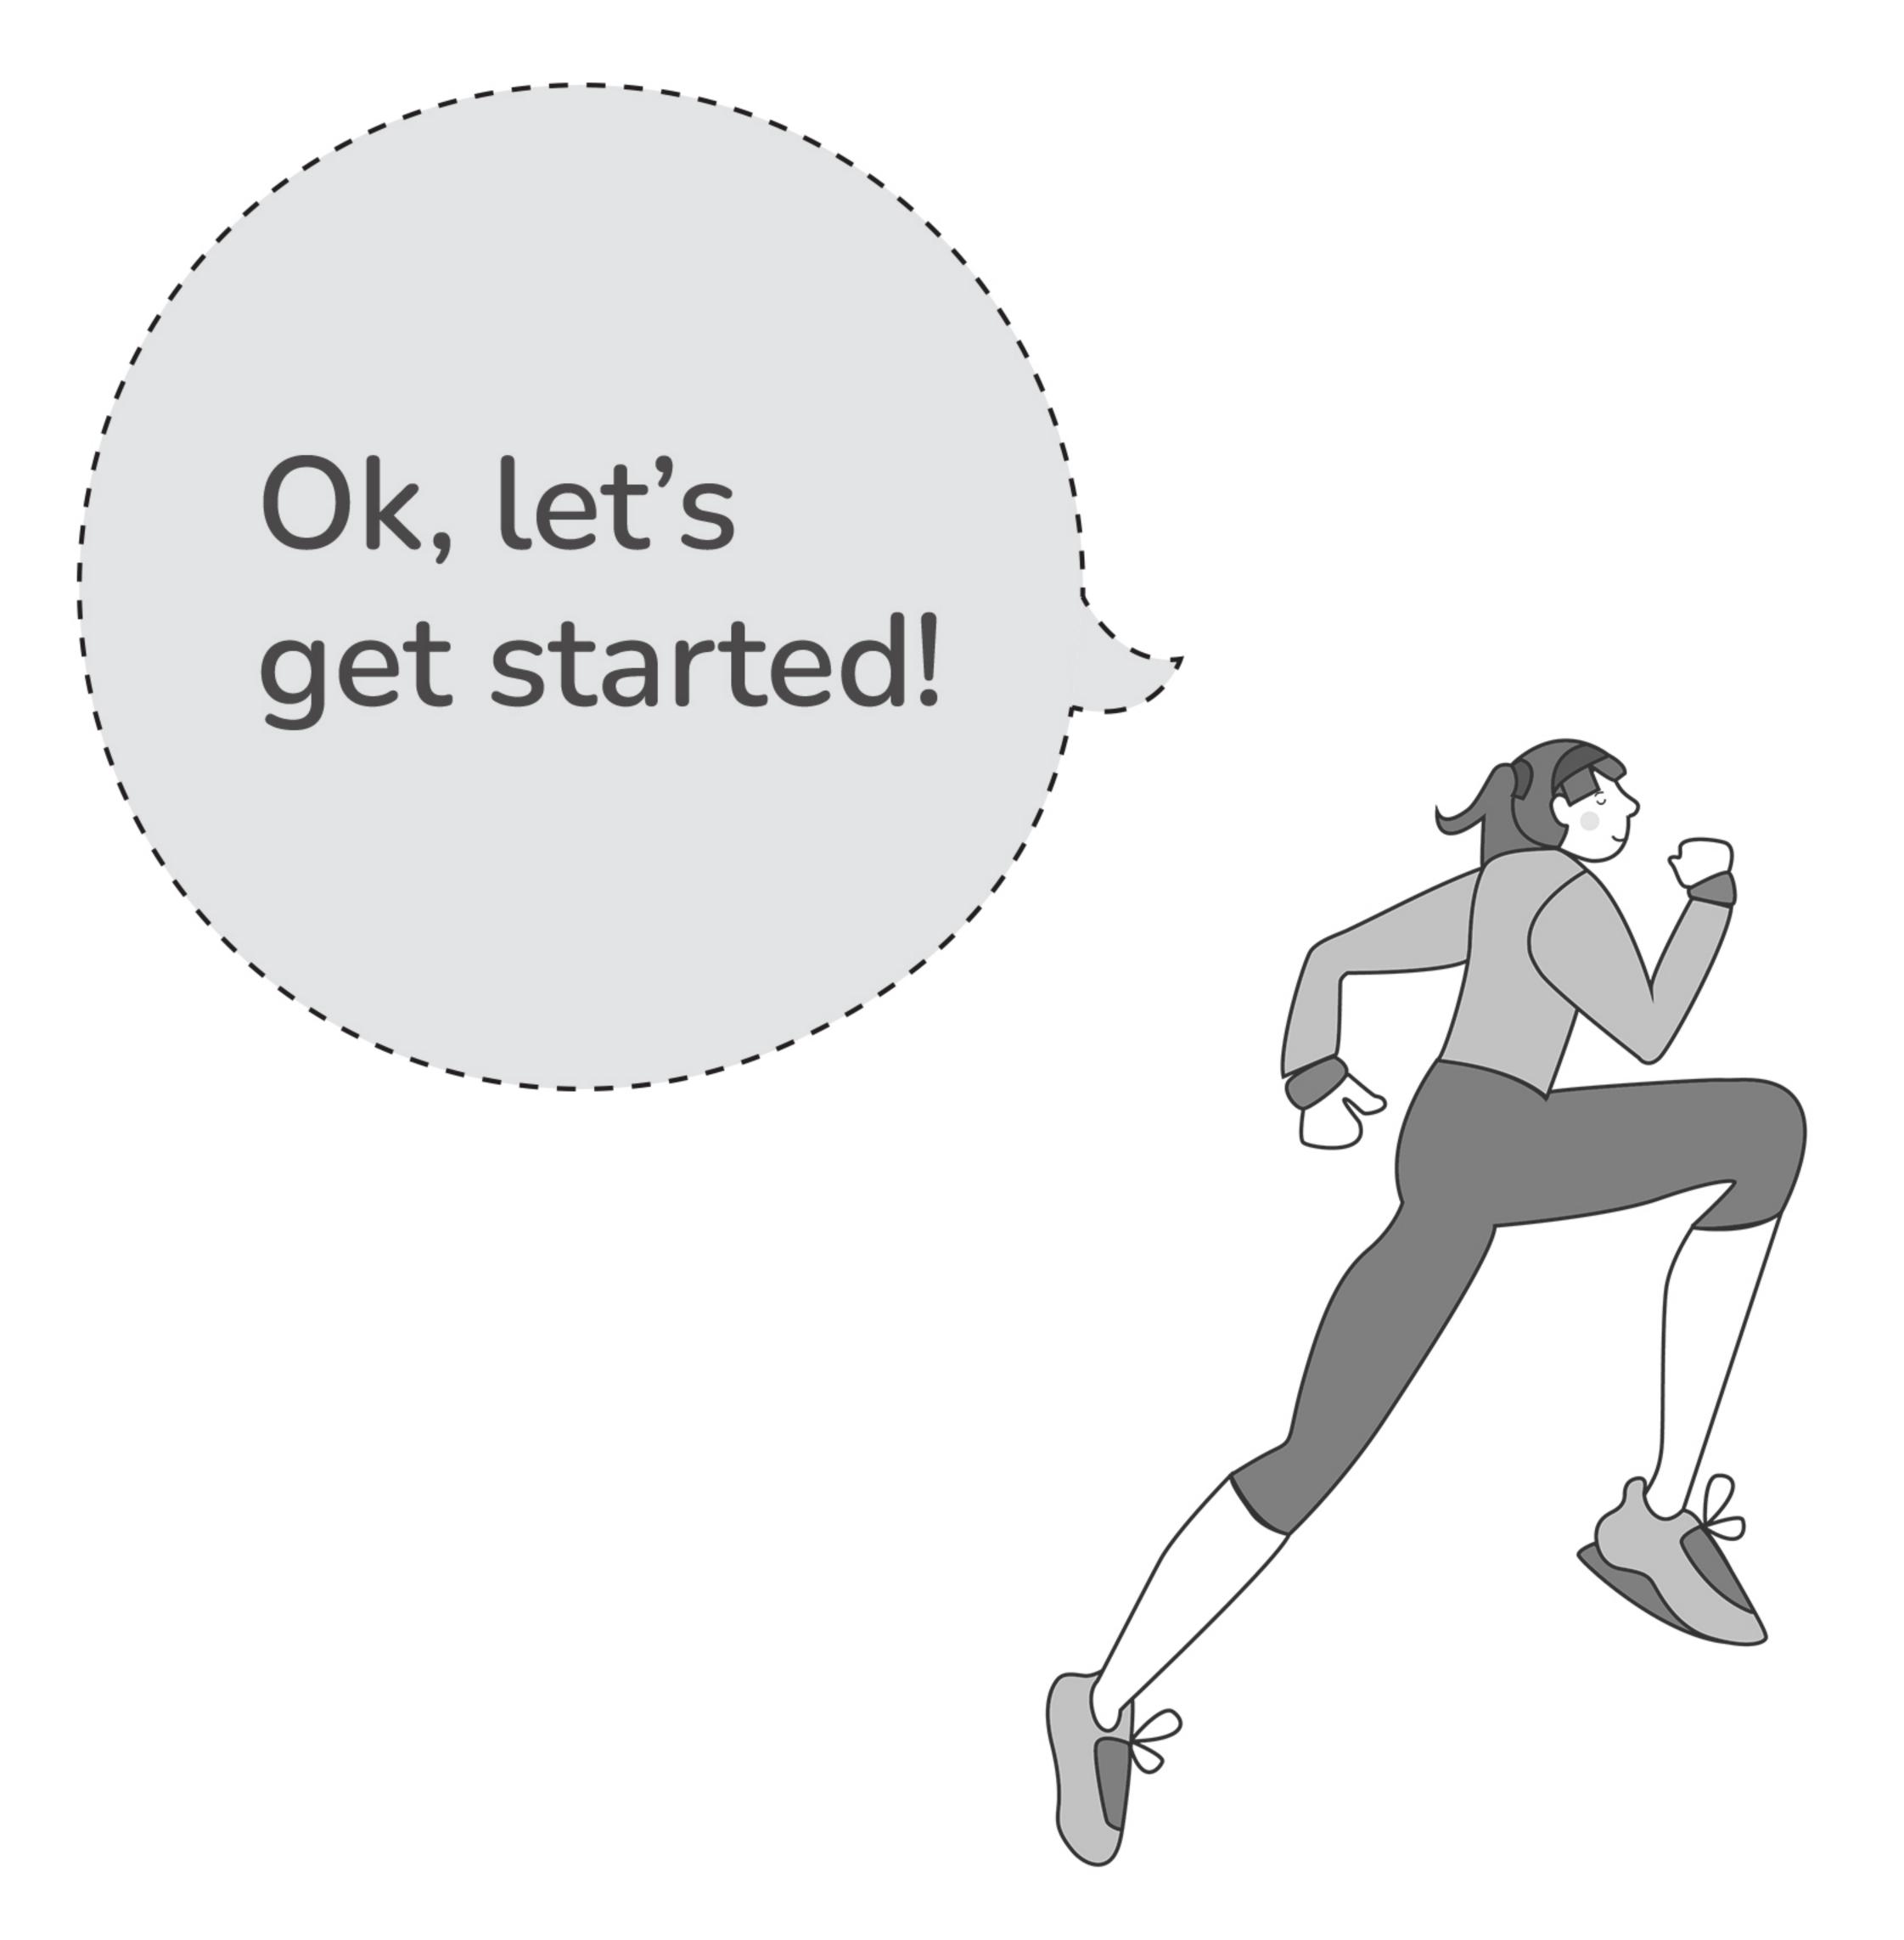

- Put on mood music!
- To prevent damage to product, use the clean side of package carton or rug as working surface for assembly.
- In the event of missing or damaged parts, delivery problems etc., please reach out to our team.
   We will be happy to fix the problem!




- Clean regularly with a soft and dry cloth.
- To protect finish, avoid use of abrasive cleaners.
- Wipe up spills immediately. Please!


(!) While assembling the product, tighten the bolts up to 50%. Once all parts are in place, only then fully tighten the bolts.




## what's included

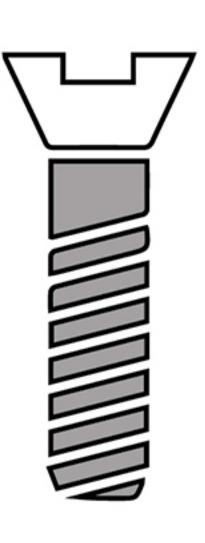


A Bolt 6 x 15 mm x12

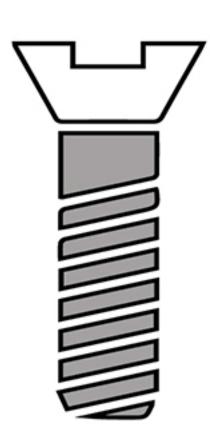

B Bolt 6 x 12 mm x8

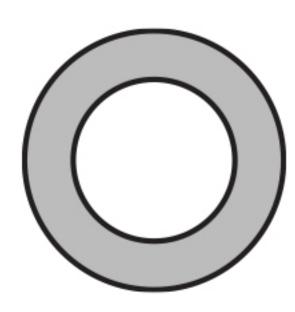


C Washer dia 16 mm x12

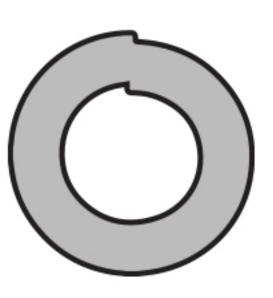


D Lock Washer dia12 mm x12

## what's included

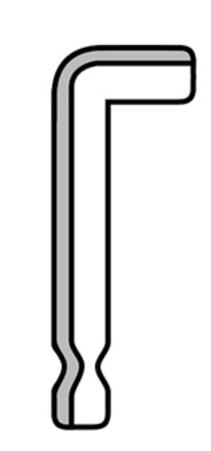


E Allen Key x1

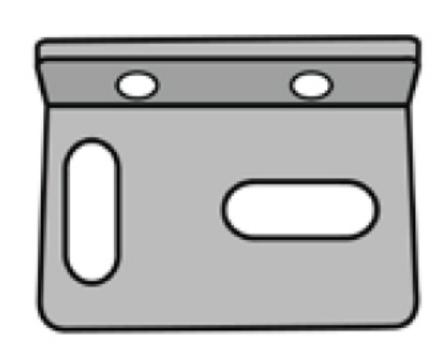


H Metal Bracket x2




Screw 4x15mm x4

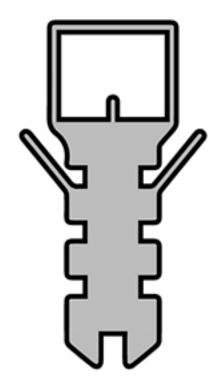

F Wall Plug x6

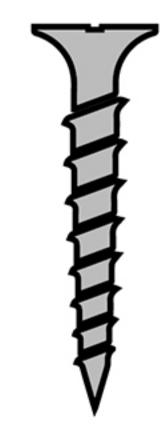



G Screw 4x40 mm x6

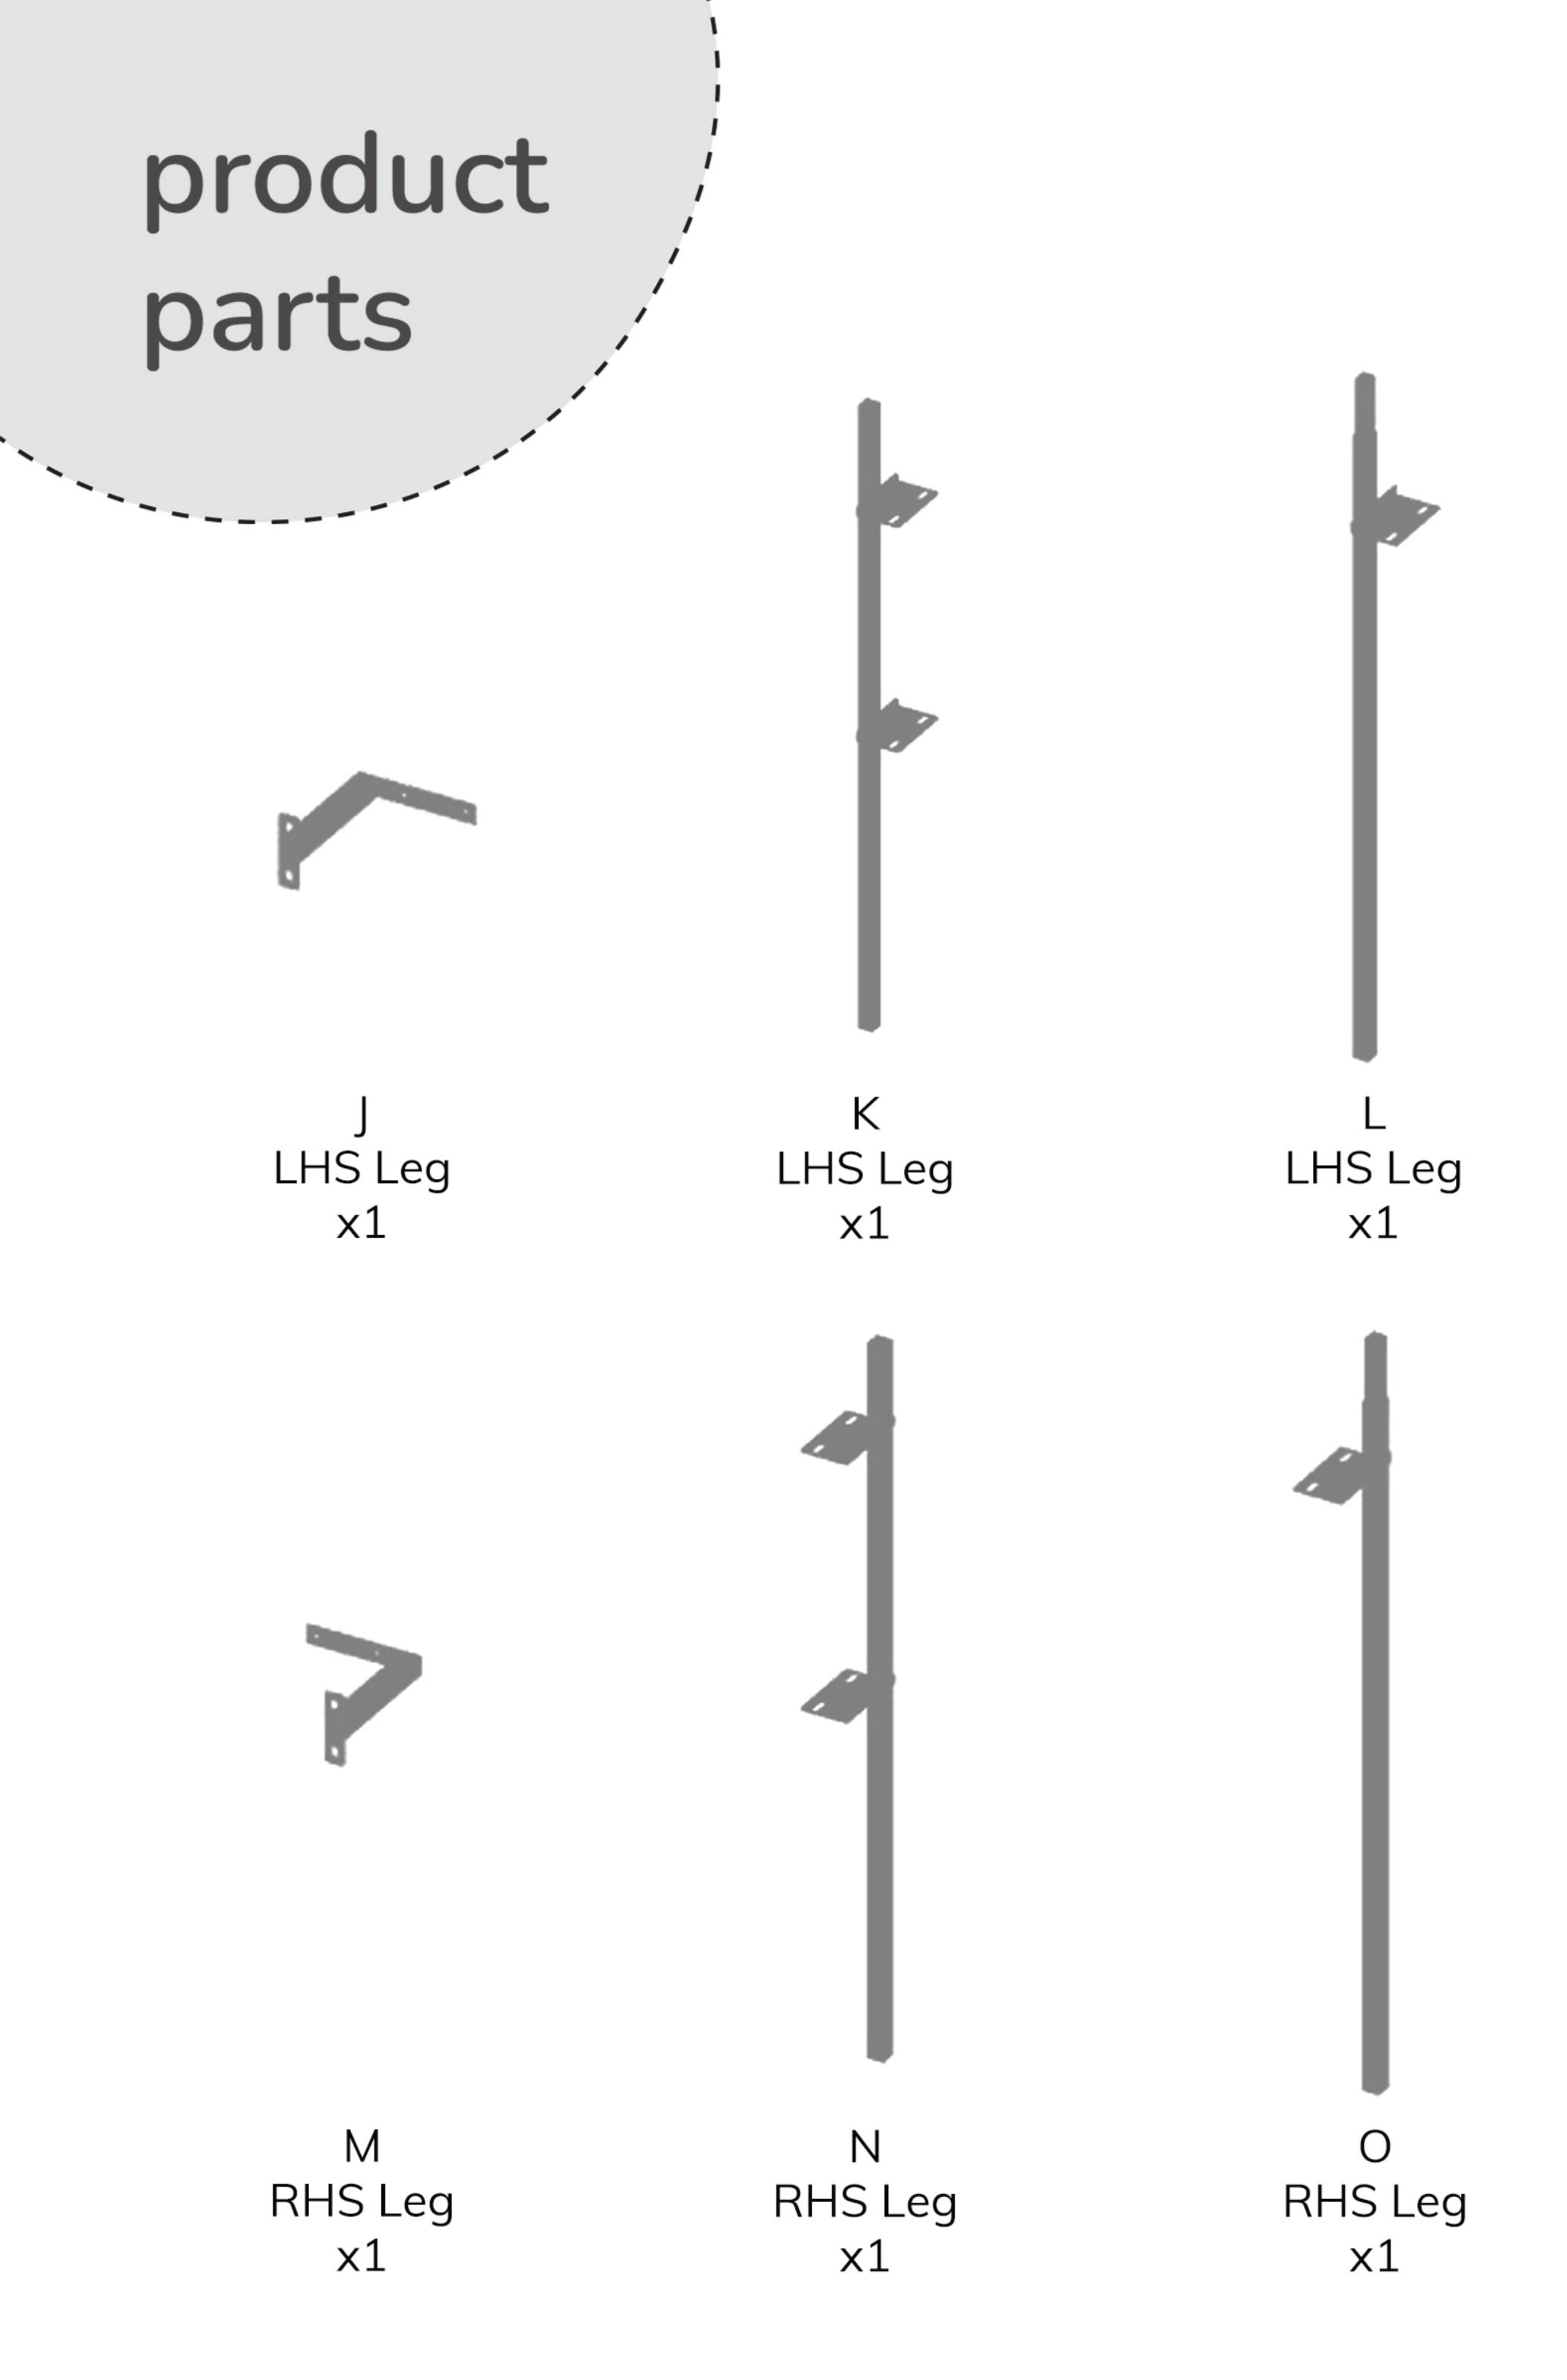

## product parts

P Shelf x1

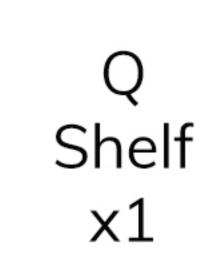

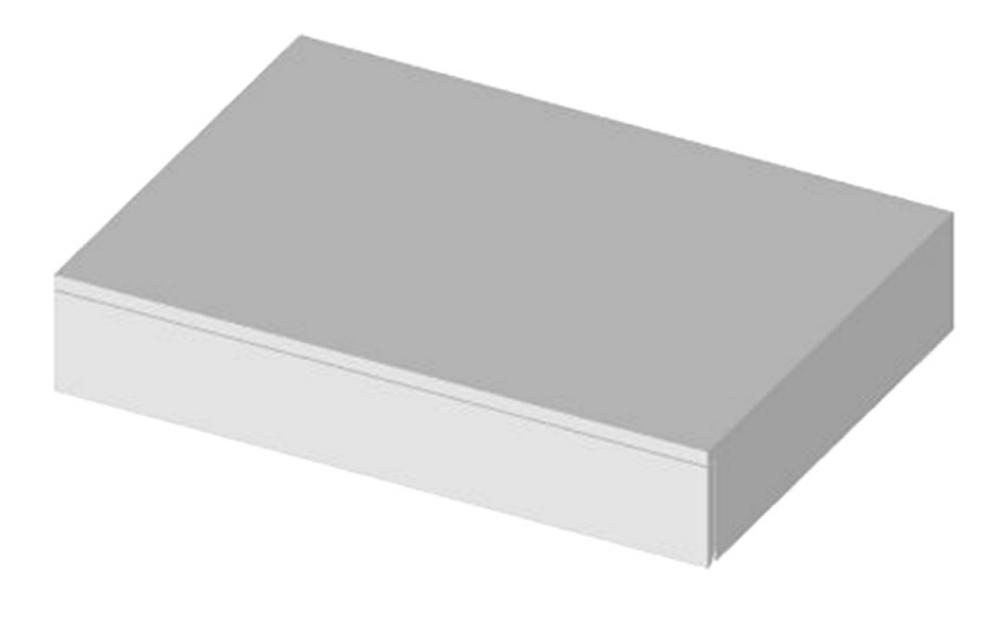

R Storage x1

### assembly instructions


Friendly Tip: Take a deep breath going in. This may be a tricky part, but nothing too overwhelming. Just follow these steps to the T and the outcome will be worth it!




(!) While assembling the product, tighten the bolts up to 50%. Once all parts are in place, only then fully tighten the bolts.

step 1:


Pleace the RHS Leg (O, N, M) on a carpet or rug as shown in figure.

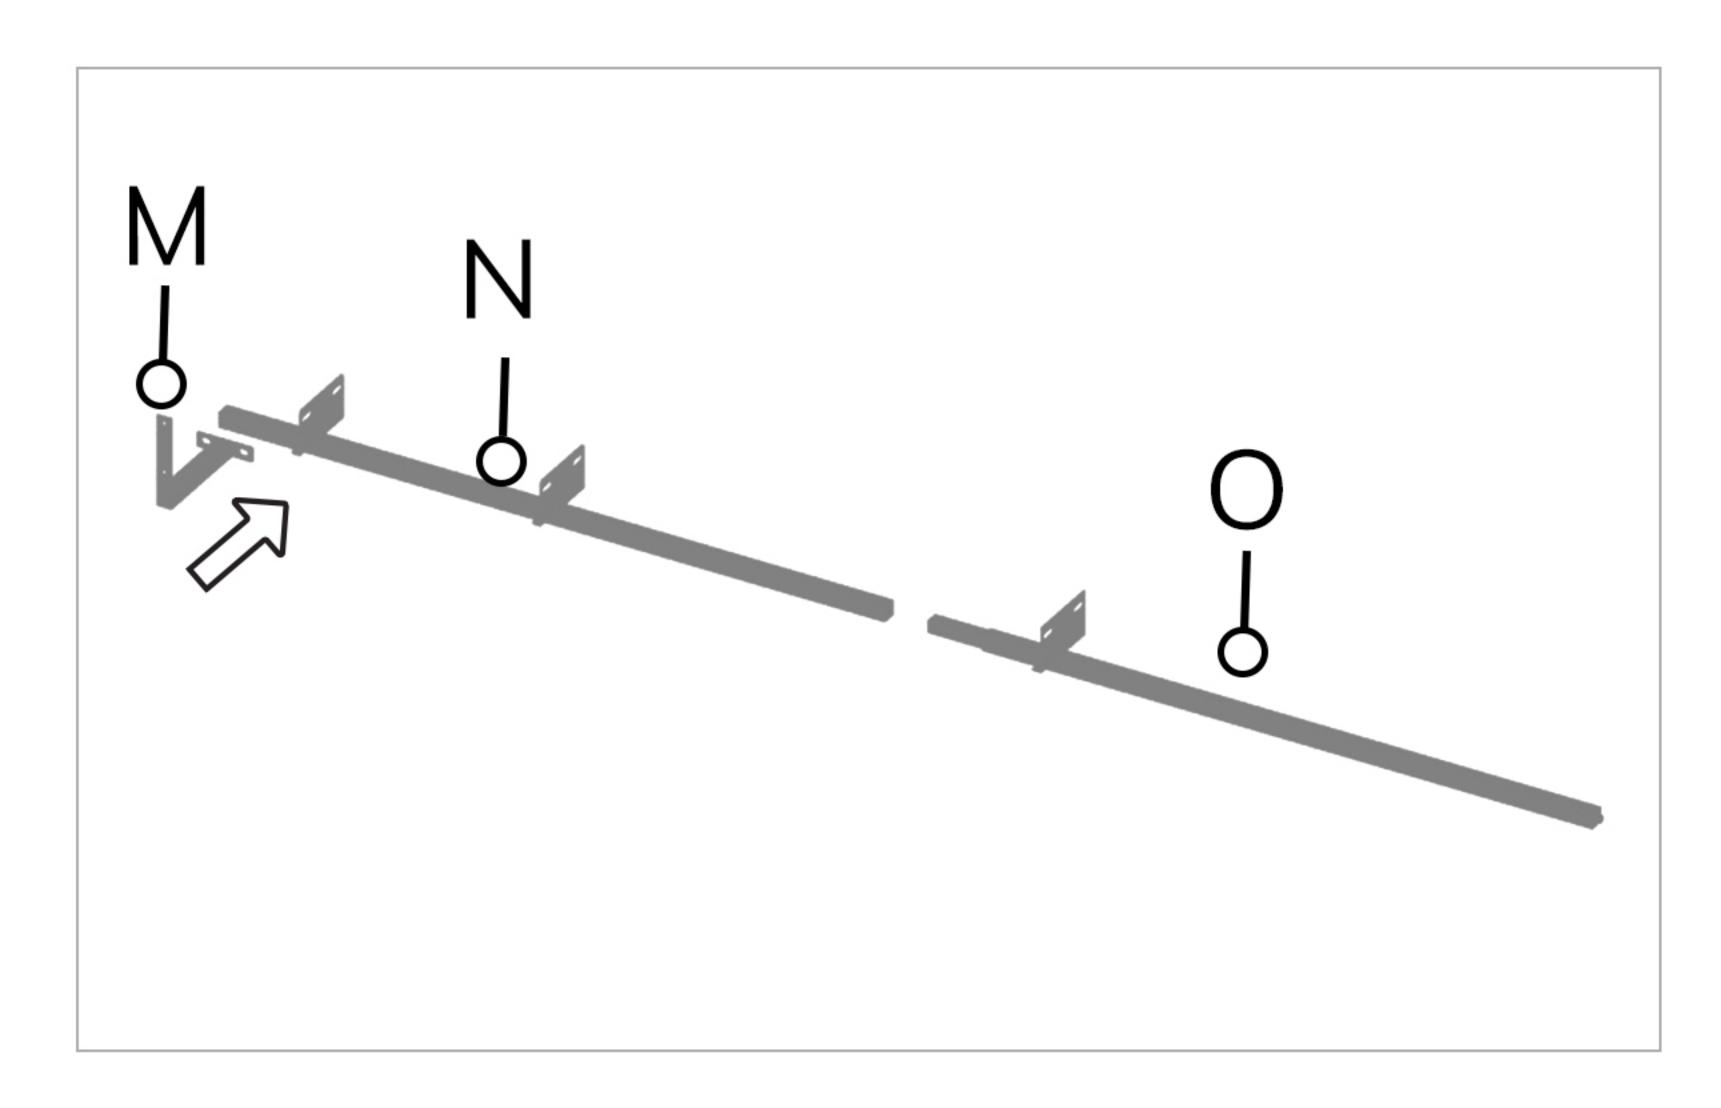

step 2: Now tighten the bolt (B) with the help of allen key (E) upto 50 percent. Make sure all the joints align before tightening 100 percent.

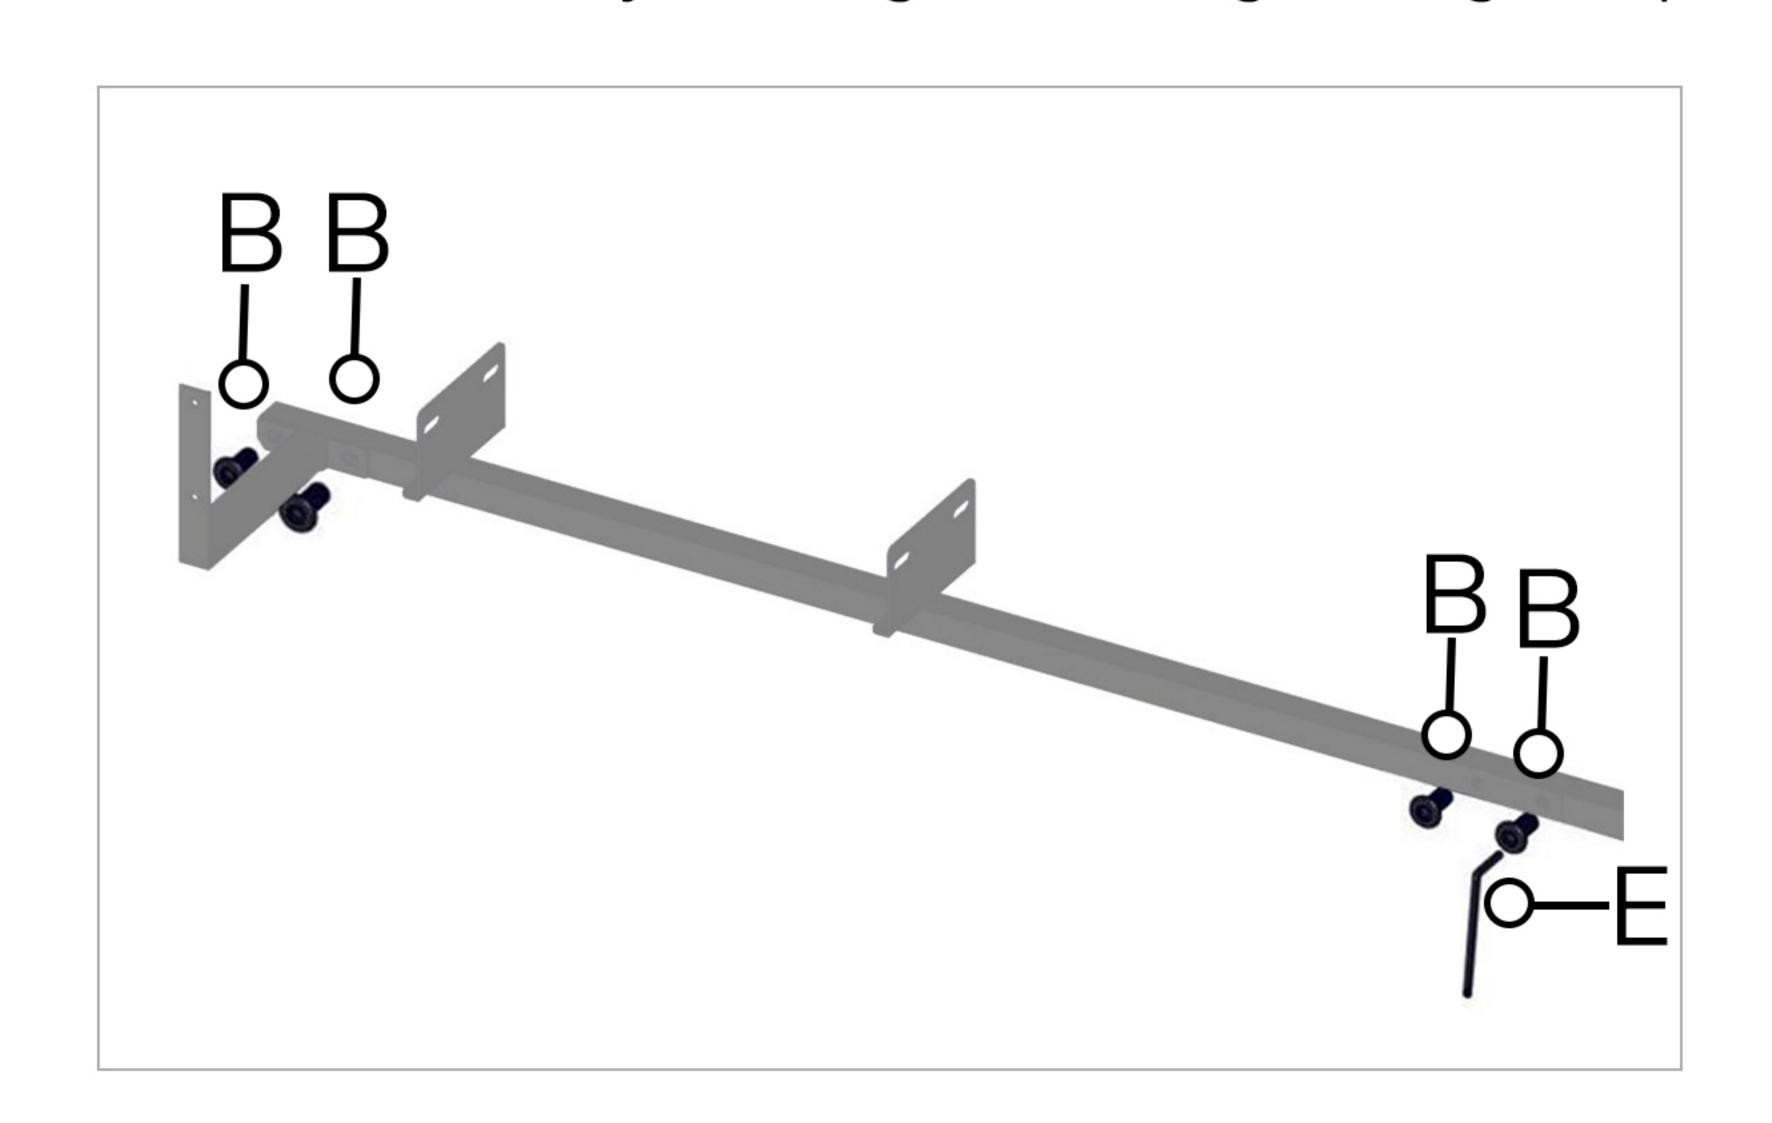


step 3: Repeat step 2 to tighten the LHS leg .

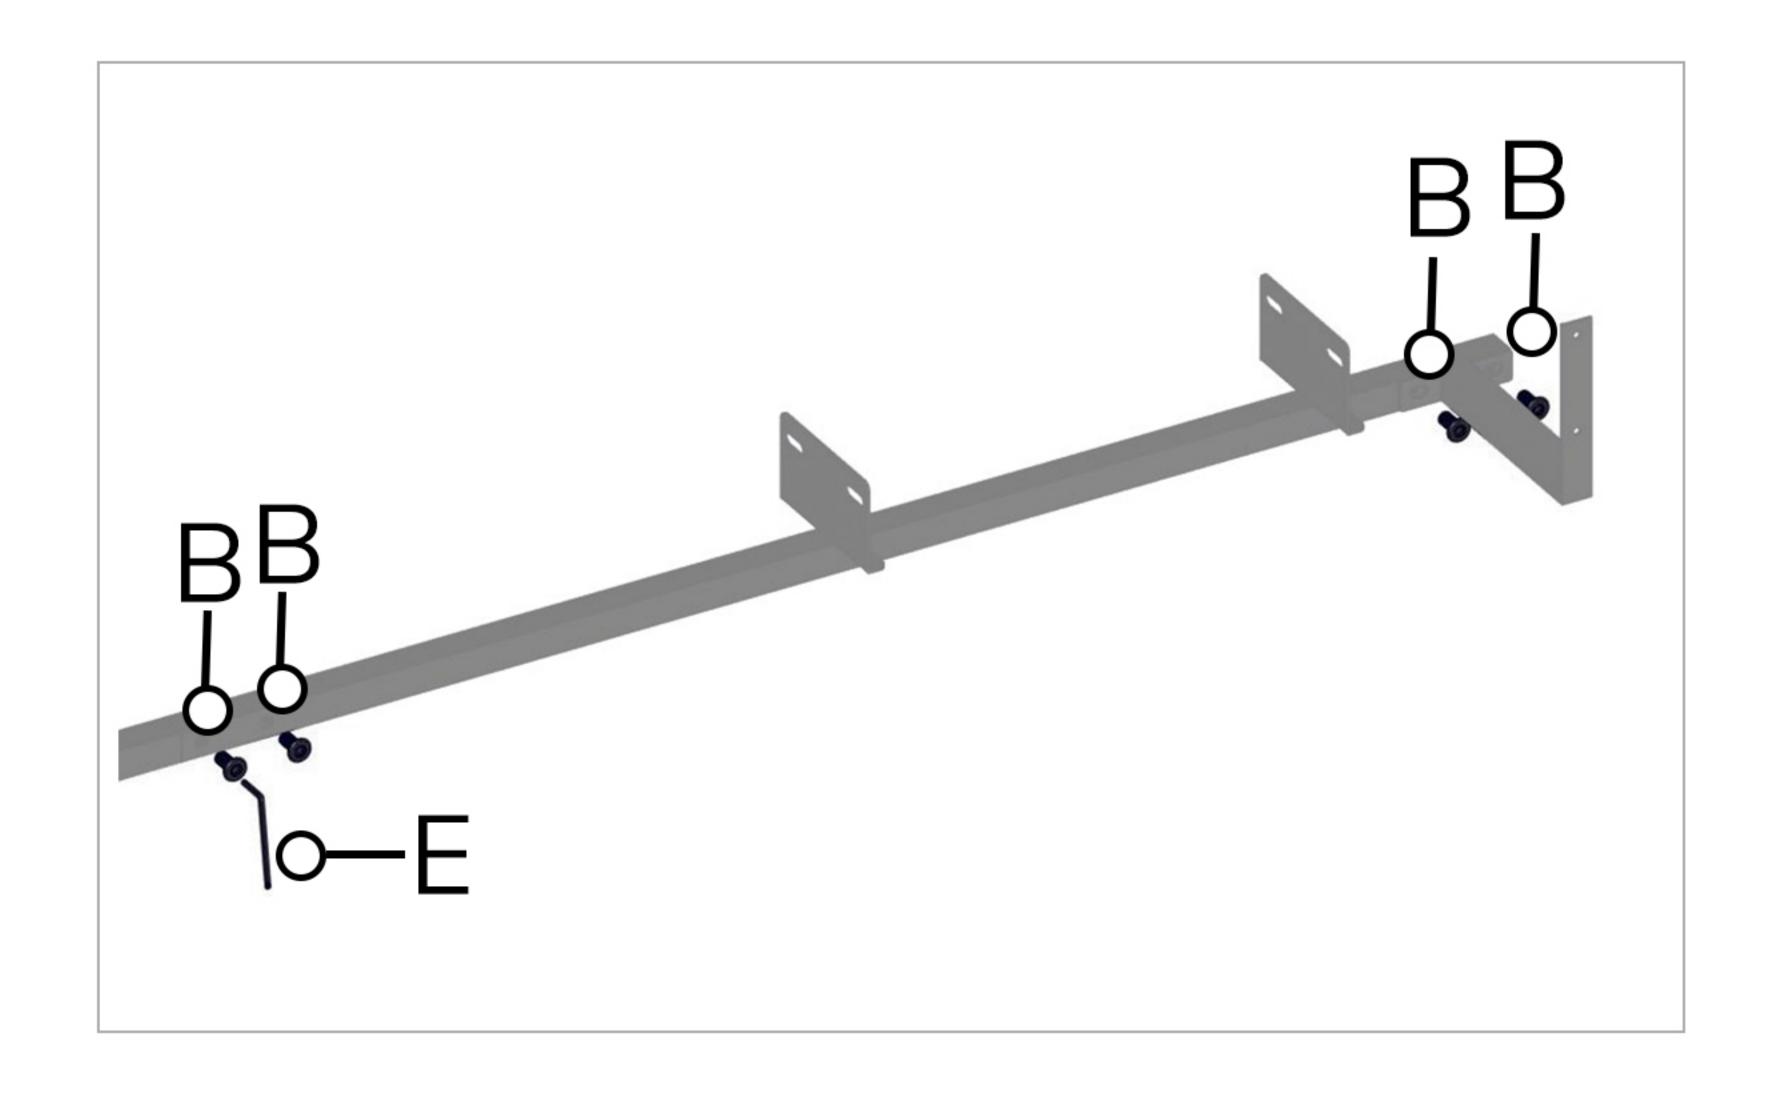


step 4:

Next, place LHS leg and RHS leg on the floor. Taking the image as reference align shelves (P, Q, R) with slots on the legs. Now, tighten all washers (C), lock washers (D), bolts (A) with the help of allen key (E).

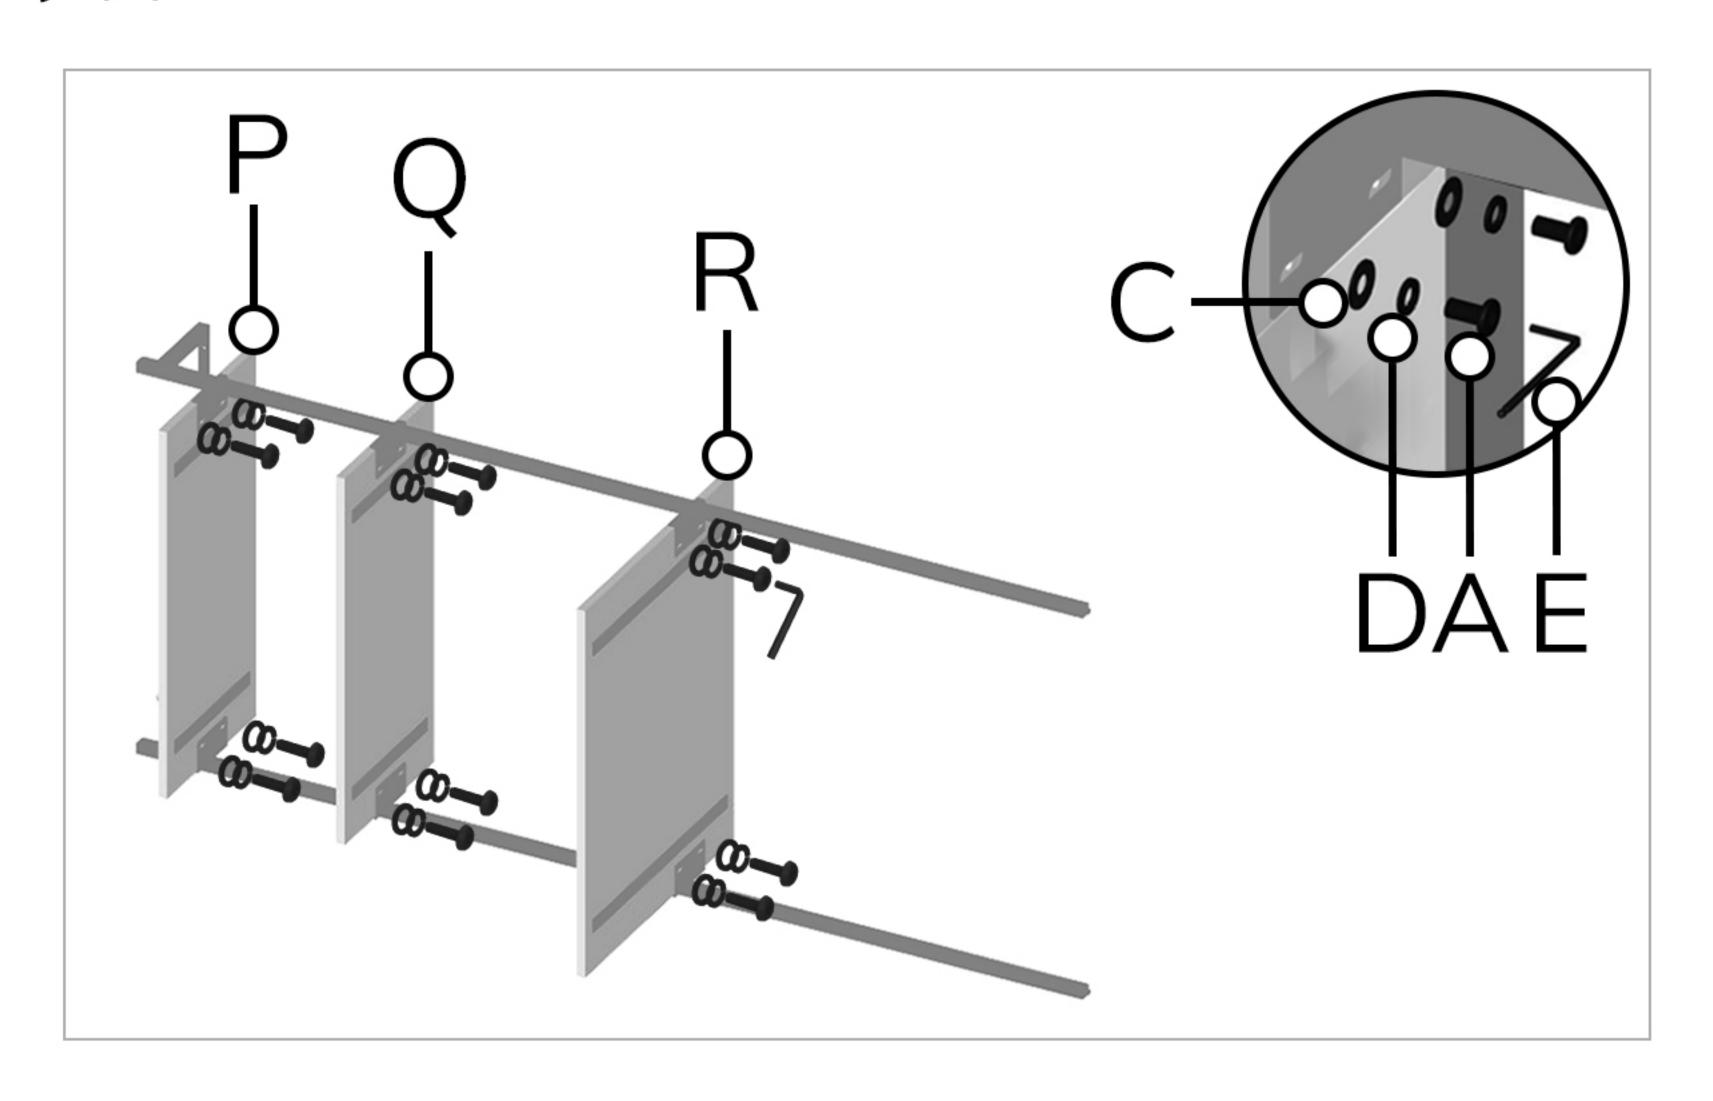


step 5:

Next, align the metal brackets (H) with predrilled holes in the bottom of the storage (R) as shown in the image.

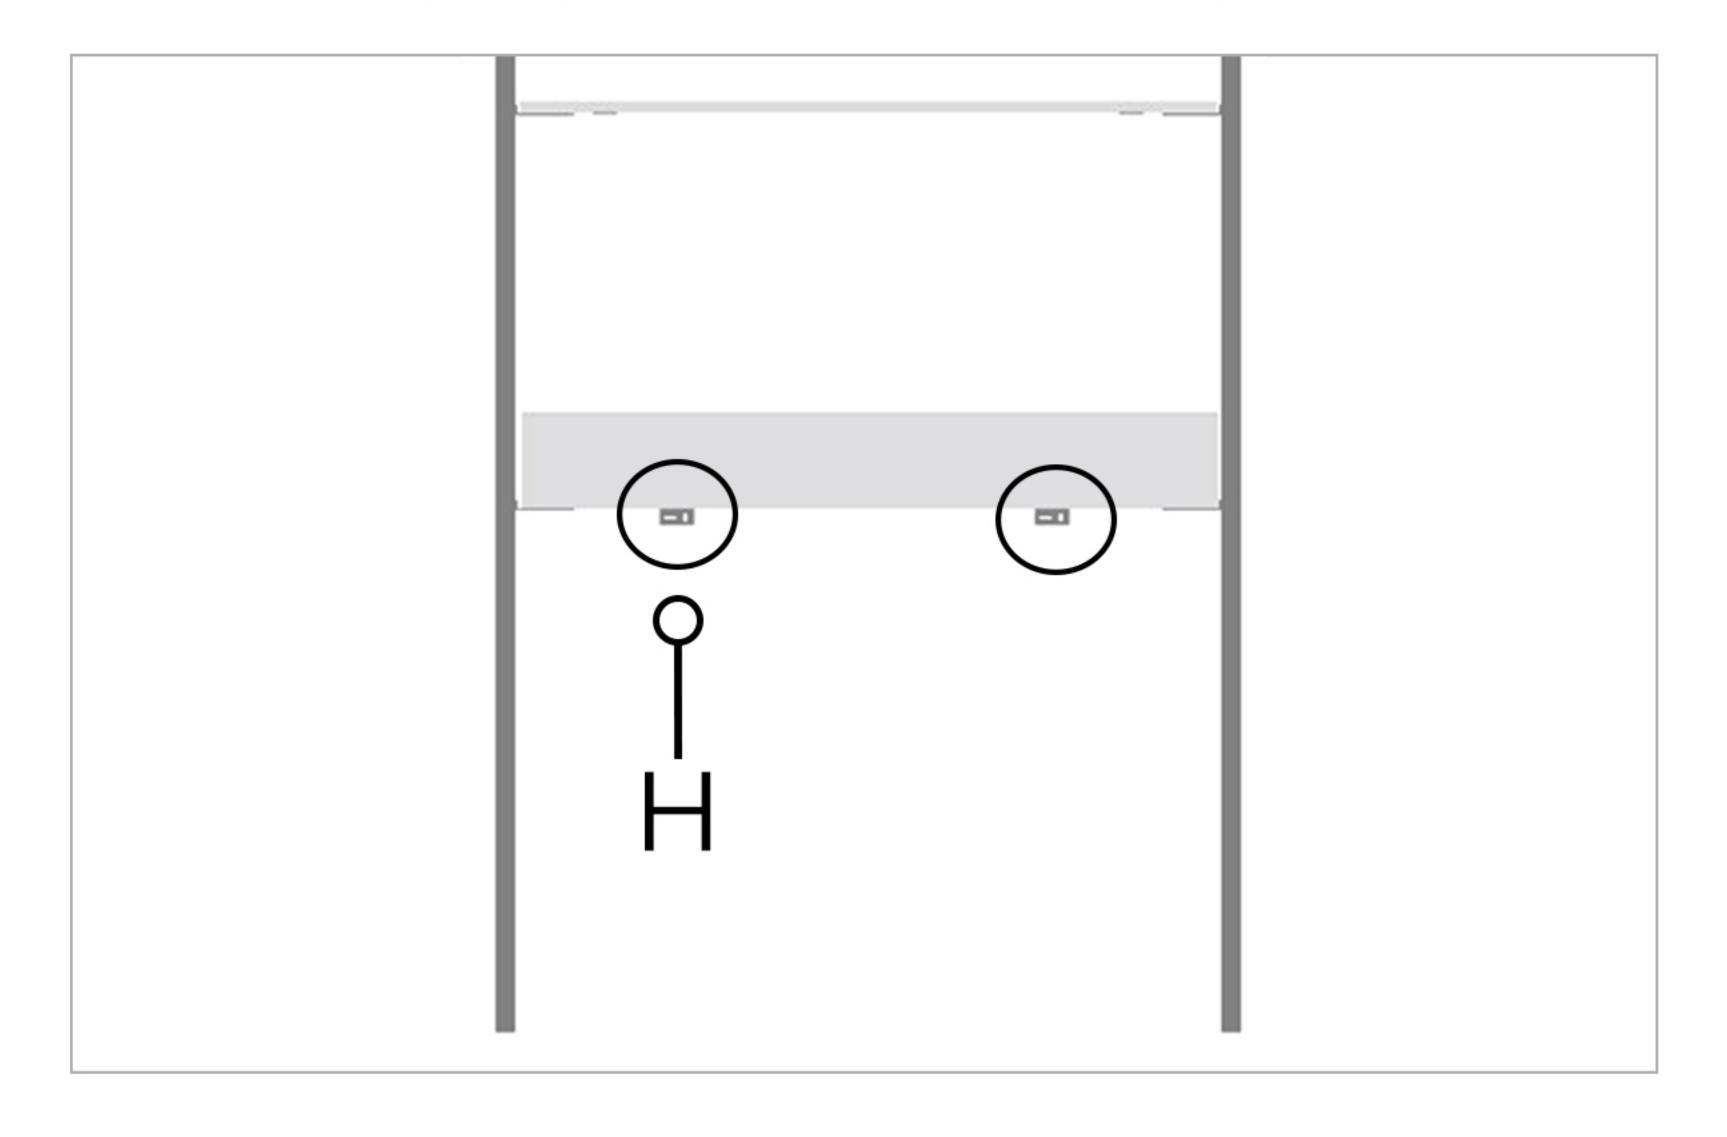

step 6: Secure them in place using screws (I) with screwdriver.

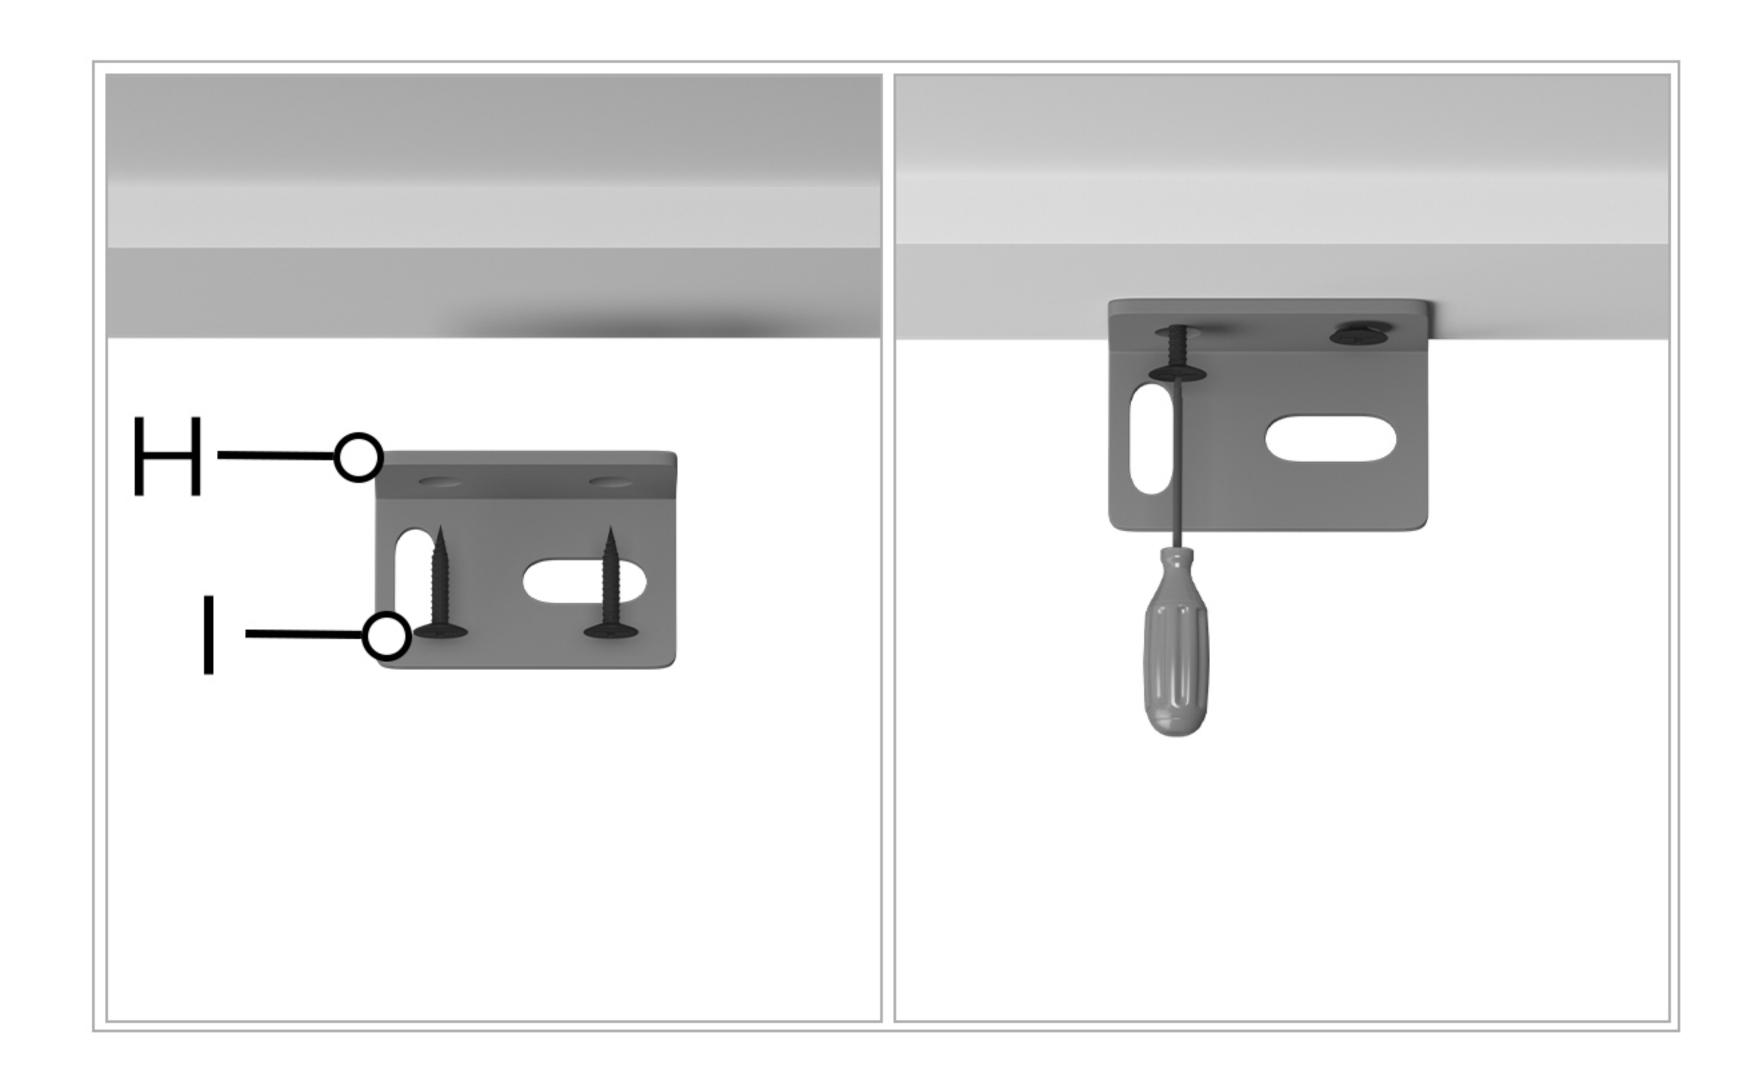


# installation instructions




(!) While assembling the product, tighten the bolts up to 50%. Once all parts are in place, only then fully tighten the bolts.

#### step 1:

Place the assembled shelf against the wall and put a spirit level on the top plank to check alignment. Adjust if needed. Stand back to see if both the legs are in level with the wall. Then, taking this image as reference, mark the walls for drilling.

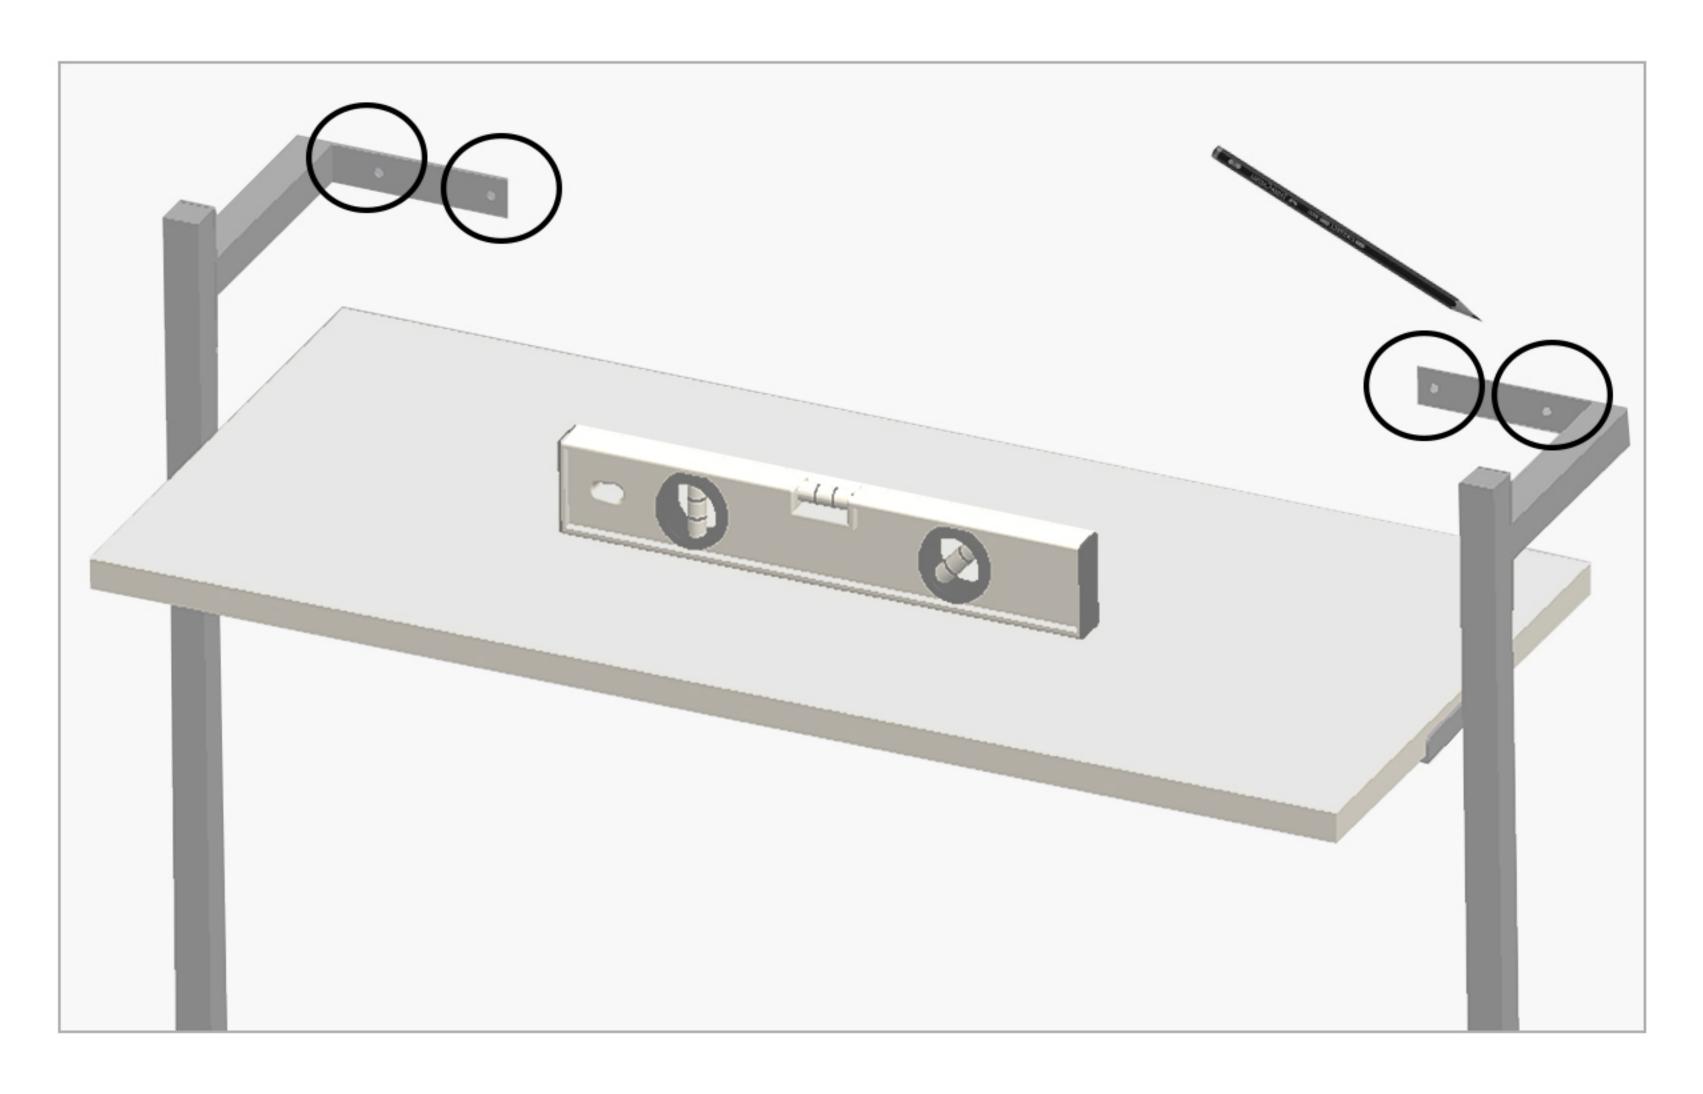


step 2: Next, taking the metal brackets as reference, mark the walls for drilling. Put the shelf aside and drill on all the markings.

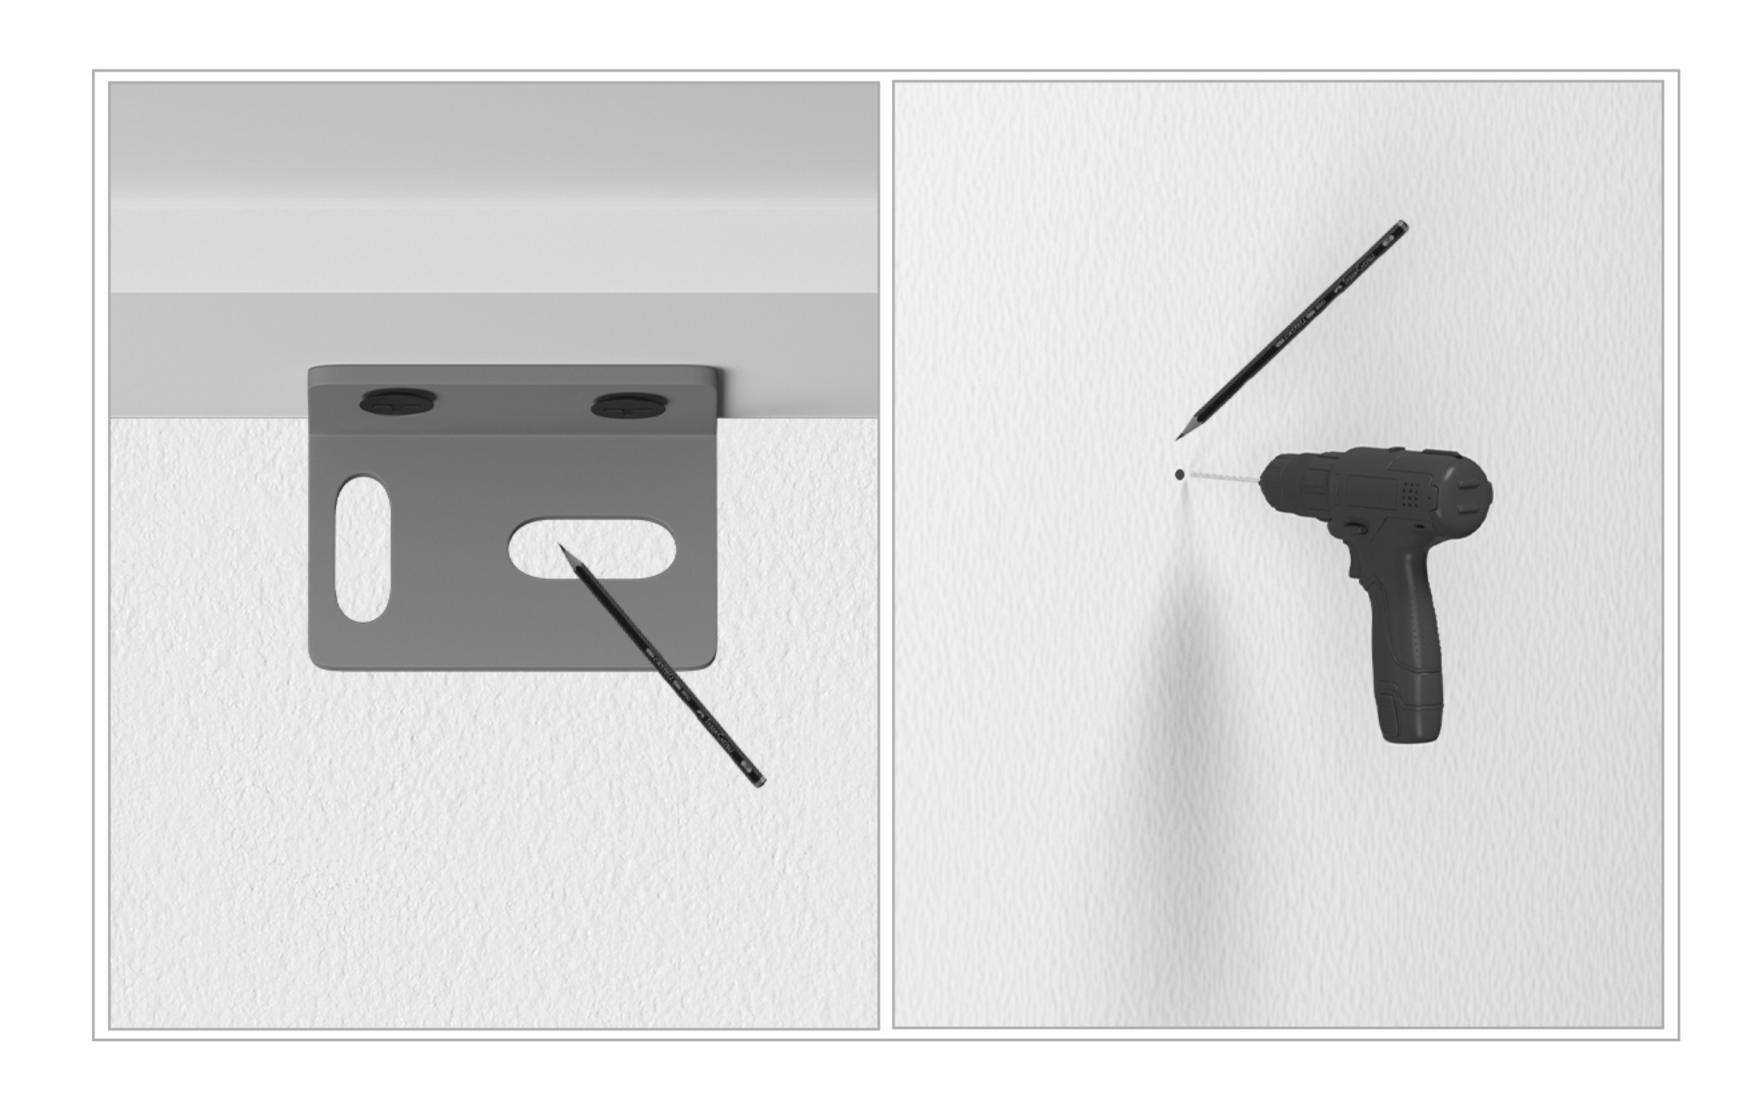



### step 3:

Insert wall plugs (F). Align the assembled shelf with the drilled marks and insert screws (G) using a screwdriver.

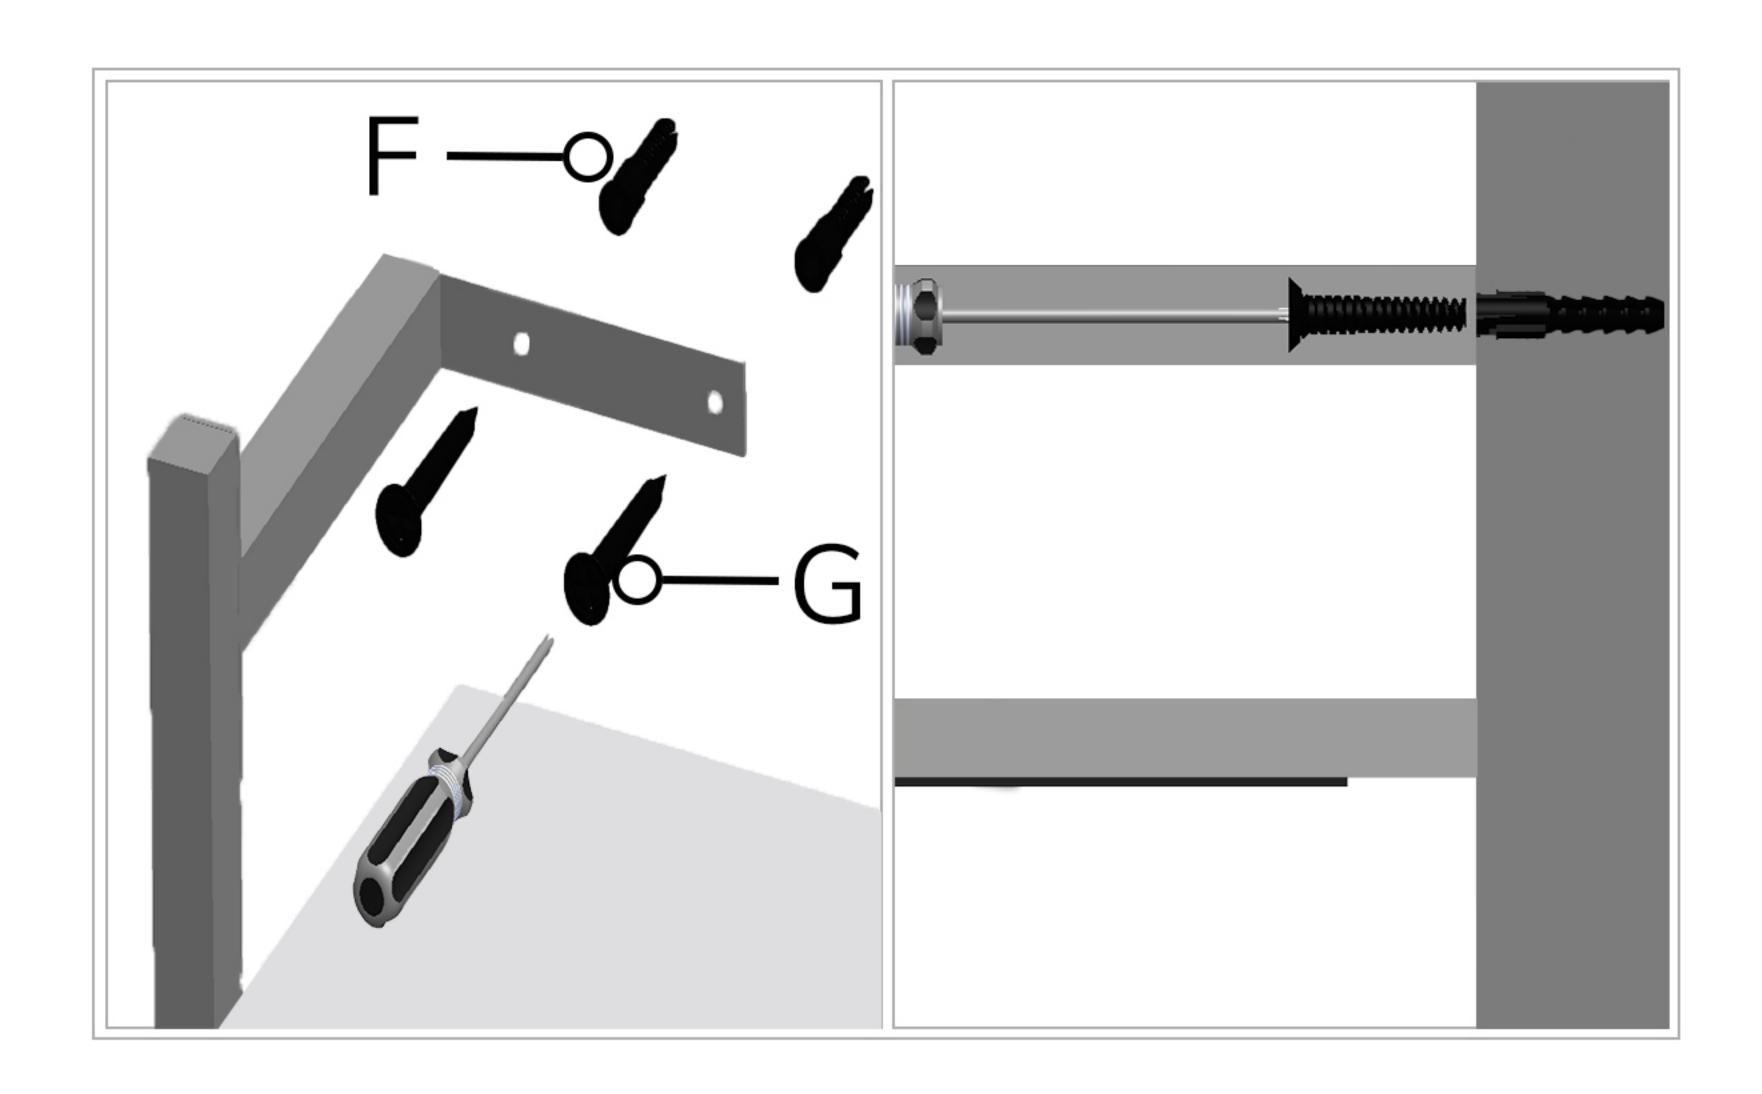

step 4: Repeat step 3 with the metal brackets.

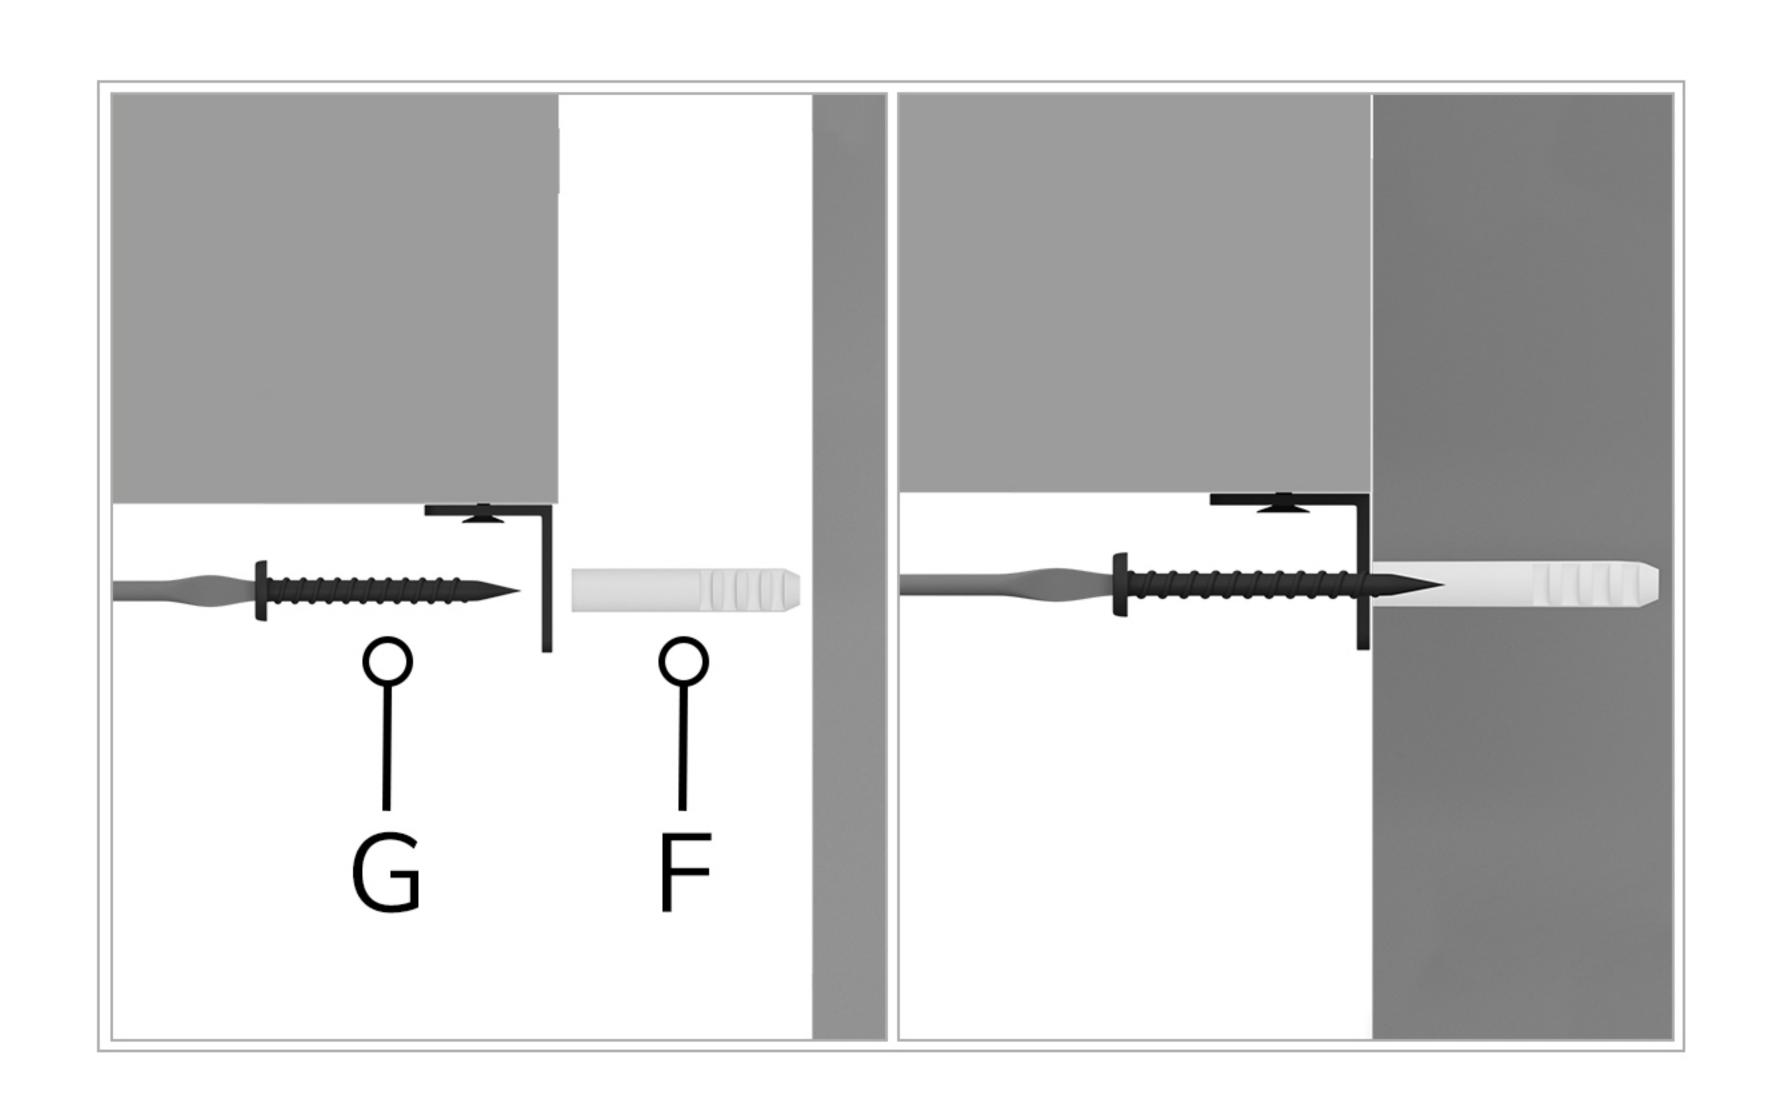

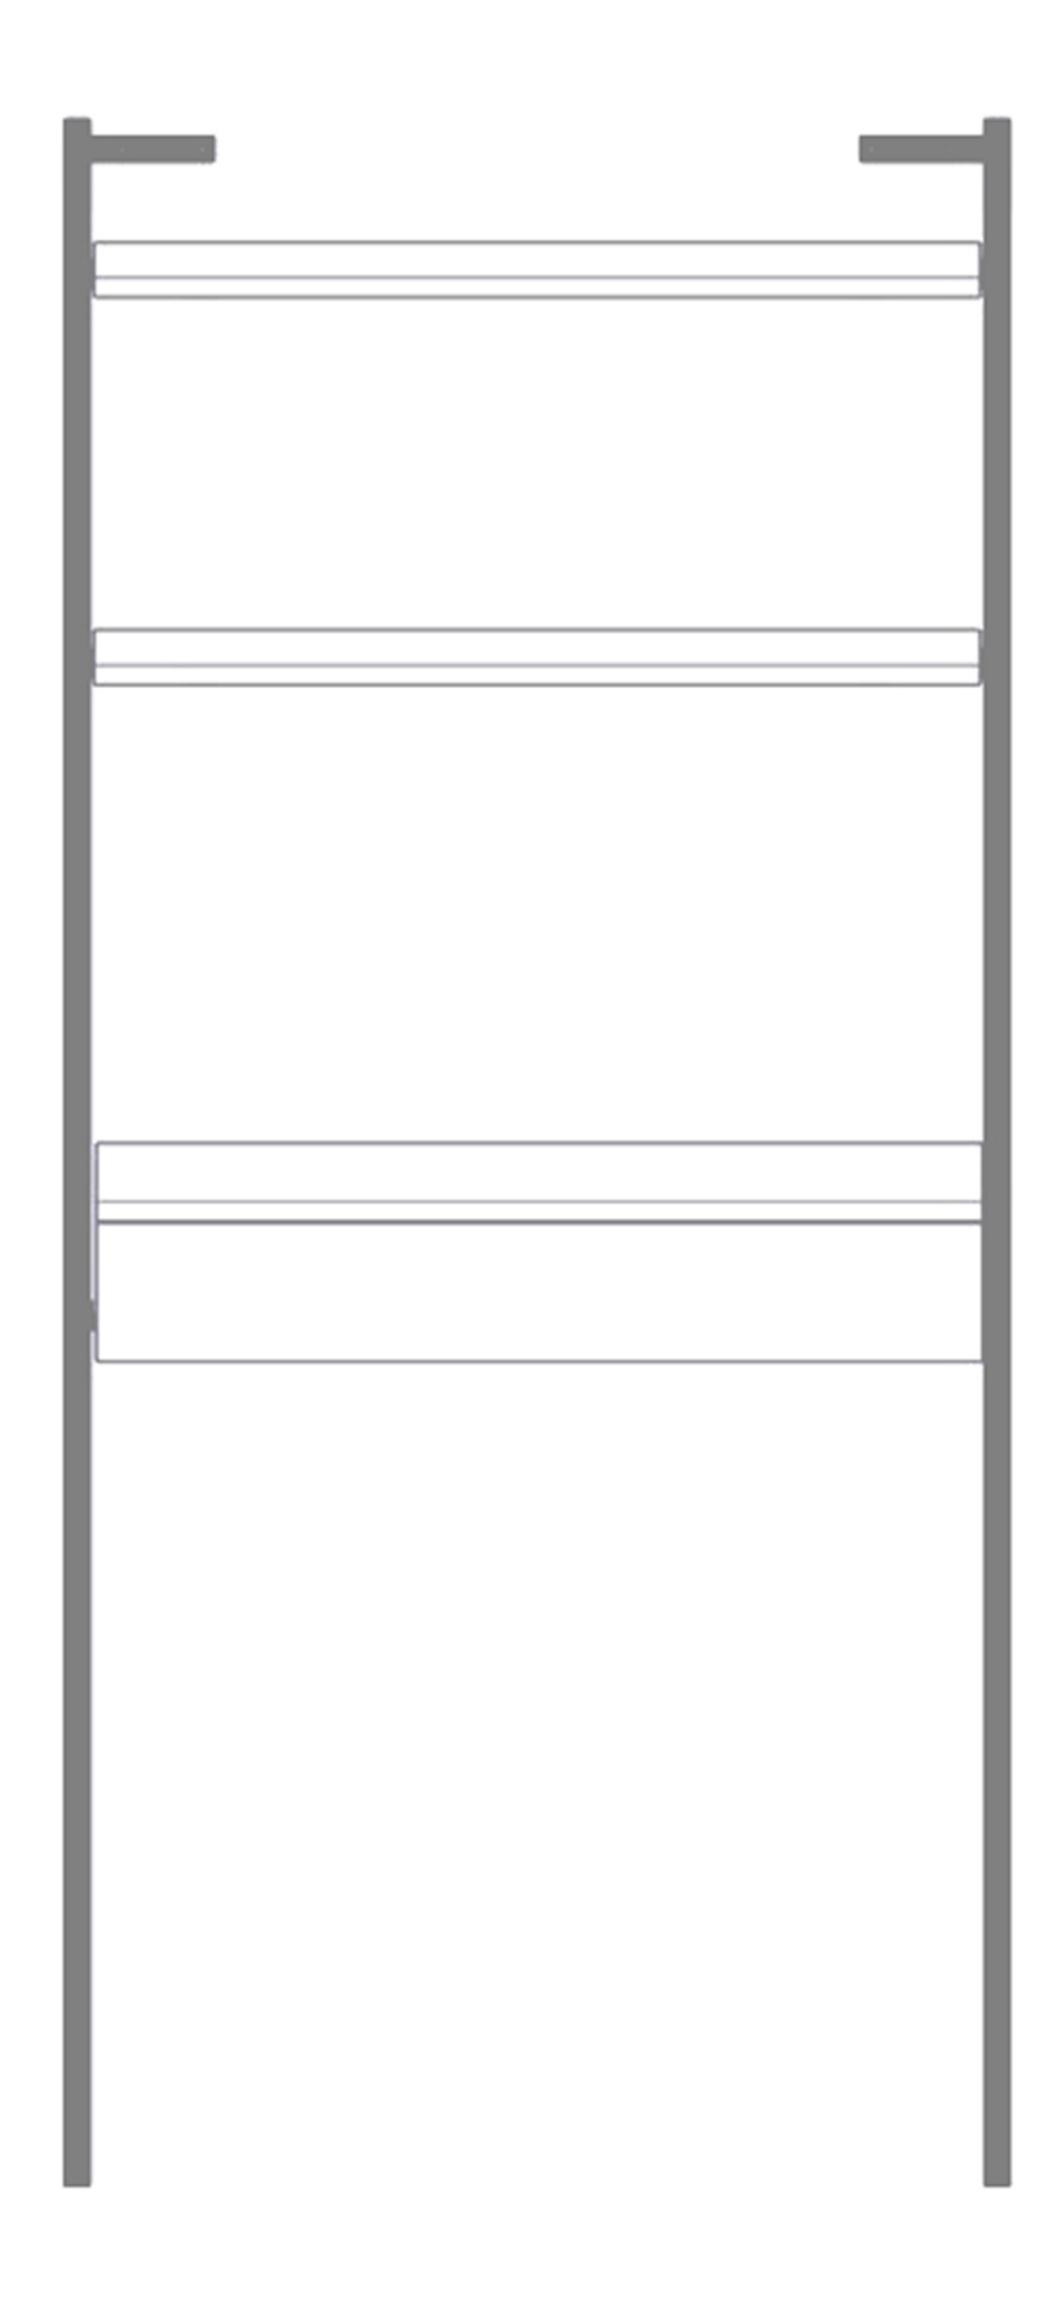

Voila! Your shelf is now assembled and secure!

you've got a home with us