



Utilitech & UT Design® and Grounded in Quality® are registered trademarks of LF, LLC. All rights reserved.

BRAND/MANUFACTURER	COMPATIBLE
UTILITECH	#0409545 #0409544
JUNO	IC22 IC22R
HALO	H7ICT H7ICAT HTRICT H7RICAT

Trim Installation Instructions


ITEM NUMBER

#0409539, #0409540, #0409541, #0416203

IMPORTANT SAFETY INSTRUCTIONS

MOUNTING

1. Turn power off.
2. Remove socket plate from housing if required.
3. Remove socket from socket plate by depressing legs and discarding socket plate.
4. Mount socket into back of trim.
5. Grasp torsion springs and push them into slots in the inside of the housing.
6. Push trim into housing.

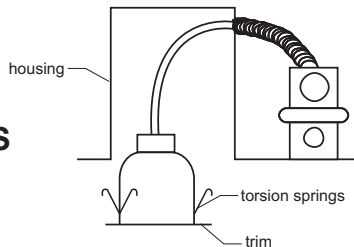

NOTE: SAVE THESE INSTRUCTIONS

Printed in China



Utilitech & UT Design® y Grounded in Quality®
son marcas registradas de LF, LLC.
Todos los derechos reservados.

MARCA/FABRICANTE	COMPATIBLE
UTILITECH	#0409545 #0409544
JUNO	IC22 IC22R
HALO	H7ICT H7ICAT HTRICT H7RICAT


Instrucciones para la instalación de los rebordes

NÚMERO DE ARTÍCULO

#0409539, #0409540, #0409541, #0416203

INSTRUCCIONES IMPORTANTES DE SEGURIDAD PARA EL MONTAJE

1. Desconecte la alimentación.
2. Retire la placa del portalámpara de la carcasa de ser necesario.
3. Para retirar el portalámpara de la placa del portalámpara, presione las patas y retire la placa del portalámpara.
4. Monte el portalámpara en la parte posterior del reborde.
5. Sujete los resortes de torsión e introdúzcalos a presión en las ranuras en el interior de la carcasa.
6. Introduzca el reborde en la carcasa mediante presión.

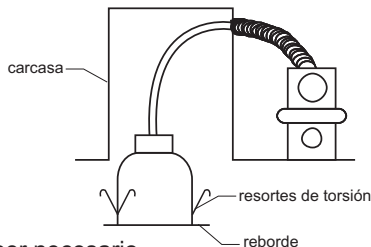

NOTA: GUARDE ESTAS INSTRUCCIONES

Impreso en China