


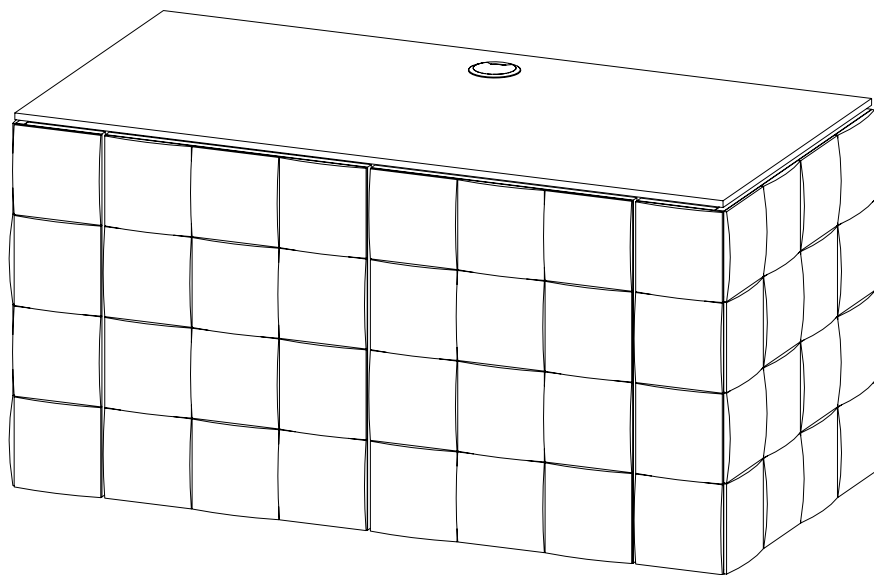

ASSEMBLY INSTRUCTIONS

Wall Mount TV Stand

EEI-7932 / V0.08.26.26

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item
Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.






Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Cam Bolt Ø6 x 32 mm	x14
B		Cam Lock Ø15 mm	x14
C		Screw M4.5 x 12.5 mm	x24
D		Screw Cap Ø15 mm	x6
E		Screw M3.5 x 13 mm	x4
F		Wood Dowel Ø8 x 30 mm	x22
G		Push Tool	x2
H		Wedge	x8
I		Screw M 3.5 x 15.5 mm	x8
J		Wall Mounted Bolt	x8
K		Screw M3.5 x 25 mm	x4
L		Wall Plug	x6
M	 M1 M2	Bracket Wall Hanging	x1
N		Wood Dowel Ø8 x 20 mm	x8
O		Screw M5.5 x 45 mm	x6
P		Wall Drill Template	x1
Q		Screw M7 x 50 mm	x6
R		Grommet Cover	x2
S		Shelf Support	x4
HGL4		Hand Grip + Allen Key	1 SET
HS26B		Hinge	x4


WHAT YOU NEED:




Phillips



Phillips Head Screwdriver




Power Drill



Level

FURNITURE COMPONENTS INCLUDED IN THE BOX:


All parts are numbered with a sticker according to this list.

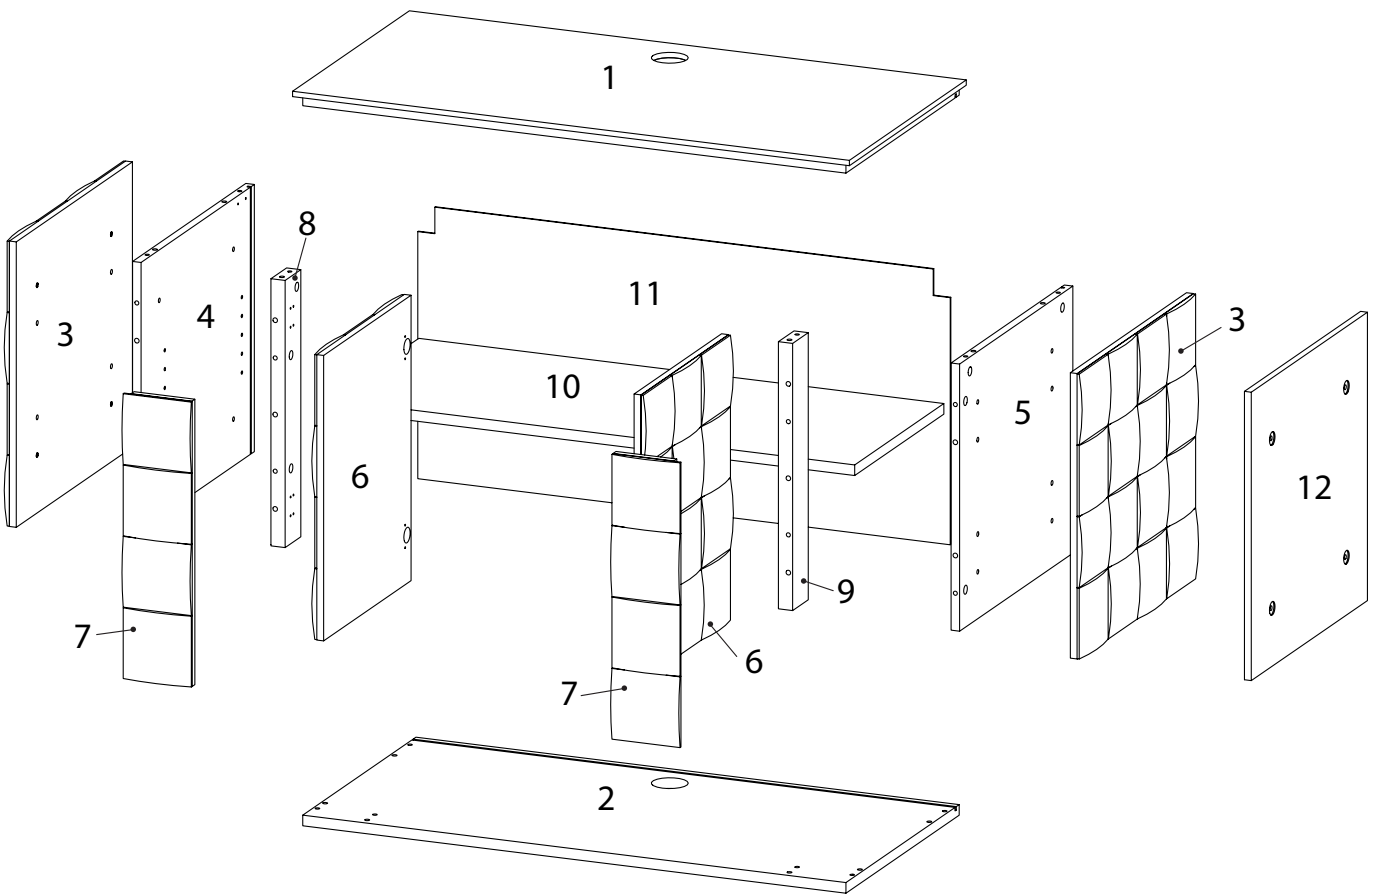

1	Top Board	x1	8	Support Board Left	x1
2	Bottom Board	x1	9	Support Board Right	x1
3	Side Board 1	x2	10	Adjustable Shelf	x1
4	Side Board 2 Left	x1	11	Back Board	x1
5	Side Board 2 Right	x1	12	Side Board Option	x1
6	Door	x2			
7	Front Board	x2			


TWO-UNIT ASSEMBLY OPTION

For a two-unit setup, use Component 12 (Side Board Option) to join the two TV Stand units together

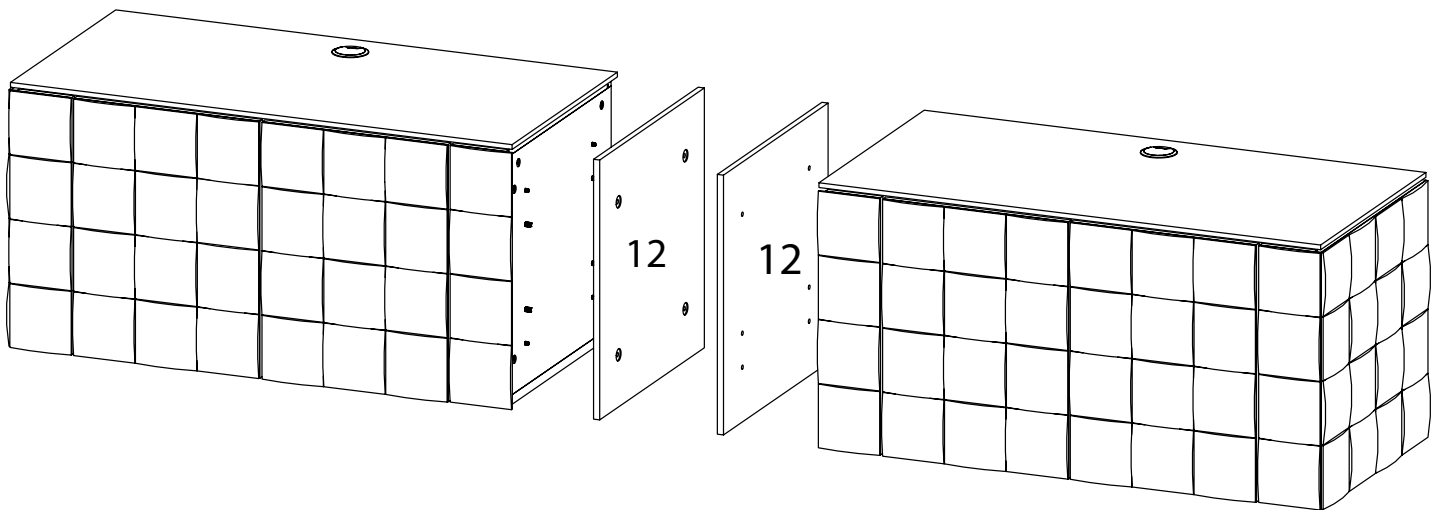


HARDWARE


HGL4 Hand Grip + Allen Key

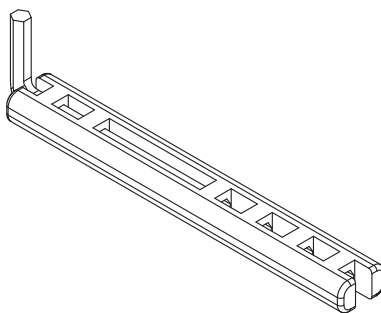

POSITION 1

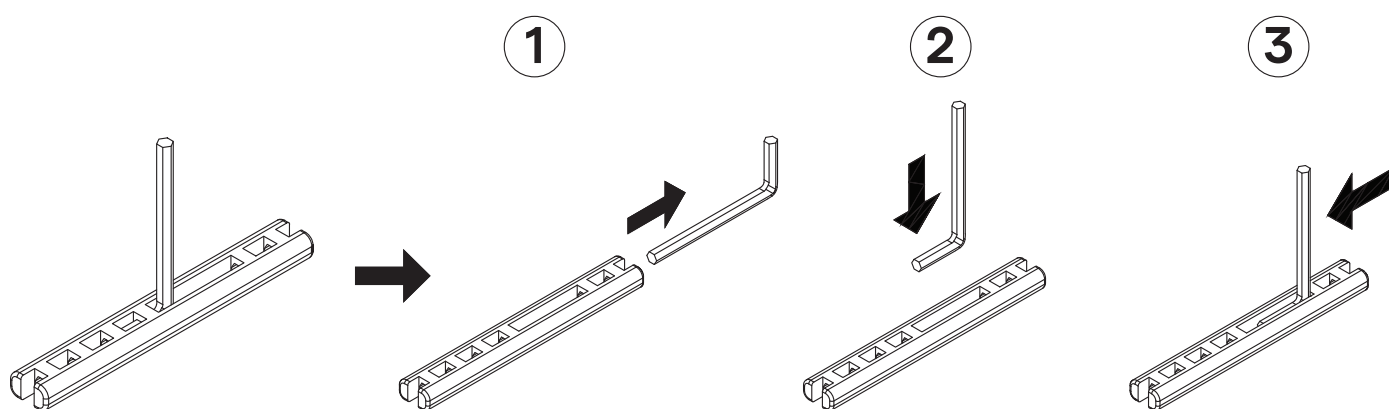

POSITION 2

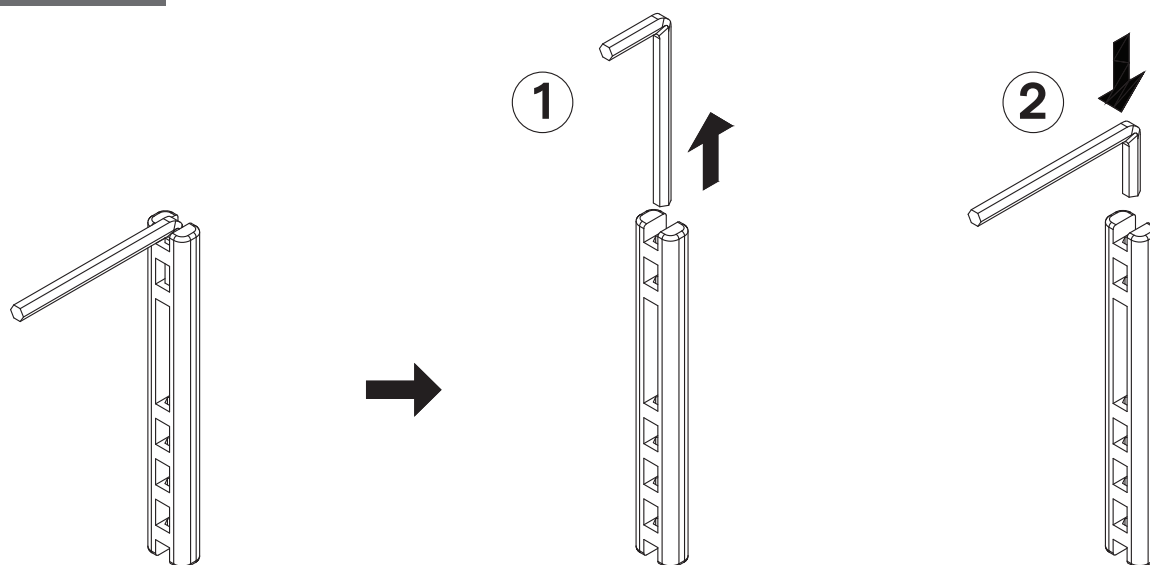

HARDWARE


- F** Wood Dowel Ø8 x 30 mm x12
S Shelf Support x4

COMPONENTS

- 4** Side Board 2 Left x1
5 Side Board 2 Right x1

1.1 Insert Wood Dowel Ø8 x 30 mm (F) into the Side Board 2 Left (4) and Side Board 2 Right (5). Position as shown.

1.2 Insert Shelf Support (S) into Side Board 2 Left (4) and Side Board 2 Right (5), then tighten using screwdriver. Ensure position of Shelf Support as shown below detail.

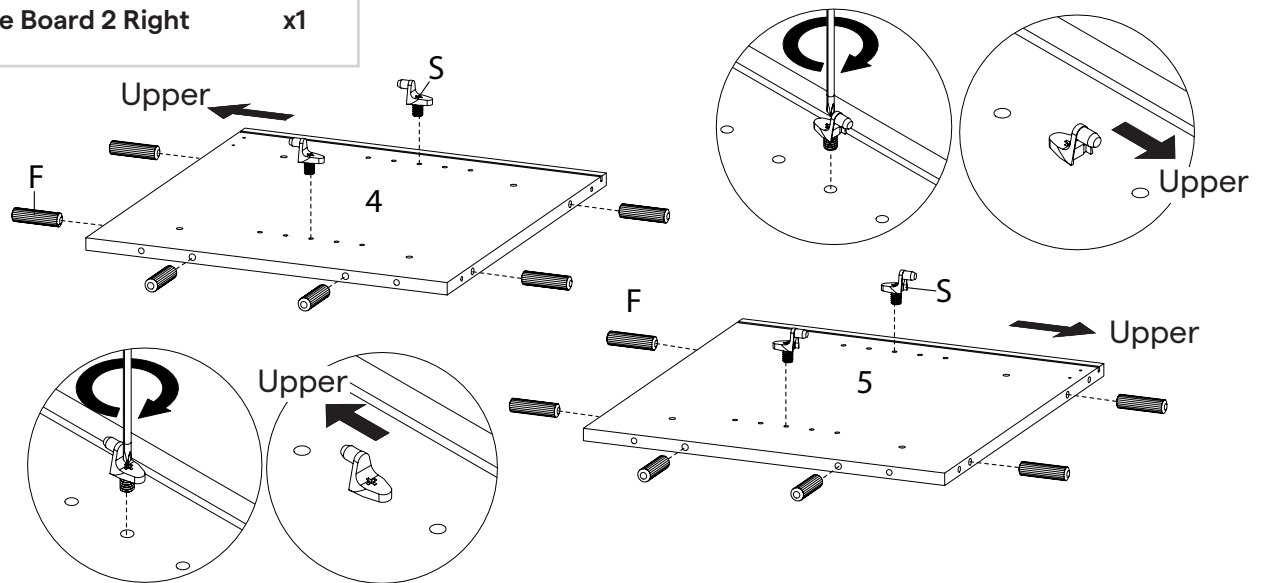

STEP 02

HARDWARE


- F** Wood Dowel Ø8 x 30 mm x10
R Grommet Cover x1

COMPONENTS

- 2** Bottom Board x1
8 Support Board Left x1
9 Support Board Right x1

2.1 Insert Grommet Cover (R) to Bottom Board (2). Position as shown.

2.2 Insert Wood Dowel Ø8 x 30 mm (F) into the Support Board Left (8) and Support Board Right (9). Position as shown.

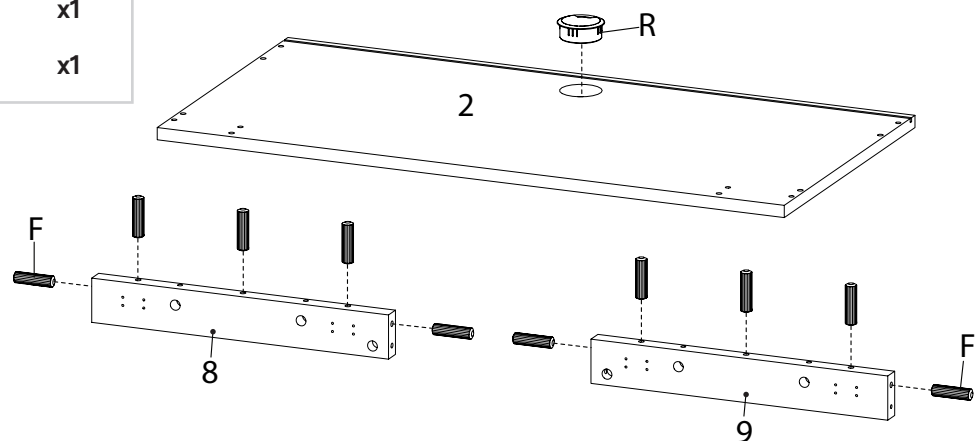

HARDWARE

Q Screw M7 x 50 mm x6

HGL4 Hand Grip + Allen Key x1

COMPONENTS

2 Bottom Board x1


4 Side Board 2 Left x1

5 Side Board 2 Right x1

8 Support Board Left x1

9 Support Board Right x1

3.1 Combine Bottom Board (2), Side Board 2 Left (4), Side Board 2 Right (5), Support Board Left (8) and Support Board Right (9), secure with Screw M7 x 50 mm (Q), tighten screws using Hand Grip + Allen Key (HGL4). Position as shown.

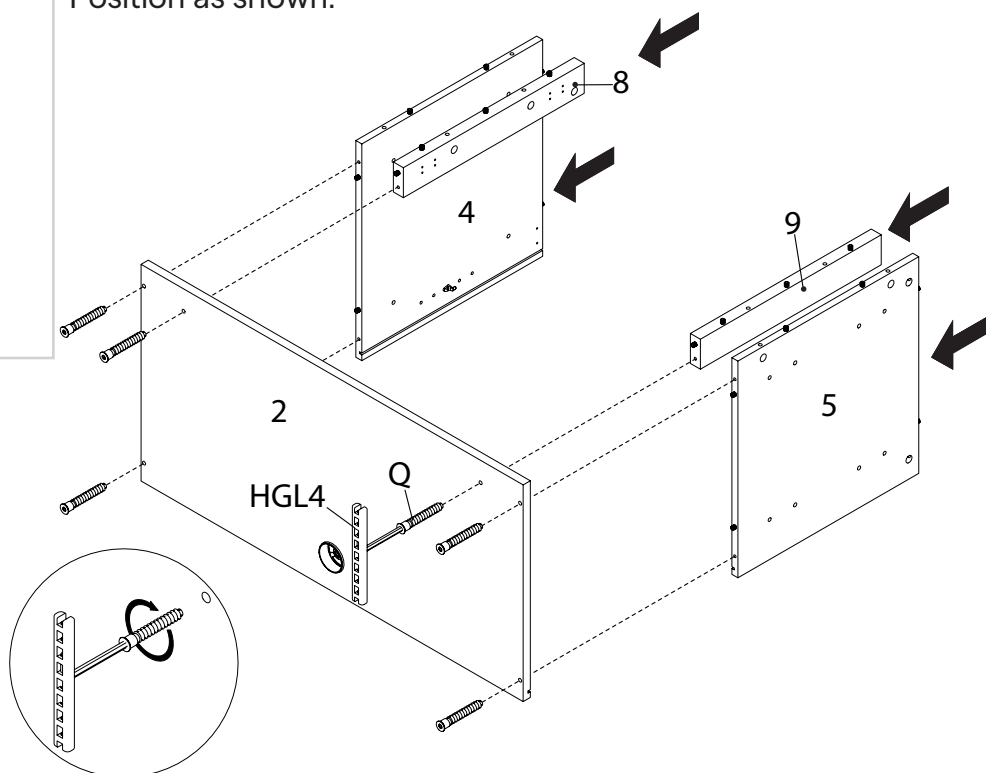

STEP 04


HARDWARE

A Cam Bolt Ø6 x 32 mm x8

COMPONENTS

7 Front Board x2

4.1 Insert Cam Bolt Ø6 x 32 mm (A) into the Front Board (7), then tighten using screwdriver. Position as shown.

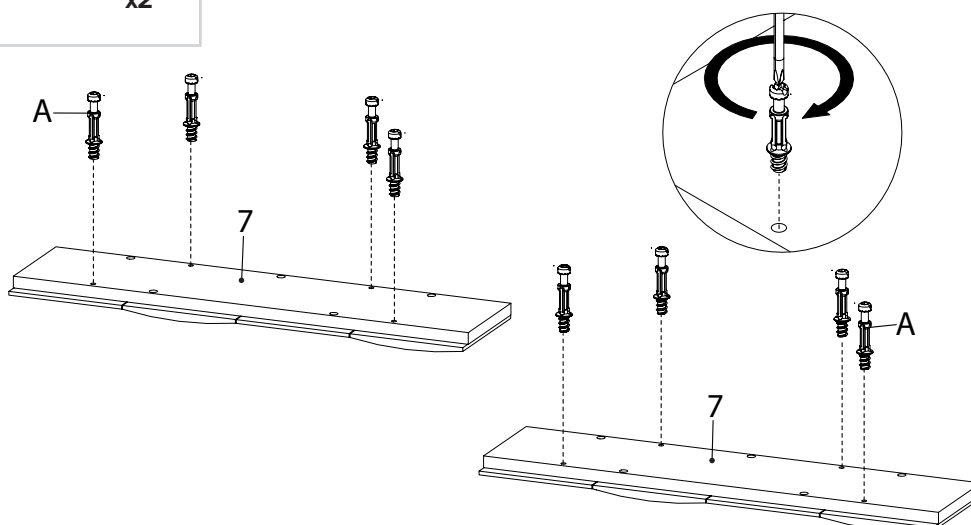

HARDWARE


- B** Cam Lock Ø15 mm x8
D Screw Cap Ø15 mm x4

COMPONENTS

- 7** Front Board x2

5.1 Carefully flip the unit to the upright position as shown. Ensure the structure is stable before proceeding to the next step.

5.2 Attach Front Board (7) into pre-assembly from previous step, Insert Cam Lock Ø15 mm (B) then tighten using screwdriver. Put Screw Cap Ø15 mm (D) over the Cam Locks on Support Board Left and Support Board Right. Position as shown.


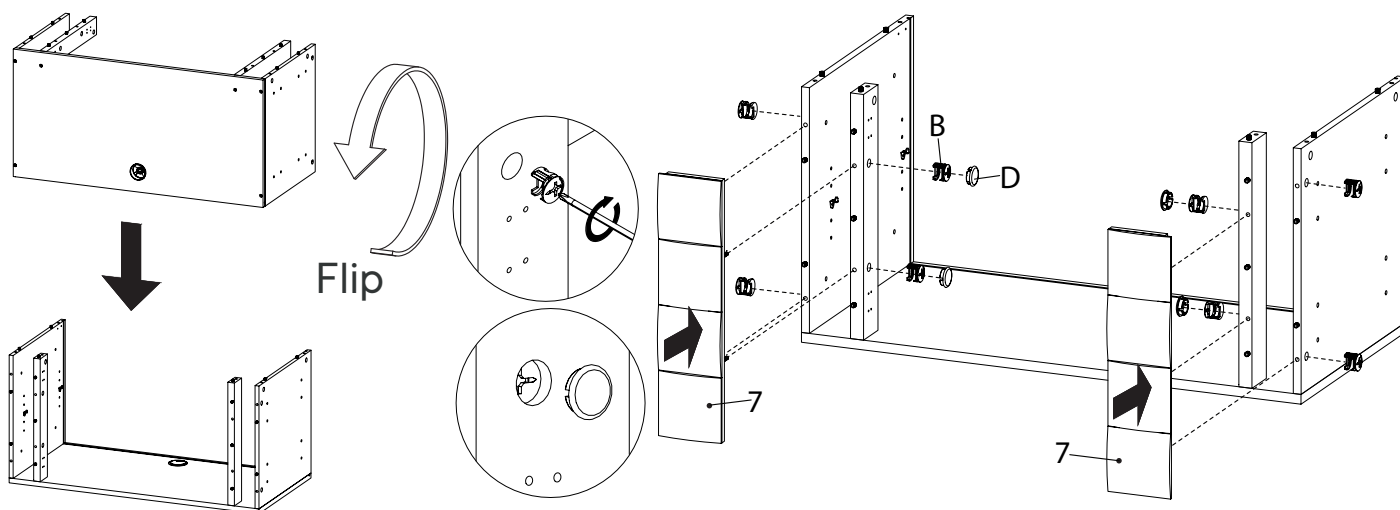


STEP 06

COMPONENTS

- 10** Adjustable Shelf x1


6.1 Insert Assembly of Adjustable Shelf (10) into cabinet by aligning its hole with the Shelf Support and inserting it securely.

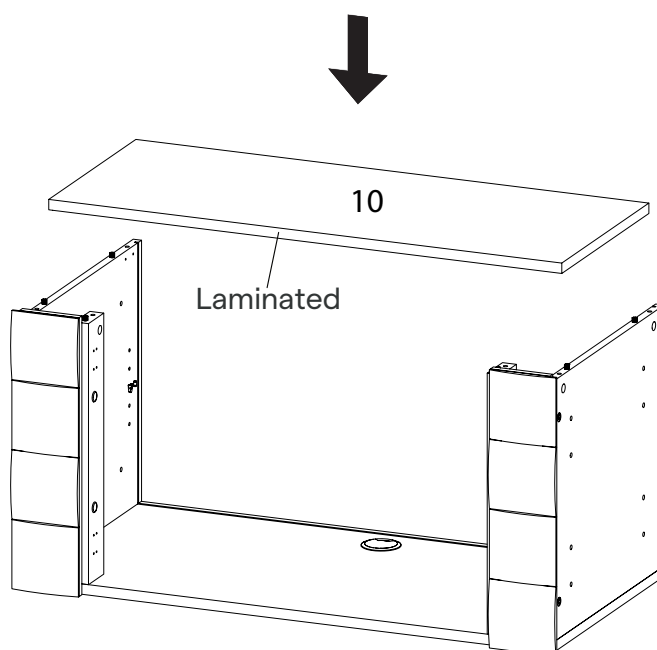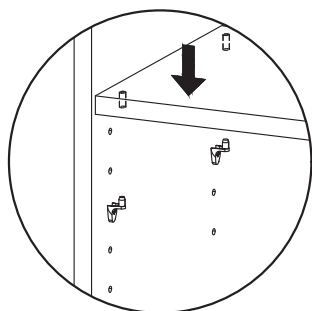

COMPONENTS

11 Back Board x1

7.1 Insert Back Board (11) into the grooves on the Side Boards and Bottom Board. Position as shown.

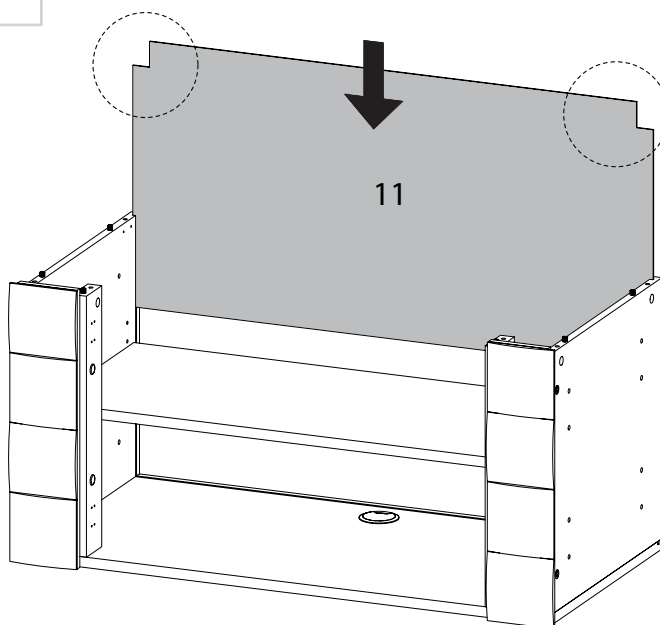


STEP 08

HARDWARE

K Screw M3.5 x 25 mm x4

M Bracket Wall Hanging x2

8.1 Install Bracket Wall Hanging (M1) to Side Board 2 Left (4) and Side Board 2 Right (5), secure with Screw M3.5 x 25 mm (K), tighten using screwdriver. Position as below details.

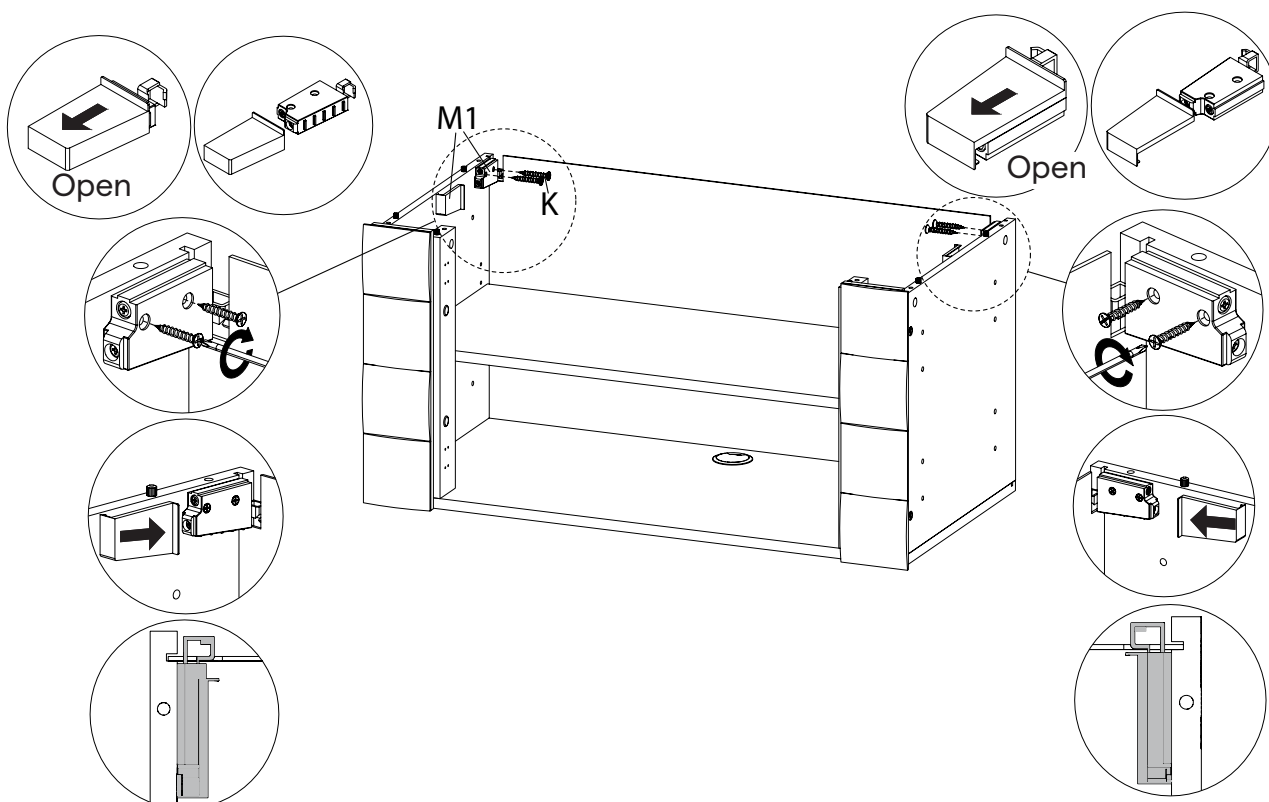

HARDWARE


A	Cam Bolt Ø6 x 32 mm	x6
E	Screw M3.5 x 13 mm	x4
G	Push Tool	x2

COMPONENTS

1	Top Board	x1
----------	-----------	----

9.1 Insert Cam Bolt Ø6 x 32 mm (A) into the Top Board (1), then tighten using screwdriver.

9.2 Install Push Tool (G) to Top Board (1), secure with Screw M3.5 x 13 mm (E), tighten using screwdriver. Ensure hole on Push Tool correct bellow details, then put the Push Tool to close the push tool. Position as below details.

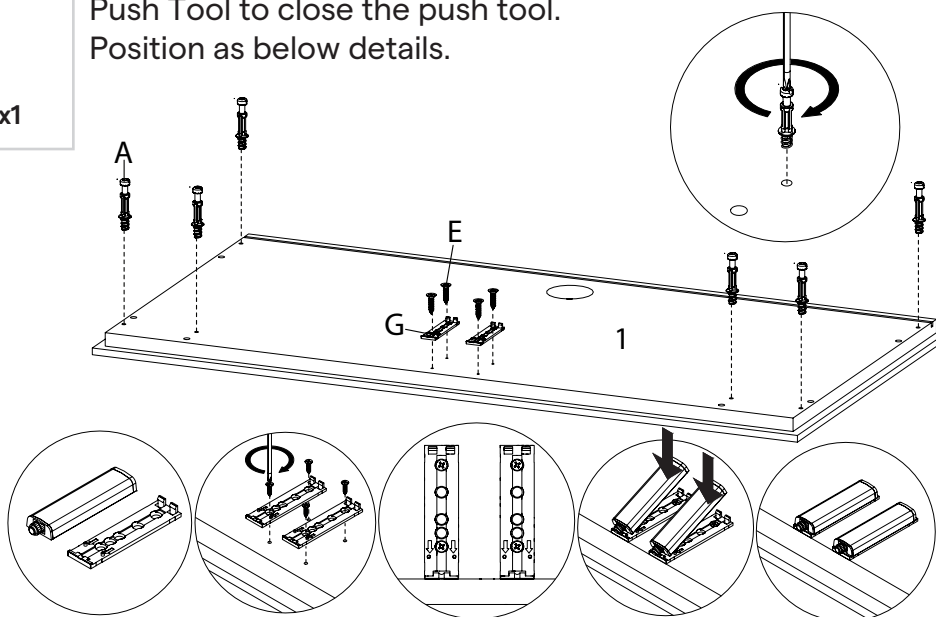

STEP 10


HARDWARE

B	Cam Lock Ø15 mm	x6
D	Screw Cap Ø15 mm	x2

COMPONENTS

1	Top Board	x1
----------	-----------	----


10.1 Attach Top Board (1) into pre-assembly from previous step, Insert Cam Lock Ø15 mm (B) then tighten using screwdriver. Put Screw Cap Ø15 mm (D) over the Cam Locks on Support Board Left and Support Board Right. Position as shown.

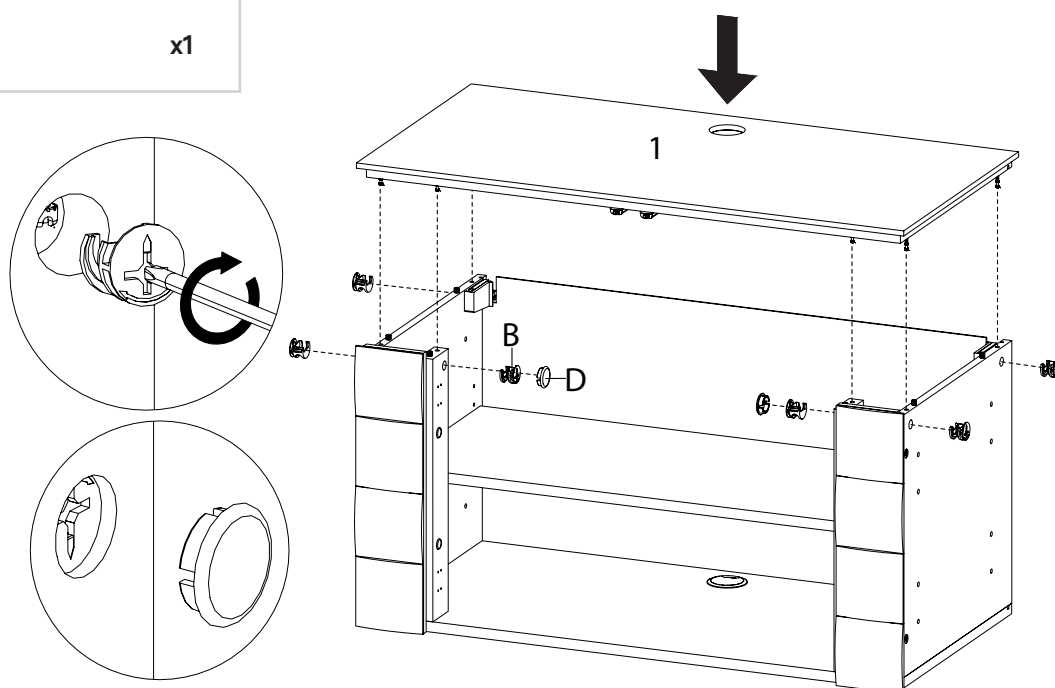

HARDWARE

(R) Grommet Cover x1

11.1 Insert Grommet Cover (R) to Top Board.
Position as shown.

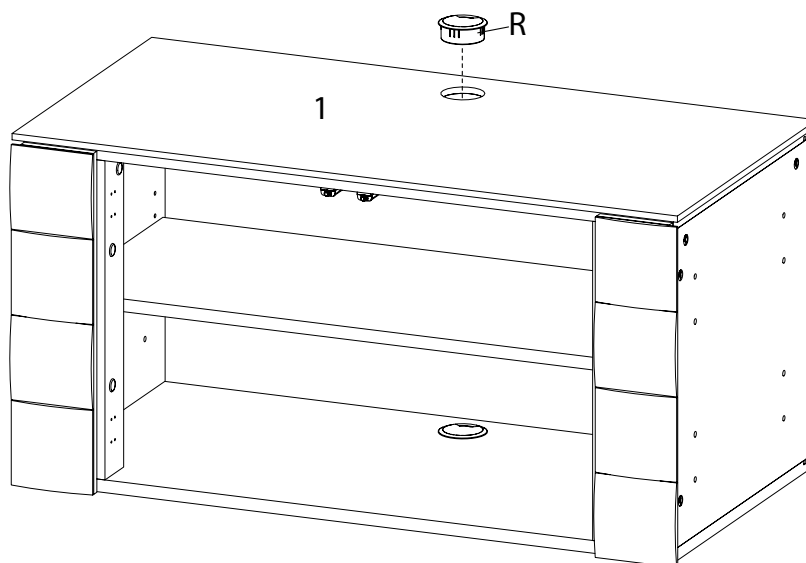



STEP 12

HARDWARE

(H) Wedge x8

(I) Screw M3.5 x 15.5 mm x8


12.1 Use the Wedge (H) and Screw M3.5 x 15.5 mm (I) to tighten the back of the product using screwdriver. Before securing the wedges (H), ensure that the top board and bottom board are aligned at a 90° angle against the Cabinet.

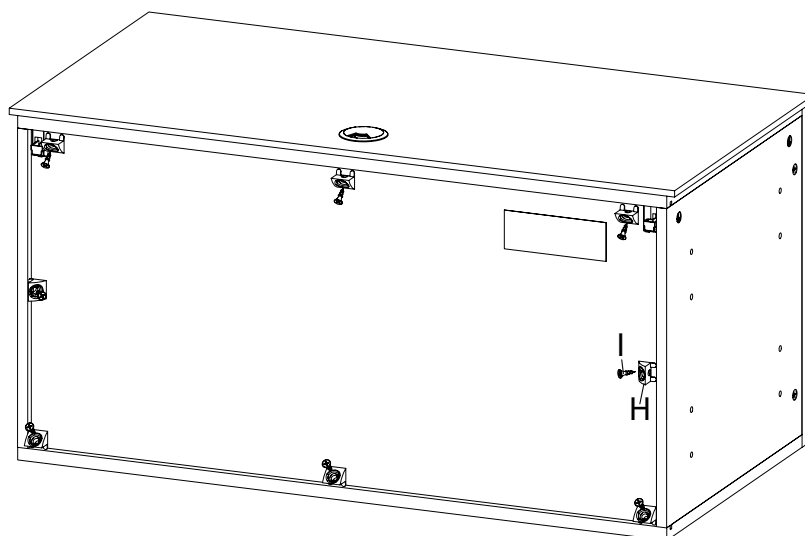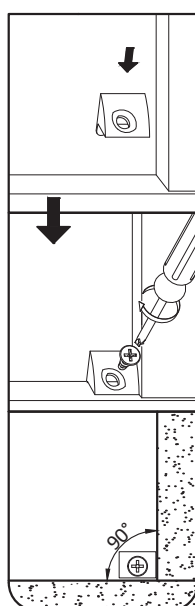

HARDWARE

(N) Wood Dowel Ø8 x 20 mm x8

13.1 Insert Wood Dowel Ø8 x 20 mm (N) into the Side Board 2 Left (4) and Side Board 2 Right (5). Position as shown.

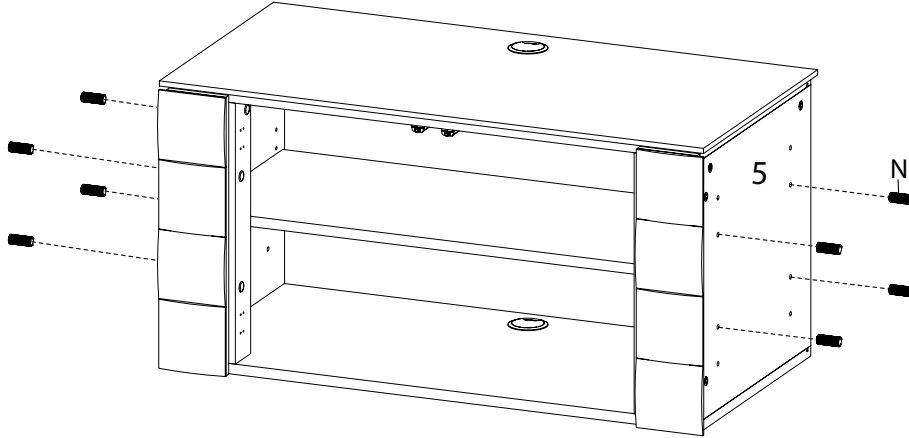

For a two-unit configuration, please refer to Page 16 of 25.

STEP 14



HARDWARE

(J) Wall Mounted Bolt x8


COMPONENTS

(3) Side Board 1 x2

14.1 Attach Side Board 1 (3) to the pre-assembled component. Secure using Wall Mounted Bolt (J) and tighten clockwise. Position as shown.

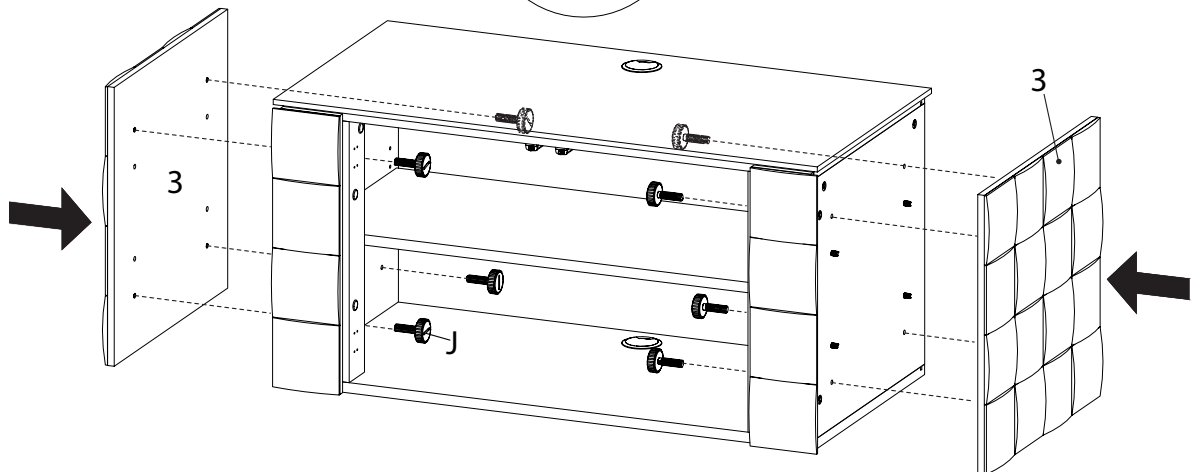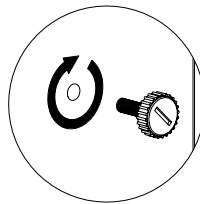

15.1 Determine your desired (Y) height, then subtract by 52 mm. This is the drill holes height from the floor (Z).

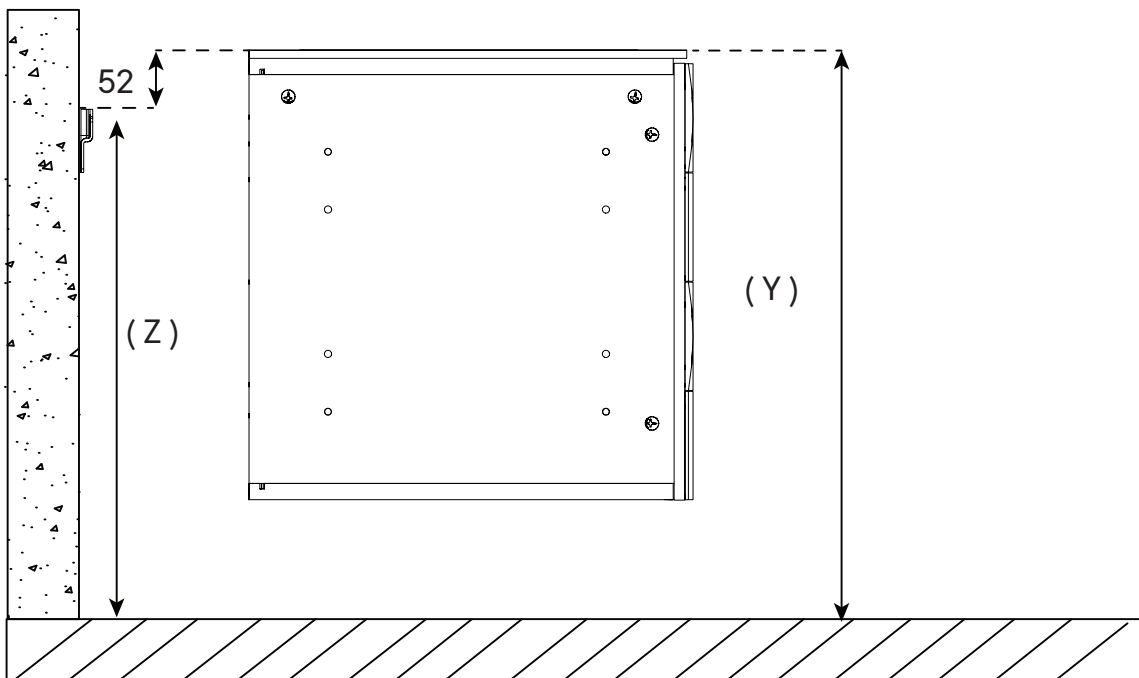


STEP 16

HARDWARE

P Wall Drill Template x1

16.1 Place the Wall Drill Template (P) against the wall at the desired position. Ensure the template is level and properly aligned. Mark the hole positions through the template, then drill the holes into the wall as indicated. Remove the template after drilling, and proceed with inserting the wall plugs.

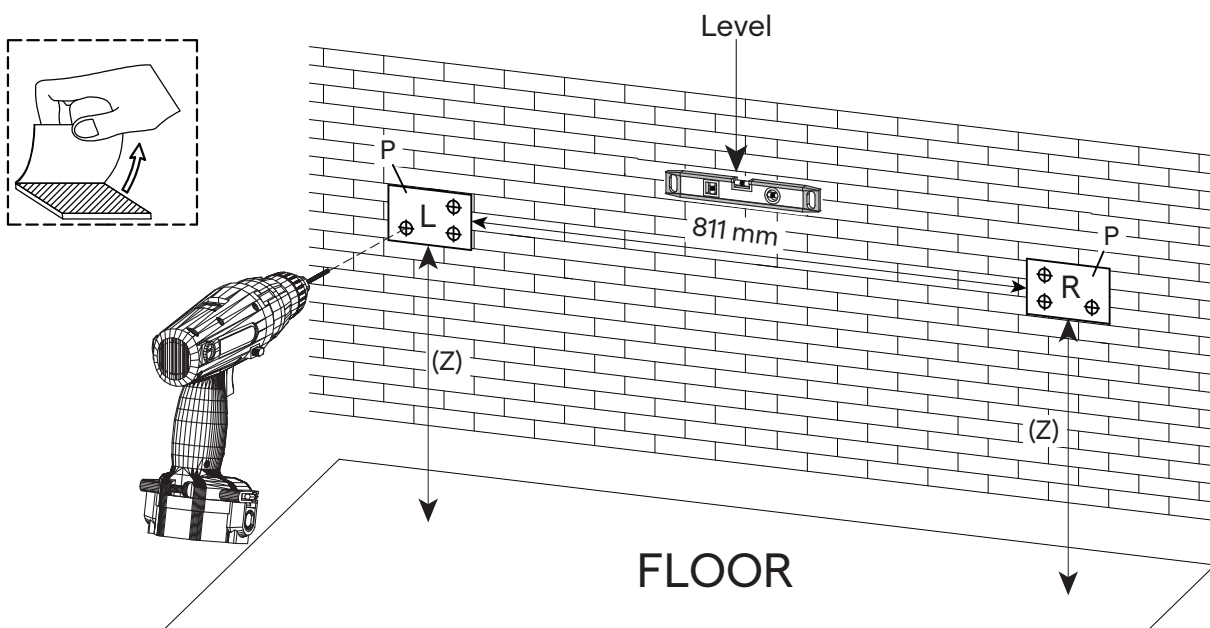

HARDWARE


L	Wall Plug	x6
M	Bracket Wall Hanging	x1
O	Screw M5.5 x 45 mm	x6

17.1 Install Wall Plug (L) to holes in the wall.

Install Wall Bracket Hanging (M2), ensure position of Wall Bracket Hanging correct below detail.

Ensure that the distance between the holes matches the measurements shown in the images below detail.

Then attach Wall Bracket Hanging (M2), secure with Screw M5.5 x 45 mm (O). Position as shown.

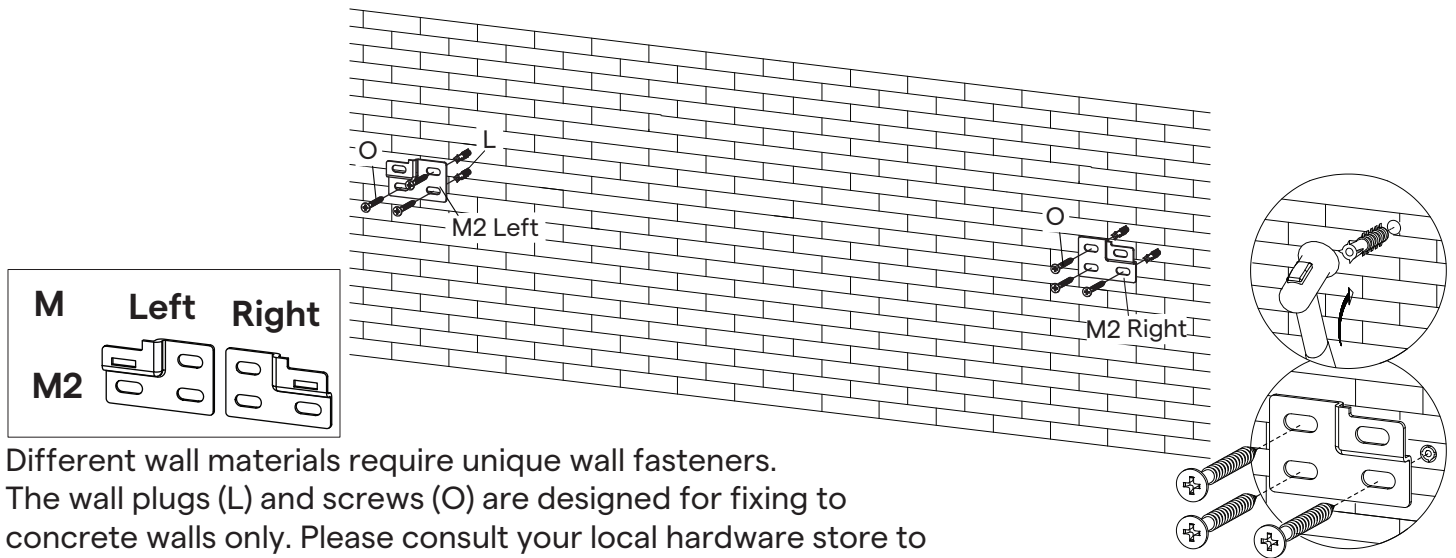


Different wall materials require unique wall fasteners. The wall plugs (L) and screws (O) are designed for fixing to concrete walls only. Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

STEP 18

18.1 Hang the assembled product onto the wall bracket and position it correctly.

Ensure that it is properly attached and secured to the wall.

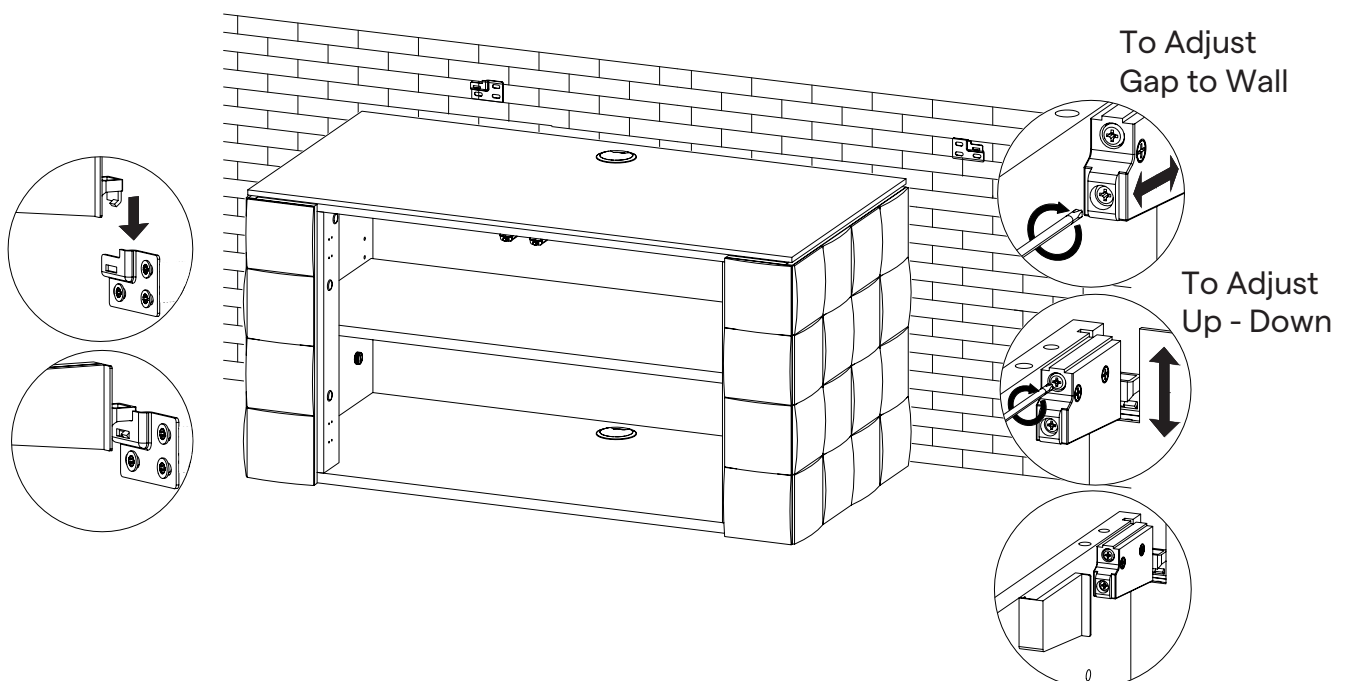

HARDWARE


Ⓒ Screw M4.5 x 12.5 mm x8

HS26B Hinge x4

COMPONENTS

⑥ Door x2

19.1 Install Hinge (HS26B) to Door (6). Secure with Screw M4.5 x 12.5 mm (C), then tighten using screwdriver. Position as shown.

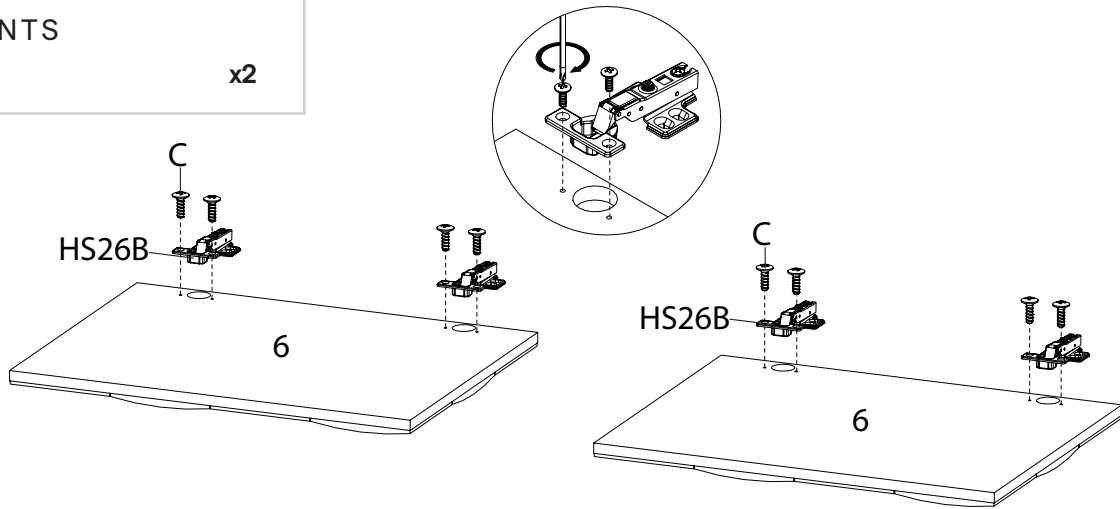

STEP 20


HARDWARE

Ⓒ Screw M 4.5 x 12.5 mm x16


COMPONENTS

⑥ Door x2

20.1 Install Door (6) to Support Board, secure the hinges with Screw M 4.5 x 12.5 mm (C) then tighten using screwdriver. Please refer to the last page for more guide on how to adjust hinges. Position as shown.

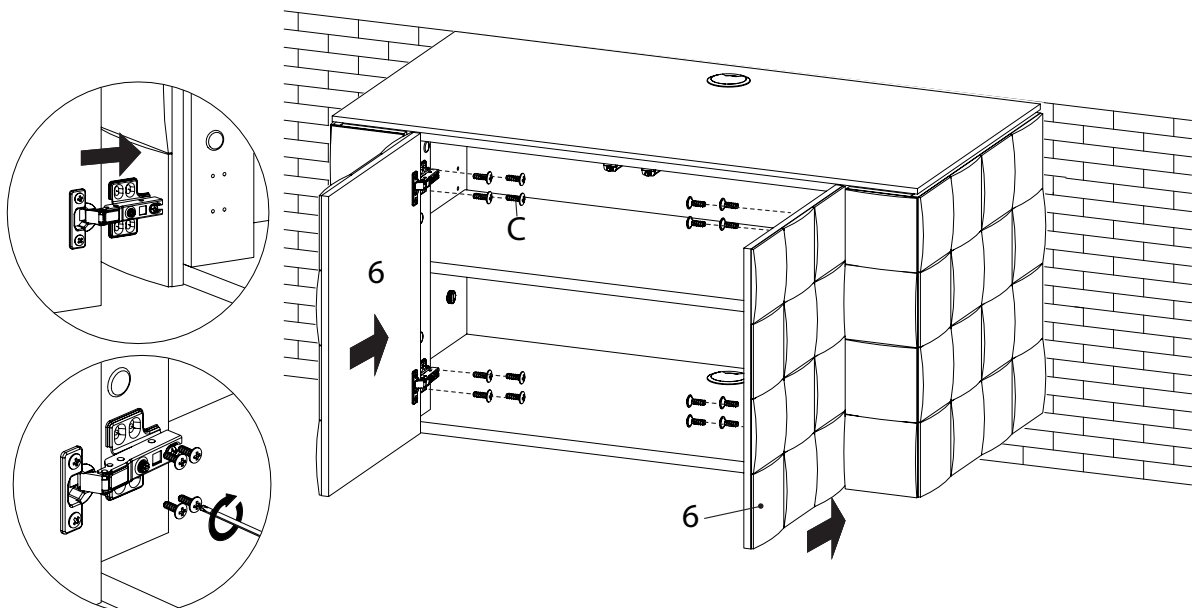

Configuration A – Single Unit

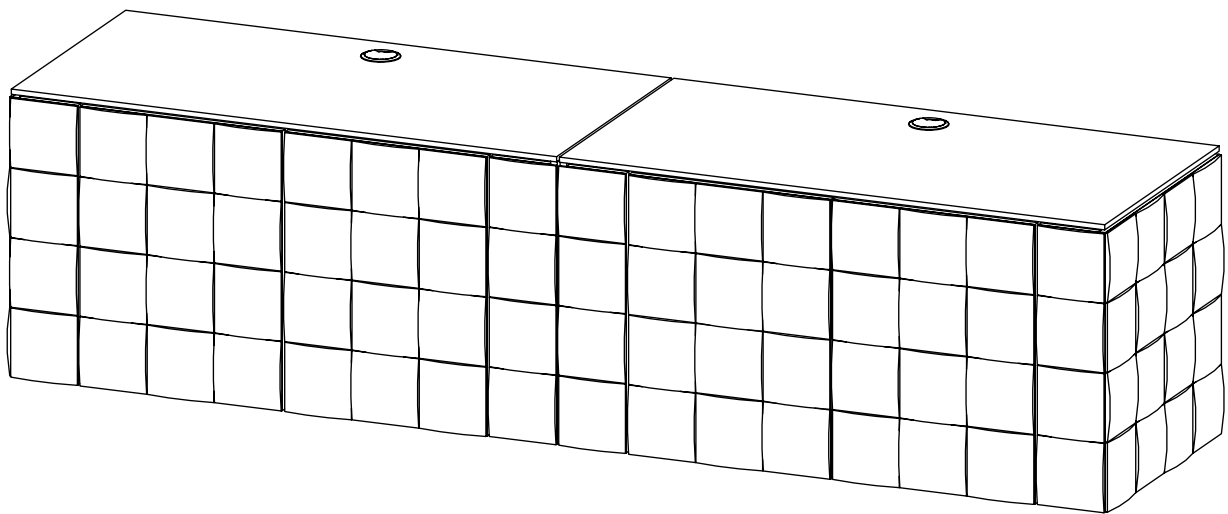


Configuration B – Two Units Combined

HARDWARE

(N) Wood Dowel Ø8 x 20 mm x6

21.1 Insert Wood Dowel Ø8 x 20 mm (N) into the Side Board 2 Left (4) and Side Board 2 Right (5). Position as shown.

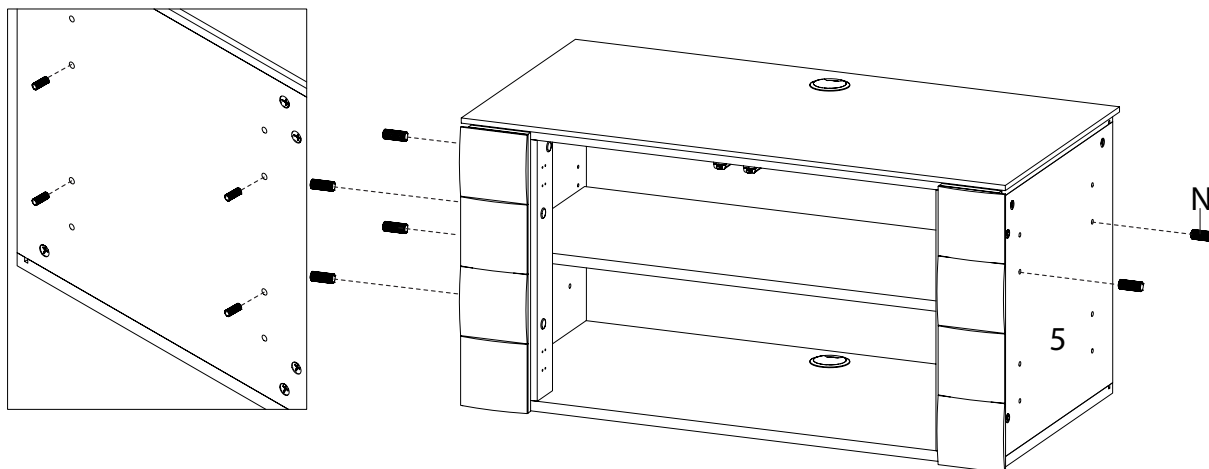

STEP 22

HARDWARE



(J) Wall Mounted Bolt x8

COMPONENTS

(3) Side Board 1 x1

(12) Side Board Option x1


22.1 Attach Side Board 1 (3) and Side Board Option (12) to the pre-assembled component. Secure using Wall Mounted Bolt (J) and tighten clockwise. Position as shown.

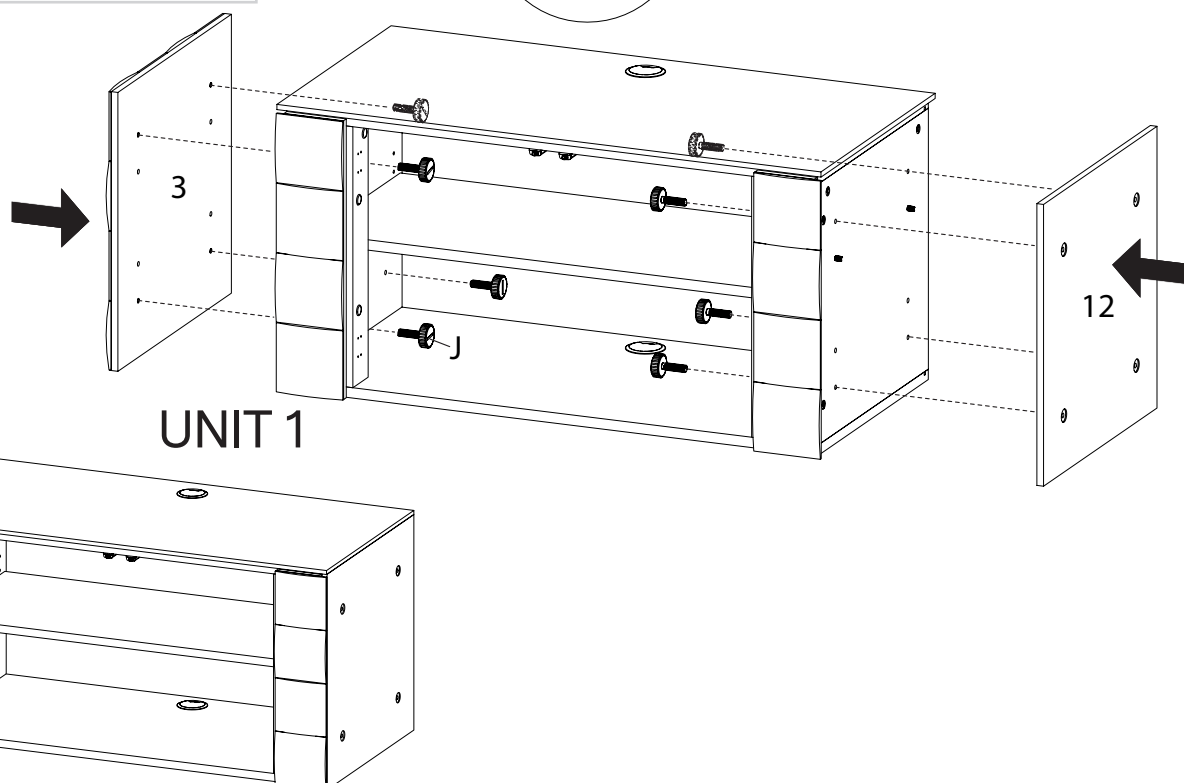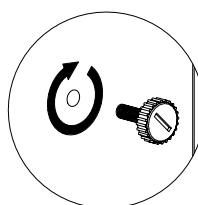

HARDWARE

(N) Wood Dowel Ø8 x 20 mm x6

23.1 Insert Wood Dowel Ø8 x 20 mm (N) into the Side Board 2 Left (4) and Side Board 2 Right (5). Position as shown.

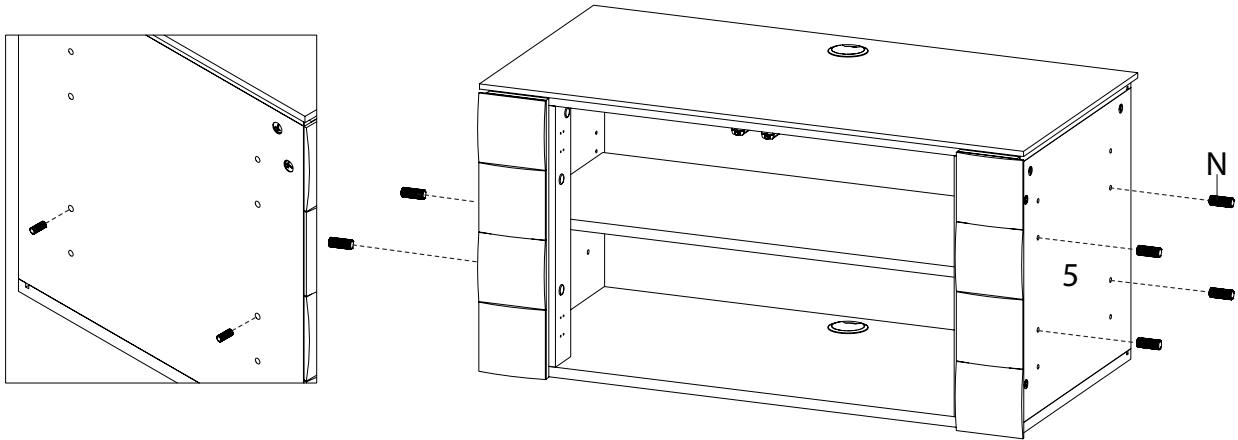

STEP 24

HARDWARE



(J) Wall Mounted Bolt x8

COMPONENTS


(3) Side Board 1 x1

(12) Side Board Option x1

24.1 Attach Side Board 1 (3) and Side Board Option (12) to the pre-assembled component. Secure using Wall Mounted Bolt (J) and tighten clockwise. Position as shown.

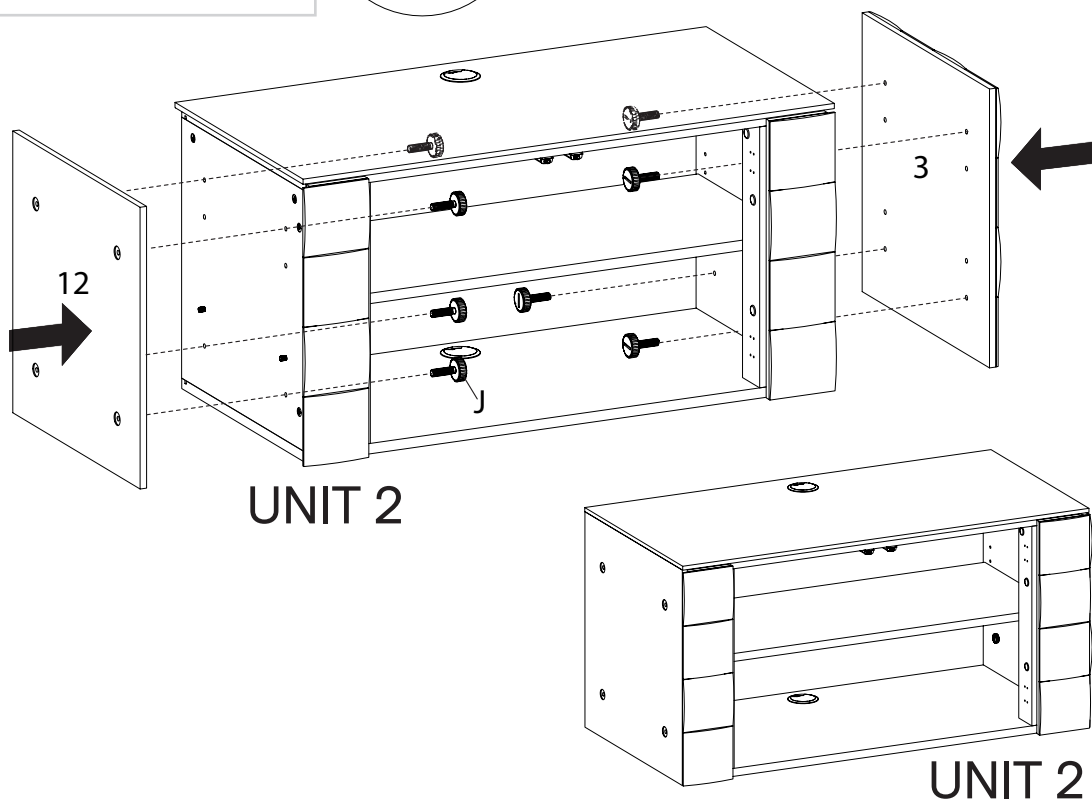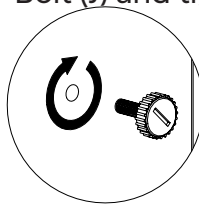

25.1 Determine your desired (Y) height, then subtract by 52 mm. This is the drill holes height from the floor (Z).

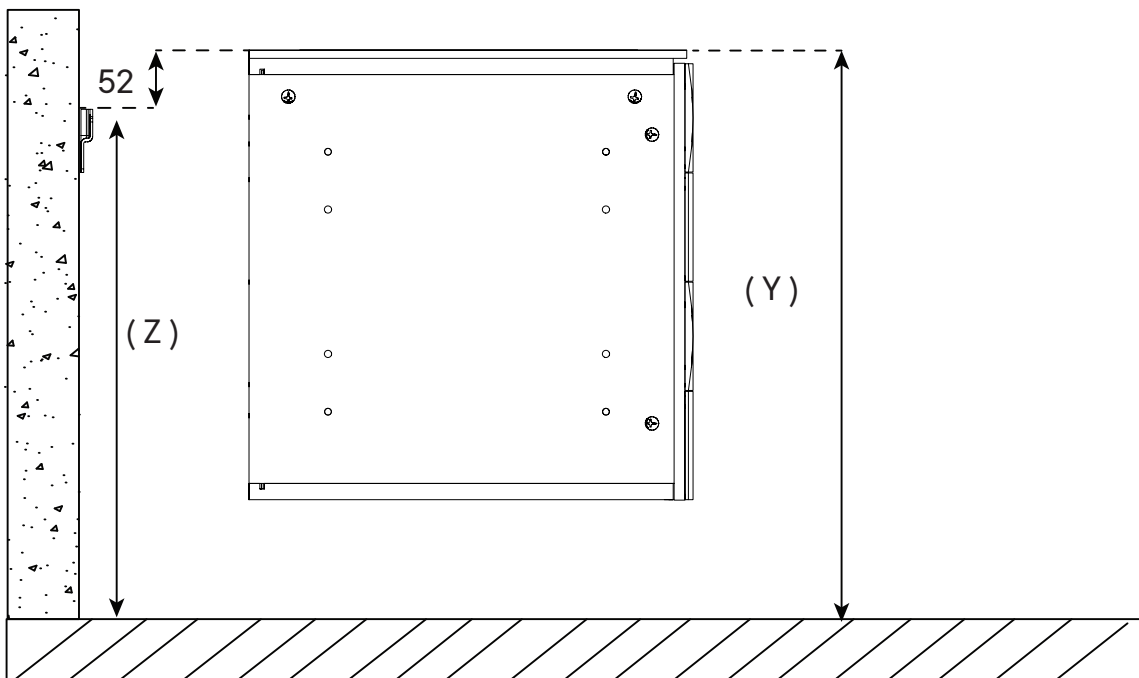


STEP 26

HARDWARE

P Wall Drill Template x2


26.1 Place the Wall Drill Template (P) against the wall at the desired position. Ensure the template is level and properly aligned. Mark the hole positions through the template, then drill the holes into the wall as indicated. Remove the template after drilling, and proceed with inserting the wall plugs.

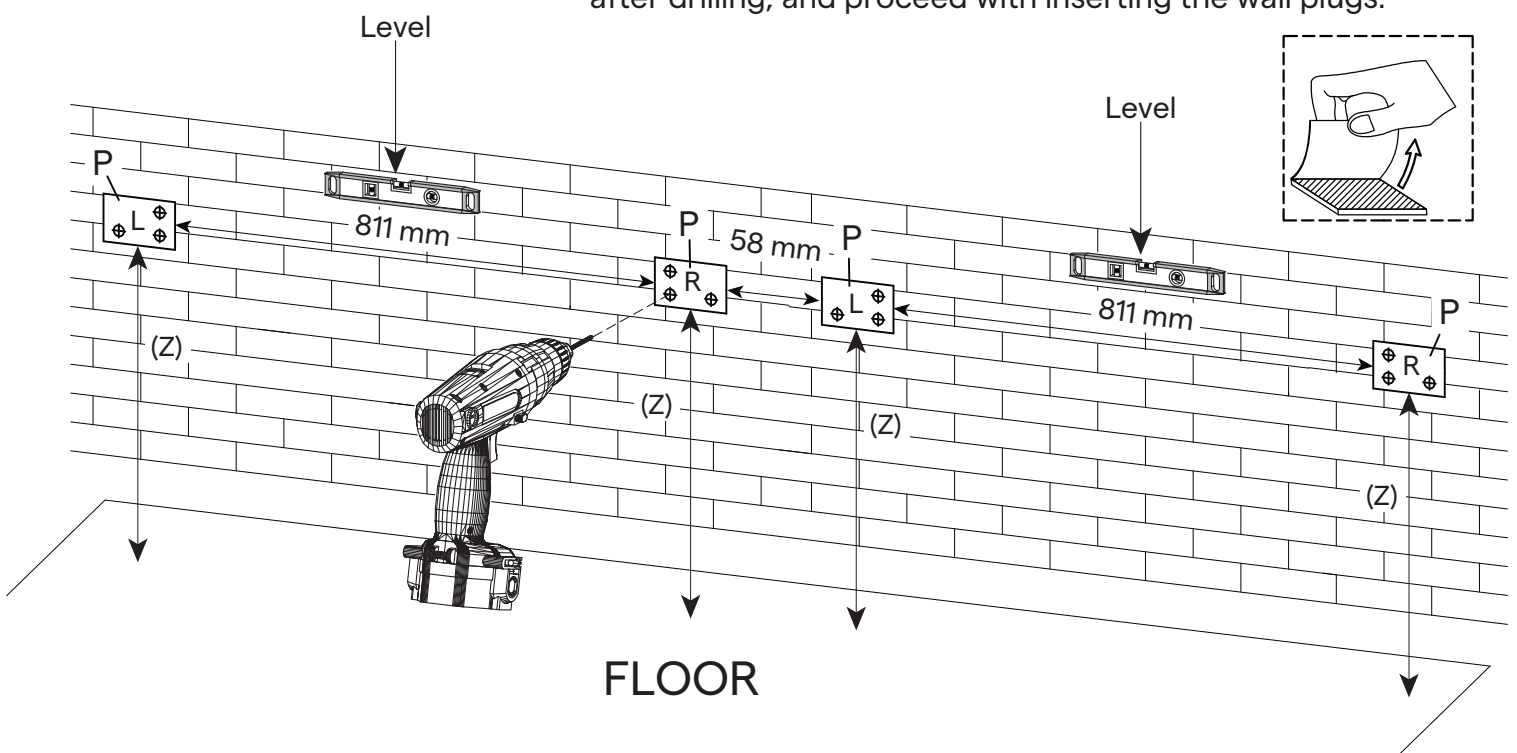


HARDWARE

L	Wall Plug	x12
M	Bracket Wall Hanging	x2
O	Screw M5.5 x 45 mm	x12


27.1 Install Wall Plug (L) to holes in the wall. Install Wall Bracket Hanging (M2), ensure position of Wall Bracket Hanging correct below detail. Ensure that the distance between the holes matches the measurements shown in the images below detail. Then attach Wall Bracket Hanging (M2), secure with Screw M5.5 x 45 mm (O). Position as shown.

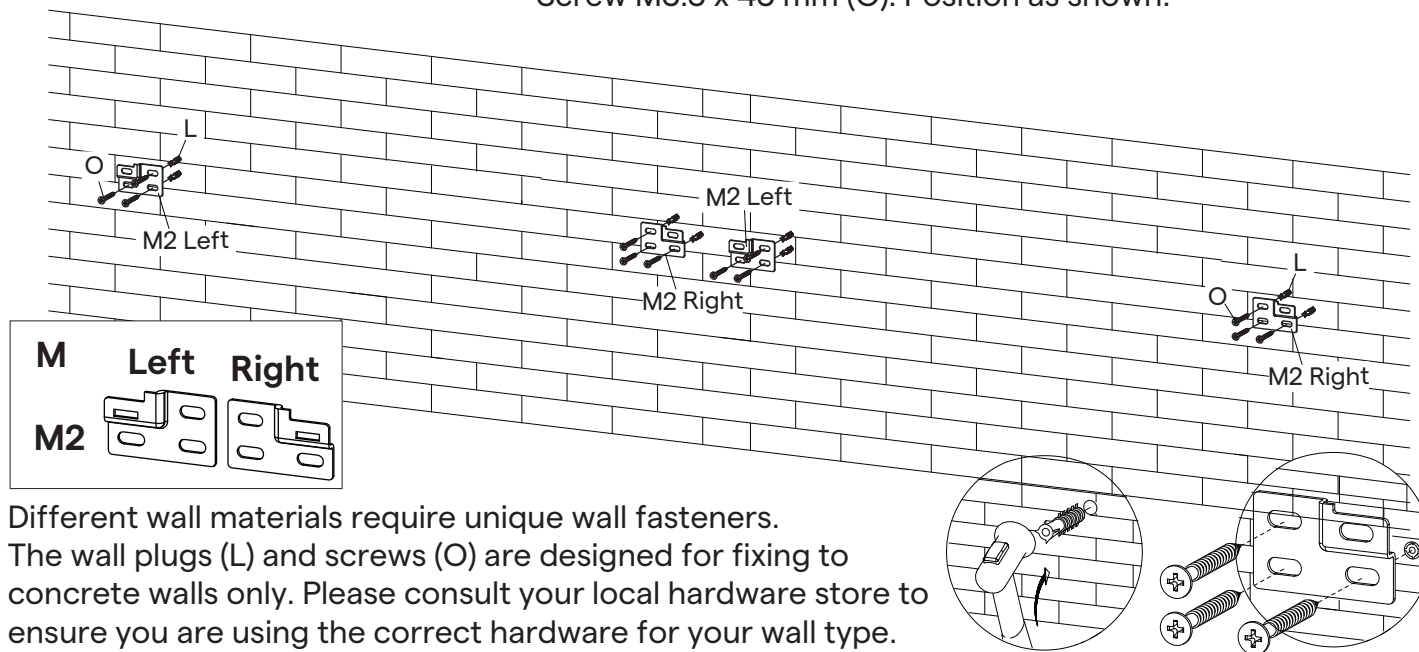**STEP 28**


28.1 Hang the assembled product onto the wall bracket and position it correctly. Ensure that it is properly attached and secured to the wall.

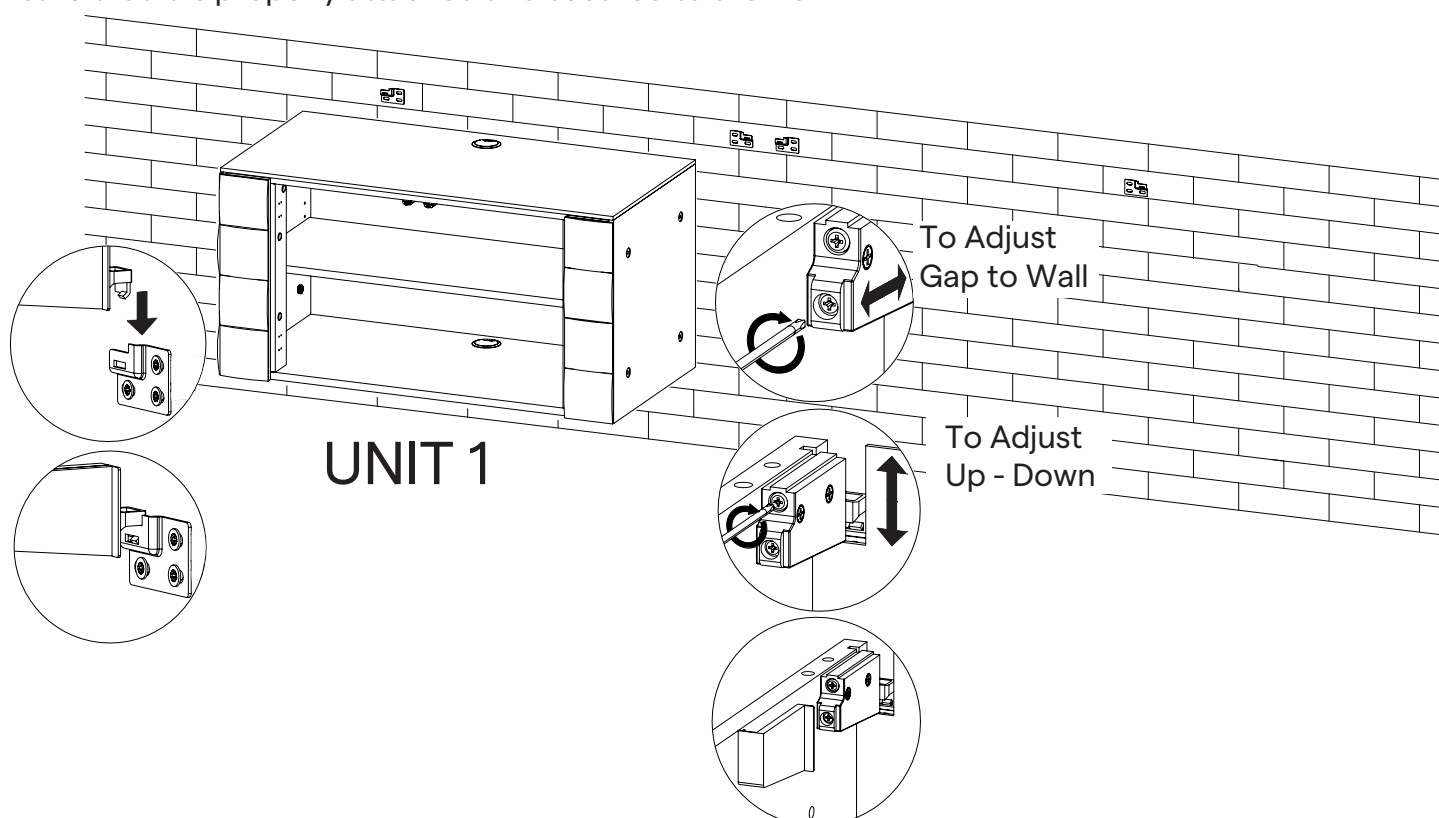

29.1 Hang the assembled product onto the wall bracket and position it correctly. Ensure that it is properly attached and secured to the wall.

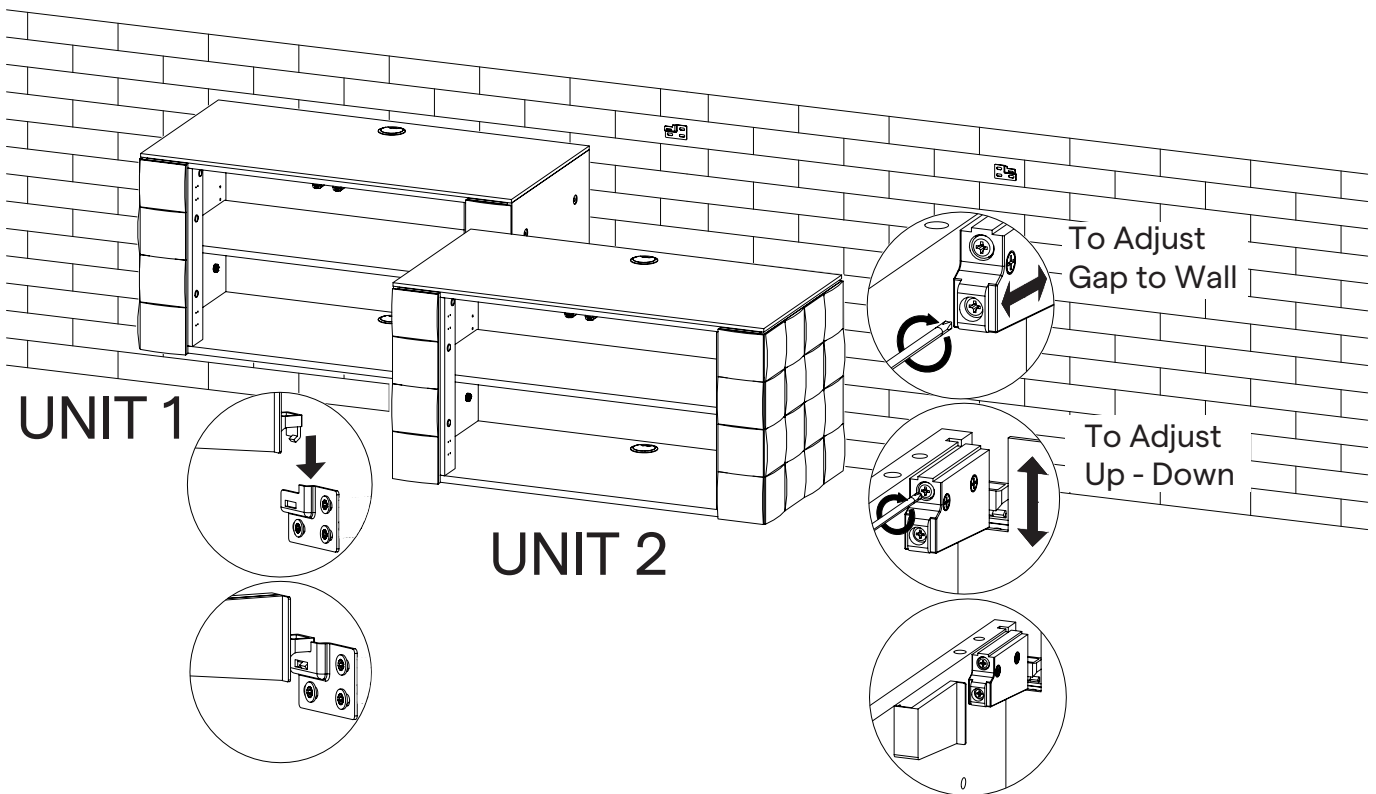

STEP 30

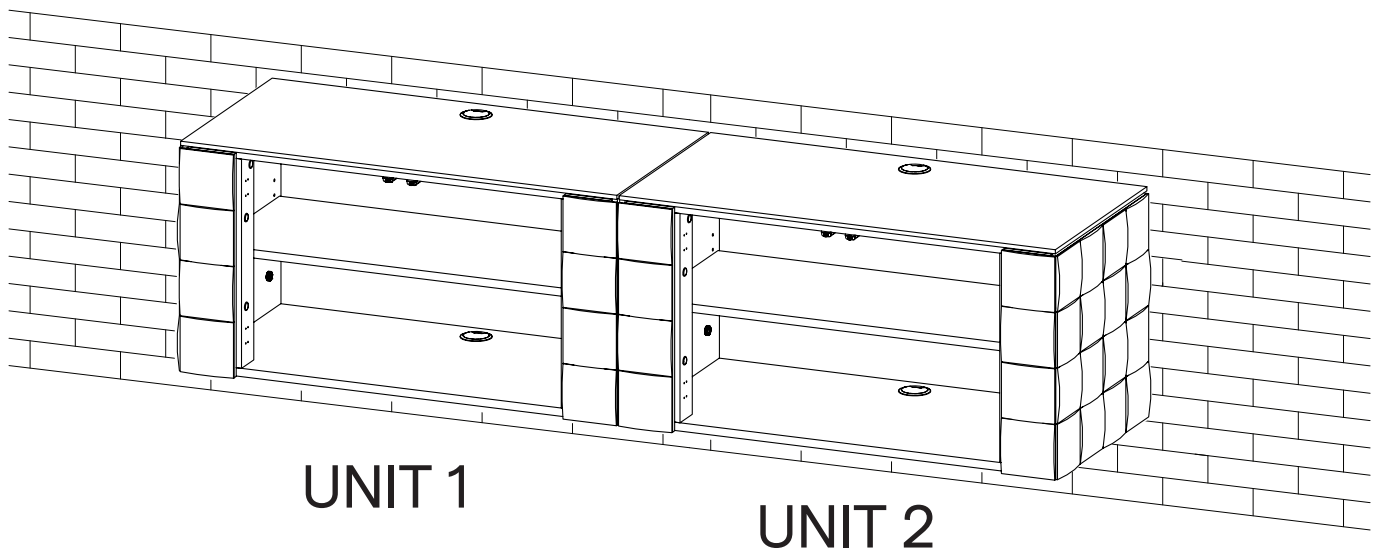

HARDWARE


Ⓒ Screw M4.5 x 12.5 mm x16

HS26B Hinge x8

COMPONENTS

⑥ Door x4

31.1 Install Hinge (HS26B) to Door (6). Secure with Screw M4.5 x 12.5 mm (C), then tighten using screwdriver. Position as shown.

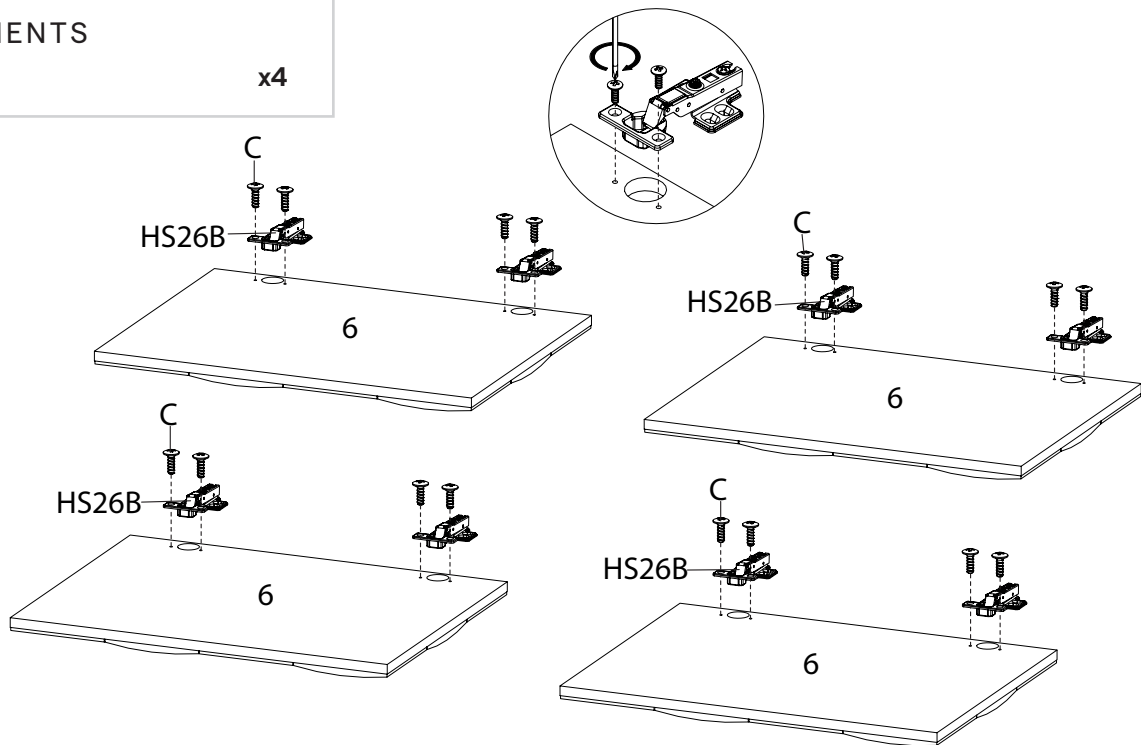

STEP 32


HARDWARE


Ⓒ Screw M4.5 x 12.5 mm x32

COMPONENTS

⑥ Door x4


32.1 Install Door (6) to Support Board, secure the hinges with Screw M4.5 x 12.5 mm (C) then tighten using screwdriver. Please refer to the last page for more guide on how to adjust hinges. Position as shown.

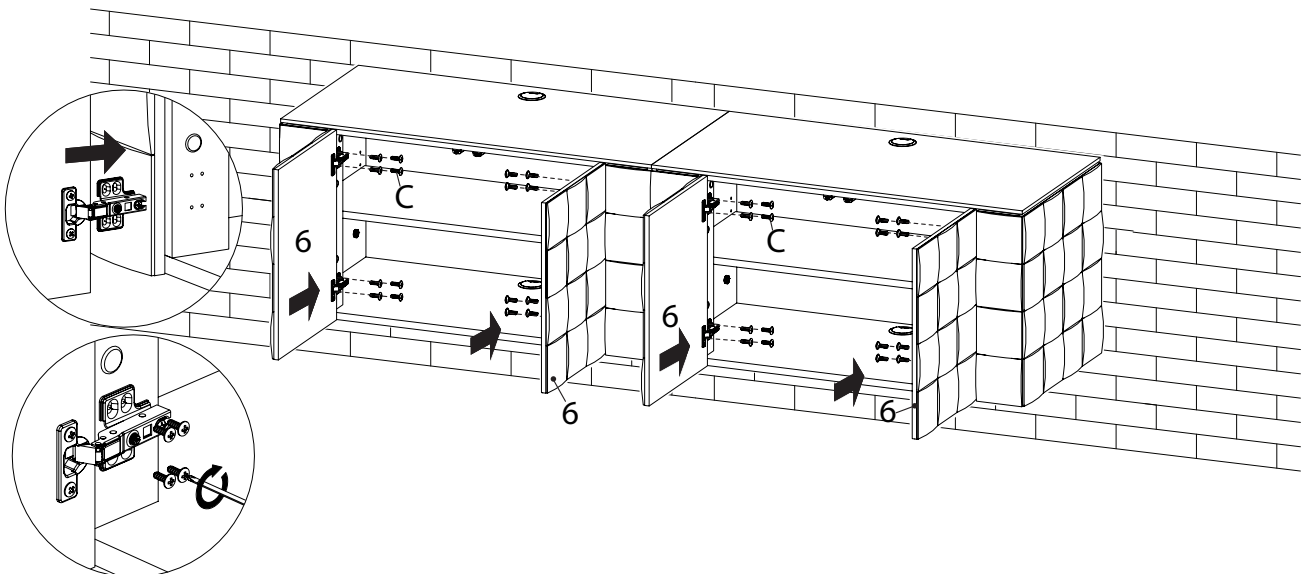

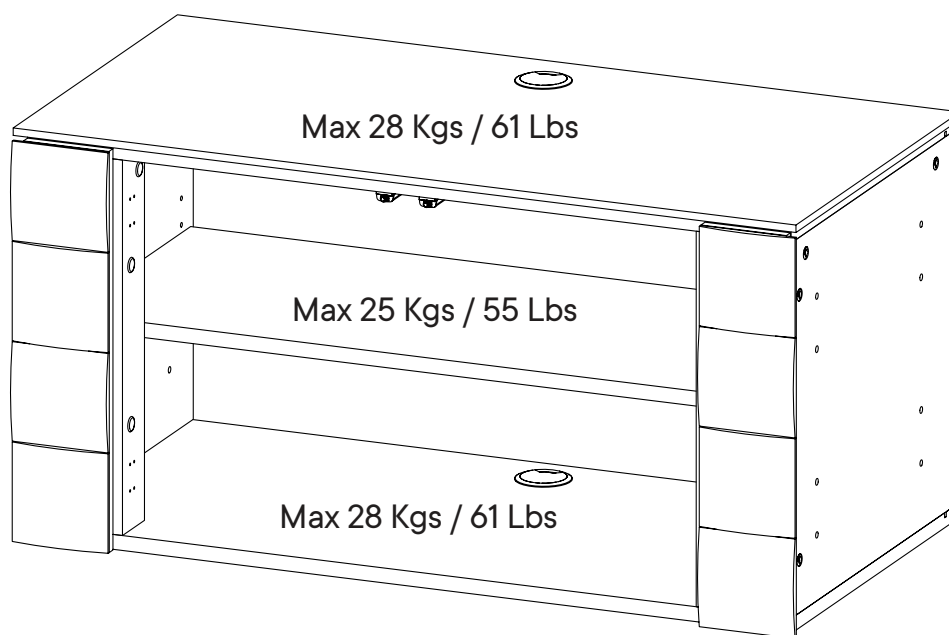

Great job!

Wall Mount TV Stand assembly is complete

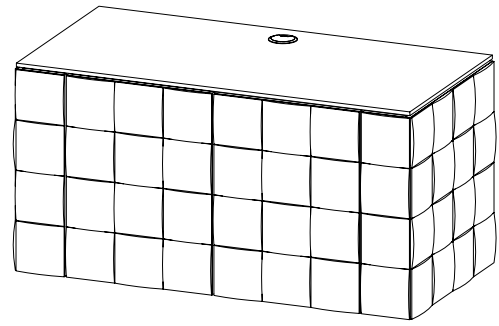

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.



CONNECT WITH US!


Tag us **@modway.furniture** and **#MyModwayHome** for a chance to be featured.

modway




Questions? Contact us!
609.256.9000
cs@modway.com

Cabinet Door Alignment

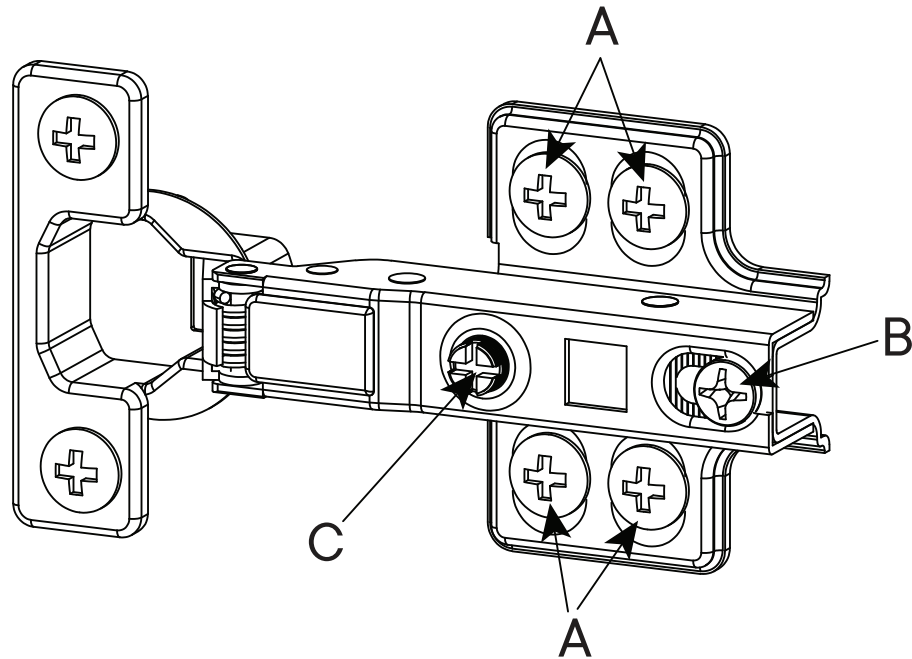


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

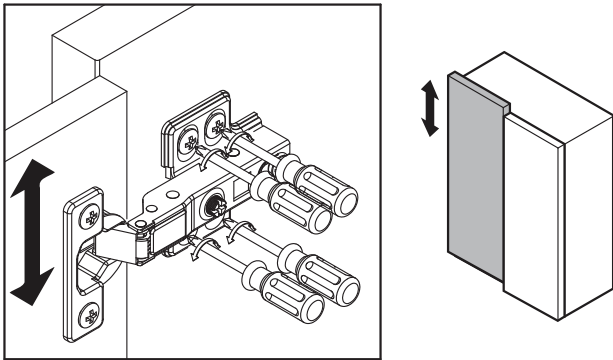

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

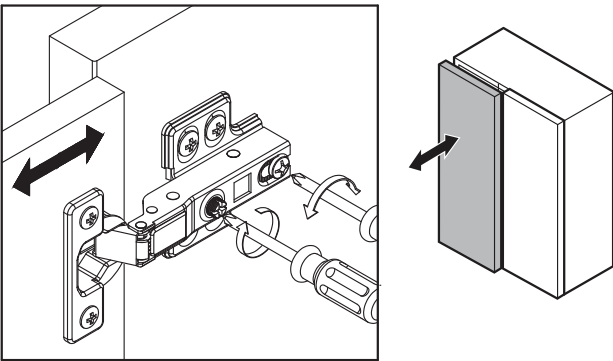

To adjust side ways.

Turn screw "C" on BOTH hinges on each door.

