


CORRECT INSTALLATION

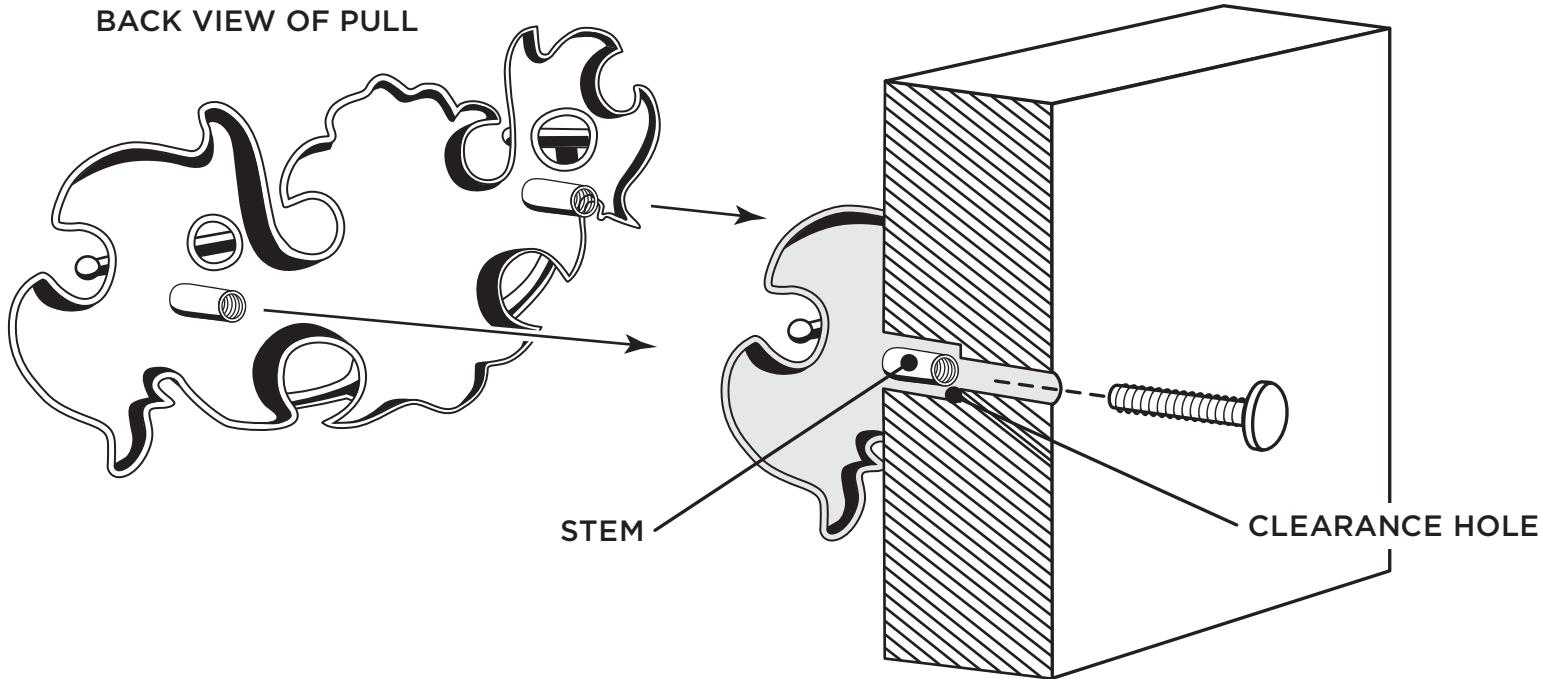

FOR PULL TO SIT FLUSH ON CABINET:

New Installation:

- 1) To mount on cabinet, drill $3/16$ in(4.8mm) hole through cabinet.
- 2) For the stem, use a standard $1/4$ in(6.4mm) drill bit and drill a clearance hole into the front of the cabinet.

Replacement Installation:

- 1) For the stem, use a standard $1/4$ in(6.4mm) drill bit and drill a clearance hole into the front of the cabinet.