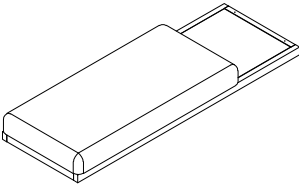

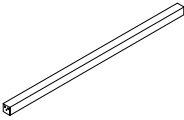









## **ASSEMBLY INSTRUCTIONS**

**ITEM # : 30082-21**

**BENCH WITH TRAY**

## BENCH WITH TRAY PARTS & HARDWARE LIST

 <b>(A)</b> SEAT BOX x 1	 <b>(B)</b> SIDE FRAME x 2	 <b>(C)</b> BOTTOM SUPPORT BAR x 2
 <b>(D)</b> TRAY x 1		
 <b>(H1)</b> ALLEN BOLT x 4 (Ø1/4" * 51 MM)	 <b>(H2)</b> SPRING WASHER x 4 (Ø1/4")	 <b>(H3)</b> FLAT WASHER x 4 (Ø1/4" * 16 * 1.5)
 <b>(H4)</b> ALLEN KEY x 1 (M4)	 <b>(H5)</b> DOWEL x 8 (Ø8 * 30mm)	 <b>(H6)</b> PAN HEAD SCREW x 4 (#8 * 32mm)


**Customer Service Contact Information:**  
 Toll Free Phone Number: 1-844-771-2727  
 Email: [consumercare@lanefurniture.com](mailto:consumercare@lanefurniture.com)  
 Website: [www.lanefurniture.com](http://www.lanefurniture.com)

**NOTES :**


1. CHECK CAREFULLY FOR SMALL PARTS WHICH MAY COME LOOSE DURING SHIPMENT.
2. REMOVE ALL COMPONENTS FROM THE PACK AND PLACE ON A CLEAN, SOFT SURFACE TO ASSEMBLE.
3. UNITS SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.
4. DO NOT OVER - TIGHTEN SCREW/ BOLTS UNTIL ASSEMBLY IS COMPLETED.
5. WITH USE, SCREW/ BOLT MAY BE COME LOOSE & MUST BE TIGHTENED PERIODICALLY.




**HARDWARE BLISTER PACKS ARE STORED INSIDE THE BENCH WITH TRAY**

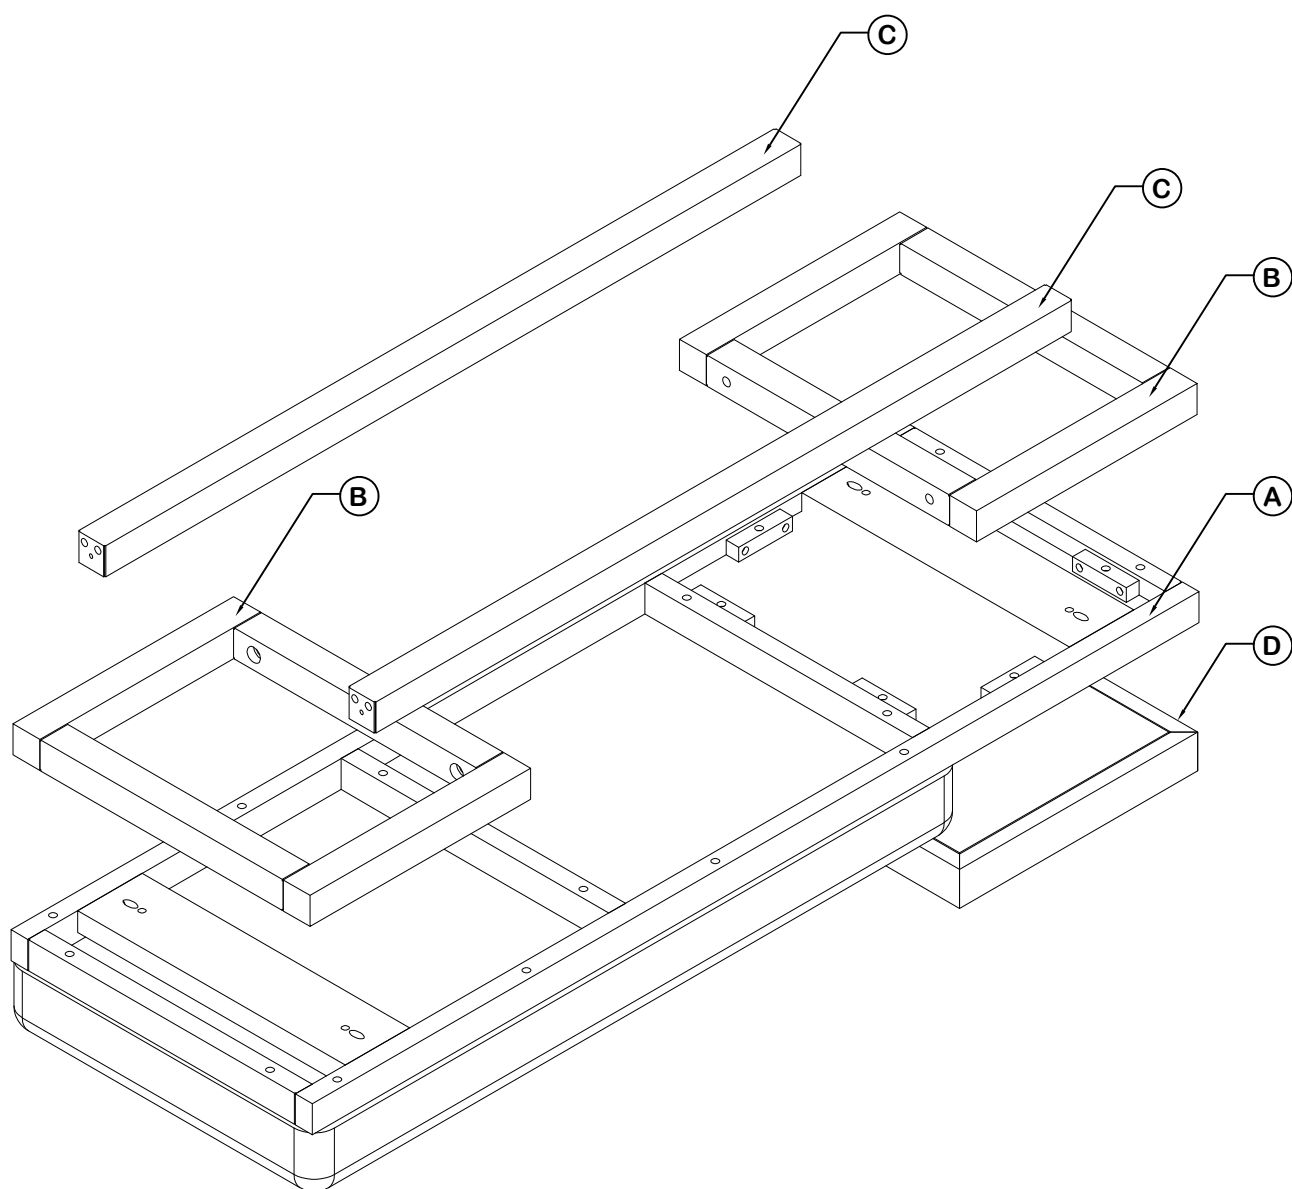



**STEP 1 (x1)**

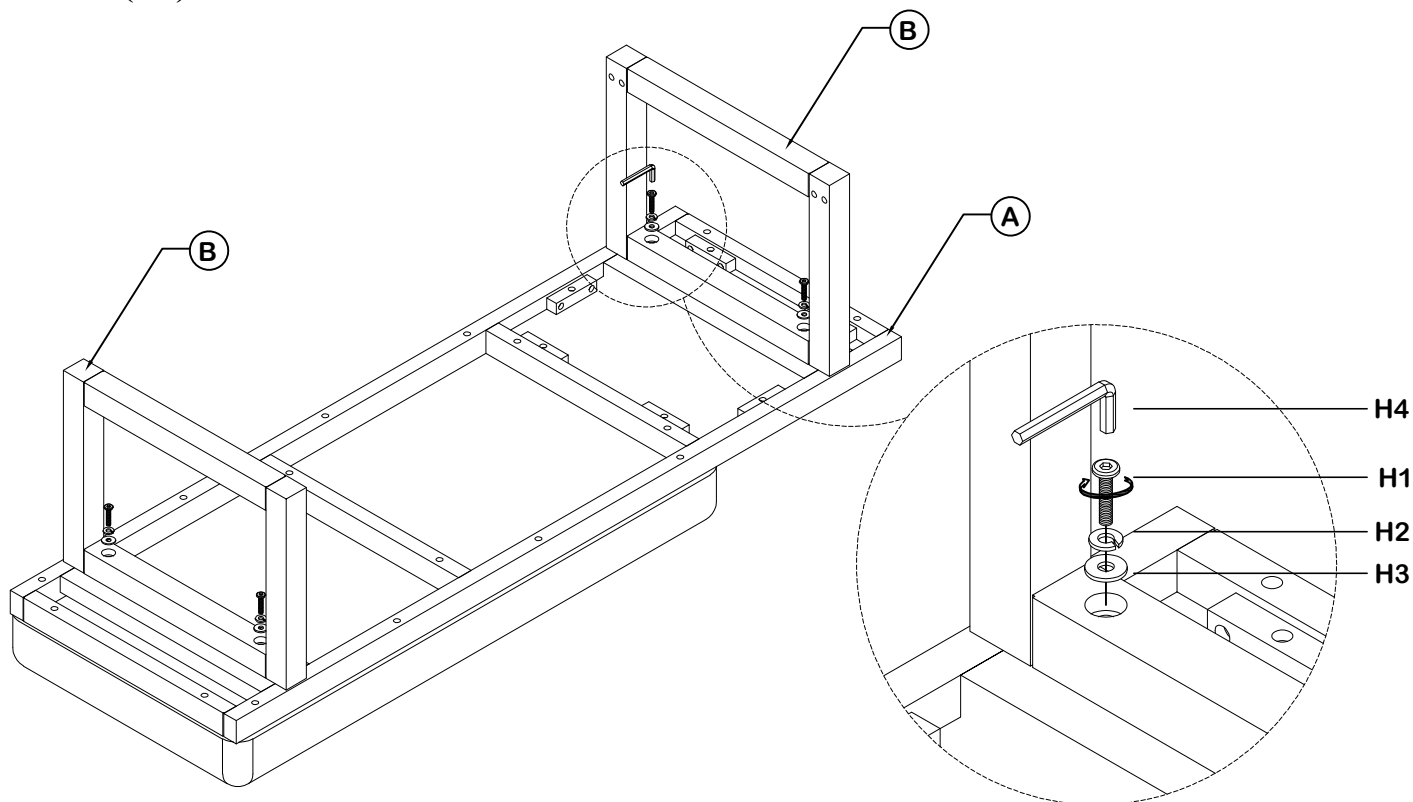

**STEP 2 (x1)**

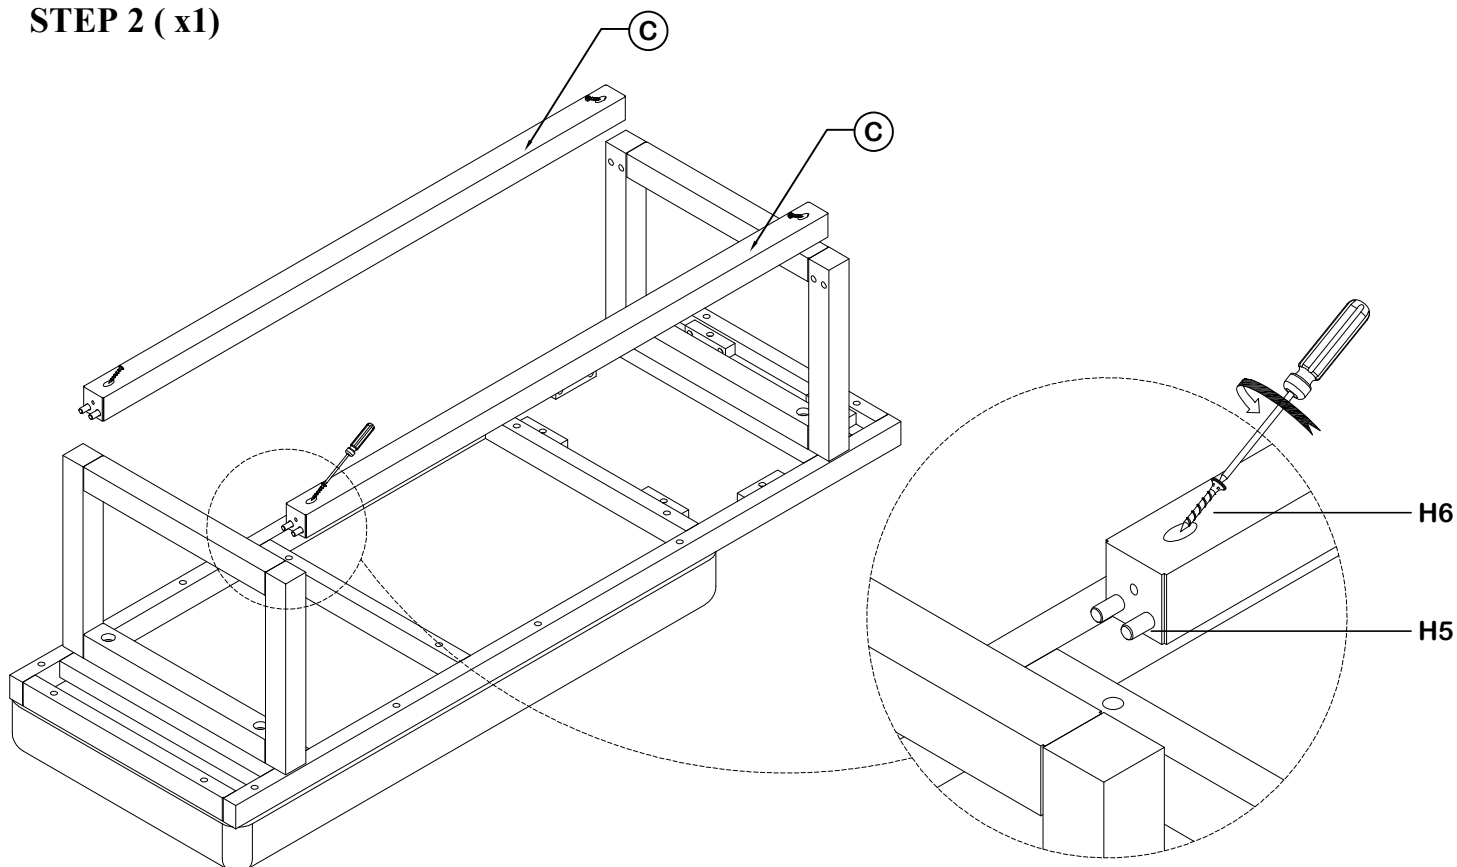

**STEP 3 (x1)**

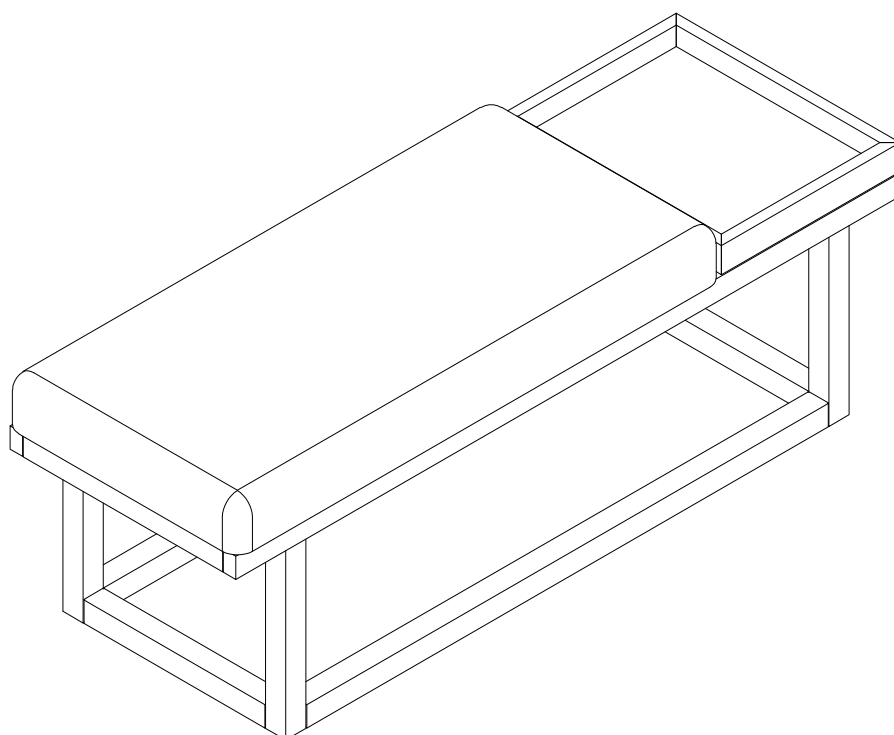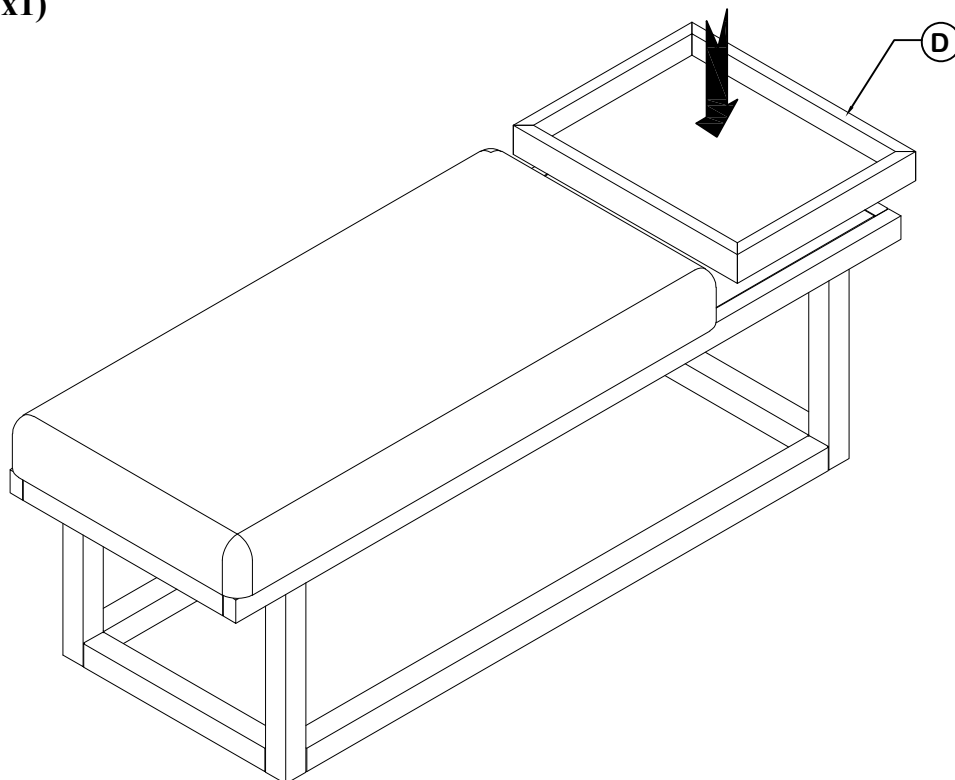

**BENCH WITH TRAY ASSEMBLY COMPLETED**